

AF-60 LP™ Micro Drive

Programming Guide





Contents

1. Safety	3
Safety Instructions	3
Software Version and Approvals	3
General Warning	3
Avoid unintended Start	4
Before Commencing Repair Work	4
2. Introduction	5
AF-60 LP Micro Drive Model Number System Diagram	5
3. Programming	7
How to Programme	7
Programming with DCT-10 Set-up Software	7
Programming with the Keypad	7
Status Menu	9
Quick Menu	9
Main Menu	10
4. Parameter Descriptions	11
Parameter group 0: Operation/Display	11
Parameter Group 1: Load/Motor	15
Parameter Group 2: Brakes	22
Parameter Group 3: Reference/Ramps	25
Parameter Group 4: Limits/Warnings	30
Parameter Group 5: Digital In/Out	32
Parameter Group 6: Analogue In/Out	36
Parameter Group 7: Controllers	41
Parameter Group 8: Communication	43
Parameter Group 13: Logic Controller	47
Parameter Group 14: Special Functions	54
Parameter Group 15: Drive Information	56
Parameter Group 16: Data Readouts	58
16-09 Custom Readout	58
5. Parameter Lists	63
Conversion Index	67
Change during operation	67
2-Set-up	67
Type	67
0-** Operation/Display	68
1-** Load/Motor	69



2-** Brakes	70
3-** Reference/Ramps	71
4-** Limits/Warnings	72
5-** Digital In/Out	73
6-** Analog In/Out	74
7-** Controllers	75
8-** Comm. and Options	76
13-** Logic Controller	77
14-** Special Functions	78
15-** Drive Information	79
16-** Data Readouts	80
6. Troubleshooting	81
Alarm, Warning and Extended Status Word	82
Index	83



1. Safety

1

1.1.1. High Voltage Warning



The voltage of the frequency converter is dangerous whenever it is connected to mains. Incorrect installation of the motor or frequency converter may cause damage to the equipment, serious injury or death. Consequently, it is essential to comply with the instructions in this manual as well as local and national rules and safety regulations.

1.1.2. Safety Instructions

- Make sure the frequency converter is properly connected to earth.
- Do not remove mains connections, motor connections or other power connections while the frequency converter is connected to power.
- Protect users against supply voltage.
- Protect the motor against overloading according to national and local regulations.
- The earth leakage current exceeds 3.5 mA.
- The [OFF] key is not a safety switch. It does not disconnect the frequency converter from mains.

1.1.3. Software Version and Approvals

Software Version Programming Guide AF-60 LP™ Micro Drive



This Programming Guide can be used for all AF-60 LP™ Micro Drive frequency drives with software version 2.1x.

The software version number can be read in parameter 15-43.

1.1.4. General Warning



Warning:

Touching the electrical parts may be fatal - even after the equipment has been disconnected from mains. Also make sure that other voltage inputs have been disconnected (such as external DC bus power supplies). Be aware that there may be high voltage on the DC link even when the LEDs are turned off. Before touching any potentially live parts of the frequency converter, wait at least 4 minutes for all sizes. Shorter time is allowed only if indicated on the nameplate for the specific unit.

**Leakage Current**

The earth leakage current from the frequency converter exceeds 3.5 mA. According to IEC 61800-5-1 a reinforced Protective Earth connection must be ensured by means of a min. 10mm² Cu or an additional PE wire - with the same cable cross section as the Mains wiring - must be terminated separately.

Residual Current Device

This product can cause a DC current in the protective conductor. Where a residual current device (RCD) is used for extra protection, only an RCD of Type B (time delayed) shall be used on the supply side of this product.

Protective earthing of the frequency converter and the use of RCDs must always follow national and local regulations.



Motor overload protection is possible by setting Parameter 1-90 Motor thermal protection to the value Electronic overload trip. For the North American market: Electronic overload functions provide class 20 motor overload protection, in accordance with NEC.

**Installation in high altitudes:**

For altitudes above 2 km, please contact GE .

1.1.5. IT Mains

**IT Mains**

Installation on isolated mains source, i.e. IT mains.

Max. supply voltage allowed when connected to mains: 440 V.

As an option, GE offers line filters for improved harmonics performance.

1.1.6. Avoid unintended Start

While the frequency converter is connected to mains, the motor can be started/stopped using digital commands, bus commands, references or via the drive Keypad.

- Disconnect the frequency converter from mains whenever personal safety considerations make it necessary to avoid unintended start of any motors.
- To avoid unintended start, always activate the [OFF] key before changing parameters.

1.1.7. Disposal Instruction



Equipment containing electrical components must not be disposed of together with domestic waste.
It must be separately collected with electrical and electronic waste according to local and currently valid legislation.

1.1.8. Before Commencing Repair Work

1. Disconnect AF-60 LP™ Micro Drive from mains (and external DC supply, if present.)
2. Wait for 4 minutes for discharge of the DC-link.
3. Disconnect DC bus terminals and brake terminals (if present)
4. Remove motor cable



2. Introduction


2.1.1. Drive Identification

Below is an example of the frequency converter nameplate sticker. This sticker is located on the top of each frequency converter and shows the ratings, serial number, warnings catalog number, and other relevant data for each unit. See following tables for details, how to read the Type code string.



Illustration 2.1: This example shows the identification sticker.

2.1.2. AF-60 LP Micro Drive Model Number System Diagram

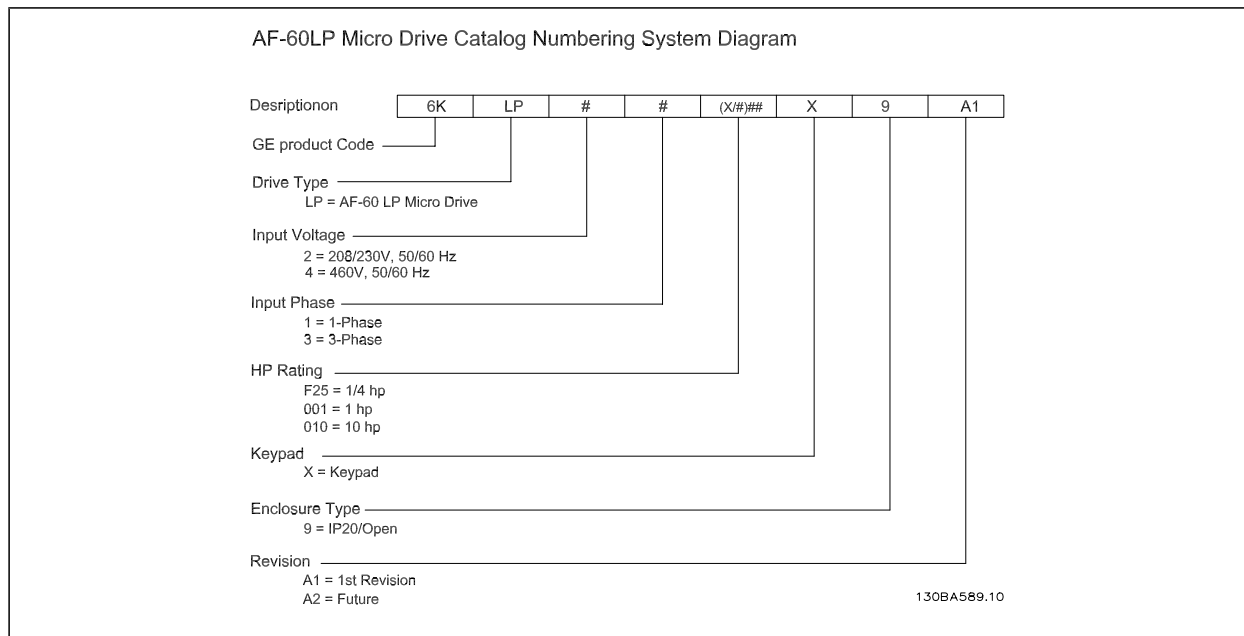



2.1.3. Symbols

Symbols used in this Programming Guide.

2

NB!

Indicates something to be noted by the reader.



Indicates a general warning.



Indicates a high-voltage warning.

*

Indicates default setting

2.1.4. Abbreviations and Standards

Abbreviations:	Terms:	SI-units:	I-P units:
AWG	Acceleration	m/s ²	ft/s ²
Auto Tune	American wire gauge		
°C	Automatic Motor Tuning		
I _{LIM}	Celsius		
	Current	A	Amp
	Current limit		
°F	Energy	J = N·m	ft-lb, Btu
FC	Fahrenheit		
kHz	Frequency Converter		
LCP	Frequency	Hz	Hz
mA	Kilohertz		
ms	Local Control Panel		
min	Milliampere		
MCT	Millisecond		
M-TYPE	Minute		
Nm	Motion Control Tool		
I _{M,N}	Motor Type Dependent		
f _{M,N}	Newton Metres		in-lbs
P _{M,N}	Nominal motor current		
U _{M,N}	Nominal motor frequency		
par.	Nominal motor power		
PELV	Nominal motor voltage		
	Parameter		
	Protective Extra Low Voltage		
	Power	W	Btu/hr, hp
I _{INV}	Pressure	Pa = N/m ²	psi, psf, ft of water
RPM	Rated Inverter Output Current		
SR	Revolutions Per Minute		
	Size Related		
	Temperature	°C	°F
	Time	s	s,hr
T _{LIM}	Torque limit		
	Voltage	V	V

Table 2.2: Abbreviation and Standards table .



3. Programming

3.1. How to Programme

3.1.1. Programming with DCT-10 Set-up Software

The frequency converter can be programmed from a PC via RS485 com-port by installing the DCT-10 Set-up Software.

This software can be downloaded from the GE Web site: www.geelectrical.com/drives

3.1.2. Programming with the Keypad

The Keypad is divided into four functional groups:

1. Numeric display.
2. Menu key.
3. Navigation keys.
4. Operation keys and indicator lights (LEDs).

NB!

Parameters should be changed in numerical order. Certain parameter values are affected by preceding changes.

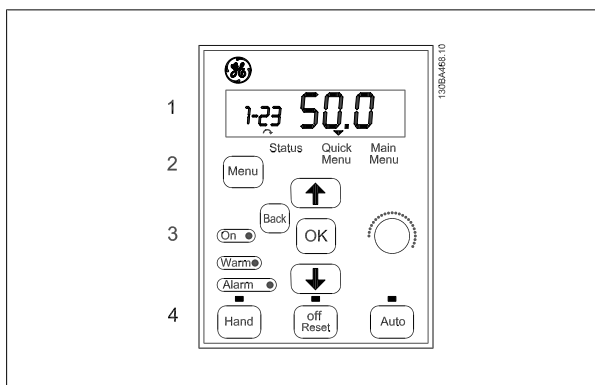


Illustration 3.1: Keypad with potentiometer

The display:

A number of information can be read from the display.

Set-up number shows the active set-up and the edit set-up. If the same set-up acts as both active and edit set-up, only that set-up number is shown (factory setting).

When active and edit set-up differ, both numbers are shown in the display (Setup 12). The number flashing, indicates the edit set-up.

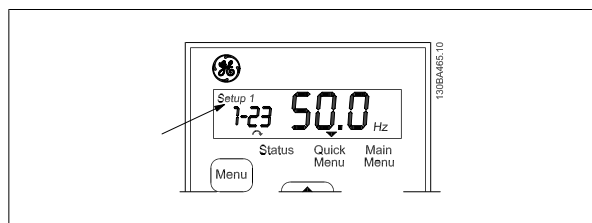


Illustration 3.3: Indicating Set-up



The small digits to the left are the selected parameter number.

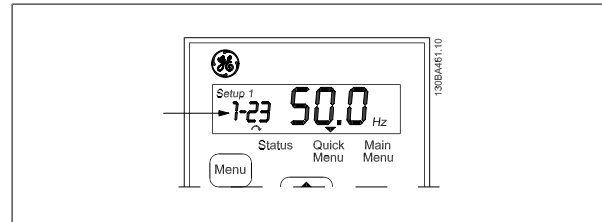


Illustration 3.4: Indicating selected par. no.

The large digits in the middle of the display show the value of the selected parameter.

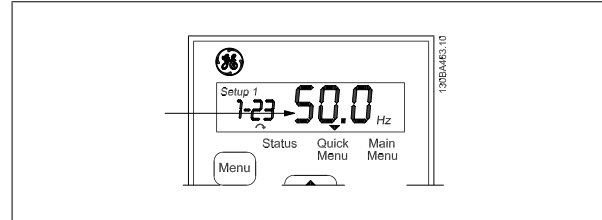


Illustration 3.5: Indicating value of selected par.

The right side of the display shows the unit of the selected parameter. This can be either Hz, A, V, kW, HP, %, s or RPM.

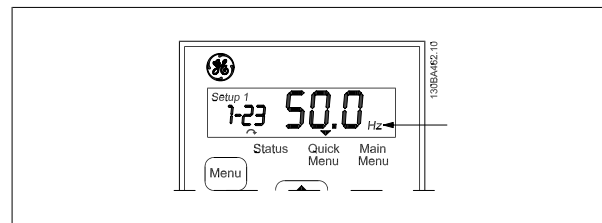


Illustration 3.6: Indicating unit of selected par.

Motor direction is shown to the bottom left of the display - indicated by a small arrow pointing either clockwise or counterclockwise.

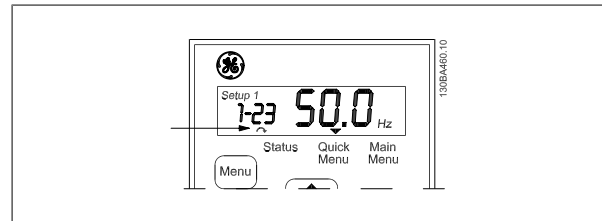


Illustration 3.7: Indicating motor direction

Use the [MENU] key to select one of the following menus:

Status Menu:

The Status Menu is either in *Readout Mode* or *Hand Mode*. In *Readout Mode* the value of the currently selected readout parameter is shown in the display.

In *Hand Mode* the local Keypad reference is displayed.

Quick Menu:

Displays Quick Menu parameters and their settings. Parameters in the Quick Menu can be accessed and edited from here. Most applications can be run by setting the parameters in the Quick Menus.

Main Menu:

Displays Main Menu parameters and their settings. All parameters can be accessed and edited here. A parameter overview is found later in this manual.

Indicator lights:

- Green LED: The frequency converter is on.
- Yellow LED: Indicates a warning. Please see section *Troubleshooting*
- Flashing red LED: Indicates an alarm. Please see section *Troubleshooting*

**Navigation Keys:**

[Back]: For moving to the previous step or layer in the navigation structure.

Arrows [▲] [▼]: For maneuvering between parameter groups, parameters and within parameters.

[OK]: For selecting a parameter and for accepting changes to parameter settings.

Operation Keys:

A yellow light above the operation keys indicates the active key.

[Hand]: Starts the motor and enables control of the frequency converter via the Keypad.

[Off/Reset]: The motor stops except in alarm mode. In that case the motor will be reset.

[Auto]: The frequency converter is controlled either via control terminals or serial communication.

[Potentiometer] Keypad: The potentiometer works in two ways depending on the mode in which the frequency converter is running.

In *Auto Mode* the potentiometer acts as an extra programmable analog input.

In *Hand Mode* the potentiometer controls local reference.

3.2. Status Menu

After power up the Status Menu is active. Use the [MENU] key to toggle between Status, Quick Menu and Main Menu.

Arrows [▲] and [▼] toggles between the choices in each menu.

The display indicates the status mode with a small arrow above "Status".

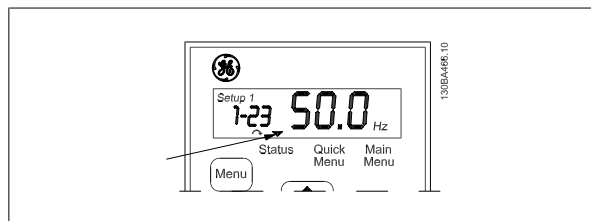


Illustration 3.8: Indicating Status mode

3.3. Quick Menu

The Quick Menu gives easy access to the most frequently used parameters.

1. To enter the Quick Menu, press [MENU] key until indicator in display is placed above *Quick Menu*.
2. Use [▲] [▼] to select either QM1 or QM2, then press [OK].
3. Use [▲] [▼] to browse through the parameters in the Quick Menu.
4. Press [OK] to select a parameter.
5. Use [▲] [▼] to change the value of a parameter setting.
6. Press [OK] to accept the change.
7. To exit, press either [Back] twice to enter *Status*, or press [Menu] once to enter *Main Menu*.

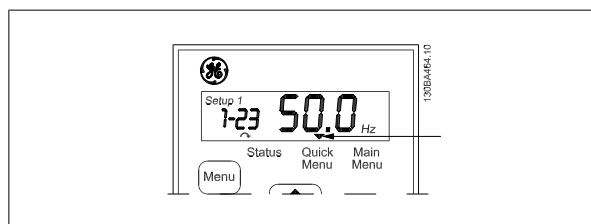


Illustration 3.9: Indicating Quick Menu mode



3.4. Main Menu

The Main Menu gives access to all parameters.

1. To enter the Main Menu, press [MENU] key until indicator in display is placed above *Main Menu*.
2. Use [▲] [▼] to browse through the parameter groups.
3. Press [OK] to select a parameter group.
4. Use [▲] [▼] to browse through the parameters in the specific group.
5. Press [OK] to select the parameter.
6. Use [▲] [▼] to set/change the parameter value.
7. Press [OK] to accept the value.
8. To exit, press either [Back] twice to enter *Quick Menu*, or press [Menu] once to enter *Status*.

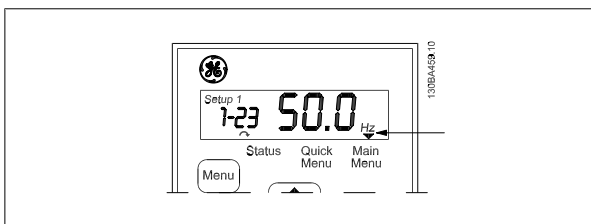


Illustration 3.10: Indicating Main Menu mode



4. Parameter Descriptions

4.1. Parameter group 0: Operation/Display

0-03 Regional Settings

Option:
Function:

In order to meet the needs for different default settings in different parts of the world, par. 0-03, *Regional Settings*, is implemented in the frequency converter. The selected setting influences the default setting of the motor nominal frequency.

[0] International

Sets default of par. 1-23, *Motor Frequency*, to 50 Hz, shows par. 1-20 in kW.

[1] * US

Sets default of par. 1-23, *Motor Frequency*, to 60 Hz, shows par. 1-20 in HP.

NB!

This parameter cannot be adjusted while motor runs.

0-04 Operating State at Power-up (Hand Mode)

Option:
Function:

This parameter controls whether or not the frequency converter should start running the motor when powering up after a power down in Hand mode.

NB!

If Keypad with potentiometer is mounted, reference is set according to actual potentiometer value.

[0] Resume

Frequency converter starts in same Hand or Off State as when powered off.
Local reference is stored and used after power-up.

[1] * Forced Stop, Ref=Old

Frequency converter powers up in Off State meaning that motor is stopped after power up.
Local reference is stored and used after power-up.

[2] Forced Stop, Ref=0

Frequency converter powers up in Off State meaning that motor is stopped after power up.
Local reference is set to 0. Thus motor will not start running before local reference has been increased.

4.1.1. 0-1* Set-up Handling

User defined parameters and miscellaneous external inputs (eg. bus, Keypad, analog/digital inputs, feedback, etc.) controls the functionality of the frequency converter.

A complete set of all parameters controlling the frequency converter is called a set-up. The frequency converter contains 2 set-ups, *Set-up1* and *Set-up 2*. Furthermore, a fixed set of factory settings can be copied into one or more set-ups.

Some of the advantages of having more than one set-up in the frequency converter are

- Run motor in one set-up (Active Set-up) while updating parameters in another set-up (Edit Set-up)
- Connect various motors (one at a time) to frequency converter. Motor data for various motors can be placed in different set-ups.
- Rapidly change settings of frequency converter and/or motor while motor is running (eg. ramp time or preset references) via bus or digital inputs.

The *Active Set-up* can be set as *Multi Set-up* where the active set-up is selected via input on a digital input terminal and/or via the bus control word.

NB!

FactorySet-up cannot be used as *Active Set-up*.

0-10 Active Set-up

Option:
Function:

Active Set-up controls the motor.
Shifts between set-ups can only happen when



- the motor is coasted

OR

- the set-ups between which the shift happens are linked to each other (see par. 0-12, *Linked Set-ups*).

If changing between set-ups that are not linked, the change will not happen before motor is coasted.

NB!

The motor is only considered stopped when it is coasted.

[1] *	Set-up 1	Set-up 1 is active.
[2]	Set-up 2	Set-up 2 is active.
[9]	Multi Set-up	Select the active set-up via digital input and/or bus, see par. 5-1* choice [23].

0-11 Edit Set-up**Option:****Function:**

The *Edit Set-up* is for updating parameters in the frequency converter from either Keypad or bus. It can be identical or different from the *Active Set-up*.

All set-ups can be edited during operation, independently of the active set-up.

[1] *	Set-up 1	Update parameters in Set-up 1.
[2]	Set-up 2	Update parameters in Set-up 2.
[9]	Active Set-up	Update parameters in set-up selected as <i>Active Set-up</i> (see par. 0-10).

0-12 Link Set-ups**Option:****Function:**

The link ensures synchronizing of the "not changeable during operation" parameter values enabling shift from one set-up to another during operation.

If the set-ups are not linked, a change between them is not possible while the motor is running. Thus the set-up change does not occur until the motor is coasted.

[0]	Not linked	Leaves parameters unchanged in both set-ups and cannot be changed while motor runs.
[1] *	Linked	Copy parameters "not changeable during operation" parameter values into presently selected <i>Edit Set-up</i> .

NB!

This parameter cannot be changed while motor runs.

4.1.2. 0-31 Custom Readout Min Scale**0-31 Custom Readout Min Scale****Range:**

0.00 * [0.00 – 9999.00]

Function:

It is possible to create a customized readout related to the output frequency of the unit. The value entered in par. 0-31 will be shown at 0 Hz. The readout can be shown in the LCP display when in Status Mode or it can be read in par. 16-09

4.1.3. 0-32 Custom Readout Max Scale**0-32 Custom Readout Max Scale****Range:**

100.0 * [0.00 – 9999.00]

Function:

It is possible to create a customized readout related to the output frequency of the unit. The value entered in par. 0-32 will be shown at the frequency programmed in par. 4-14 Motor Speed High Limit. The readout can be shown in the LCP display when in Status Mode or it can be read in par. 16-09

4.1.4. 0-4* Keypad

The frequency converter can operate in the following three modes: *Hand*, *Off* and *Auto*.

Hand: The frequency converter is locally operated and does not allow any remote control. By activating Hand a start signal is given.

Off: The frequency converter stops with a normal stop ramp. When Off is chosen the frequency converter can only be started by pressing either Hand or Auto on the Keypad.



Auto: In Auto-mode the frequency converter can be remote controlled (bus/digital).

0-40 [Hand] Key on Keypad

Option:	Function:
[0] Disabled	Hand key has no function.
[1] * Enabled	Hand key is functional.

0-41 [Off/Reset] Key on Keypad

Option:	Function:
[0] Disable Off/Reset	Off/reset key has no function.
[1] * Enable Off/Reset	Stop signal and reset of any faults.
[2] Enable Reset Only	Reset only. Stop (Off) function is disabled.

0-42 [Auto] Key on Keypad

Option:	Function:
[0] Disabled	Auto key has no function.
[1] * Enabled	Auto key is functional.

4.1.5. 0-5* Copy/Save

0-50 Keypad Copy

Option:	Function:
	The detachable Keypad of the frequency converter can be used for storing setups, and thus for transferring data when moving parameter settings from one frequency converter to another.

NB!

Keypad Copy can only be activated from the Keypad and ONLY when the motor is coasted.

[1] All to Keypad	Copy all setups from the frequency converter into the Keypad.
[2] All from Keypad	Copy all setups from Keypad to frequency converter.
[3] Size indep. from Keypad	Copy non motor size dependent data from Keypad to frequency converter

0-51 Set-up Copy

Option:	Function:
	Use this function to copy a set-up content into the <i>Edit Set-up</i> . In order to be able to make a set-up copy ensure that
	- the motor is coasted - par. 0-10, <i>Active Set-up</i>, is set to either <i>Set-up 1</i> [1] or <i>Set-up 2</i> [2]

NB!

The keyboard/parameter database are blocked while Set-up Copy is running.

[0] * No Copy	Copy function is inactive
[1] Copy from Set-up 1	Copy from <i>Set-up 1</i> to edit set-up chosen in par. 0-11, <i>Edit Set-up</i> .
[2] Copy from Set-up 2	Copy from <i>Set-up 2</i> to edit set-up chosen in par. 0-11, <i>Edit Set-up</i> .
[9] Copy from Factory Set-up	Copy from Factory Settings to edit set-up chosen in par. 0-11, <i>Edit set-up</i> .

4.1.6. 0-6* Password

0-60 (Main) Menu Password

Range:	Function:
	Use password for protection against unintended change of sensitive parameters, eg. motor parameters. Password protected parameters can always be read, but cannot be edited without entering the password.



0 * [0 - 999]

Enter the password for access to Main Menu via the [Main Menu] key. Select the number that should allow for changing other parameter values. 0 means there is no password.

NB!

Pressing buttons [MENU], [OK] and down will unlock the password. This will automatically enter the parameter editing screen in Quick Menu or Main Menu.



4.2. Parameter Group 1: Load/Motor

1-00 Configuration Mode

Option:
Function:

Use this parameter for selecting the application control principle to be used when a Remote Reference is active.

NB!

Changing this parameter will reset parameters 3-00, 3-02 and 3-03 to their default values.

NB!

This parameter cannot be adjusted while motor runs.

[0] *	Speed Open Loop	For normal speed control (References).
[3]	Process Closed Loop	Enables process closed loop control. See par. group 7-3* for further information on PI-controller. When running in process closed loop, par. 4-10 <i>Motor Speed Direction</i> must be set to <i>Clockwise</i> [0]

1-01 Motor Control Principle

Option:
Function:

[0]	U/f	Is used for parallel connected motors and/or special motor applications. The U/f settings are set in parameters 1-55 and 1-56.
-----	-----	--

NB!

When running U/f control slip- and load compensations are not included.

[1] *	Advanced Vector Control	Normal running mode, including slip- and load compensations.
-------	-------------------------	--

1-03 Torque Characteristics

Option:
Function:

With more torque characteristics it is possible to run low energy consuming, as well as high torque applications.

[0] *	Constant Torque	Motor shaft output provides constant torque under variable speed control.
[2]	Energy Savings	This function automatically optimizes energy consumption in centrifugal pump and fan applications. See par. 14-41 <i>Energy Savings Minimum Magnetisation</i> .

1-05 Hand Mode Configuration

Option:
Function:

This parameter is only relevant when parameter 1-00 *Configuration Mode* is set to *Process Closed Loop* [3]. The parameter is used for determining the reference or setpoint handling when changing from Auto Mode to Hand Mode on the Keypad.

[0]	Speed Open Loop	In Hand Mode the drive always runs in Open Loop configuration regardless of setting in par. 1-00 <i>Configuration Mode</i> . Local potentiometer (if present) or Arrow up/down determines output frequency limited by Motor Speed High/Low Limit (parameters 4-14 and 4-12).
[2] *	As configuration in par. 1-00	If par. 1-00 <i>Configuration Mode</i> is set to <i>Open Loop</i> [1] function is as described above. If par. 1-00 is set to <i>Process Closed Loop</i> [3] changing from Auto mode to Hand mode results in a setpoint change via local potentiometer or Arrow up/down. The change is limited by Reference Max/Min (parameters 3-02 and 3-03).

4.2.1. 1-2* Motor Data

Enter the correct motor nameplate data (power, voltage, frequency, current and speed).

Run Auto Tune, see par. 1-29.

Factory settings for advanced motor data, par. 1-3*, are automatically calculated.

NB!

Parameters in parameter group 1.2* cannot be adjusted while motor runs.

**1-20 Motor Power [kW]/[HP] (P_{m.n})****Option:****Function:**

Enter motor power from nameplate data.

Two sizes down, one size up from nominal AF-60 LP™ rating.

[1]	0.09 kW/0.12 HP
[2]	0.12 kW/0.16 HP
[3]	0.18kW/0.25 HP
[4]	0.25 kW/0.33 HP
[5]	0.37kW/0.50 HP
[6]	0.55 kW/0.75 HP
[7]	0.75 kW/1.00 HP
[8]	1.10 kW/1.50 HP
[9]	1.50 kW/2.00 HP
[10]	2.20 kW/3.00 HP
[11]	3.00 kW/4.00 HP
[12]	3.70 kW/5.00 HP
[13]	4.00 kW/5.40 HP
[14]	5.50 kW/7.50 HP
[15]	7.50 kW/10.0 HP
[16]	11.00 kW/15.00 HP

NB!

Changing this parameter affects par. 1-22 to 1-25, 1-30, 1-33 and 1-35.

1-22 Motor Voltage (U_{m.n})**Range:**

230/400 V [50 - 999 V]

Function:

Enter motor voltage from nameplate data.

1-23 Motor Frequency (f_{m.n})**Range:**

60 Hz* [20-400 Hz]

Function:

Enter motor frequency from nameplate data.

1-24 Motor Current (I_{m.n})**Range:**

M-type dependent* [0.01 - 26.00 A]

Function:

Enter motor current from nameplate data.

1-25 Motor Nominal Speed (n_{m.n})**Range:**

M-type Dependent* [100 - 9999 RPM]

Function:

Enter motor nominal speed from nameplate data.

1-29 Auto Tune**Option:****Function:**

Use Auto Tune to optimize motor performance.

NB!

This parameter cannot be changed while motor runs.

1. Stop the frequency converter – make sure motor is at standstill
2. Choose [2] Enable Auto Tune
3. Apply start signal
– Via Keypad: Press Hand



- Or in Remote On mode: Apply start signal on terminal 18

[0] *	Off	Auto Tune function is disabled.
[2]	Enable Auto Tune	Auto Tune function starts running.

NB!
To gain optimum tuning of frequency converter, run Auto Tune on a cold motor.


4.2.2. 1-3* Adv. Motor Data

Adjust advanced motor data using one of these methods:

1. Run Auto Tune on cold motor. Frequency converter measures value from motor.
2. Enter X_1 value manually. Obtain value from motor supplier.
3. Use R_s , X_1 , and X_2 default setting. Frequency converter establishes setting based on motor nameplate data.

NB!

These parameters cannot be changed while motor runs.

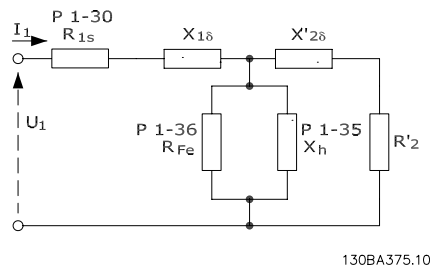

1-30 Stator Resistance (R_s)

Range:

Depending on motor data* [Ohm]

Function:

Set stator resistance value.

1-33 Stator Leakage Reactance (X_1)

Range:

Depending on motor data* [Ohm]

Function:

Set stator leakage reactance of motor.

1-35 Main Reactance (X_2)

Range:

Depending on motor data* [Ohm]

Function:

Set motor main reactance.

4.2.3. 1-5* Load Independent Setting

This parameter group is for setting the load independent motor settings.

1-50 Motor Magnetization at Zero Speed

Range:

100 %* [0 - 300%]

Function:

This parameter enables different thermal load on motor when running at low speed.

Enter a percentage of rated magnetizing current. If setting is too low, motor shaft torque may be reduced.

1-52 Min. Speed Normal Magnetizing [Hz]

Range:


Function:

Use this parameter along with par. 1-50, *Motor Magnetizing at Zero Speed*.



0.0 Hz* [0.0 - 10.0 Hz]

Set frequency required for normal magnetizing current. If frequency is set lower than motor slip frequency, par. 1-50, *Motor Magnetizing at Zero Speed* is inactive.

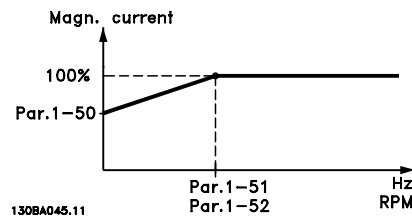

1-55 U/f Characteristic - U

Range:**Function:**

This parameter is an array parameter [0-5] and is only functional when par. 1-01, *Motor Control Principle* is set to U/f [0].

0.0 V* [0.0 - 999.9 V]

Enter voltage at each frequency point to manually form a U/f characteristic matching motor. Frequency points are defined in par. 1-56, *U/f characteristics - F*.

1-56 U/f Characteristic - F

Range:**Function:**

This parameter is an array parameter [0-5] and is only functional when par. 1-01, *Motor Control Principle* is set to U/f [0].

0.0 Hz* [0.0 - 1000.0 Hz]

Enter frequency points to manually form a U/f characteristic matching motor. Voltage at each point is defined in par. 1-55, *U/f Characteristic - U*.

Make a U/f characteristic based on 6 definable voltages and frequencies, see below figure.

Simplify U/f characteristics by merging 2 or more points (voltages and frequencies), respectively, are set equal.

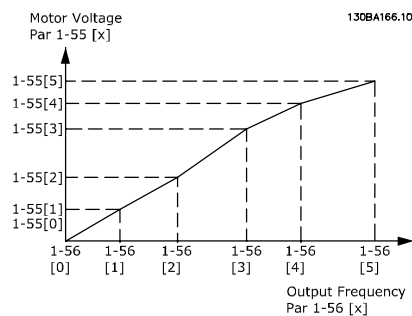


Illustration 4.1: Fig. 1 U/f characteristics

NB!

For par. 1-56 the following applies

[0] ≤ [1] ≤ [2] ≤ [3] ≤ [4] ≤ [5]

4.2.4. 1-6* Load Dependent setting

Parameters for adjusting the load dependent motor settings.

1-60 Low Speed Load Compensation

Range:**Function:**


Use this parameter to gain optimum U/f characteristic when running at low speed.

100 %* [0-199 %]

Enter percentage in relation to load when motor runs at low speed.



Change-over point is automatically calculated based on motor size.

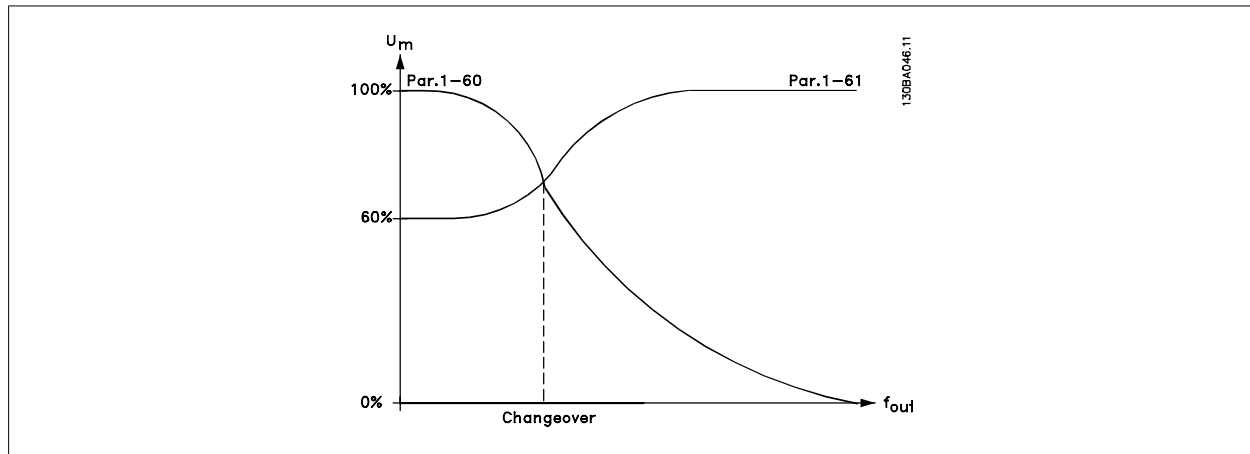

1-61 High Speed Load Compensation

Range:

100 %* [0 - 199 %]

Function:

Use this parameter to obtain optimum load compensation when running at high speed.

Enter percentage to compensate in relation to load when motor runs at high speed.
Change-over point is automatically calculated based on motor size.

1-62 Slip Compensation

Range:

100 %* [-400 - 399 %]

Function:

Compensation for load dependent motor slip.

Slip compensation is calculated automatically based on rated motor speed, n_{MN} . Example: if par. 1-62 is set to 100% and the 4 pole 1800 RPM motor has an actual nameplate RPM of 1750 RPM, then 50 RPM is added to the output frequency by the drive.

NB!

This function is only active when par. 1-00, *Configuration Mode*, is set to *Speed Open Loop* [0], and when par. 1-01, *Motor Control Principle*, is set to *Advanced Vector Control* [1].

1-63 Slip Compensation Time

Range:

0.10 s [0.05 - 5.00 s]

Function:

Enter slip compensation reaction speed. A high value results in slow reaction whereas a low value results in quick reaction.

If low-frequency resonance problems arise, use longer time setting.

4.2.5. 1-7* Start Adjustments

Considering the need for various start functions in different applications, it is possible to select a number of functions in this parameter group.

1-71 Start Delay

Range:

0.0 s* [0.0 - 10.0 s]

Function:

The start delay defines the time to pass from a start command is given until the motor starts accelerating.
Setting start delay to 0.0 sec. disables *Start Function*, [1-72], when start command is given.

Enter the time delay required before commencing acceleration.
Par. 1-72 *Start Function* is active during *Start delay time*.

1-72 Start Function

Option:

[0]

DC Hold/Delay Time

Function:

Motor is energized with DC holding current (par. 2-00) during start delay time.



[1]	DC Brake/Delay Time	Motor is energized with DC braking current (par. 2-01) during start delay time.
[2] *	Coast/Delay Time	Drive is coasted during start delay time (Driveoff).

1-73 Start Mode

Option:

Function:

The Start Mode parameter is used to catch a spinning motor after eg. mains drop-out.



This function is not suitable for hoisting applications.

[0] *	Disabled	Catch a spinning load disabled.
[1]	Enabled	Frequency converter enabled to catch spinning motor.

NB!

When catch a spinning load is enabled par. 1-71, *Start Delay*, and par. 1-72, *Start Function*, have no function.

4.2.6. 1-8* Stop Adjustments

To meet the need for various stop functions in different application these parameters offer some special stop features for the motor.

1-80 Function at Stop

Option:

Function:

The selected function at stop is active in following situations:

- Stop command is given and output speed is ramped down to *Min. Speed for Activating Functions at Stop*.
- Start command is removed (standby), and output speed is ramped down to *Min. Speed for Activating Functions at Stop*.
- DC-brake command is given, and DC-brake time has passed
- While running and calculated output speed is below *Min. Speed for Activating Functions at Stop*.

[0] *	Coast	The drive is coasted.
[1]	DC hold	The motor is energized with a DC current. See par. 2-00 <i>DC Hold Current</i> for more information.

1-82 Min. Speed For Function at Stop [Hz]

Range:

0.0 Hz* [0.0 - 20.0 Hz]

Function:

Set the speed at which to activate par. 1-80 *Function at Stop*.

4.2.7. 1-9* Motor Temperature

With an estimated motor temperature monitor the frequency converter is able to estimate motor temperature without having a thermistor mounted. It is thus possible to receive a warning or an alarm, if motor temperature exceeds upper operational limit.

1-90 Motor Thermal Protection

Option:

Function:

Using Electronic Overload the motor temperature is calculated based on frequency, speed and time. GE recommends using The Electronic Overload function, if a thermistor is not present.

NB!

Electronic Overload calculation is based on motor data from group 1-2*.

[0] *	No Protection	Disables temperature monitoring.
[1]	Thermistor Warning	A thermistor connected to either digital or analog input gives a warning if upper limit of motor temperature range is exceeded, (see par. 1-93, <i>Thermistor Resource</i>).
[2]	Thermistor Trip	A thermistor connected to either digital or analog input gives an alarm and makes the frequency converter trip if upper limit of motor temperature range is exceeded, (see par. 1-93, <i>Thermistor Resource</i>).



[3] Electronic Overload If calculated upper limit of motor temperature range is exceeded, a warning occurs.
Warning

[4] Electronic Overload Trip If 90% of calculated upper limit of motor temperature range is exceeded, an alarm occurs and frequency converter trips.

NB!

When the Electronic Overload function has been selected the drive will store the recorded temperature at power down and this temperature will resume at power up regardless of the elapsed time. Changing par. 1-90 back to [0] No Protection will reset the recorded temperature.

1-93 Thermistor Resource**Option:****Function:**

Select the thermistor input terminal.

[0] * None No thermistor is connected.

[1] Analog Input 53 Connect thermistor to analog input terminal 53.

NB!

Analog input 53 cannot be selected for other purposes when selected as thermistor resource.

[6] Digital input 29 Connect thermistor to digital input terminal 29.
While this input functions as thermistor input, it will not respond to the function chosen in par. 5-13, *Digital Input 29*.
The value of par. 5-13 remains however unchanged in parameter database while function is inactive.

Input Digital/ Analog	Supply Voltage	Threshold Cut-out Values
Digital	10 V	<800 ohm - >2.9k ohm
Analog	10 V	<800 ohm - >2.9k ohm



4.3. Parameter Group 2: Brakes

4.3.1. 2-** Brakes

4.3.2. 2-0* DC-Brake

The purpose of DC-brake function is to brake a rotating motor by applying DC-current to the motor.

2-00 DC Hold Current

Range:

50%* [0 - 100%]

Function:

This parameter either holds the motor (holding torque) or pre-heats the motor.

The parameter is active if *DC Hold* has been selected in either par. 1-72 *Start Function* or par. 1-80 *Function at Stop*.

Enter a value for holding current as a percentage of the rated motor current set in par. 1-24 *Motor Current*. 100% DC holding current corresponds to $I_{M,N}$.

NB!

Avoid 100% current too long as it may overheat the motor.

2-01 DC Brake Current

Range:

50 %* [0 - 150%]

Function:

Set DC-current needed to brake rotating motor.

Activate DC-brake in one of the four following ways:

1. DC-brake command, see par. 5-1* choice [5]
2. DC Cut-in function, see par. 2-04
3. DC-brake selected as start function, see par. 1-72
4. DC-brake in connection with *Flying Start*, par. 1-73.

2-02 DC-Braking Time

Range:

10.0 s* [0.0 - 60 s]

Function:

DC-braking time defines the period during which *DC-brake current* is applied to the motor.

Set the time DC-braking current, set in par. 2-01, must be applied.

NB!

If DC-brake is activated as start function, DC-brake time is defined by *start delay time*.

2-04 DC-Brake Cut-in Speed

Range:

0.0 Hz* [0.0 - 400.0 Hz]

Function:

Set DC-brake cut-in speed to activate DC braking current, set in par. 2-01, when ramping down.

When set to 0 the function is off.



4.3.3. 2-1* Brake Energy Function

Use the parameters in this group for selecting dynamic braking parameters.

2-10 Brake Function

Option:
Function:

Resistor Brake:

The resistor brake limits voltage in the intermediate circuit when the motor acts as generator. Without brake resistor, the frequency converter eventually trips.

The resistor brake consumes surplus energy resulting from motor braking. A frequency converter with brake stops a motor faster than without a brake, which is used in many applications. Requires connection of external brake resistor. An alternative to the resistor brake is the AC brake.

NB!

Resistor brake is only functional in frequency converters with integrated dynamic brake. An external resistor must be connected.

AC Brake:

The AC brake consumes surplus energy by creating power loss in the motor.

It is important to keep in mind that an increase in power loss causes motor temperature to rise.

[0] *	Off	No brake function.
-------	-----	--------------------

[1]	Resistor Brake	Resistor brake is active.
-----	----------------	---------------------------

[2]	AC Brake	AC brake is active.
-----	----------	---------------------

2-11 Brake Resistor (Ohm)

Range:

5 Ω* [5 - 5000 Ω]

Function:

Set brake resistor value.

2-16 AC Brake, Max Current

Range:

100.0 %* [0.0 - 150.0 %]

Function:

Enter max. permissible current for AC-braking to avoid overheating of motor.

100% equals motor current set in par. 1-24.

2-17 Over-Voltage Control

Option:
Function:

Use Over-voltage Control (OVC) to reduce the risk of the frequency converter tripping due to an over voltage on the DC link caused by generative power from the load.

An over-voltage occurs eg. if the ramp down time is set too short compared to the actual load inertia.

[0] *	Disabled	The OVC is not active/required.
-------	----------	---------------------------------

[1]	Enabled, not at stop	OVC is running unless a stop signal is active.
-----	----------------------	--

[2]	Enabled	OVC is running, also when a stop signal is active.
-----	---------	--

NB!

If Resistor Brake has been chosen in par. 2-10 *Brake Function* the OVC is not active even though enabled in this parameter.

4.3.4. 2-2* Mechanical Brake

For hoisting applications an electro-magnetic brake is required. The brake is controlled by a relay, which releases the brake when activated.

The brake activates if frequency converter trips or a coast command is given. Furthermore, it activates when motor speed is ramped down below the speed set in par. 2-22, *Active Brake Speed*.

**2-20 Release Brake Current****Range:**

0.00 A* [0.00 - 100 A]

Function:

Select motor current at which mechanical brake releases.



If start delay time has passed, and motor current is below *Release brake current*, frequency converter trips.

2-22 Activating Mechanical Brake**Range:**

0 Hz* [0 - 400 Hz]

Function:

If the motor is stopped using ramp, the mechanical brake is activated when motor speed is less than *Active Brake Speed*.

Motor is ramped down to stop in the following situations:

- A start command is removed (stand by)
- A stop command is activated
- Quick-stop is activated (Q-stop ramp is used)

Select motor speed at which mechanical brake activates when ramping down.

Mechanical brake automatically activates if frequency converter trips or reports an alarm.



4.4. Parameter Group 3: Reference/Ramps

4.4.1. 3-** Reference/Ramps

Parameters for reference handling, definition of limitations, and configuration of the frequency converter's reaction to changes

4.4.2. 3-0* Reference Limits

Parameters for setting the reference unit, limits and ranges.

3-00 Reference Range

Option:

Function:

Select the range of reference and feedback signals. Values can be both positive and negative, unless par. 1-00, *Configuration Mode*, is set to *Process Closed Loop* [3]. In that case only positive values are allowed.

[0] * Min - Max

Reference setpoint ranges can have positive values only.
Select this if running in Process Closed Loop.

[1] -Max - +Max

Ranges can have both positive and negative values.

3-02 Minimum Reference

Range:

0.00* [-4999 - 4999]

Function:

Enter value for minimum reference.

The sum of all internal and external references are clamped (limited) to the minimum reference value, par. 3-02.

3-03 Maximum Reference

Range:

50.00* [-4999 - 4999]

Function:

Maximum Reference is adjustable in the range Minimum Reference - 4999.

Enter value for Maximum Reference.

The sum of all internal and external references are clamped (limited) to the maximum reference value, par. 3-03.

4.4.3. 3-1* References

Parameters for setting up the reference sources. Select the preset references for the corresponding digital inputs in parameter group 5.1*, *Digital Inputs*.

3-10* Preset Reference

Option:

Function:

Each parameter set-up contains 8 preset references which are selectable via 3 digital inputs or bus.

[18] Bit2	[17] Bit1	[16] Bit0	Preset reference no.
0	0	0	0
0	0	1	1
0	1	0	2
0	1	1	3
1	0	0	4
1	0	1	5
1	1	0	6
1	1	1	7

Table 4.1: Par. 5-1* selection [16], [17] and [18]

[0.00] * -100.00 - 100.00%

Enter the different preset references using array programming.

Normally, 100% = value set in par. 3-03, *Maximum Reference*.

However, there are exceptions if par. 3-00 is set to *Min - Max*, [0].

Example 1:



Par. 3-02 is set to 20 and par. 3-03 is set to 50. In this case 0% = 0 and 100% = 50.
 Example 2:
 Par. 3-02 is set to -70 and par. 3-03 is set to 50. In this case 0% = 0 and 100% = 70.

3-11 Jog Speed [Hz]

Range:

5.0 Hz [0.0 - 400.0 Hz]

Function:

Jog speed is a fixed output speed and overrules the selected reference speed, see par. 5-1* selection [14].
 If the motor is stopped while in jog mode, the jog signal acts as a start signal.
 Removing the jog signal makes the motor run according to the selected configuration.

Select speed to function as jog speed.

3-12 Catch Up/Slow Down Value

Range:

0% * [0 - 100%]

Function:

The *Catch-up/Slowdown function* is activated by an input command (see par. 5-1*, choice [28]/[29]). If the command is active, the Catch-up/Slowdown value (in %) is added to the reference function as follows:

$$\text{Reference} = \text{Reference} + \text{Reference} \times \frac{\text{Catchup Slowdown}}{100}$$

$$\text{Reference} = \text{Reference} - \text{Reference} \times \frac{\text{Catchup Slowdown}}{100}$$

When the input command is inactivated, the reference returns to its original value ie. Reference = Reference + 0.

3-14 Preset Relative Reference

Range:


0.00% [-100.00 - 100.00%]

Function:

Define fixed value in % to be added to variable value defined in par. 3-18, *Relative Scaling Reference Source*.

The sum of fixed and variable values (labelled Y in illustration below) is multiplied with actual reference (labelled X in

illustration). This product is added to actual reference $X + X \times \frac{Y}{100}$

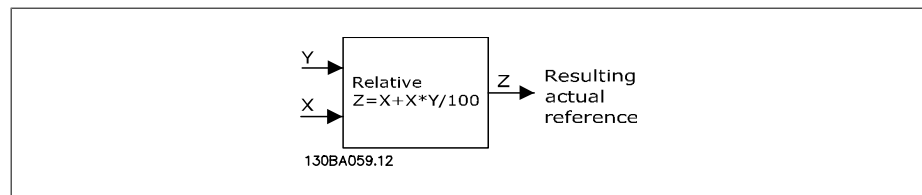

3-15 Reference 1 Source

Option:

Function:

Par. 3-15, 3-16 and 3-17 define up to three different reference signals. The sum of these reference signals defines the actual reference.

[0]	No Function	No reference signal is defined.
[1] *	Analog Input 53	Use signals from analog input 53 as reference, see par. 6-1*.
[2]	Analog Input 60	Use signals from analog input 60 as reference, see par. 6-2*.
[8]	Pulse input 33	Use signals from pulse input as reference, see par. 5-5*.
[11]	Local Bus Reference	Use signals from local bus as reference, see par. 8-9*.
[21]	Keypad Potentiometer	Use signals from Keypad potentiometer as reference, see par. 6-8*.

3-16 Reference 2 Source

Option:

Function:

See Par. 3-15 for description.

[0]	No Function	No reference signal is defined.
[1]	Analog Input 53	Use signals from analog input 53 as reference.
[2] *	Analog Input 60	Use signals from analog input 60 as reference.
[8]	Pulse input 33	Use signals from pulse input as reference, see par. 5-5*.
[11]	Local Bus Reference	Use signals from local bus as reference.



[21] Keypad Potentiometer Use signals from Keypad potentiometer as reference.

3-17 Reference 3 Source

Option:**Function:**

See Par. 3-15 for description.

[0]	No Function	No reference signal is defined.
[1]	Analog Input 53	Use signals from analog input 53 as reference.
[2]	Analog Input 60	Use signals from analog input 60 as reference.
[8]	Pulse input 33	Use signals from pulse input as reference, see par. 5-5*.
[11] *	Local Bus Reference	Use signals from local bus as reference.
[21]	Keypad Potentiometer	Use signals from Keypad potentiometer as reference.

3-18 Relative Scaling Reference Source

Option:**Function:**

Select the source for a variable value to be added to the fixed value defined in par. 3-14, *Preset Relative Reference*.


[0] *	No Function	The function is disabled
[1]	Analog Input 53	Select analog input 53 as relative scaling reference source.
[2]	Analog Input 60	Select analog input 54 as relative scaling reference source.
[8]	Pulse Input 33	Select pulse input 33 as relative scaling reference source.
[11]	Local Bus Reference	Select local bus ref. as relative scaling reference source.
[21]	Keypad Potentiometer	Select Keypad potentiometer as relative scaling reference source.

4.4.4. 3-4* Accel/Decel 1

A linear ramp is characterized by ramping up at a constant speed until the desired motor speed has been reached. Some overshoot may be experienced when reaching speed, which may cause speed jerks for a short while before stabilizing.

An S-ramp accelerates more smoothly thus compensating for jerks when the speed is reached.

See the below figure for a comparison of the two ramp types.

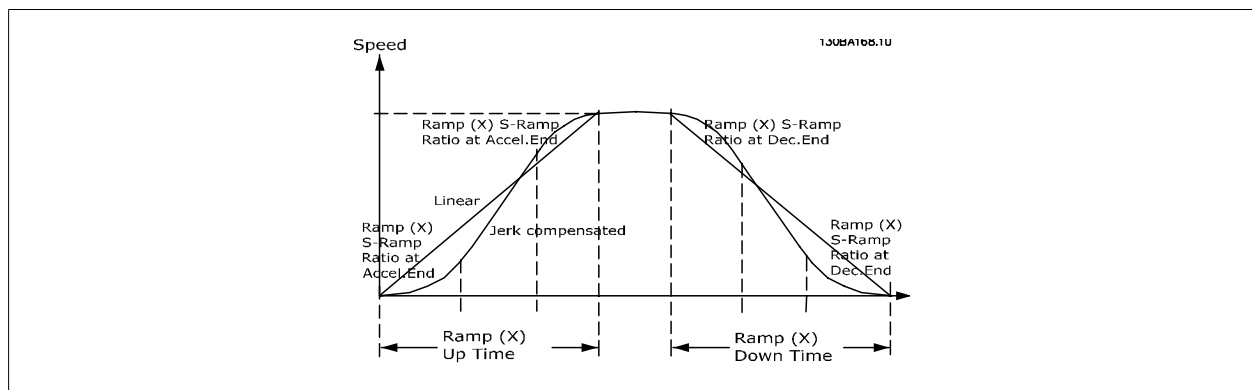**Accel/Decel Time:**

Acceleration time from 0 to nominal motor frequency (par. 1-23).

Ramp down: Deceleration time from nominal motor frequency (par. 1-23) to 0.

**Limitation:**

Too short of an Accel time can result in Torque limit warning (W12) and/or DC over voltage warning (W7). Ramping is stopped when the frequency converter has reached Torque limit motor mode (par. 4-16).

Too short of a Decel time can result in Torque limit warning (W12) and/or DC over voltage warning (W7). Ramping is stopped when the frequency converter reaches the Torque limit generator mode (par. 4-17) and/or the internal DC over voltage limit.

3-40 Accel/Decel 1 Type

Option:	Function:
[0] * Linear	Constant acceleration/deceleration.
[2] S-ramp	Smooth jerk compensated acceleration/deceleration.

3-41 Accel Time 1

Range:	Function:
3.00 s* [0.05 - 3600.00 s]	Enter accel time from 0 Hz to rated motor frequency ($f_{M,N}$) set in par. 1-23. Choose a accel time ensuring that torque limit is not exceeded, see par. 4-16.

3-42 Decel Time 1

Range:	Function:
3.00 s* [0.05 - 3600.00 s]	Enter decel time from rated motor frequency ($f_{M,N}$) in par. 1-23 to 0 Hz. Choose a decel time that does not cause over-voltage in due to regenerative operation of motor. Furthermore, regenerative torque must not exceed limit set in par. 4-17.

4.4.5. 3-5* Accel/Decel 2

See par. 3-4* for a description of ramp types.

NB!

Accel/Decel 2- alternative ramp times:

Changing from Accel/Decel 1 to Accel/Decel 2 is done via the digital input. See par. 5-1*, selection [34].

3-50 Accel/Decel 2 Type

Option:	Function:
[0] * Linear	Constant acceleration/deceleration.
[2] S-ramp	Smooth jerk compensated acceleration/deceleration.

3-51 Accel Time 2

Range:	Function:
3.00 s* [0.05 - 3600.00 s]	Enter accel time from 0 Hz to rated motor frequency ($f_{M,N}$) set in par. 1-23. Choose a accel time ensuring that torque limit is not exceeded, see par. 4-16.

3-52 Decel Time 2

Range:	Function:
3.00 s [0.05 - 3600.00 s]	Enter decel time from rated motor frequency ($f_{M,N}$) in par. 1-23 to 0 Hz. Choose a decel time that does not cause over-voltage in due to regenerative operation of motor. Furthermore, regenerative torque must not exceed limit set in par. 4-17.

4.4.6. 3-8* OtherAccel/Decel Ramps

This section contains parameters for Jog and Quick Stop Ramps.

With a Jog Ramp you can both ramp up and down whereas you can only ramp down with the Quick Stop Ramp.

**3-80 Jog Accel/Decel Time****Range:**

3.00 s* [0.05 - 3600.00 s]

Function:

A linear ramp applicable when Jog is activated. See par. 5-1*, selection [14].

Accel time = Decel time.

Jog Ramp time starts upon activation of a jog signal via a selected digital input or serial communication port.

3-81 Quick Stop Decel Time**Range:**

3.00 s* [0.05 - 3600.00 s]

Function:

A linear ramp applicable when Q-stop is activated. See par. 5-1*, selection [4].



4.5. Parameter Group 4: Limits/Warnings

4.5.1. 4-** Motor Limits

Parameter group for configuring limits and warning.

4.5.2. 4-1* Motor Limits

Use these parameters for defining the speed, torque and current working range for the motor.

4-10 Reverse Lock

Option:

Function:

If terminals 96, 97 and 98 are connected to U, V and W respectively, the motor runs clockwise when seen from the front.

NB!

This parameter cannot be adjusted while the motor is running

[0] Reverse Lock

The motor shaft rotates in forward direction. This setting prevents the motor from running in reverse direction. If par. 1-00 *Configuration mode* has been set to *Process Closed Loop* [3] this parameter must always be set to *Clockwise*.

[1] Reverse only

The motor shaft rotates in reverse direction. This setting prevents the motor from running in forward direction.

[2] * Both

With this setting the motor can run in both directions. However, the output frequency is limited to the range: Motor Speed Low Limit (par. 4-12) to Motor Speed High Limit (par. 4-14).

4-12 Motor Speed Low Limit

Range:

0.0 Hz* [0.0 - 400.0 Hz]

Function:

Set the *Minimum Motor Speed Limit* corresponding to the minimum output frequency of the motor shaft.

NB!

As the minimum output frequency is an absolute value, it cannot be deviated from.

4-14 Motor Speed High Limit

Range:

65.0 Hz* [0.0 - 400.0 Hz]

Function:

Set the *Maximum Motor Speed* corresponding to the maximum output frequency of the motor shaft.

NB!

As the maximum output frequency is an absolute value, it cannot be deviated from.

4-16 Torque Limit in Motor Mode

Range:

150 %* [0 - 400%]

Function:

Set the torque limit for motor operation.

The setting is not automatically reset to default when changing settings in par. 1-00 to 1-25 *Load & Motor*.

4-17 Torque Limit in Generator Mode

Range:

100 %* [0 - 400%]

Function:

Set the torque limit for generator mode operation.

The setting is not automatically reset to default when changing settings in par. 1-00 to 1-25 *Load & Motor*.

4.5.3. 4-5* Adjustable Warnings

Parameter group containing adjustable warning limits for current, speed, reference and feedback.

Warnings are shown in display, programmed output or serial bus.

**4-50 Warning Current Low****Range:**

0.00 A* [0.00 - 26.00 A]

Function:

Use this parameter to set a lower limit for the current range.

If current drops below the set limit, warning bit 8 is set in par. 16-94.

Output Relay can be configured to indicate this warning. Keypad warning light does not light when this parameter's set limit is reached.

Set value for low current limit.

4-51 Warning Current High**Range:**

26.00 A* [0.00 - 26.00 A]

Function:

Use this parameter to set an upper limit for the current range.

If current exceeds the set limit, warning bit 7 is set in par. 16-94.

Output Relay can be configured to indicate this warning. Keypad warning light does not light when this parameter's set limit is reached.

Set upper current limit.

4-58 Missing Motor Phase Function**Option:**

[0] Off
[1]* On

Function:

A missing motor phase causes the motor torque to drop. This monitor may be disabled for special purposes (eg. small motors running pure U/f model), but as there is a risk of overheating the motor, GE strongly recommends that the function is On.

A missing motor phases causes the frequency converter to trip and report an alarm.

NB!

This parameter cannot be changed while motor runs.

Function is disabled.
Function is enabled.

4.5.4. 4-6* Jump Frequencies

In some applications mechanical resonance may occur. Avoid resonance points by creating a Jump frequency. The frequency converter ramps through the Jump frequency area thereby passing mechanical resonance points quickly.

4-61 Jump Frequency From [Hz]**Range:**

0.0 Hz* [0.0 - 400.0 Hz]

Function:

Array [2]

Enter either the lower or upper limit of the speeds to be avoided.

It does not matter whether Jump From or Jump To is the upper or lower limit, however the Jump Frequency function is disabled if the two parameters are set to the same value.

4-63 Jump Frequency To [Hz]**Range:**

0.0 Hz* [0.0 - 400.0 Hz]

Function:

Array [2]

Enter either the upper or lower limit of the speed area to be avoided.

Make sure to enter the **opposite** limit of that in par. 4-61 *Jump Frequency From [Hz]*.



4.6. Parameter Group 5: Digital In/Out

4.6.1. 5-** Digital In/Out

The following describes all digital input command functions and signals.

4.6.2. 5-1* Digital Inputs

Parameters for configuring the functions for the input terminals.

The digital inputs are used for selecting various functions in the frequency converter. All digital inputs can be set to the following:

[0]	No Operation	The frequency converter will not react to signals transmitted to the terminal.
[1]	Reset	Reset the frequency converter after a Trip/Alarm. Not all alarms can be reset.
[2]	Coast Inverse	Coasting stop, inverted input (NC). The frequency converter leaves the motor in free mode.
[3]	Coast and reset inv.	Reset and coasting stop inverted input (NC). The frequency converter resets and leaves the motor in free mode.
[4]	Quick stop inverse	Inverted input (NC). Generates a stop in accordance with the quick-stop ramp time set in par. 3-81. When motor stops, shaft is in free mode.
[5]	DC-brake inv.	Inverted input for DC braking (NC). Stops motor by energizing it with DC current for a certain time period, see par. 2-01. Function is only active when value in par. 2-02 is different from 0.
[6]	Stop inv.	Stop inverted function. Generates stop function when selected terminal goes from logical level "1" to "0". Stop is performed according to selected ramp time.
[8]	Start	Select start for a start/stop command. 1 = Start, 0 = stop.
[9]	Latched start	Motor starts if a pulse is applied for min. 2 ms. Motor stops when Stop inverse is activated.
[10]	Reversing	Change direction of motor shaft rotation. Reversing signal only changes direction of rotation; it does not activate start function. Select <i>Both directions</i> [2] in par. 4-10. 0 = normal, 1 = reversing.
[11]	Start reversing	Use for start/stop and for reversing at the same time. Signals on start [8] are not allowed at the same time. 0 = stop, 1 = start reversing.
[12]	Enable start forward	Use if motor shaft must rotate clockwise at start.
[13]	Enable start reverse	Use if motor shaft must rotate counterclockwise at start.
[14]	Jog	Use for activating jog speed. See par. 3-11.
[16]	Preset ref bit 0	Preset ref bit 0, 1 and 2 enables a choice between one of the eight preset references according to the table below.
[17]	Preset ref bit 1	Same as preset ref bit 0 [16], see par. 3-10.
[18]	Preset ref bit 2	Same as preset ref bit 0 [16].
[19]	Freeze reference	Freeze actual reference. The frozen reference is now the point of enable/condition for Speed up and Speed down to be used. If Speed up/down is used, speed change always follows ramp 2 (par. 3-51 and 3-52) in the range par. 3-02 <i>Minimum Reference</i> - par. 3-03 <i>Maximum Reference</i> .
[20]	Freeze output	Freeze the actual motor frequency (Hz). The frozen motor frequency is now the point of enable/condition for Speed up and Speed down to be used. If Speed up/down is used, the speed change always follows ramp 2 in the range par. 4-12, <i>Motor Speed Low Limit</i> - par. 4-14, <i>Motor Speed High Limit</i> . NB! When freeze output is active, the frequency converter cannot be stopped via a low Start [8] signal. Stop the frequency converter via a terminal programmed for Coasting Inverse [2] or Coast and reset, inverse [3].
[21]	Speed up	Select Speed up and Speed down if digital control of the up/down speed is desired (motor potentiometer). Activate this function by selecting either Freeze reference or Freeze output. When Speed up is activated for less than 400 ms. the resulting reference will be increased by 0.1%. If Speed up is activated for more than 400 ms. the resulting reference will ramp according to ramp 2 in par. 3-51.
[22]	Speed down	Same as Speed up [21].
[23]	Setup select bit 0	Set par. 0-10 <i>Active set-up</i> to Multi set-up. Logic 0 = set-up 1, Logic 1 = Set-up 2.



[26]	Precise stop inverse (only terminal 33)	Prolong the stop signal to give a precise stop independent of scan time. The function is available for terminal 33 only.
[27]	Start, precise stop (only terminal 33)	As [26], but including Start.
[28]	Catch up	Select Catch up/Slow down to increase or reduce the resulting reference value by the percentage set in par. 3-12.
[29]	Slow down	Same as Catch up [28]
[32]	Pulse input (only terminal 33)	Select Pulse input when using a pulse sequence as either reference or feedback. Scaling is done in par. group 5-5*.
[34]	Ramp bit 0	Logic 0 = Ramp1, see par. 3-4*. Logic 1 = Ramp2, see par. 3-5*.
[60]	Counter A (up)	Input for counter A.
[61]	Counter A (down)	Input for counter A.
[62]	Reset counter A	Input for reset of counter A.
[63]	Counter B (up)	Input for counter B.
[64]	Counter B (down)	Input for counter B.
[65]	Reset counter B	Input for reset of counter B.

5-10 Terminal 18 Digital Input

Option:	Function:
[8] * Start	Select function from available digital input range. See par. 5-1* for choices.

5-11 Terminal 19 Digital Input

Option:	Function:
[10] * Reversing	Select function from available digital input range. See par. 5-1* for choices.

5-12 Terminal 27 Digital Input

Option:	Function:
[1] * Reset	Select function from available digital input range. See par. 5-1* for choices.

5-13 Terminal 29 Digital Input

Option:	Function:
[14] * Jog	Select function from available digital input range. See par. 5-1* for choices.

5-15 Terminal 33 Digital Input

Option:	Function:
[16] * Preset bit 0	Select function from available digital input range. See par. 5-1* for choices.

4.6.3. 5-4* Relays

Parameter group for configuring timing and output functions for relays.

[0]	No Operation	Default for all digital and relay outputs.
[1]	Control Ready	Control board receives supply voltage.
[2]	Drive Ready	Frequency converter is ready for operation and applies supply signal on control board.
[3]	Drive Ready, Remote	Frequency converter is ready for operation in Auto mode.
[4]	Enable/No Warning	Frequency converter is ready for operation. No start or stop command is given. No warnings are present.
[5]	Drive Running	Motor is running.
[6]	Running/No Warning	Motor runs, and no warning are present.



[7]	Run in Range/No Warning	Motor runs within programmed current ranges, see parameters 4-50 and 4-51. No warnings are present.
[8]	Run on ref/No Warning	Motor runs at reference speed.
[9]	Alarm	An alarm activates output.
[10]	Alarm on Warning	An alarm or warning activates output.
[12]	Out of Current Range	Motor current is outside range set in parameters 4-50 and 4-51.
[13]	Below Current, low	Motor current is lower than set in par. 4-50.
[14]	Above Current, high	Motor current is higher than set in par. 4-51.
[21]	Thermal Warning	Thermal warning is present when temperature exceeds limit in motor, frequency converter, brake resistor or thermistor.
[22]	Ready, No Thermal Warning	Frequency converter is ready for operation and no over-temperature warning is present.
[23]	Remote Ready, No Thermal Warning	Frequency converter is ready for operation in Auto mode, and no over-temperature warning is present.
[24]	Ready, Voltage OK	Frequency converter is ready for operation and mains voltage is within specified voltage range.
[25]	Reverse	Motor runs/is ready to run clockwise when logic = 0 and counter clockwise when logic = 1. Output changes as soon as reversing signal is applied.
[26]	Bus OK	Active communication (no time-out) via serial communication port.
[28]	Brake, No Warn	Brake is active, and no warnings are present.
[29]	Brake Ready/No Fault	Brake is ready for operation, and no faults are present.
[30]	Brake Fault (IGBT)	Protects frequency converter if fault on brake modules is present. Use relay to cut out main voltage from frequency converter.
[32]	Mech. Brake Control	Enables control of external mechanical brake, see parameter group 2-2*.
[36]	Control Word Bit 11	Bit 11 in control word controls relay.
[51]	Local Ref Active	
[52]	Remote Ref Active	
[53]	No Alarm	
[54]	Start Cmd Active	
[55]	Running Reverse	
[56]	Drive in Hand Mode	
[57]	Drive in Auto Mode	
[60]	Comparator 0	See par. group 13-1*. If comparator 0 is evaluated as TRUE, output goes high. Otherwise, it is low.
[61]	Comparator 1	See par. group 13-1*. If comparator 1 is evaluated as TRUE, output goes high. Otherwise, it is low.
[62]	Comparator 2	See par. group 13-1*. If comparator 2 is evaluated as TRUE, output goes high. Otherwise, it is low.
[63]	Comparator 3	See par. group 13-1*. If comparator 3 is evaluated as TRUE, output goes high. Otherwise, it is low.
[70]	Logic Rule 0	See par. 13-4*. If Logic Rule 1 is evaluated as TRUE, output goes high. Otherwise, it is low.
[71]	Logic Rule 1	See par. 13-4*. If Logic Rule 2 is evaluated as TRUE, output goes high. Otherwise, it is low.
[72]	Logic Rule 2	See par. 13-4*. If Logic Rule 3 is evaluated as TRUE, output goes high. Otherwise, it is low.
[73]	Logic Rule 3	See par. 13-4*. If Logic Rule 3 is evaluated as TRUE, output goes high. Otherwise, it is low.
[81]	Logic Controller Digital Output B	See par. 13-52 <i>SL Control Action</i> . When Logic Controller Action <i>Set dig. out. A high</i> [39] is executed, input goes high. When Smart Logic Action <i>Set dig. out. A low</i> [33] is executed, input goes low.

5-40 Function Relay

Option:

[0] * No Operation

Function:

Select function from available relay output range.

4.6.4. 5-5* Pulse Input

Set par. 5-15 to choice [32] pulse input. Now terminal 33 handles a pulse input in the range from Low frequency, par. 5-55, to High frequency, par. 5-56. Scale frequency input via par. 5-57 and par. 5-58.

**5-55 Terminal 33 Low Frequency****Range:**

20 Hz* [20 - 4999 Hz]

Function:

Enter low frequency corresponding to low motor shaft speed (i.e. low reference value) in par. 5-57.

5-56 Terminal 33 High Frequency**Range:**

5000 Hz* [21 - 5000 Hz]

Function:

Enter high frequency corresponding to high motor shaft speed (i.e. high reference value) in par. 5-58.

5-57 Terminal 33 Low Ref./Feedb. Value**Range:**

0.000* [-4999 - 4999]

Function:

Set reference/feedback value corresponding to low pulse frequency value set in par. 5-55.

5-58 Terminal 33 High Ref./Feedb. Value**Range:**

50.000* [-4999 - 4999]

Function:

Set reference/feedback value corresponding to high pulse frequency value set in par. 5-56.



4.7. Parameter Group 6: Analogue In/Out

4.7.1. 6-** Analog In/Out

Parameter group for configuring analog inputs and outputs.

4.7.2. 6-0* Analog I/O Mode

Parameter group for setting up the analog I/O configuration.

6-00 Live Zero Timeout Time

Range:

10 s [1 - 99 s]

Function:

The Live Zero function is used for monitoring the signal on an analog input. If the signal disappears, a *Live Zero* warning is reported.

Set delay time before *Live Zero Timeout Function* is applied (par. 6-01).

If the signal reappears during the set delay, timer will be reset.

When live zero is detected, the frequency converter freezes output frequency and starts *Live Zero Timeout* timer.

6-01 Live Zero Timeout Function

Option:

[0] *

Off

Function:

Function is activated if input signal is below 50% of value set in parameters 6-10, 6-12 or 6-22.

Function is disabled.

[1]

Freeze output

Output frequency remains at value it had when live zero was detected.

[2]

Stop

Frequency converter decels down to 0 Hz. Remove live zero error condition before restarting frequency converter.

[3]

Jogging

Frequency converter accels to jog speed, see par. 3-41.

[4]

Max Speed

Frequency converter accels to Motor Speed High Limit, see par. 4-14.

[5]

Stop and Trip

Frequency converter decels down to 0 Hz and then trips. Remove live zero condition and activate reset before restarting the frequency converter.

4.7.3. 6-1* Analog Input 1

Parameters for configuring scaling and limits for analog input 1 (terminal 53).

NB!


Micro switch 4 in position U:

Parameters 6-10 and 6-11 are active.

Micro switch in position I:

Parameters 6-12 and 6-13 are active.

See AF-60 LP™ Micro Drive Quick Guide

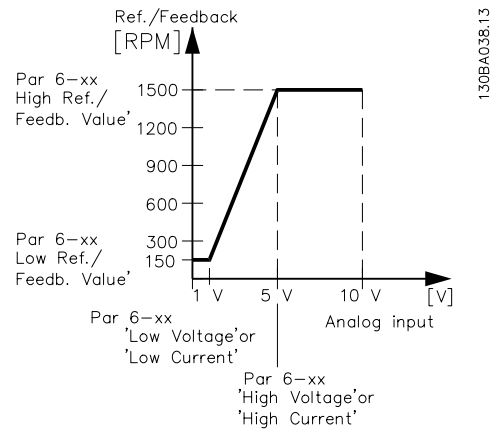

6-10 Terminal 53 Low Voltage

Range:**Function:**

This scaling value should correspond to minimum reference value set in par. 6-14. See also section *Reference Handling*.

0.07 V* [0.00 - 9.90 V]

Enter low voltage value.



The value must be set to min. 1V in order to activate the Live Zero Timeout function in par. 6-01.

6-11 Terminal 53 High Voltage

Range:**Function:**

This scaling value should correspond to maximum reference value set in par. 6-15.

10.0 V* [0.10 - 10.00 V]

Enter high voltage value.

6-12 Terminal 53 Low Current

Range:**Function:**

This reference signal should correspond to minimum reference value set in par. 3-02.

0.14 mA* [0.00 - 19.90 mA]

Enter low current value.



The value must be set to min. 2 mA in order to activate the Live Zero Timeout function in par. 6-01.

6-13 Terminal 53 High Current

Range:**Function:**

This reference signal should correspond to the maximum reference value set in par. 6-15.

20.00 mA* [0.10 - 20.00 mA]

Enter high current value.

6-14 Terminal 53 Low Ref./Feedb. Value

Range:**Function:**

The scaling value corresponding to the low voltage/low current set in parameters 6-10 and 6-12.

0.000* [-4999 - 4999]

Enter analog input scaling value.

**6-15 Terminal 53 High Ref./Feedb. Value****Range:**

50.000* [-4999.000 - 4999.000]

Function:

The scaling value corresponding to the maximum reference feedback value set in parameters 6-11 and 6-13.

Enter analog input scaling value.

6-16 Terminal 53 Filter Time Constant**Range:**

0.01 s* [0.01 - 10.00 s]

Function:

A first-order digital low pass filter time constant for suppressing electrical noise in terminal 53. A high time constant value improves dampening but also increases time delay through the filter.

Enter time constant.

6-19 Terminal 53 Mode**Option:**

[0] *

Voltage Mode

[1]

Current Mode

Function:

Select the input to be present on terminal 53.



Par. 6-19 MUST be set according to Micro switch 4 setting.

4.7.4. 6-2* Analog Input 2

Parameters for configuring scaling and limits for analog input 2, terminal 60.

6-22 Terminal 60 Low Current**Range:**

0.14 mA* [0.00 - 19.90 mA]

Function:

This reference signal should correspond to minimum reference value set in par. 3-02.

Enter low current value.



The value must be set to min. 2 mA in order to activate the Live Zero Timeout function in par. 6-01.

6-23 Terminal 60 High Current**Range:**

20.00 mA* [0.10 - 20.00 mA]

Function:

This reference signal should correspond to the high current value set in par. 6-25.

Enter high current value.

6-24 Terminal 60 Low Ref./Feedb. Value**Range:**

0.000* [-4999 - 4999]

Function:

The scaling value should correspond to the minimum reference feedback value set in par. 3-02.

Enter analog input scaling value.

6-25 Terminal 60 High Ref./Feedb. Value**Range:**

50.00* [-4999 - 4999]

Function:

The scaling value should correspond to the maximum reference feedback value set in par. 3-03.

Enter analog input scaling value.

**6-26 Terminal 60 Filter Time Constant****Range:**

0.01 s* [0.01 - 10.00 s]

Function:

A first-order digital low pass filter time constant for suppressing electrical noise in terminal 54. A high time constant value improves dampening, but also increases time delay through the filter.

NB!

This parameter cannot be changed while motor runs.

Enter time constant.

4.7.5. 6-8* Keypad Potentiometer

The Keypad potentiometer can be selected either as Reference Resource or Relative Reference Resource.

NB!

In Hand mode the Keypad potentiometer functions as local reference.

6-81 Keypad Potentiometer Low Ref. Value**Range:**

0.000* [-4999 - 4999]

Function:

The scaling value corresponding to 0.

Enter low reference value.

The reference value corresponding to potentiometer turned fully counterclockwise (0 degrees).

6-82 Keypad Potentiometer High Ref. Value**Range:**

50.00* [-4999 - 4999]

Function:

The scaling value corresponding to the maximum reference feedback value set in par. 3-03.

Enter high reference value.

The reference value corresponding to potentiometer turned fully clockwise (200 degrees).

4.7.6. 6-9* Analog Output

These parameters are for configuring the analog outputs of the frequency converter.

6-90 Terminal 42 Mode**Option:**

[0] * 0 - 20 mA

Function:

Range for analog outputs is 0-20 mA

[1] 4-20 mA

Range for analog outputs is 4 - 20 mA

[2] Digital

Functions as slow reacting digital output. Set value to either 0 mA (off) or 20 mA (on), see par. 6-92.

6-91 Terminal 42 Analog Output**Option:**

[0] * No Operation

Function:

Select the function for terminal 42 as an analog output.

[10] Output Frequency

[11] Reference

[12] Feedback

[13] Motor Current

[16] Power

[20] Bus Control

6-92 Terminal 42 Digital Output**Option:****Function:**

See par. 5-4*, *Relays*, for choices and descriptions.



[0] *	No Operation
[80]	Logic Controller Digital Output A See par. 13-52 <i>Logic Controller Action</i> . When Logic Controller Action Set dig. out. A high [38] is executed, input goes high. When Smart Logic Action Set dig. out. A low [32] is executed, input goes low.


6-93 Terminal 42 Output Min. Scale

Range:

0.00 % [0.00 - 200.0%]

Function:

Scale minimum output of selected analog signal at terminal 42 as percentage of maximum signal value. E.g. if 0 mA (or 0 Hz) is desired at 25% of maximum output value, programme 25%. Scaling values up to 100% can never be higher than corresponding setting in par. 6-52.

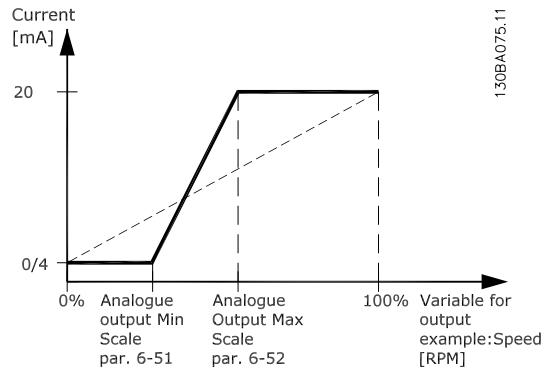

6-94 Terminal 42 Output Max. Scale

Range:

100.00%* [0.00 - 200.00%]

Function:


Scale maximum output of selected analog signal at terminal 42. Set value to maximum value of current signal output. Scale output to give a current lower than 20 mA at full scale; or 20 mA at an output below 100% of maximum signal value.

If 20 mA is the desired output current at a value between 0 - 100% of the full-scale output, programme percentage value in the parameter, i.e. 50% = 20 mA. If a current between 4 and 20 mA is desired at maximum output (100%), calculate percentage value as follows:

$$\frac{20 \text{ mA}}{\text{desired maximum current}} \times 100 \%$$

i.e.

$$10 \text{ mA} = \frac{20}{10} \times 100 = 200 \%$$

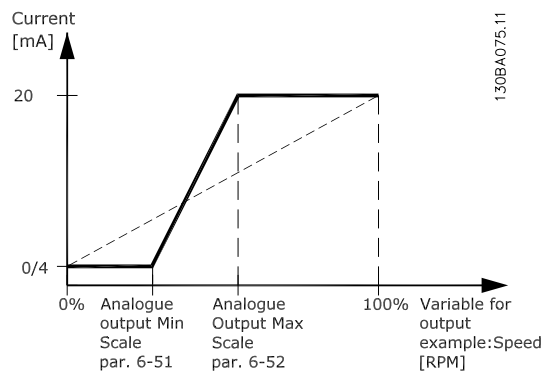



4.8. Parameter Group 7: Controllers

4.8.1. 7-** Controllers

Parameters group for configuring application controls.

4.8.2. 7-2* Process Ctrl. Feedb

Select feedback sources and handling for Process PI Control.

NB!

Set par. 3-15 to [0] *No Function* in order to use Analog Input as a feedback signal.

4

7-20 Process CL Feedback Resources

Option: **Function:**
Select input to function as feedback signal.

[0] *	No Function
[1]	Analog Input 53
[2]	Analog Input 60
[8]	Pulse Input 33
[11]	Local Bus Ref.

4.8.3. 7-3* Process PI Control

7-30 Process PI Normal/Inverse Control

Option:	Function:
[0] * Normal	Feedback larger than setpoint result in a speed reduction. Feedback less than setpoint result in a speed increase.
[1] Inverse	Feedback larger than setpoint result in a speed increase. Feedback less than setpoint result in a speed reduction.

7-31 Process PI Anti Windup

Option:	Function:
[0] Disable	Regulation of a given error will continue even when the output frequency cannot be increased/decreased.
[1] * Enable	PI-controller ceases from regulating a given error when the output frequency cannot be increased/decreased.

7-32 Process PI Start Speed

Range:	Function:
0.0 Hz* [0.0 - 200.0 Hz]	Until the set motor speed has been reached the frequency converter operates in Open Loop mode.

7-33 Process PI Proportional Gain

Option:	Function:
[0.01] * 0.00 - 10.00	Enter the value for the P proportional gain, i.e. the multiplication factor of the error between the set point and the feedback signal. Note! 0.00 = Off.

7-34 Process PI Integral Time

Range:	Function:
9999.00 s* [0.10 - 9999.00 s]	The integrator provides an increasing gain at a constant error between the set point and the feedback signal. The integral time is the time needed by the integrator to reach the same gain as the proportional gain.

**7-38 Process Feed Forward Factor****Range:**

0%* [0 - 400%]

Function:

The FF factor sends a part of the reference signal around the PI controller which then only affects part of the control signal.

By activating the FF factor less overshoot and high dynamics are gained when changing the setpoint.

This parameter is always active when par. 1-00 *Configuration Mode* is set to *Process* [3].

7-39 On Reference Bandwidth**Range:**

5% [0 - 200%]

Function:

Enter the value for the On Reference Bandwidth.

The PI control error is the difference between setpoint and feedback and when this is less than the value set in this parameter the On Reference is active.



4.9. Parameter Group 8: Communication

4.9.1. 8-** Communication

Parameter group for configuring communication.

4.9.2. 8-0* General Settings

Use this parameter group for configuring the general settings for communication.

8-01 Control Site

Option:	Function:
[0] * Digital and Control Word	Use both digital input and control word as control.
[1] Digital Only	Use digital input as control.
[2] Control Word Only	Use control word only as control.

NB!

The setting in this parameter overrules settings in par. 8-50 to 8-56.

8-02 Control Word Source

Option:	Function:
[0] None	Function is inactive
[1] * Drive RS485	Monitoring control word source is done via serial communication port RS485.

8-03 Control Word Timeout Time

Range:	Function:
1.0 s* [0.1 - 6500 s]	Enter time to pass before control word timeout function (par. 8-04) must be carried out.

8-04 Control Word Timeout Function

Option:	Function:
	Select the action to be taken in case of a timeout.
[0] * Off	No function.
[1] Freeze Output	Freeze output until communication resumes.
[2] Stop	Stop with auto restart when communication resumes.
[3] Jogging	Run motor at jog frequency until communication resumes.
[4] Max. Speed	Run motor at max. frequency until communication resumes.
[5] Stop and Trip	Stop motor, then reset frequency converter in order to restart either via Keypad or digital input.

8-06 Reset Control Word Timeout

Option:	Function:
	Resetting the control word timeout will remove any timeout function.
[0] * No Function	Control word timeout is not reset.
[1] Do Reset	Control word timeout is reset, and parameter goes into <i>No Function</i> state.

4.9.3. 8-3* GE Drive Port Settings

Parameters for configuring the GE Drive Port.



4.9.4. 8-30 Protocol

8-30 Protocol

Option:**Function:**

Select the protocol to be used. Note that changing protocol will not be effective until after powering off the frequency converter.

[0] * GE Drive Protocol

[2] Modbus RTU

8-31 Address

Range:**Function:**

Select the address for the bus.

1* [1 - 126]

Drive-bus range is 1-126.

Modbus range is 1-247.

8-32 Drive Port Baud Rate

Option:**Function:**

Select baud rate for Drive Port.

NB!

Changing baud rate will be effective after responding to any ongoing bus-requests.

[0] 2400 Baud

[1] 4800 Baud

[2] * 9600 Baud

[3] 19200 Baud

[4] 38400 Baud

8-33 Drive Port Parity

Option:**Function:**

This parameter only affects Modbus as Drive bus always has even parity.

[0] * Even Parity (1 stopbit)

[1] Odd parity

[2] No Parity (1 stopbit)

Select this for Modbus RTU

[3] No Parity (2 stopbit)

8-35 Minimum Response Delay

Range:**Function:**

0.010 s* [0.001 - 0.500 s]

Specify minimum delay time between receiving a request and transmitting a response.

8-36 Max Response Delay

Range:**Function:**

5.000 s* [0.010 - 10.00 s]

Specify maximum permissible delay time between transmitting a request and receiving a response. Exceeding this time delay causes control word timeout.

4.9.5. 8-5* Digital/Bus

Parameters for configuring control word Digital/Bus merging.

NB!

Parameters are only active when par. 8-01, *Control Slte*, is set to *Digital* and control word [0].

**8-50 Coasting Select****Option:****Function:**

Select control of coasting function via digital input and/or bus.

[0]	Digital Input	Activation via a digital input.
[1]	Bus	Activation via serial communication port.
[2]	LogicAnd	Activation via serial communication port and a digital input.
[3] *	LogicOr	Activation via serial communication port or a digital input.

8-51 Quick Stop Select**Option:****Function:**

Select control of quick stop function via digital input and/or bus.

[0]	Digital Input	Activation via a digital input.
[1]	Bus	Activation via serial communication port.
[2]	LogicAnd	Activation via serial communication port and a digital input.
[3] *	LogicOr	Activation via serial communication port or a digital input.

8-52 DC Brake Select**Option:****Function:**

Select control of DC brake via digital input and/or bus.

[0]	Digital Input	Activation via a digital input.
[1]	Bus	Activation via serial communication port.
[2]	LogicAnd	Activation via serial communication port and a digital input.
[3] *	LogicOr	Activation via serial communication port or a digital input.

8-53 Start Select**Option:****Function:**

Select control of start function via digital input and/or bus.

[0]	Digital Input	Activation via a digital input.
[1]	Bus	Activation via serial communication port.
[2]	LogicAnd	Activation via serial communication port and a digital input.
[3] *	LogicOr	Activation via serial communication port or a digital input.

8-54 Reversing Select**Option:****Function:**

Select control of reversing function via digital input and/or bus.

[0]	Digital Input	Activation via a digital input.
[1]	Bus	Activation via serial communication port.
[2]	LogicAnd	Activation via serial communication port and a digital input.
[3] *	LogicOr	Activation via serial communication port or a digital input.

8-55 Set-up Select**Option:****Function:**

Select control of set-up selection via digital input and/or bus.

[0]	Digital Input	Activation via a digital input.
[1]	Bus	Activation via serial communication port.
[2]	LogicAnd	Activation via serial communication port and a digital input.
[3] *	LogicOr	Activation via serial communication port or a digital input.

**8-56 Preset Reference Select**

Option:		Function:
		Select control of Preset Reference selection via digital input and/or bus.
[0]	Digital Input	Activation via a digital input.
[1]	Bus	Activation via serial communication port.
[2]	LogicAnd	Activation via serial communication port and a digital input.
[3] *	LogicOr	Activation via serial communication port or a digital input.

4.9.6. 8-9* Bus Feedback

Parameter for configuring bus feedback.

8-94 Bus Feedback 1

Range:	Function:
0* [0x8000 - 0x7FFF]	Bus feedback is delivered via Drive or Modbus by writing the feedback value into this parameter.



4.10. Parameter Group 13: Logic Controller

4.10.1. 13-** Programming Features

Logic Controller is a sequence of user defined actions (par. 13-52 [X]) executed by the Logic Controller when the associated user defined event (par. 13-51 [X]) is set to *True*.


Events and actions are linked in pairs, meaning that when an event is true, the linked action is carried out. After this the next event is evaluated and its belonging action carried out and so on. Only one event is evaluated at the time.

If an event is evaluated as *False*, the Logic Controller takes no action during the scan interval and no other events are evaluated.

It is possible to programme from 1 to 20 events and actions.

When the last event/action has been executed, the sequence starts again from event/action [0].

The drawing shows an example with three events/actions:

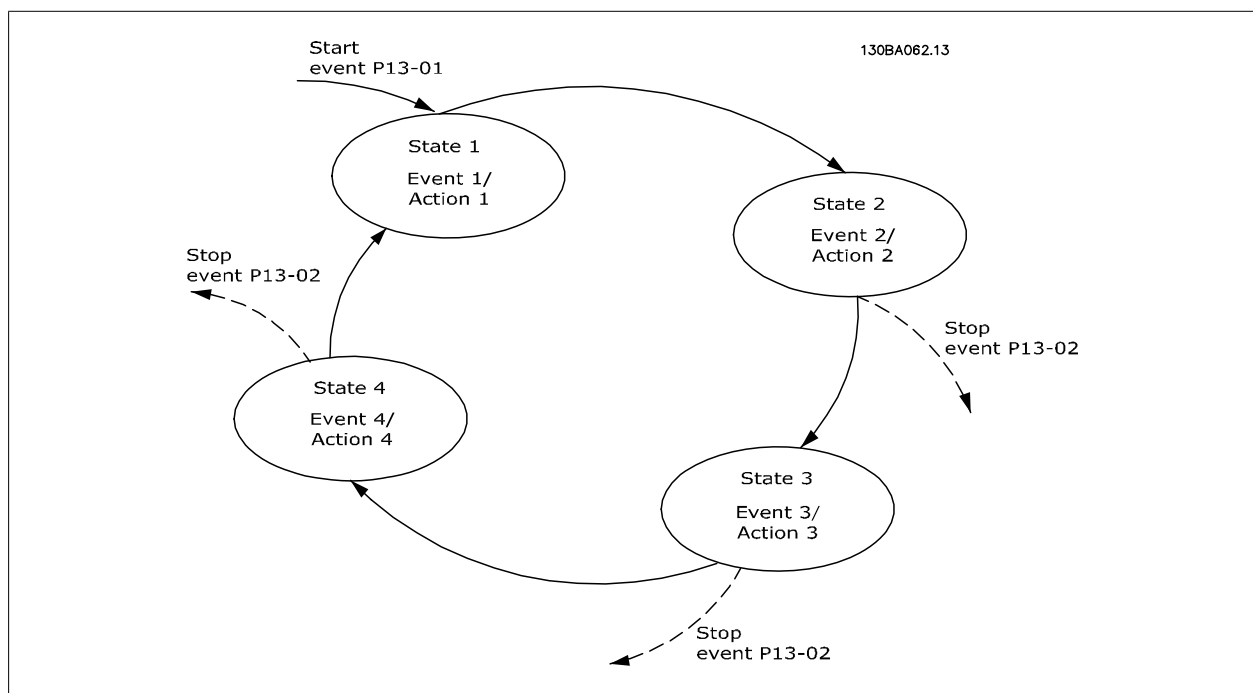

Starting and stopping the Logic Controller:

Start the Logic Controller by selecting *On* [1] in par. 13-00. The Logic Controller starts evaluating Event 0, and if this is evaluated as *TRUE*, the Logic Controller continues its cycle.

The Logic Controller stops when the *Stop Event*, par. 13-02, is *TRUE*. The Logic Controller can also be stopped by selecting *Off* [0] in par. 13-00.

To reset all Logic Controller parameters select *Reset Logic Controller* [1] in par. 13-03 and start programming from scratch.

4.10.2. 13-0* Logic Controller Settings

Use Logic Controller settings to activate, deactivate and reset the Logic Controller.

13-00 Logic Controller Mode

Option:	Function:
[0] * Off	Function is disabled.



[1]	On	Logic Controller is active.
-----	----	-----------------------------

13-01 Start Event**Option:****Function:**

Select input to activate Logic Controller.

[0]	False	Enters <i>False</i> in logic rule.
[1]	True	Enters <i>True</i> in logic rule.
[2]	Running	See par. 5-4* [5] for description.
[3]	InRange	See par. 5-4* [7] for description.
[4]	OnReference	See par. 5-4* [8] for description.
[7]	Out of Current Range	See par. 5-4* [12] for description.
[8]	BelowLow	See par. 5-4* [13] for description.
[9]	AboveHigh	See par. 5-4* [14] for description.
[16]	ThermalWarning	See par. 5-4* [21] for description.
[17]	MainsOutOfRange	Mains voltage is outside the specified voltage range.
[18]	Reversing	See par. 5-4* [25] for description.
[19]	Warning	A warning is active.
[20]	Alarm_Trip	A trip alarm is active.
[21]	Alarm_TripLock	A trip lock alarm is active.
[22]	Comparator 0	Use result of comparator 0 in logic rule.
[23]	Comparator 1	Use result of comparator 1 in logic rule.
[24]	Comparator 2	Use result of comparator 2 in logic rule.
[25]	Comparator 3	Use result of comparator 3 in logic rule.
[26]	LogicRule 0	Use result of logic rule 0 in logic rule.
[27]	LogicRule 1	Use result of logic rule 1 in logic rule.
[28]	LogicRule 2	Use result of logic rule 2 in logic rule.
[29]	LogicRule 3	Use result of logic rule 3 in logic rule.
[33]	DigitalInput_18	Use value of DI 18 in logic rule.
[34]	DigitalInput_19	Use value of DI 19 in logic rule.
[35]	DigitalInput_27	Use value of DI 27 in logic rule.
[36]	DigitalInput_29	Use value of DI 29 in logic rule.
[38]	DigitalInput_33	
[39] *	StartCommand	This event is <i>True</i> , if frequency converter is started by any means (digital input or other).
[40]	DriveStopped	This event is <i>True</i> , if frequency converter is stopped or coasted by any means (digital input or other).

13-02 Stop Event**Option:****Function:**

Select input to activate Logic Controller.

[0]	False	Enters <i>False</i> in logic rule.
[1]	True	Enters <i>True</i> in logic rule.
[2]	Running	See par. 5-4* [5] for description.
[3]	InRange	See par. 5-4* [7] for description.
[4]	OnReference	See par. 5-4* [8] for description.
[7]	Out of Current Range	See par. 5-4* [12] for description.
[8]	BelowLow	See par. 5-4* [13] for description.
[9]	AboveHigh	See par. 5-4* [14] for description.
[16]	ThermalWarning	See par. 5-4* [21] for description.
[17]	MainsOutOfRange	Mains voltage is outside the specified voltage range.



[18]	Reversing	See par. 5-4* [25] for description.
[19]	Warning	A warning is active.
[20]	Alarm_Trip	A trip alarm is active.
[21]	Alarm_TripLock	A trip lock alarm is active.
[22]	Comparator 0	Use result of comparator 0 in logic rule.
[23]	Comparator 1	Use result of comparator 1 in logic rule.
[24]	Comparator 2	Use result of comparator 2 in logic rule.
[25]	Comparator 3	Use result of comparator 3 in logic rule.
[26]	LogicRule 0	Use result of logic rule 0 in logic rule.
[27]	LogicRule 1	Use result of logic rule 1 in logic rule.
[28]	LogicRule 2	Use result of logic rule 2 in logic rule.
[29]	LogicRule 3	Use result of logic rule 3 in logic rule.
[30]	LC Timeout0	Use result of timer 0 in logic rule.
[31]	LC Timeout1	Use result of timer 1 in logic rule.
[32]	LC Timeout2	Use result of timer 2 in logic rule.
[33]	DigitalInput_18	Use value of DI 18 in logic rule.
[34]	DigitalInput_19	Use value of DI 19 in logic rule.
[35]	DigitalInput_27	Use value of DI 27 in logic rule.
[36]	DigitalInput_29	Use value of DI 29 in logic rule.
[38]	DigitalInput_33	
[39]	StartCommand	This event is <i>True</i> , if frequency converter is started by any means (digital input or other).
[40] *	DriveStopped	This event is <i>True</i> , if frequency converter is stopped or coasted by any means (digital input or other).

13-03 Reset Logic Controller

Option:

Function:

[0] *	Do Not Reset	Retains all settings programmed in parameter group 13.
[1]	Reset Logic Controller	Reset all group 13 parameters to default settings.

4.10.3. 13-1* Comparators

Comparators are used for comparing continuous variables (i.e. output frequency, output current, analog input etc.) to fixed preset values. In addition, there are digital values that will be compared to fixed time values. See explanation in par. 13-10. Comparators are evaluated once in each scan interval. Use the result (TRUE or FALSE) directly. All parameters in this parameter group are array parameters with index 0 to 5. Select index 0 to programme Comparator 0, select index 1 to programme Comparator 1, and so on.

13-10 Comparator Operand

Array [4]

		Select variable to be monitored by comparator.
[0] *	Disabled	Comparator is disabled.
[1]	Reference	Resulting remote reference (not local) as a percentage.
[2]	Feedback	Feedback in [Hz].
[3]	MotorSpeed	Motor speed in Hz.
[4]	MotorCurrent	Motor current in [A].
[6]	MotorPower	Motor power in either [kW] or [hp].
[7]	MotorVoltage	Motor voltage in [V].
[8]	DCLinkVoltage	DC-link voltage in [V].
[12]	AnalogInput53	Expressed as a percentage.
[13]	AnalogInput60	Expressed as a percentage.
[18]	PulseInput33	Expressed as a percentage.



[20]	AlarmNumber	Shows number of the alarm.
[30]	CounterA	Number of counts.
[31]	CounterB	Number of counts.

13-11 Comparator Operator

Array [4]

Select operator to be used in comparison.		
[0]	Less Than <	Result of evaluation is <i>True</i> if variable selected in par. 13-10 is smaller than fixed value in par. 13-12. Result is <i>False</i> if variable selected in par. 13-10 is greater than fixed value in par. 13-12.
[1] *	Approximately equals ≈	Result of evaluation is <i>True</i> if variable selected in par. 13-10 is approximately equal to fixed value in par. 13-12.
[2]	Greater Than >	Inverse logic of option [0].

13-12 Comparator Value

Array [4]

0.0* [-9999 - 9999]	Enter "trigger level" for variable monitored by this comparator.
---------------------	--

4.10.4. 13-2* Timers

Use the timer results to define an event (par. 13-51) or as boolean input in a logic rule (par. 13-40, 13-42 or 13-44).

When timer value has elapsed timer changes state from *False* to *True*.

13-20 Logic Controller Controller Timer

Array [3]

0.0 s* [0.0 - 3600 s]	Enter value to define duration of the <i>False</i> output from programmed timer. A timer is only <i>False</i> if it is started by an action and until the given timer value has elapsed.
-----------------------	--

4.10.5. 13-4* Logic Rules

Combine up to three boolean inputs (TRUE / FALSE inputs) from timers, comparators, digital inputs, status bits and events using the logical operators AND, OR, and NOT. Select boolean inputs for the calculation in par. 13-40, 13-42, and 13-44. Define the operators used to logically combine the selected inputs in par. 13-41 and 13-43.

Priority of calculation

The results of par. 13-40, 13-41, and 13-42 are calculated first. The outcome (TRUE / FALSE) of this calculation is combined with the settings of par. 13-43 and 13-44, yielding the final result (TRUE / FALSE) of the logic rule.

13-40 Logic Rule Boolean 1

Array [4]

Select first boolean input for selected logic rule.		
[0] *	False	Enters <i>False</i> in logic rule.
[1]	True	Enters <i>True</i> in logic rule.
[2]	Running	See par. 5-4* [5] for description.
[3]	InRange	See par. 5-4* [7] for description.
[4]	OnReference	See par. 5-4* [8] for description.
[7]	Out of Current Range	See par. 5-4* [12] for description.
[8]	BelowLow	See par. 5-4* [13] for description.
[9]	AboveHigh	See par. 5-4* [14] for description.
[16]	ThermalWarning	See par. 5-4* [21] for description.
[17]	MainsOutOfRange	Mains voltage is outside the specified voltage range.
[18]	Reversing	See par. 5-4* [25] for description.



[19]	Warning	A warning is active.
[20]	Alarm_Trip	A trip alarm is active.
[21]	Alarm_TripLock	A trip lock alarm is active.
[22]	Comparator 0	Use result of comparator 0 in logic rule.
[23]	Comparator 1	Use result of comparator 1 in logic rule.
[24]	Comparator 2	Use result of comparator 2 in logic rule.
[25]	Comparator 3	Use result of comparator 3 in logic rule.
[26]	LogicRule 0	Use result of logic rule 0 in logic rule.
[27]	LogicRule 1	Use result of logic rule 1 in logic rule.
[28]	LogicRule 2	Use result of logic rule 2 in logic rule.
[29]	LogicRule 3	Use result of logic rule 3 in logic rule.
[30]	LC Timeout0	Use result of timer 0 in logic rule.
[31]	LC Timeout1	Use result of timer 1 in logic rule.
[32]	LC Timeout2	Use result of timer 2 in logic rule.
[33]	DigitalInput_18	Use value of DI 18 in logic rule.
[34]	DigitalInput_19	Use value of DI 19 in logic rule.
[35]	DigitalInput_27	Use value of DI 27 in logic rule.
[36]	DigitalInput_29	Use value of DI 29 in logic rule.
[38]	DigitalInput_33	
[39]	StartCommand	This event is <i>True</i> , if frequency converter is started by any means (digital input or other).
[40]	DriveStopped	This event is <i>True</i> , if frequency converter is stopped or coasted by any means (digital input or other).

13-41 Logic Rule Operator 1

Array [4]

		Select first logical operator to use on boolean inputs from par. 13-40 and 13-42.
[0] *	Disabled	Ignores parameters 13-42, 13-43 and 13-44.
[1]	And	Evaluates expression [13-40] AND [13-42].
[2]	Or	Evaluates expression [13-40] OR [13-42].
[3]	And not	Evaluates expression [13-40] AND NOT [13-42].
[4]	Or not	Evaluates expression [13-40] OR NOT [13-42].
[5]	Not and	Evaluates expression NOT [13-40] and [13-42].
[6]	Not or	Evaluates expression NOT [13-40] OR [13-42].
[7]	Not and not	Evaluates expression NOT [13-40] AND NOT [13-42].
[8]	Not or not	Evaluates expression NOT [13-40] OR NOT [13-42].

13-42 Logic Rule Boolean 2

Array [4]

		Select second boolean input for selected logic rule. See par. 13-40 for choices and descriptions.
--	--	--

13-43 Logic Rule Operator 2

Array [4]

		Select second logical operator to use on boolean inputs calculated in par. 13-40, 13-41, and 13-42 and the boolean input from par. 13-42.
[0] *	Disabled	Ignores parameter 13-44.
[1]	And	Evaluates expression [13-40/13-42] AND [13-44].
[2]	Or	Evaluates expression [13-40/13-42] OR [13-44].
[3]	And not	Evaluates expression [13-40/13-42] AND NOT [13-44].
[4]	Or not	Evaluates expression [13-40/13-42] OR NOT [13-44].



[5]	Not and	Evaluates expression NOT [13-40/13-42] and [13-44].
[6]	Not or	Evaluates expression NOT [13-40/13-42] OR [13-44].
[7]	Not and not	Evaluates expression NOT [13-40/13-42] AND NOT [13-44].
[8]	Not or not	Evaluates expression NOT [13-40/13-42] OR NOT [13-44].

13-44 Logic Rule Boolean 3

Array [4]

Select third boolean input for selected logic rule.
See par. 13-40 for choices and descriptions.

4

4.10.6. 13-5* States

Parameters for programming the Logic Controller.

13-51 Logic Controller Event

Array [20]

Select boolean input to define Logic Controller Event.
See par. 13-40 for choices and descriptions.

13-52 LC Controller Action

Array [20]

Select action corresponding to LC event. Actions are executed when corresponding event (par. 13-51) is evaluated as *True*.

[0] *	Disabled	Function is disabled.
[1]	No Action	No action is taken.
[2]	Select Set-up1	Changes active set-up to Set-up 1.
[3]	Select Set-up2	Changes active set-up to Set-up 2.
[10]	SelectPresetRef0	Selects preset reference 0
[11]	SelectPresetRef1	Selects preset reference 1
[12]	SelectPresetRef2	Selects preset reference 2
[13]	SelectPresetRef3	Selects preset reference 3
[14]	SelectPresetRef4	Selects preset reference 4
[15]	SelectPresetRef5	Selects preset reference 5
[16]	SelectPresetRef6	Selects preset reference 6
[17]	SelectPresetRef7	Selects preset reference 7
[18]	SelectRamp1	Selects ramp 1
[19]	SelectRamp2	Selects ramp 2
[22]	Run	Issues start command to frequency converter.
[23]	RunReverse	Issues start reverse command to frequency converter.
[24]	Stop	Issues stop command to frequency converter.
[25]	Qstop	Issues quick stop command to frequency converter.
[26]	DCstop	Issues DC stop command to frequency converter.
[27]	Coast	Frequency converter coasts immediately. All stop commands including coast command stop the Logic Controller.
[28]	Freeze Output	Freezes output frequency.
[29]	StartTimer0	Starts timer 0.
[30]	StartTimer1	Starts timer 1
[31]	StartTimer2	Starts timer 2
[32]	SetDO42Low	Set Digital output 42 low.
[33]	SetRelayLow	Set Relay low.
[38]	SetDO42High	Set Digital output 42 high.



[39]	SetRelayHigh	Set Relay high.
[60]	ResetCounterA	Resets counter A to 0.
[61]	ResetCounterB	Resets counter B to 0.



4.11. Parameter Group 14: Special Functions

4.11.1. 14-** Special Functions

Parameter group for configuring special frequency converter functions.

4.11.2. Carrier Frequency 14-0*

Parameters for configuring the carrier frequency.

14-01 Motor Noise (Carrier Frequency)

Option:

Function:

Select the carrier frequency in order to minimize e.g. acoustic noise and power loss or maximizing efficiency.

[0] 2 KHz

[1] * 4 KHz

[2] 8 KHz

[4] 16 KHz

14-03 Overmodulation

Option:

Function:

This feature allows more accurate speed control near and over nominal speed (50/60 Hz). Another advantage with overmodulation is the ability of staying at a constant speed even though mains is dropping.

[0] Off

Disables the overmodulation function to avoid torque ripple on the motor shaft.

[1] * On

Connects the overmodulation function to obtain an output voltage up to 15% greater than mains voltage.

4.11.3. 14-1* Mains Monitoring

This parameter group supplies functions for handling imbalance on mains.

14-12 Functions at Mains Imbalance

Option:

Function:

Operation under severe mains imbalance conditions reduces drive lift time.

Select function to take place when severe mains imbalance is detected.

[0] * Trip

Frequency converter trips.

[1] Warning

Frequency converter issues a warning.

[2] Disabled

No action taken.

4.11.4. Trip Reset, 14-2*

Parameters for configuring auto reset handling, special trip handling and control card self test or initialisation.

14-20 Reset Mode

Option:

Function:

Select reset function after tripping. Once reset, frequency converter can be restarted.

[0] * Manual Reset

Perform reset via [reset]-button or digital inputs.

[1] AutoReset 1

Performs one automatic reset after tripping.

[2] AutoReset 2

Performs two automatic resets after tripping.

[3] AutoReset 3

Performs three automatic resets after tripping.

[4] AutoReset 4

Performs four automatic resets after tripping.

[5] AutoReset 5

Performs five automatic resets after tripping.



[6]	AutoReset 6	Performs six automatic resets after tripping.
[7]	AutoReset 7	Performs seven automatic resets after tripping.
[8]	AutoReset 8	Performs eight automatic resets after tripping.
[9]	AutoReset 9	Performs nine automatic resets after tripping.
[10]	AutoReset 10	Performs ten automatic resets after tripping.
[11]	AutoReset 15	Performs fifteen automatic resets after tripping.
[12]	AutoReset 20	Performs twenty automatic resets after tripping.
[13]	Infinite auto reset	Performs an infinite number of automatic resets after tripping.



Motor may start without warning.

4

14-21 Automatic Restart Time

Range:

10 s* [0 - 600 s]

Function:

Enter time interval from trip to start of automatic reset function. This parameter is active when par. 14-20, *Reset Mode*, is set to *Automatic Reset* [1] - [13].

14-22 Operation Mode

Option:
Function:

Use this parameter for specifying normal operation or to initialize all parameters, except par. 15-03, 15-04 and 15-05.

[0] *	Normal Operation	Frequency converter runs normal operation.
[2]	Restore Factory Settings	Resets all parameters to default settings, except for 15-03, 15-04 and 15-05. Frequency converter resets during next power-up. Par. 14-22 also reverts to default setting <i>Normal Operation</i> [0].

4.11.5. 14-4* Energy Savings

These parameters are for adjusting the energy savings level in both Variable Torque (VT) and Energy savings modes.

14-41 Energy savingsMinimum Magnetization

Range:

66%* [40 - 75%]

Function:

Enter the minimum allowable magnetization for energy savings. Selecting a low value reduces energy loss in the motor, but may also reduce resistance to sudden load changes.



4.12. Parameter Group 15: Drive Information

4.12.1. 15-** Drive Information

Parameter group containing information on operating data, hardware configuration, software version, etc.

4.12.2. 15-0* Operating Data

Parameter group containing operating data e.g. Operating Hours, kWh counters, Power Ups, etc.

4.12.3. 15-00 Operating Time

15-00 Operating Time

Range:	Function:
0 days* [0 - 65535 days]	View running hours of frequency converter. The value is saved at power off and cannot be reset.

15-01 Running Hours

Range:	Function:
0* [0 - 2147483647]	View running hours of motor. The value is saved at power off and can be reset in par. 15-07, <i>Reset Running Hours Counter</i> .

15-02 kWh Counter

Range:	Function:
0 [0 - 65535]	View power consumption in kWh as a mean value over one hour. Reset counter in par. 15-06, <i>Reset kWh Counter</i> .

15-03 Power Ups

Range:	Function:
0 [0 - 2147483647]	View number of times frequency converter has been powered up. Counter cannot be reset.

15-04 Over Temps

Range:	Function:
0 [0 - 65535]	View number of times frequency converter has tripped due to over temperature. Counter cannot be reset.

15-05 Over Volts

Range:	Function:
0* [0 - 65535]	View number of times frequency converter has tripped due to over voltage. Counter cannot be reset.

15-06 Reset kWh Counter

Option:	Function:
[0] * Do Not Reset	Counter is not reset.
[1] Reset Counter	Counter is reset.

15-07 Reset Running Hours Counter

Option:	Function:
[0] * Do Not Reset	Counter is not reset.
[1] Reset Counter	Counter is reset.



4.12.4. 15-3* Fault Log

This parameter group contains a fault log showing reasons for the ten latest trips.

15-30 Fault Log: Error Code

Range:

0 [0 - 255]

Function:

View error code and look it up in GE AF-60 LP Micro Operating Instructions.

4.12.5. Drive Identification, 15-4*

Parameters containing read only information about the hardware and software configuration of the frequency converter.

15-40 Drive Type

Option:**Function:**

View Drive type.

15-41 Power Section

Option:**Function:**

View power section of frequency converter.

15-42 Voltage

Option:**Function:**

View voltage of frequency converter.

15-43 Software Version

Option:**Function:**

View software version of frequency converter.

15-46 Frequency Converter Ordering No

Option:**Function:**

View ordering number for re-ordering frequency converter in its original configuration.

15-48 Keypad ID No

Option:**Function:**

View Keypad ID number.

15-51 Frequency Converter Serial Number

Option:**Function:**

View frequency converter serial number.



4.13. Parameter Group 16: Data Readouts

4.13.1. 16-** Data Readouts

Parameter group for data read-outs, e.g. actual references, voltages, control, alarm, warning and status words.

4.13.2. 16-0* General Status

Parameters for reading the general status, e.g. the calculated reference, the active control word, status.

16-00 Control Word

Range:

0* [0 - 65535]

Function:

View latest valid control word sent to frequency converter via serial communication port.

16-01 Reference [Unit]

Range:

0.00* [-4999.000 - 4999.000]

Function:

View total remote reference. Total reference is sum of pulse, analog, preset, Keypad potentiometer, local bus and freeze reference.

16-02 Reference %

Range:

0.0* [-200.0 - 200.0%]

Function:

View total remote reference in percent. Total reference is sum of pulse, analog, preset, Keypad potentiometer, local bus and freeze reference.

16-03 Status Word

Range:

0* [0 - 65535]

Function:

View status word sent to frequency converter via serial communication port.

16-05 Main Actual Value %

Range:

0.00* [-100.00 - 100.00%]

Function:

View two-byte word sent with status word to bus Master reporting main actual value.

4.13.3. 16-09 Custom Readout

16-09 Custom Readout

Range:

0.00* [0.00 - 9999.00%]

Function:

Customized readout based on the settings of par. 0-31, par. 0-32 and par. 4-14

4.13.4. 16-1* Motor Status

Parameters for reading the motor status values.

16-10 Power [kW]

Range:

0 kW* [0 - 99 kW]

Function:

View output power in kW.

16-11 Power [hp]

Range:

0 hp [0 - 99 hp]

Function:

View output power in hp.

**16-12 Motor Voltage****Range:**

0.0* [0.0 - 999.9 V]

Function:

View motor phase voltage.

16-13 Frequency**Range:**

0.0 Hz* [0.0 - 400.0 Hz]

Function:

View output frequency in Hz.

16-14 Motor Current**Range:**

0.00 A* [0.00 - 655 A]

Function:

View motor phase current.

16-15 Frequency [%]**Range:**

0.00* [-100.00 - 100.00%]

Function:

View a two-byte word reporting actual motor frequency as a percentage of par. X-XX

16-18 Motor Thermal**Range:**

0%* [0 - 100%]

Function:

View calculated thermal motor load as percentage of estimated thermal motor load.

4.13.5. 16-3* Drive Status

Parameters for reporting the status of the frequency converter.

16-30 DC Link Voltage**Range:**

0 V* [0 - 10000 V]

Function:

View DC-link voltage.

16-34 Heat Sink Temp.**Range:**

0* [0 - 255°C]

Function:

View heat sink temperature of frequency converter.

16-35 Drive Thermal**Range:**

0%* [0 - 100%]

Function:

View calculated thermal load on frequency converter in relation to estimated thermal load on frequency converter.

16-36 Drive Nom. Current**Range:**

0.00 A* [0.01 - 655A]

Function:

View continuous nominal drive current.

16-37 Drive Max. Current**Range:**

0.00 A* [0.1 - 655A]

Function:

View intermittent maximum drive current (150%).

16-38 Logic Controller State**Range:**

0* [0 - 255]

Function:

View number of active Logic state.

4.13.6. 16-5* Ref. & Feedb.

Parameters for reporting the reference and feedback input.

**16-50 External Reference**

Range:	Function:
0.0%* [-200.0 - 200.0%]	View sum of all external references in percent.

16-51 Pulse Reference

Range:	Function:
0.0 %* [-200.0 - 200.0%]	View actual pulse input converted to a reference in percent.

16-52 Feedback

Range:	Function:
0.000* [-4999.000 - 4999.000]	View analog or pulse feedback in Hz.

4.13.7. 16-6* Inputs and Outputs

Parameters for reporting the digital and analog IO ports.

16-60 Digital Input 18, 19, 27, 33

Range:	Function:
0* [0 - 1111]	View signal states from active digital inputs.

16-61 Digital Input 29

Range:	Function:
0* [0 - 1]	View signal state on digital input 29.

16-62 Analog Input 53 (volt)

Range:	Function:
0.00* [0.00 - 10.00 V]	View input voltage on analog input terminal.

16-63 Analog Input 53 (current)

Range:	Function:
0.00* [0.00 - 20.00 mA]	View input current on analog input terminal.

16-64 Analog Input 60

Range:	Function:
0.00* [0.00 - 20.00 mA]	View actual value at input 60 either as reference or protection value.

16-65 Analog Output 42 [mA]

Range:	Function:
0.00 mA* [0.00 - 20.00 mA]	View output current on analog output 42.

16-68 Pulse Input

Range:	Function:
20 Hz* [20 - 5000 Hz]	View input frequency on pulse input terminal.

16-71 Relay Output [bin]

Range:	Function:
0* [0 - 1]	View relay setting.

16-72 Counter A

Range:	Function:
0* [-32768 - 32767]	View present value of Counter A.

**16-73 Counter B****Range:**

0* [-32768 - 32767]

Function:

View present value of Counter B.

4.13.8. 16-8* GE Drive Port

Parameter for viewing references from GE Drive Port.

16-86 GE Drive Port REF 1**Range:**

0* [0x8000 - 0x7FFF]

Function:

View currently received reference from GE Drive Port.

4.13.9. 16-9* Diagnosis Read-Out

Parameters displaying alarm, warning and extended status words.

16-90 Alarm Word**Range:**

0* [0 - 0xFFFFFFFF]

Function:

Via alarm word sent via serial communication port in hex code.

16-92 Warning Word**Range:**

0* [0 - 0xFFFFFFFF]

Function:

View warning word sent via serial communication port in hex code.

16-94 Ext. Status Word**Range:**

0* [0 - 0xFFFFFFFF]

Function:

View extended warning word sent via serial communication port in hex code.





5. Parameter Lists

0--** Operation/Display 0-0* Basic Settings 0-03 Regional Settings [0] International * [1] US 0-04 Oper. State at Power-up (Hand) [0] Resume * [1] Forced stop, ref = old [2] Forced stop, ref = 0 0-1* Set-up Handling 0-10 Active Set-up * [1] Setup 1 [2] Setup 2 [9] Multi Setup 0-11 Edit Set-up * [1] Setup 1 [2] Setup 2 [9] Active Setup 0-12 Link Setups [0] Not Linked * [20] Linked 0-31 Custom Readout Min Scale 0.00 - 9999.00 * 0.00 0-32 Custom Readout Max Scale 0.00 - 9999.00 * 100.0 0-4* Keypad 0-40 [Hand] Key on Keypad [0] Disabled * [1] Enabled 0-41 [Off / Reset] Key on Keypad [0] Disable All * [1] Enable All [2] Enable Reset Only 0-42 [Auto] Key on Keypad [0] Disabled * [1] Enabled 0-5* Copy/Save 0-50 Keypad Copy * [0] No copy [1] All to Keypad [2] All from Keypad [3] Size indep. from Keypad 0-51 Set-up Copy * [0] No copy [1] Copy from setup 1 [2] Copy from setup 2 [9] Copy from Factory setup 0-6* Password 0-60 [Main] Menu Password 0 - 999 * 0 1--** Load/Motor	1-0* General Settings 1-00 Configuration Mode * [0] Speed open loop [3] Process 1-01 Motor Control Principle [0] U/f * [1] Adv. Vector Control 1-03 Torque Characteristics * [0] Constant torque [2] Energy Saving 1-05 Local Mode Configuration [0] Speed Open Loop * [2] As config in param. 1-00 1-2* Motor Data 1-20 Motor Power [kW] [HP] [1] 0.09 kW/0.12 HP [2] 0.12 kW/0.16 HP [3] 0.18 kW/0.25 HP [4] 0.25 kW/0.33 HP [5] 0.37 kW/0.50 HP [6] 0.55 kW/0.75 HP [7] 0.75 kW/1.00 HP [8] 1.10 kW/1.50 HP [9] 1.50 kW/2.00 HP [10] 2.20 kW/3.00 HP [11] 3.00 kW/4.00 HP [12] 3.70 kW/5.00 HP [13] 4.00 kW/5.40 HP [14] 5.50 kW/7.50 HP [15] 7.50 kW/10.00 HP [16] 11.00 kW/15.00 HP 1-22 Motor Voltage 50 - 999 V * 230 - 400 V 1-23 Motor Frequency 20 - 400 Hz * 60 Hz 1-24 Motor Current 0.01 - 26.00 A * Motor type dep. 1-25 Motor Nominal Speed 100 - 9999 rpm * Motor type dep. 1-29 Auto Tune * [0] Off [2] Enable Auto Tune 1-3* Adv. Motor Data 1-30 Stator Resistance (Rs) [Ohm] * Dep. on motor data	Parameter Overview 1-33 Stator Leakage Reactance (Xl) [Ohm] * Dep. on motor data 1-35 Main Reactance (Xh) [Ohm] * Dep. on motor data 1-5* Load Indep. Setting 1-50 Motor Magnetisation at 0 Speed 0 - 300 % * 100 % 1-52 Min Speed Norm. Magnet. [Hz] 0.0 - 100.0 Hz * 0.0 Hz 1-55 U/f Characteristic - U 0 - 9999 V 1-56 U/f Characteristic - F 0 - 400 Hz 1-6* Load Depen. Setting 1-60 Low Speed Load Compensation 0 - 199 % * 100 % 1-61 High Speed Load Compensation 0 - 199 % * 100 % 1-62 Slip Compensation -400 - 399 % * 100 % 1-63 Slip Compensation Time Constant 0.05 - 5.00 s * 0.10 s 1-7* Start Adjustments 1-71 Holding Time 0.0 - 10.0 s * 0.0 s 1-72 Start Function [0] DC hold / delay time [1] DC brake / delay time * [2] Coast / delay time 1-73 Start Mode * [0] Disabled [1] Enable - Catch Spinning Load 1-8* Stop Adjustments 1-80 Function at Stop * [0] Coast [1] DC hold 1-82 Min Speed for Funct. at Stop [Hz] 0.0 - 200.0 Hz * 0.0 Hz 1-9* Motor Temperature 1-90 Motor Thermal Protection * [0] No protection [1] Thermistor warning [2] Thermistor trip [3] Electronic Overload warning [4] Electronic Overload trip 1-93 Thermistor Resource * [0] None	[1] Analog input 53 [6] Digital input 29 2--** Brakes 2-0* DC-Brake 2-00 DC Hold Current 0 - 150 % * 50 % 2-01 DC Brake Current 0 - 150 % * 50 % 2-02 DC Braking Time 0.0 - 60.0 s * 10.0 s 2-04 DC Brake Cut In Speed 0.0 - 400.0 Hz * 0.0 Hz 2-1* Brake Energy Funct. 2-10 Brake Function * [0] Off [1] Resistor brake [2] AC brake 2-11 Brake Resistor (ohm) 5 - 5000 * 5 2-16 AC Brake, Max current 0 - 150 % * 100 % 2-17 Over-voltage Control * [0] Disabled [1] Enabled (not at stop) [2] Enabled 2-2* Mechanical Brake 2-20 Release Brake Current 0.00 - 100.0 A * 0.00 A 2-22 Activate Brake Speed [Hz] 0.0 - 400.0 Hz * 0.0 Hz 3--** Reference / Ramps 3-0* Reference Limits 3-00 Reference Range * [0] Min - Max [1] -Max - +Max 3-02 Minimum Reference -4999 - 4999 * 0.000 3-03 Maximum Reference -4999 - 4999 * 50.00 3-1* References 3-10 Preset Reference -100.0 - 100.0 % * 0.00 % 3-11 Jog Speed [Hz] 0.0 - 400.0 Hz * 5.0 Hz 3-12 Catch up/slow Down Value 0.00 - 100.0 % * 0.00 %
---	---	---	---



3-14 Preset Relative Reference -100.0 - 100.0 % * 0.00 %			
3-15 Reference Resource 1 [0] No function *[1] Analog input 53 [2] Analog input 60 [8] Pulse input 33 [11] Local bus ref			
3-16 Reference Resource 2 [21] Keypad Potentiometer [0] No function [1] Analog input 53 *[2] Analog input 60 [8] Pulse input 33 [11] Local bus ref [21] Keypad Potentiometer			
3-17 Reference Resource 3 [0] No function [1] Analog input 53 [2] Analog input 60 [8] Pulse input 33 *[11] Local bus ref [21] Keypad Potentiometer			
3-18 Relative Scaling Ref. Resource *[0] No function [1] Analog input 53 [2] Analog input 60 [8] Pulse input 33 [11] Local bus ref [21] Keypad Potentiometer			
3-40 Accel/Decel 1 Pattern *[0] Linear [2] S-Shape			
3-41 Accel Time 1 0.05 - 3600 s * 3.00 s			
3-42 Decel Time 1 0.05 - 3600 s * 3.00 s			
3-5* Accel/Decel 2 *[0] Linear [2] S-Shape			
3-51 Accel Time 2 0.05 - 3600 s * 3.00 s			
3-52 Decel Time 2 0.05 - 3600 s * 3.00 s			
3-8* Other Ramps			
3-80 Jog Accel and Decel Time 0.05 - 3600 s * 3.00 s			
3-81 Quick Stop Decel Time 0.05 - 3600 s * 3.00 s			
4-** Limits / Warnings			
4-1* Motor Limits 4-10 Reverse Lock [0] Reverse Lock [1] Reverse *[2] Both			
4-12 Motor Speed Low Limit [Hz] 0.0 - 400.0 Hz * 0.0 Hz			
4-14 Motor Speed High Limit [Hz] 0.1 - 400.0 Hz * 65.0 Hz			
4-16 Torque Limit Motor Mode 0 - 400 % * 150 %			
4-17 Torque Limit Generator Mode 0 - 400 % * 100 %			
4-5* Adj. Warnings			
4-50 Warning Current Low 0.00 - 26.00 A * 0.00 A			
4-51 Warning Current High 0.00 - 26.00 A * 26.00 A			
4-58 Missing Motor Phase Function [0] Off *[1] On			
4-6* Jump Frequencies			
4-61 Jump Frequency From [Hz] 0.0 - 400.0 Hz * 0.0 Hz			
4-63 Jump Frequency To [Hz] 0.0 - 400.0 Hz * 0.0 Hz			
5-1* Digital Inputs			
5-10 Terminal 18 Digital Input [0] No function [1] Reset [2] Coast inverse [3] Coast and reset inv. [4] Quick stop inverse [5] DC-brake inv. [6] Stop inv *[8] Start [9] Latched start [10] Reversing [11] Start reversing [12] Enable start forward [13] Enable start reverse [14] Jog			
5-11 Terminal 19 Digital Input See par. 5-10. * [10] Reversing			
5-12 Terminal 27 Digital Input See par. 5-10. * [1] Reset			
5-13 Terminal 29 Digital Input See par. 5-10. * [14] Jog			
5-15 Terminal 33 Digital Input See par. 5-10. * [16] Preset ref bit 0			
5-26 Precise Stop Inverse [27] Start, Precise Stop [32] Pulse Input			
5-4* Relays			
5-40 Function Relay *[0] No operation [1] Control ready [2] Drive ready [3] Drive ready, Remote [4] Enable / No warning [5] Drive running [6] Running / No warning [7] Run in range / No warning [8] Run on ref / No warning [9] Alarm [10] Alarm or warning [12] Out of current range [13] Below current, low [14] Above current, high [21] Thermal warning [22] Ready, No thermal warning [23] Remote ready, No thermal warning [24] Ready, Voltage ok			
5-55 Terminal 33 Low Frequency 20 - 4999 Hz * 20 Hz			
5-56 Terminal 33 High Frequency 21 - 5000 Hz * 5000 Hz			
5-57 Term. 33 Low Ref./Feedb. Value -4999 - 4999 * 0.000			
5-58 Term. 33 High Ref./Feedb. Value -4999 - 4999 * 50.000			
6-** Analog In/Out			
6-0* Analog I/O Mode 6-00 Live Zero Timeout Time 1 - 99 s * 10 s			
6-01 Live Zero Timeout Function *[0] Off [1] Freeze output [2] Stop [3] Jogging [4] Max speed [5] Stop and trip			
6-1* Analog Input 1			
6-10 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-11 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-12 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-13 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-14 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-15 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-16 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-17 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-18 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-19 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-20 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-21 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-22 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-23 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-24 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-25 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-26 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-27 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-28 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-29 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-30 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-31 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-32 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-33 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-34 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-35 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-36 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-37 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-38 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-39 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-40 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-41 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-42 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-43 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-44 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-45 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-46 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-47 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-48 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-49 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-50 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-51 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-52 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-53 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-54 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-55 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-56 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-57 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-58 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-59 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-60 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-61 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-62 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-63 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-64 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-65 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-66 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-67 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-68 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-69 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-70 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-71 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-72 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-73 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-74 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-75 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-76 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-77 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-78 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-79 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-80 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-81 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-82 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-83 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-84 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-85 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-86 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-87 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-88 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-89 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-90 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-91 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-92 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-93 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-94 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-95 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-96 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-97 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-98 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-99 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-100 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-101 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-102 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-103 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-104 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-105 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-106 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-107 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-108 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-109 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-110 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-111 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-112 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-113 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-114 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-115 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-116 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-117 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-118 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-119 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-120 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-121 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-122 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-123 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-124 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-125 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-126 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-127 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-128 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-129 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-130 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-131 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-132 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-133 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-134 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-135 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-136 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-137 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-138 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-139 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-140 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-141 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-142 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-143 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-144 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-145 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-146 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-147 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-148 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-149 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-150 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-151 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-152 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-153 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-154 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-155 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-156 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-157 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-158 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-159 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-160 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-161 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-162 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-163 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-164 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-165 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-166 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V			
6-167 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V			
6-168 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA			
6-169 Terminal 53 High Current 0.01 - 19.99 mA * 0.14 mA			
6-170 Terminal 53 Low Voltage			



6-13 Terminal 53 High Current 0.01 - 20.00 mA * 20.00 mA 6-14 Term. 53 Low Ref./Feedb. Value -4999 - 4999 * 0.000 6-15 Term. 53 High Ref./Feedb. Value -4999 - 4999 * 50.000 6-16 Terminal 53 Filter Time Constant 0.01 - 10.00 s * 0.01 s 6-19 Terminal 53 mode *[0] Voltage mode [1] Current mode 6-2* Analog Input 2 6-22 Terminal 60 Low Current 0.00 - 19.99 mA * 0.14 mA 6-23 Terminal 60 High Current 0.01 - 20.00 mA * 20.00 mA 6-24 Term. 60 Low Ref./Feedb. Value -4999 - 4999 * 0.000 6-25 Term. 60 High Ref./Feedb. Value -4999 - 4999 * 50.00 6-26 Terminal 60 Filter Time Constant 0.01 - 10.00 s * 0.01 s 6-8* Keypad potentiometer 6-81 Keypad potm. Low Reference -4999 - 4999 * 0.000 6-82 Keypad potm. High Reference -4999 - 4999 * 50.00 6-9* Analog Output-xx 6-90 Terminal 42 Mode *[0] 0-20 mA [1] 4-20 mA [2] Digital Output 6-91 Terminal 42 Analog Output *[0] No operation [10] Output Frequency [11] Reference [12] Feedback [13] Motor Current [16] Power [20] BusControl 6-92 Terminal 42 Digital Output See par. 5-40 *[0] No Operation [80] Logic Controller Digital Output A	6-93 Terminal 42 Output Min Scale 0.00 - 200.0 % * 0.00 % 6-94 Terminal 42 Output Max Scale 0.00 - 200.0 % * 100.0 % 7-** Controllers 7-2* Process Ctrl. Feedb 7-20 Process CL Feedback 1 Resource *[0] NoFunction [1] Analog Input 53 [2] Analog Input 60 [8] PulseInput33 [11] LocalBusRef 7-3* Process PI Ctrl. 7-30 Process PI Normal/ Inverse Ctrl *[0] Normal [1] Inverse 7-31 Process PI Anti Windup [0] Disable *[1] Enable 7-32 Process PI Start Speed 0.0 - 200.0 Hz * 0.0 Hz 7-33 Process PI Proportional Gain 0.00 - 10.00 * 0.01 7-34 Process PI Integral Time 0.10 - 9999 s * 9999 s 7-38 Process PI Feed Forward Factor 0 - 400 % * 0 % 7-39 On Reference Bandwidth 0 - 200 % * 5 % 8-** Comm. and Options 8-01 Control Site *[0] Digital and ControlWord [1] Digital only [2] ControlWord only 8-02 Control Word Source [0] None *[1] GE Drive RS485 8-03 Control Word Timeout Time 0.1 - 6500 s * 1.0 s 8-04 Control Word Timeout Function *[0] Off [1] Freeze Output [2] Stop [3] Jogging	6-95 Terminal 42 Output Max Scale 0.00 - 200.0 % * 100.0 % 7-2* Process Ctrl. Feedb 7-20 Process CL Feedback 1 Resource *[0] NoFunction [1] Analog Input 53 [2] Analog Input 60 [8] PulseInput33 [11] LocalBusRef 7-3* Process PI Ctrl. 7-30 Process PI Normal/ Inverse Ctrl *[0] Normal [1] Inverse 7-31 Process PI Anti Windup [0] Disable *[1] Enable 7-32 Process PI Start Speed 0.0 - 200.0 Hz * 0.0 Hz 7-33 Process PI Proportional Gain 0.00 - 10.00 * 0.01 7-34 Process PI Integral Time 0.10 - 9999 s * 9999 s 7-38 Process PI Feed Forward Factor 0 - 400 % * 0 % 7-39 On Reference Bandwidth 0 - 200 % * 5 % 8-** Comm. and Options 8-01 Control Site *[0] Digital and ControlWord [1] Digital only [2] ControlWord only 8-02 Control Word Source [0] None *[1] GE Drive RS485 8-03 Control Word Timeout Time 0.1 - 6500 s * 1.0 s 8-04 Control Word Timeout Function *[0] Off [1] Freeze Output [2] Stop [3] Jogging	8-9* Bus Jog / Feedback 8-94 Bus feedback 1 0x8000 - 0x7FFF * 0 13-** Controller Logic 13-0* Logic Controller Settings 13-00 Logic Controller Mode *[0] Off [1] On 13-01 Start Event [0] False [1] True [2] Running [3] InRange [4] OnReference [7] OutOfCurrentRange [8] BelowLow [9] AboveHigh [16] ThermalWarning [17] MainOutOfRange [18] Reversing [19] Warning [20] Alarm_Trip [21] Alarm_TripLock [22-25] Comparator 0-3 [26-29] LogicRule0-3 [33] DigitalInput_18 [34] DigitalInput_19 [35] DigitalInput_27 [36] DigitalInput_29 [38] DigitalInput_33 *[39] StartCommand [40] DriveStopped 13-02 Stop Event See par. 13-01 * [40] DriveStopped 13-03 Reset Logic Controller *[0] Do not reset [1] Reset Logic Controller 13-1* Comparators	8-9* Bus Jog / Feedback 8-94 Bus feedback 1 0x8000 - 0x7FFF * 0 13-** Controller Logic 13-0* Logic Controller Settings 13-00 Logic Controller Mode *[0] Off [1] On 13-01 Start Event [0] False [1] True [2] Running [3] InRange [4] OnReference [7] OutOfCurrentRange [8] BelowLow [9] AboveHigh [16] ThermalWarning [17] MainOutOfRange [18] Reversing [19] Warning [20] Alarm_Trip [21] Alarm_TripLock [22-25] Comparator 0-3 [26-29] LogicRule0-3 [33] DigitalInput_18 [34] DigitalInput_19 [35] DigitalInput_27 [36] DigitalInput_29 [38] DigitalInput_33 *[39] StartCommand [40] DriveStopped 13-02 Stop Event See par. 13-01 * [40] DriveStopped 13-03 Reset Logic Controller *[0] Do not reset [1] Reset Logic Controller 13-1* Comparators
---	--	--	--	--



13-10 Comparator Operand *[0] Disabled [1] Reference [2] Feedback [3] MotorSpeed [4] MotorCurrent [6] MotorPower [7] MotorVoltage [8] DCLinkVoltage [12] AnalogInput53 [13] AnalogInput60 [18] PulseInput33 [20] AlarmNumber [30] CounterA [31] CounterB 13-11 Comparator Operator [0] Less Than *[1] Approximately equals [2] Greater Than 13-12 Comparator Value -9999 - 9999 * 0.0 13-2* Timers 13-20 LC Controller Timer 0.0 - 3600 s * 0.0 s 13-4* Logic Rules 13-40 Logic Rule Boolean 1 See par. 13-01 * [0] False [30] - [32] LC Time-out 0-2 13-41 Logic Rule Operator 1 *[0] Disabled [1] And [2] Or [3] And not [4] Or not [5] Not and [6] Not or [7] Not and not [8] Not or not 13-42 Logic Rule Boolean 2 See par. 13-40 13-43 Logic Rule Operator 2 See par. 13-41 * [0] Disabled 13-44 Logic Rule Boolean 3 See par. 13-40 13-5* States 13-51 LC Controller Event See par. 13-40 13-52 LC Controller Action *[0] Disabled	[1] NoAction [2] SelectSetup1 [3] SelectSetup2 [10-17] SelectPresetRef0-7 [18] Select Accel/Decel 1. [19] Select Accel/Decel 2. [22] Run [23] RunReverse [24] Stop [25] Ostop [26] DCstop [27] Coast [28] FreezeOutput [29] StartTimer0 [30] StartTimer1 [31] StartTimer2 [32] Set Digital Output A Low [33] Set Digital Output B Low [38] Set Digital Output A High [39] Set Digital Output B High [60] ResetCounterA [61] ResetCounterB 14-0* Carrier Frequency 14-01 Motor Noise [0] 2 kHz *[1] 4 kHz [2] 8 kHz [4] 16 kHz 14-03 Overmodulation [0] Off *[1] On 14-1* Mains monitoring 14-12 Function at mains imbalance *[0] Trip [1] Warning [2] Disabled 14-2* Trip Reset 14-20 Reset Mode *[0] Manual reset [1-9] AutoReset 1-9 [10] AutoReset 10 [11] AutoReset 15 [12] AutoReset 20 [13] Infinite auto reset 14-21 Automatic Restart Time 0 - 600 s * 10 s	14-22 Restore Factory Settings *[0] Normal Operation [2] Restore Factory Settings 14-26 Action At Drive Fault *[0] Trip [1] Warning 14-4* Energy Savings 14-41 Energy Savings Minimum Magnetisation 40 - 75 % * 66 % 15-0* Drive Information 15-00 Operating Data 15-00 Operating Days 15-01 Running Hours 15-02 kWh Counter 15-03 Power Ups 15-04 Over Temps 15-05 Over Volts 15-06 Reset kWh Counter *[0] Do not reset [1] Reset counter 15-07 Reset Running Hours Counter *[0] Do not reset [1] Reset counter 15-3* Fault Log 15-30 Fault Log: Error Code 15-4* Drive Identification 15-40 GE Drive Type 15-41 Power Section 15-42 Voltage 15-43 Software Version 15-46 Frequency Converter Order. No 15-48 Keypad Id No 15-51 Frequency Converter Serial No 16-0* General Status 16-00 Control Word 0 - 0XFFFF 16-01 Reference [Unit] -4999 - 4999 16-02 Reference % -200.0 - 200.0 % 16-03 Status Word 0 - 0XFFFF 16-05 Main Actual Value [%] -200.0 - 200.0 % 16-09 Custom Readout Dep. on par. 0-31, 0-32 and 4-14	16-1* Motor Status 16-10 Power [kW] 16-11 Power [hp] 16-12 Motor Voltage [V] 16-13 Frequency [Hz] 16-14 Motor Current [A] 16-15 Frequency [%] 16-18 Motor Thermal [%] 16-3* Drive Status 16-30 DC Link Voltage 16-34 Heatsink Temp. 16-35 Inverter Thermal 16-36 Drive Nominal current 16-37 Drive Maximum Current 16-38 Logic Controller State 16-5* Ref. / Feedb. 16-50 External Reference 16-51 Pulse Reference 16-52 Feedback [Unit] 16-6* Inputs / Outputs 16-60 Digital Input 18,19,27,33 0 - 1111 16-61 Digital Input 29 0 - 1 16-62 Analog Input 53 (volt) 16-63 Analog Input 53 (current) 16-64 Analog Input 60 16-65 Analog Output 42 [mA] 16-68 Pulse Input [Hz] 16-71 Relay Output [bin] 16-72 Counter A 16-73 Counter B 16-8* Fieldbus / GE Drive Port 16-86 GE Drive Port REF 1 0x8000 - 0x7FFF 16-9* Diagnosis Readouts 16-90 Alarm Word 0 - 0XFFFFFFF 16-92 Warning Word 0 - 0XFFFFFFF 16-94 Ext. Status Word 0 - 0XFFFFFFF
--	--	---	---



5.2.1. Conversion Index

The various attributes of each parameter are displayed in the section *Factory Settings*. Parameter values are transferred as whole numbers only. Conversion factors are therefore used to transfer decimals according to the table below.

Example:

Par. 1-24 *Motor Current* has a conversion index of -2 (i.e. conversion factor of 0.01 according to the table below). To set the parameter to 2.25 A, transfer the value 225 via Modbus. The Conversion Factor of 0.01 means that the value transferred is multiplied by 0.01 in the drive. The value 225 transferred on the bus is thus perceived as 2.25 A in the drive.

Conversion index	Conversion factor
2	10
1	100
0	1
-1	0.1
-2	0.01
-3	0.001
-4	0.0001
-5	0.00001

Table 5.1: Conversion table

5.2.2. Change during operation

"TRUE" means that the parameter can be changed while the frequency converter is in operation and "FALSE" means that the frequency converter must be stopped before a change can be made.

5.2.3. 2-Set-up

"All set-up": The parameter can be set individually in each of the two set-ups, i.e. one single parameter can have two different data values.

"1 set-up": Data value will be the same in both set-ups.

5.2.4. Type

Data Type	Description	Type
2	Integer 8	Int8
3	Integer 16	Int16
4	Integer 32	Int32
5	Unsigned 8	UInt8
6	Unsigned 16	UInt16
7	Unsigned 32	UInt32
9	Visible string	VisibleString



5.2.5. 0-** Operation/Display

Parameter Number	Parameter Description	Default Value	2 Setup	Change During Operation	Conversion Index	Type
0 - 03	Regional Settings	[1] US	1 set-up	FALSE	-	Uint8
0 - 04	Operating State at Power-up (Hand)	[1] Forced stop ref=old	All set-ups	TRUE	-	Uint8
0 - 10	Active Set-up	[1] Set-up 1	1 set-up	TRUE	-	Uint8
0 - 11	Edit Set-up	[1] Set-up 1	1 set-up	TRUE	-	Uint8
0 - 12	Link Settings	[20] Linked	All set-ups	FALSE	-	Uint8
0 - 40	[Hand] Key on Keypad	[1] Enabled	All set-ups	TRUE	-	Uint8
0 - 41	[Off / Reset] Key on Keypad	[1] Enabled All	All set-ups	TRUE	-	Uint8
0 - 42	[Auto] Key on Keypad	[1] Enabled	All set-ups	TRUE	-	Uint8
0 - 50	Keypad Copy	[0] No copy	1 set-up	FALSE	-	Uint8
0 - 51	Set-up Copy	[0] No copy	1 set-up	FALSE	-	Uint8
0 - 60	Main Menu Password	0	1 set-up	TRUE	0	Uint16



5.2.6. 1-** Load/Motor

Parameter Number	Parameter Description	Default Value	2 Setup	Change During Operation	Conversion Index	Type
1 - 00	Configuration Mode	[0] Speed open loop	All set-ups	TRUE	-	Uint8
1 - 01	Motor Control Principle	[1] Adv. Vector Control	All set-ups	FALSE	-	Uint8
1 - 03	Torque Characteristics	[0] Constant torque	All set-ups	TRUE	-	Uint8
1 - 05	Hand Mode Configuration	[2] As mode par 1-00	All set-ups	TRUE	-	Uint8
1 - 20	Motor Power		All set-ups	FALSE	-	Uint8
1 - 22	Motor Voltage		All set-ups	FALSE	0	Uint16
1 - 23	Motor Frequency		All set-ups	FALSE	0	Uint16
1 - 24	Motor Current		All set-ups	FALSE	-2	Uint16
1 - 25	Motor Nominal Speed		All set-ups	FALSE	0	Uint16
1 - 29	Auto Tune	[0] Off	1 set-up	FALSE	-	Uint8
1 - 30	Stator Resistance (Rs)		All set-ups	FALSE	-2	Uint16
1 - 33	Stator Leakage Reactance (Xl)		All set-ups	FALSE	-2	Uint32
1 - 35	Main Reactance (Xh)		All set-ups	FALSE	-2	Uint32
1 - 50	Motor Magnetisation at Zero Speed	100%	All set-ups	TRUE	0	Uint16
1 - 52	Min Speed Normal Magnetising [Hz]	0 Hz	All set-ups	TRUE	-1	Uint16
1 - 55	U/f Characteristic - U		All set-ups	TRUE	0	Uint16
1 - 56	U/f Characteristic - F		All set-ups	TRUE	0	Uint16
1 - 60	Low Speed Load Compensation	100%	All set-ups	TRUE	0	Uint16
1 - 61	High Speed Load Compensation	100%	All set-ups	TRUE	0	Uint16
1 - 62	Slip Compensation	100%	All set-ups	TRUE	0	Int16
1 - 63	Slip Compensation Time Constant	0.1 s	All set-ups	TRUE	-2	Uint16
1 - 71	Holding Time	0 s	All set-ups	TRUE	-1	Uint8
1 - 72	Start Function	[2] Coast/delay time	All set-ups	TRUE	-	Uint8
1 - 73	Start Mode	[0] Disabled	All set-ups	FALSE	-	Uint8
1 - 80	Function at Stop	[0] Coast	All set-ups	TRUE	-	Uint8
1 - 82	Min Speed for Function at Stop [Hz]	0 Hz	All set-ups	TRUE	-1	Uint16
1 - 90	Motor Thermal Protection	[0] No protection	All set-ups	TRUE	-	Uint8
1 - 93	Thermistor Resource	[0] None	All set-ups	FALSE	-	Uint8



5.2.7. 2-** Brakes

Parameter Number	Parameter Description	Default Value	2 Setup	Change During Operation	Conversion Index	Type
2 - 00	DC Hold Current	50%	All set-ups	TRUE	0	Uint16
2 - 01	DC Brake Current	50%	All set-ups	TRUE	0	Uint16
2 - 02	DC Braking Time	10 s	All set-ups	TRUE	-1	Uint16
2 - 04	DC Brake Cut In Speed	0 Hz	All set-ups	TRUE	-1	Uint16
2 - 10	Brake Function	[0] Off	All set-ups	TRUE	-	Uint8
2 - 11	Brake Resistor (ohm)		All set-ups	TRUE	0	Uint16
2 - 16	AC Brake, Max current	100%	All set-ups	TRUE	0	Uint16
2 - 17	Over-voltage Control	[0] Disabled	All set-ups	TRUE	-	Uint8
2 - 20	Release Brake Current	0 A	All set-ups	TRUE	-2	Uint32
2 - 22	Activate Brake Speed [Hz]	0 Hz	All set-ups	TRUE	-1	Uint16

**5.2.8. 3-** Reference/Ramps**

Parameter Number	Parameter Description	Default Value	2 Setup	Change During Operation	Conversion Index	Type
3 - 00	Reference Range	[0] Min - Max	All set-ups	TRUE	-	Uint8
3 - 02	Minimum Reference	0	All set-ups	TRUE	-3	Int32
3 - 03	Maximum Reference	50	All set-ups	TRUE	-3	Int32
3 - 10	Preset Reference	0%	All set-ups	TRUE	-2	Int16
3 - 11	Jog Speed [Hz]	5 Hz	All set-ups	TRUE	-1	Uint16
3 - 12	Catch up/slow Down Value	0%	All set-ups	TRUE	-2	Int16
3 - 14	Preset Relative Reference	0%	All set-ups	TRUE	-2	Int16
3 - 15	Reference Resource 1	[1] Analog in 53	All set-ups	TRUE	-	Uint8
3 - 16	Reference Resource 2	[2] Analog in 60	All set-ups	TRUE	-	Uint8
3 - 17	Reference Resource 3	[11] Local bus reference	All set-ups	TRUE	-	Uint8
3 - 18	Relative Scaling Reference Resource	[0] No function	All set-ups	TRUE	-	Uint8
3 - 40	Accel/Decel 1 Pattern	[0] Linear	All set-ups	TRUE	-	Uint8
3 - 41	Accel Time 1	3 s	All set-ups	TRUE	-2	Uint32
3 - 42	Decel Time 1	3 s	All set-ups	TRUE	-2	Uint32
3 - 50	Accel/Decel 2 Pattern	[0] Linear	All set-ups	TRUE	-	Uint8
3 - 51	Accel Time 2	3 s	All set-ups	TRUE	-2	Uint32
3 - 52	Decel Time 2	3 s	All set-ups	TRUE	-2	Uint32
3 - 80	Jog Accel/Decel Time	3 s	All set-ups	TRUE	-2	Uint32
3 - 81	Quick Stop Ramp Time	3 s	1 set-up	TRUE	-2	Uint32



5.2.9. 4-** Limits/Warnings

Parameter Number	Parameter Description	Default Value	2 Setup	Change During Operation	Conversion Index	Type
4 - 10	Reverse Lock	[2] Both directions	All set-ups	FALSE	-	Uint8
4 - 12	Motor Speed Low Limit [Hz]	0 Hz	All set-ups	FALSE	-1	Uint16
4 - 14	Motor Speed High Limit [Hz]	65 Hz	All set-ups	FALSE	-1	Uint16
4 - 16	Torque Limit Motor Mode	150%	All set-ups	TRUE	0	Uint16
4 - 17	Torque Limit Generator Mode	100%	All set-ups	TRUE	0	Uint16
4 - 50	Warning Current Low	0 A	All set-ups	TRUE	-2	Uint32
4 - 51	Warning Current High	26 A	All set-ups	TRUE	-2	Uint32
4 - 58	Missing Motor Phase Function	[1] On	All set-ups	FALSE	-	Uint8
4 - 61	Jump Frequency From [Hz]	0 Hz	All set-ups	TRUE	-1	Uint16
4 - 63	Jump Frequency To [Hz]	0 Hz	All set-ups	TRUE	-1	Uint16

**5.2.10. 5-** Digital In/Out**

Parameter Number	Parameter Description	Default Value	2 Setup	Change During Operation	Conversion Index	Type
5 - 10	Terminal 18 Digital Input	[8] Start	All set-ups	TRUE	-	Uint8
5 - 11	Terminal 19 Digital Input	[10] Reversing	All set-ups	TRUE	-	Uint8
5 - 12	Terminal 27 Digital Input	[11] Reset	All set-ups	TRUE	-	Uint8
5 - 13	Terminal 29 Digital Input	[14] Jog	All set-ups	TRUE	-	Uint8
5 - 15	Terminal 33 Digital Input	[16] Preset ref bit 0	All set-ups	TRUE	-	Uint8
5 - 40	Function Relay	[0] No operation	All set-ups	TRUE	-	Uint8
5 - 55	Terminal 33 Low Frequency	20 Hz	All set-ups	TRUE	0	Uint16
5 - 56	Terminal 33 High Frequency	5000 Hz	All set-ups	TRUE	0	Uint16
5 - 57	Terminal 33 Low Ref./Feedb. Value	0	All set-ups	TRUE	-3	Int32
5 - 58	Terminal 33 High Ref./Feedb. Value	50	All set-ups	TRUE	-3	Int32



5.2.11. 6-** Analog In/Out

Parameter Number	Parameter Description	Default Value	2 Setup	Change During Operation	Conversion Index	Type
6 - 00	Live Zero Timeout Time	10 s	All set-ups	TRUE	0	Uint8
6 - 01	Live Zero TimeoutFunction	[0] Off	All set-ups	TRUE	-	Uint8
6 - 10	Terminal 53 Low Voltage	0.07 V	All set-ups	TRUE	-2	Uint16
6 - 11	Terminal 53 High Voltage	10 V	All set-ups	TRUE	-2	Uint16
6 - 12	Terminal 53 Low Current	0.14 mA	All set-ups	TRUE	-2	Uint16
6 - 13	Terminal 53 High Current	20 mA	All set-ups	TRUE	-2	Uint16
6 - 14	Terminal 53 Low Ref./Feedb. Value	0	All set-ups	TRUE	-3	Int32
6 - 15	Terminal 53 High Ref./Feedb. Value	50	All set-ups	TRUE	-3	Int32
6 - 16	Terminal 53 Filter Time Constant	0.01 s	All set-ups	TRUE	-2	Uint16
6 - 19	Terminal 53 mode	[0] Voltage mode	1 set-up	TRUE	-	Uint8
6 - 22	Terminal 60 Low Current	0.14 mA	All set-ups	TRUE	-2	Uint16
6 - 23	Terminal 60 High Current	20 mA	All set-ups	TRUE	-2	Uint16
6 - 24	Terminal 60 Low Ref./Feedb. Value	0	All set-ups	TRUE	-3	Int32
6 - 25	Terminal 60 High Ref./Feedb. Value	50	All set-ups	TRUE	-3	Int32
6 - 26	Terminal 60 Filter Time Constant	0.01 s	All set-ups	TRUE	-2	Uint16
6 - 81	Keypad potentiometer Low Ref.	0	All set-ups	TRUE	-3	Int32
6 - 82	Keypad potentiometer High Ref.	50	All set-ups	TRUE	-3	Int32
6 - 90	Terminal 42 Mode	[0] 0-20 mA	All set-ups	TRUE	-	Uint8
6 - 91	Terminal 42 Analog Output	[0] No operation	All set-ups	TRUE	-	Uint8
6 - 92	Terminal 42 Digital Output	[0] No operation	All set-ups	TRUE	-	Uint8
6 - 93	Terminal 42 Output Min Scale	0%	All set-ups	TRUE	-2	Uint16
6 - 94	Terminal 42 Output Max Scale	100%	All set-ups	TRUE	-2	Uint16

**5.2.12. 7-** Controllers**

Parameter Number	Parameter Description	Default Value	2 Setup	Change During Operation	Conversion Index	Type
7 - 20	Process CL Feedback 1 Resource	[0] No function	All set-ups	TRUE	-	Uint8
7 - 30	Process PI Normal/ Inverse Control	[0] Normal	All set-ups	TRUE	-	Uint8
7 - 31	Process PI Anti Windup	[1] Enabled	All set-ups	TRUE	-	Uint8
7 - 32	Process PI Start Speed	0 Hz	All set-ups	TRUE	-1	Uint16
7 - 33	Process PI Proportional Gain	0.01	All set-ups	TRUE	-2	Uint16
7 - 34	Process PI Integral Time	9999 s	All set-ups	TRUE	-2	Uint32
7 - 38	Process PI Feed Forward Factor	0%	All set-ups	TRUE	0	Uint16
7 - 39	On Reference Bandwidth	5%	All set-ups	TRUE	0	Uint8



5.2.13. 8-** Comm. and Options

Parameter Number	Parameter Description	Default Value	2 Setup	Change During Operation	Conversion Index	Type
8 - 01	Control Site	[0] Digital and ctrl word	All set-ups	TRUE	-	Uint8
8 - 02	Control Word Source	[1] GE Drive RS485	All set-ups	TRUE	-	Uint8
8 - 03	Control Word Timeout Time	1 s	1 set-up	TRUE	-1	Uint16
8 - 04	Control Word Timeout Function	[0] Off	1 set-up	TRUE	-	Uint8
8 - 06	Reset Control Word Timeout	[0] No function	1 set-up	TRUE	-	Uint8
8 - 30	Protocol	[0] GE Drive	1 set-up	TRUE	0	Uint8
8 - 31	Address	1	1 set-up	TRUE	0	Uint8
8 - 32	GE Drive Port Baud Rate	[2] 9600 Baud	1 set-up	TRUE	-	Uint8
8 - 33	GE Drive Port Parity	[0] Even Parity 1 Stop Bit	1 set-up	TRUE	-	Uint8
8 - 35	Minimum Response Delay	0.01 s	1 set-up	TRUE	-3	Uint16
8 - 36	Max Response Delay	5 s	1 set-up	TRUE	-3	Uint16
8 - 50	Coasting Select	[3] Logic OR	All set-ups	TRUE	-	Uint8
8 - 51	Quick Stop Select	[3] Logic OR	All set-ups	TRUE	-	Uint8
8 - 52	DC Brake Select	[3] Logic OR	All set-ups	TRUE	-	Uint8
8 - 53	Start Select	[3] Logic OR	All set-ups	TRUE	-	Uint8
8 - 54	Reversing Select	[3] Logic OR	All set-ups	TRUE	-	Uint8
8 - 55	Set-up Select	[3] Logic OR	All set-ups	TRUE	-	Uint8
8 - 56	Preset Reference Select	[3] Logic OR	All set-ups	TRUE	-	Uint8
8 - 94	Bus feedback 1	0	All set-ups	TRUE	0	Int16

**5.2.14. 13-** Logic Controller**

Parameter Number	Parameter Description	Default Value	2 Setup	Change During Operation	Conversion Index	Type
13 - 00	Logic Controller Mode	[0] Off	1 set-up	TRUE	-	UInt8
13 - 01	Start Event	[39] Start command	1 set-up	TRUE	-	UInt8
13 - 02	Stop Event	[40] Drive stopped	1 set-up	TRUE	-	UInt8
13 - 03	Reset Logic Controller	[0] Do not reset	1 set-up	TRUE	-	UInt8
13 - 10	Comparator Operand	[0] Disabled	1 set-up	TRUE	-	UInt8
13 - 11	Comparator Operator	[1] ApproxEqual	1 set-up	TRUE	-	UInt8
13 - 12	Comparator Value	0	1 set-up	TRUE	-1	Int32
13 - 20	Logic Controller Controller Timer	0 s	1 set-up	TRUE	-1	UInt32
13 - 40	Logic Rule Boolean 1	[0] False	1 set-up	TRUE	-	UInt8
13 - 41	Logic Rule Operator 1	[0] Disabled	1 set-up	TRUE	-	UInt8
13 - 42	Logic Rule Boolean 2	[0] False	1 set-up	TRUE	-	UInt8
13 - 43	Logic Rule Operator 2	[0] Disabled	1 set-up	TRUE	-	UInt8
13 - 44	Logic Rule Boolean 3	[0] False	1 set-up	TRUE	-	UInt8
13 - 51	Logic Controller Event	[0] False	1 set-up	TRUE	-	UInt8
13 - 52	Logic Controller Action	[0] Disabled	1 set-up	TRUE	-	UInt8



5.2.15. 14-**- Special Functions

Parameter Number	Parameter Description	Default Value	2 Setup	Change During Operation	Conversion Index	Type
14 - 01	Motor Noise (Carrier Freq.)	[1] 4.0 kHz	All set-ups	TRUE	-	Uint8
14 - 03	Overmodulation	[1] On	All set-ups	FALSE	-	Uint8
14 - 12	Function at Mains Imbalance	[0] Trip	All set-ups	TRUE	-	Uint8
14 - 20	Reset Mode	[0] Manual reset	All set-ups	TRUE	-	Uint8
14 - 21	Automatic Restart Time	10 s	All set-ups	TRUE	0	Uint16
14 - 22	Restore Factory Settings	[0] Normal operation	1 set-up	TRUE	-	Uint8
14 - 26	Action At Inverter Fault	[0] Trip	All set-ups	TRUE	-	Uint8
14 - 41	Energy Savings Minimum Magnetisation	66 %	All set-ups	TRUE	0	Uint8

**5.2.16. 15-**- Drive Information**

Parameter Number	Parameter Description	Default Value	2 Setup	Change During Operation	Conversion Index	Type
15 - 00	Operating Time	0	1 set-up	TRUE	0	Uint32
15 - 01	Running Hours	0	1 set-up	TRUE	0	Uint32
15 - 02	kWh Counter	0	1 set-up	TRUE	0	Uint32
15 - 03	Power Ups	0	1 set-up	TRUE	0	Uint32
15 - 04	Over Temp's	0	1 set-up	TRUE	0	Uint16
15 - 05	Over Volt's	0	1 set-up	TRUE	0	Uint16
15 - 06	Reset kWh Counter	[0] Do not reset	1 set-up	TRUE	-	Uint8
15 - 07	Reset Running Hours Counter	[0] Do not reset	1 set-up	TRUE	-	Uint8
15 - 30	Fault Log: Error Code	0	1 set-up	TRUE	0	Uint8
15 - 40	GE Drive Type		1 set-up	FALSE	0	VisibleString
15 - 41	Power Section		1 set-up	FALSE	0	VisibleString
15 - 42	Voltage		1 set-up	FALSE	0	VisibleString
15 - 43	SW ID Control Card		1 set-up	FALSE	0	VisibleString
15 - 46	Frequency Converter Ordering No		1 set-up	FALSE	0	VisibleString
15 - 48	Keypad Id No		1 set-up	FALSE	0	VisibleString
15 - 51	Frequency Converter Serial Number		1 set-up	FALSE	0	VisibleString



5.2.17. 16-** Data Readouts

Parameter Number	Parameter Description	Default Value	2 Setup	Change During Operation	Conversion Index	Type
16-00	Control Word	0	1 set-up	TRUE	0	Uint16
16-01	Reference [Unit]	0	1 set-up	TRUE	-3	Int32
16-02	Reference %	0	1 set-up	TRUE	-1	Int16
16-03	Status Word	0	1 set-up	TRUE	0	Uint16
16-05	Main Actual Value [%]	0	1 set-up	TRUE	-2	Int16
16-10	Power [kW]	0	1 set-up	TRUE	-3	Uint16
16-11	Power [hp]	0	1 set-up	TRUE	-3	Uint16
16-12	Motor Voltage	0	1 set-up	TRUE	0	Uint16
16-13	Frequency	0	1 set-up	TRUE	-1	Uint16
16-14	Motor Current	0	1 set-up	TRUE	-2	Uint16
16-15	Frequency [%]	0	1 set-up	TRUE	-1	Uint16
16-18	Motor Thermal	0	1 set-up	TRUE	0	Uint8
16-30	DC Link Voltage	0	1 set-up	TRUE	0	Uint16
16-34	Heatsink Temp.	0	1 set-up	TRUE	0	Uint8
16-35	Inverter Thermal	0	1 set-up	TRUE	0	Uint8
16-36	Inv. Nom. Current	0	1 set-up	TRUE	-2	Uint16
16-37	Inv. Max. Current	0	1 set-up	TRUE	-2	Uint16
16-38	Logic Controller State	0	1 set-up	TRUE	0	Uint8
16-50	External Reference	0	1 set-up	TRUE	-1	Int16
16-51	Pulse Reference	0	1 set-up	TRUE	-1	Int16
16-52	Feedback [Unit]	0	1 set-up	TRUE	-3	Int32
16-60	Digital input 18,19,27,33	0	1 set-up	TRUE	0	Uint16
16-61	Digital input 29	0	1 set-up	TRUE	0	Uint8
16-62	Analog input 53 (V)	0	1 set-up	TRUE	-2	Uint16
16-63	Analog input 53 (mA)	0	1 set-up	TRUE	-2	Uint16
16-64	Analog input 60	0	1 set-up	TRUE	-2	Uint16
16-65	Analog output 42 [mA]	0	1 set-up	TRUE	-2	Uint16
16-68	Pulse input 33	20	1 set-up	TRUE	0	Uint16
16-71	Relay Output [bin]	0	1 set-up	TRUE	0	Uint8
16-72	Counter A	0	1 set-up	TRUE	0	Int16
16-73	Counter B	0	1 set-up	TRUE	0	Int16
16-86	GE Drive Port REF 1	0	1 set-up	TRUE	0	Int16
16-90	Alarm Word	0	1 set-up	TRUE	0	Uint32
16-92	Warning Word	0	1 set-up	TRUE	0	Uint32
16-94	Ext. Status Word	0	1 set-up	TRUE	0	Uint32



6. Troubleshooting

No.	Description	Warning	Alarm	Trip Lock	Error	Cause of Problem
2	Live zero error	X	X			Signal on terminal 53 or 60 is less than 50% of value set in par. 6-10, 6-12 and 6-22.
4	Mains phase loss ¹⁾	X	X	X		Missing phase on supply side, or too high voltage imbalance. Check supply voltage.
7	DC over voltage ¹⁾	X	X			Intermediate circuit voltage exceeds limit.
8	DC under voltage ¹⁾	X	X			Intermediate circuit voltage drops below "voltage warning low" limit.
9	Driveoverload	X	X			More than 100% load for too long.
10	Motor Electronic Overload over temperature	X	X			Motor is too hot due to more than 100% load for too long.
11	Motor thermistor over temperature	X	X			Thermistor or thermistor connection is disconnected.
12	Torque limit	X				Torque exceeds value set in either par. 4-16 or 4-17.
13	Over Current	X	X	X		Drive current limit is exceeded.
14	Earth fault		X	X		Discharge from output phases to ground.
16	Short Circuit		X	X		Short-circuit in motor or on motor terminals.
17	Control word timeout	X	X			No communication to frequency converter.
25	Brake resistor short-circuited		X	X		Brake resistor is short-circuited, thus brake function is disconnected.
27	Brake chopper short-circuited		X	X		Brake transistor is short-circuited, thus brake function is disconnected.
28	Brake check		X			Brake resistor is not connected/working
29	Power board over temp	X	X	X		Heat-sink cut-out temperature has been reached.
30	Motor phase U missing		X	X		Motor phase U is missing. Check the phase.
31	Motor phase V missing		X	X		Motor phase V is missing. Check the phase.
32	Motor phase W missing		X	X		Motor phase W is missing. Check the phase.
38	Internal fault		X	X		Contact local GE supplier.
47	Control Voltage Fault	X	X	X		24 V DC may be overloaded.
51	Auto Tune check U_{nom} and I_{nom}		X			Wrong setting for motor voltage and/or motor current.
52	Auto Tune low I_{nom}		X			Motor current is too low. Check settings.
59	Current limit	X				Drive overload.
63	Mechanical Brake Low		X			Actual motor current has not exceeded "release brake" current within "start delay" time window.
80	Drive restored to Factory Settings		X			All parameter settings are restored to factory default settings.
84	The connection between drive and Keypad is lost			X		No communication between Keypad and frequency converter
85	Button disabled			X		See parameter group 0-4* Keypad
86	Copy fail			X		An error occurred while copying from frequency converter to Keypad or vice versa.
87	Keypad data invalid			X		Occurs when copying from Keypad if the Keypad contains erroneous data - or if no data was uploaded to the Keypad.
88	Keypad data not compatible			X		Occurs when copying from Keypad if data are moved between frequency converters with major differences in software versions.
89	Parameter read only			X		Occurs when trying to write to a read-only parameter.
90	Parameter database busy			X		Keypad and RS485 connection are trying to update parameters simultaneously.
91	Parameter value is not valid in this mode			X		Occurs when trying to write an illegal value to a parameter.
92	Parameter value exceeds the min/max limits			X		Occurs when trying to set a value outside the range.
nw run	Not While RUN ing			X		Parameter can only be changed when the motor is stopped.
Err.	A wrong password was entered			X		Occurs when using a wrong password for changing a password-protected parameter.

¹⁾ These faults may be caused by mains distortions. Installing GE Line Filter may rectify this problem.

Table 6.1: Code list



6.1.1. Alarm, Warning and Extended Status Word

			Par 1690	Par 1692	Par 1694
Bit	Hex	Dec	AlarmWord	WarningWord	ExtendedStatusWord
0	1	1	Brake check		Ramping
1	2	2	Pwr.card temp	Pwr.card temp	
2	4	4	Earth Fault		Start CW/CCW
3	8	8			Slow down
4	10	16	Ctrl.word TO	Ctrl.word TO	Catch up
5	20	32	Over Current	Over Current	
6	40	64		Torque limit	
7	80	128	Motor Thermistor Over	Motor Thermistor Over	Output current high
8	100	256	Electronic Overload Over	Electronic Overload Over	Output current low
9	200	512	Inverter overload	Inverter overload	
10	400	1024	DC under volt	DC under volt	
11	800	2048	DC over volt	DC over volt	
12	1000	4096	Short Circuit		
13	2000	8192			Braking
14	4000	16384	Mains ph. loss	Mains ph. loss	
15	8000	32768	"Auto Tune Not OK"		OVC active
16	10000	65536	Live zero error	Live zero error	AC brake
17	20000	131072	Internal fault		
18	40000	262144			
19	80000	524288	U phase loss		
20	100000	1048576	V phase loss		
21	200000	2097152	W phase loss		
22	400000	4194304			
23	800000	8388608	Control Voltage Fault		
24	1000000	16777216			
25	2000000	33554432		Current limit	
26	4000000	67108864	Brake resistor shortcircuit		
27	8000000	134217728	Brake IGBT shortcircuit		
28	10000000	268435456		MotorPhaseMissing	
29	20000000	536870912	Drive initialised		
30	40000000	1073741824		Undefined	
31	80000000	2147483648	Mech. brake low		DatabaseBusy



Index

A

Abbreviations And Standards	6
Active Set-up	7, 52
Active Set-up	32
Active Set-up	11, 13, 63, 68

B

Brake Resistor	23, 34
Brake Resistor	70
Brake Resistor (ohm)	63
Brake Resistor Short-circuited	81

D

Dc-brake	20, 22, 32, 64
Dc-brake	63
Display	7
Disposal Instruction	4
Drive Identification, 15-4*	57

E

Earth Leakage Current	3, 4
Edit Set-up	7
Edit Set-up	11, 12, 13, 63, 68
Electronic Waste	4

G

General Warning	6
-----------------	---

H

Hand Mode	64
Hand Mode	11, 15, 34, 69

I

Indicator Lights	8
Isolated Mains Source	4
It Mains	4

L

Leakage Current	4
Load Compensation	18, 63, 69

M

Main Menu	8
Motor Direction	8
Motor Overload Protection	4
Motor Phase	59
Motor Phase	31, 64, 72
Motor Status	58
Motor Temperature	20, 23
Motor Temperature	63

N

Navigation Keys	9
Not Changeable During Operation	12

O

Operation Keys	9
Over-voltage Control	23, 63, 70

**P**

Parameter Number	8
------------------------	---

Q

Quick Menu	8
------------------	---

R

Rated Magnetizing Current	17
Readout Mode	8
Residual Current Device	4

S

Serial Communication	9, 29, 34, 43, 45, 46, 58, 61
Set-up Number	7
Set-up Software	7
Slip Compensation	19, 63, 69
Special Functions	54
Status Menu	8

T

Thermal Load	17, 59
Thermistor	20
Thermistor	63
Thermistor Resource	69
Trip Reset, 14-2*	54
Type Code String	5

U

Unit	8
------------	---

V

Value	8
-------------	---

The instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the GE company.

AF-60 LP is a trademark of the General Electric Company.

GE Consumer & Industrial
41 Woodford Avenue
Plainville, CT 06062

www.geelectrical.com/drives



imagination at work