


Fan (AGY-030)

AGY-030 increases the number of starts to 40/hour. The fan operates automatically during a soft start or soft stop and will continue to run if the heatsink temperature is $> 45^{\circ}\text{C}$. The fan stops when the heatsink temperature has fallen below 40°C .

Fitting

Step 1. Remove screw (x1) and retain

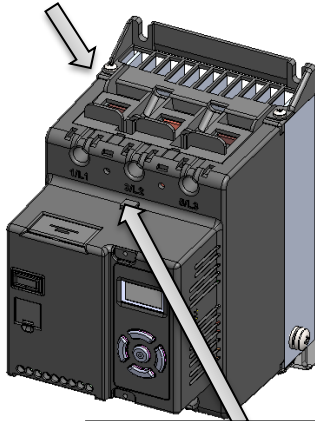


Step 2. Remove blanking plug (x1)



Step 3. Fit fan as shown



Step 4. Replace screw (x1)

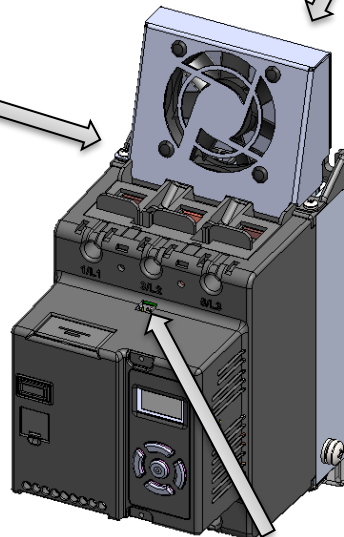

Step 5. Fit flying lead from fan into socket.