

### SINAMICS V20 变频器 BOP 接口模块 (选件)

### SINAMICS V20 Inverter – BOP Interface Module (option)

### BOP 接口模块

### BOP Interface Module

订货号 Article number: 6SL3255-0VA00-2AA1



### 功能

### Functionality

该模块可以用作外接 BOP 的接口模块, 从而实现外接 BOP 对变频器的远程控制。BOP 接口模块允许的工作温度范围在 -10 °C 至 50 °C 之间。

This module can be used as an interface module for the external BOP, thus realizing the remote control over the inverter by the external BOP. The permissible operating temperature range for the BOP Interface Module is from -10 °C to 50 °C.

### 说明

### Note

只有在需要使用外接 BOP (选件) 对变频器进行远程操作控制时才须将 BOP 接口模块与外接 BOP 连接在一起。

Connecting the BOP Interface Module to the external BOP (option) is required only when you desire to control the inverter operation remotely with the external BOP.

### 安装步骤

### Mounting

