



- Hoja de Curvas Características -
- *Power and Torque Diagrams* -

Página	1/1
Fecha	30/08/2013

400 V

[illegible]

Par / Torque (Nm)

rpm

— Limite Servicio S6 Limit for Service S6
 — Limite Servicio S1 Limit for Service S1
 — Carga / Load Nm 1
 — Carga / Load Nm 2

[illegible]

The graph displays the power limits and load for two services, S6 and S1, across a range of RPM from 0 to 4000. The Y-axis represents Potencia / Power (KW) from 0 to 20. The X-axis represents rpm from 0 to 4000. The legend indicates four data series: L'imate Servicio S6 Limit for Service S6 (thin black line), L'imate Servicio S1 Limit for Service S1 (thick black line), Carga / Load KW 1 (blue line), and Carga / Load KW 2 (red line). The S6 limit starts at 0 kW at 0 rpm, rises to 18.5 kW at 1200 rpm, remains constant until 2000 rpm, and then decreases to approximately 12.5 kW at 3600 rpm. The S1 limit starts at 0 kW at 0 rpm, rises to 12.5 kW at 1200 rpm, remains constant until 2700 rpm, and then decreases to approximately 8.5 kW at 3600 rpm. The load for KW 1 and KW 2 is not visible on the graph, likely because they are zero or very close to zero.

rpm	L'imate Servicio S6 Limit (KW)	L'imate Servicio S1 Limit (KW)	Carga / Load KW 1 (KW)	Carga / Load KW 2 (KW)
0	0.0	0.0	0.0	0.0
500	5.0	5.0	0.0	0.0
1000	10.0	10.0	0.0	0.0
1200	18.5	12.5	0.0	0.0
1500	18.5	12.5	0.0	0.0
2000	18.5	12.5	0.0	0.0
2500	14.0	12.5	0.0	0.0
2700	12.5	12.5	0.0	0.0
3000	11.0	11.0	0.0	0.0
3500	9.0	9.0	0.0	0.0
3600	8.5	8.5	0.0	0.0