


Software

WLP

User's Manual

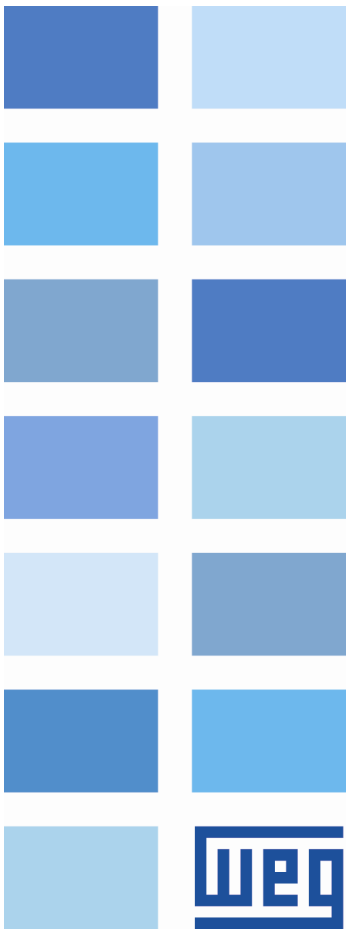



User's Manual

Series: WLP V9.1X

Language: English

Publication Date: 05/2012

Index

	0
Parte I Welcome	10
Parte II Overview	10
1 What the news in WLP	10
2 General Information	20
3 Installation and initialization of the WLP	21
4 Introduction	22
5 Project Architecture	24
6 Project Tree	24
7 Configuration Wizards	26
8 Monitoring Dialogs	26
Parte III Menus	27
1 Project	27
New	27
Open	27
Save	27
Save As	28
Save All	28
Close	28
Remove	28
Print	28
Print Preview	29
Print Setup	29
Units	29
Proprieties	29
Language	30
Load the last Project during initialization	30
Exit	30
2 Edit	30
Undo	30
Redo	31
Cut	31
Copy	31
Paste	31
Find	32
3 View	32
Standard Bar	32
Communication Bar	32
Edition Bar	32
Block Bar	32
Page Bar	33
Status Bar	33

Project Tree	33
Grid	33
Tag/Address	33
Compilation errors	34
Searching errors	34
Compilation Info	34
Address table	34
User parameter table	34
4 Page	35
Insert before	35
Inserte after	35
Delete	35
Previous	35
Next	36
Go to	36
5 Insert	36
Select	36
Delete Element	36
Comment	37
Connection	37
Horizontal	37
Vertical	37
Contacts	38
NO CONTACT.....	38
NC CONTACT.....	38
Coils	38
COIL	38
NEG COIL.....	38
SET COIL.....	39
RESET COIL.....	39
PTS COIL.....	39
NTS COIL.....	39
Function Blocks	40
Controle de Movimento	40
STOP	40
QSTOP	40
Positioning.....	40
SCURVE	40
TCURVE	40
HOME	41
TCURVAR.....	41
CAM	41
CALCCAM.....	42
SHIFT	42
MC_CamTableSelect.....	42
MC_CamCalc.....	42
MC_CamIn.....	43
MC_CamOut.....	43
Movement.....	43
SETSPPEED.....	43
JOG	43
SPEED	44
REF	44
Gear-Box.....	44

FOLLOW.....	44
AUTOREG.....	45
Verify	45
INPOS	45
INBWG	45
PLC	45
TON	45
RTC	46
CTU	46
PID	46
FILTER	46
CTENC	47
Calculation.....	47
COMP	47
MATH	47
FUNC	48
SAT	48
MUX	48
DMUX	48
Transference.....	49
TRANSFER.....	49
FL2INT	49
INT2FL	49
IDATA	49
USERERR.....	50
CAN Network.....	50
MSCANWEG.....	50
RXCANWEG.....	50
SDO	51
USERFB.....	51
MMC	51
6 Tools	51
Parameter Values	51
Anybus	52
CANOpen	52
Cam Profiles	52
Application	61
Create	61
Configure.....	62
7 Build	62
Compile	62
Compile Subroutine/USERFB	62
Debug	62
8 Communicate	63
Download	63
Upload	63
Online Monitoring	63
Config Online Monitoring	63
Signed	63
Not Signed.....	64
Decimal	64
Hexadecimal.....	64
Binary	64

Monitoring Variables	64
Trend Variables	64
Monitoring Input/Outputs	65
Monitoring by HMI	65
Force Inputs/Outputs	65
General Information	65
Config	66
9 User Block	66
Configuration	66
Information	66
10 Window	67
Cascade	67
Tile Horizontally	67
Tile Vertically	67
11 Help	67
Contents	67
About WLP	67

Parte IV Edit Operations 68

1 Selecting Cells	68
2 Moving Cells	69
3 Pasting Cells	70

Parte V Monitoring 70

1 Introduction	70
2 Toolbar	71
3 Online Monitoring	71
4 Monitoring Numerics Values in the Ladder	74
5 Ladder Variable Write	75
6 Variables Monitoring	75
7 Trend of Variables	77
8 Inputs/Outputs Monitoring	81
9 Monitoring via the HMI	83
10 Force Inputs/Outputs	84
11 General Information (Online)	86
12 Parameters Value Table	86

Parte VI Communications 87

1 General Review	87
2 Serial Cable	87
3 Installing/Uninstalling USB Driver	88

Parte VII Language 89

1 Introduction	89
Element Structure	89

Data Types	90
Functions of the system markers	97
Compatibility	103
Types of arguments	107
Quick reference	111
2 Texto	112
Comment	112
3 Contacts	113
NO CONTACT	113
NC CONTACT	113
4 Coils	114
COIL	114
NEG COIL	115
SET COIL	116
RESET COIL	117
PTS COIL	118
NTS COIL	119
5 Function Blocks	120
Controle de Movimento	120
STOP	120
QSTOP.....	123
Positioning	125
SCURVE.....	125
TCURVE.....	128
HOME	131
TCURVAR.....	137
CAM	139
CALCCAM.....	152
SHIFT	155
MC_CamTableSelect.....	157
MW_CamCalc.....	158
MC_CamIn.....	159
MC_CamOut.....	160
Movement	161
SETSPEED.....	161
JOG	164
SPEED.....	166
REF	168
Gear-Box	171
FOLLOW.....	171
AUTOREG.....	173
Verify	175
INPOS	175
INBWG.....	177
PLC	179
TON	179
RTC	182
CTU	183
PID	186
FILTER.....	189
CTENC.....	191
Calculation	194
COMP	194

MATH	195
FUNC	202
SAT	203
MUX	204
DMUX	206
Transference	207
TRANSFER.....	207
INT2FL	208
FL2INT	209
IDATA	210
USERERR.....	211
CAN Network	212
MSCANWEG.....	212
RXCANWEG	213
SDO	213
USERFB	216
MMC	229
6 User Blocks	230
User Blocks installed in the WLP	230

Parte VIII Compiler 231

1 General Review	231
2 Fatal Errors	231
3 Errors	232
4 Warnings	234
5 Informations	235

Parte IX Applications 235

1 Applications in the WLP	235
---------------------------------	-----

Parte X Tutorial 238

1 General Resume	238
2 Installing the WLP Software	239
3 Executing the WLP Software	242
4 Creating a New Project	243
5 Editing a Ladder Programm (Tutor1)	244
6 Monitoring a Ladder Program (Tutor1)	254
7 Examples of User's Programs	256
On/Off via buttons (Tutor2 and Tutor3)	256
On/Off via user's parameters (Tutor4)	257
Enable/disable drive and control speed (Tutor5 and Tutor6)	258
Relative positioning with s-curve and t-curve (Tutor7)	261
Absolut positioning with s-curve and t-curve (Tutor8)	265
Analog Input Reading 0-10Vdc (Tutor9)	269
Analog Input Reading 4-20mA (Tutor10)	270
Motor control speed through PID block (Tutor11)	272

Parte XI Getting Help 277

1 Fixing computer problems	277
2 Copyright	278
Parte XII Technical Support	279
1 Technical Support	279
Index	280

1 Welcome

WELCOME TO WEG LADDER PROGRAMMER!

Thanks for using **WEG LADDER PROGRAMMER**, a graphic ladder program used to facilitate the PLC programming, through an integrated development environment.

WLP is a powerful 32 bits tool that grants you characteristics and functionalities to create professional applications through simple mouse clicks.

2 Overview

2.1 What the news in WLP

WLP V9.10

New functions:

- CFW700 V1.22:
 - Engineering units referenced according to the parameters P510, P512, P514 or P516 in the configuration of user parameters (%UW);
 - Decimal points referenced according to the parameters P511, P513, P515 or P517 in the configuration of user parameters (%UW);
 - Included %SX3022 = state of command run;
 - Included %SX3023 = force run SoftPlc;
 - Included %SX3024 = in quick stop;
 - Allow config Ts field of PID as %MF;
- CFW701:
 - Included %SX3024 = in quick stop;
 - Included %SX3026 = in bypass;
 - Included %SX3028 = in firemode;

Correction of V9.00 functional deviations:

- New application was not showing the latest standard version of equipment;
- TRANSFER Block: floating point data was converted to integer;
- MUX and DMUX block: fixed system markers according to the equipment;
- IMMEDIATE COIL: fixed help that was not open;
- CFW11: updated the EDS;
- CFW700: changed V1.20 that does not exist to V1.22;
- CFW701 - user parameters: fixed items of engineering units;
- SCA06 - inside USERFB block: fixed data types on SRC field of TRANSFER block
- SCA06 - inside USERFB block: fixed INT2FL and FL2INT blocks to the float and double data types;
- SCA06: disabled monitoring of macro parameters;
- SCA06: fix error code in the help of MC_Power block;

WLP V9.00

New blocks SCA06:

- IMMEDIATE COIL
- CTENC2

New functions:

- Included version 1.20 of the SCA06
- Upload/decompiler function for SCA06
- Added Jerk argument for the following blocks of the SCA06:
 - MC_Stop

- MC_MoveAbsolute
- MC_MoveRelative
- MC_MoveVelocity
- Added Velocity, Acceleration e Deceleration arguments for the following block of the SCA06:
 - MC_Phasing
- New float system markers and double system markers of the [SCA06](#)^[101]
- Added encoder inputs of the EEN1 and EEN2 accessory for following SCA06 blocks:
 - [MC_CamIn](#)^[159]
 - MC_GearIn
 - MC_GearInPos
- Added signed variable option in trend of variables dialog

Correction of V8.90 functional deviations:

- SDO block did not work properly for the retentive markers of the SCA06, could use incorrect values in its execution.
- Conversion of unit speed "rps" was incorrect.

WLP V8.90

Included new equipments:

- CFW701
- CTW900

WLP V8.81

Correction of V8.80 functional deviations:

- Correction in identification of equipment and/or versions of the equipment in download, which could lead to improper requests for changes to equipment.

WLP V8.80

Included V4.0X of SRW01-PTC and SRW01-RCD

Included VE2.50 of VE3.90 and CFW11

WLP V8.71

New applications for CFW11:

- Crane horizontal and vertical motion
- Center winder via dancer, load cell or motor torque

Correction of V8.70 functional deviations:

- Compilation error of block USERFB for CFW700, this error make the program incompatible with these equipments
- Error on loading applications in spanish language, no application was loaded in this situation

WLP V8.70

Included new equipments:

- SSW7000
- CFW500

Correction of V8.60 functional deviations:

- Solved the problem in setting languages for Windows Vista and Windows 7, that do not load correctly the data of the language;
- Solve the problem that WLP load the wrong menu when the Ladder project is opened (loading the language of the Windows);
- Not descompile PLC-01 V1.4X and PLC11-02 V1.4X because WLP was identifying a wrong version;

- Not descompile CAM and CALCAM blocks for PLC11-01 and PLC11-02;
- Uploading of wizards values of configuration do not read negative values of words;
- Descompiler of user program parameters had problems with negative values of the minimum and maximum values and the decimal digits;
- Configuration of the tags of MUX and DMUX blocks were not possible because the tag button used wrong markers addresses.

WLP V8.60

Included V1.1X of SCA06

100% compatible with Windows Vista and Windows 7 (32 and 64bit)

New blocks SCA06:

- [MC_CamTableSelect](#) ^[157]
- [MW_CamCalc](#) ^[158]
- [MC_CamIn](#) ^[159]
- [MC_CamOut](#) ^[160]

New functions:

CANopen master for SCA06 according WSCAN V2.00

Tool Cam Profiles for SCA06 utilized for managing the CAM profiles of equipment.

WLP V8.41

Modifications:

For the CFW700 V1.03, the compiler blocks programs with size superior to 5986 bytes.

Correction of V8.40 functional deviations:

For SCA06 when the inputs of MUX block were disabled, in some situations the boolean value read and transferred to output was 1.

WLP V8.40

Included V3.0X of SRW01-RCD and SRW01-PTC

New functions:

* [USERERR](#) ^[211]: User error block to SRW01-RCD V3.0X/Higher and SRW01-PTC V3.0X/Higher

Correction of V8.30 functional deviations:

- Programmable parameters of SCA06 were not working properly
- Block IDATA in SCA06 was not working correctly for double marker
- In CFW700 in some situations the download does not work correctly

WLP V8.30

New functions:

* CAM: creation of [CAM](#) ^[139] positioning profile for PLC11-01 and PLC11-02 firmware versions 1.30 or higher

Verify block [compatibility](#) ^[103] and [data type](#) ^[90] for more details.

Correction of V8.22 functional deviations:

- Error while compiling USERFBs for PLC11-01 and PLC11-02
- MC_PHASING block - PhaseShift argument was truncating the value when configured as constant
- In the USERFB it was not releasing parameters (%PM) for the encoder counter reset
- Error in the project conversions from wlp 8.00 to 1.20, 1.30 and 1.70 CFW11 firmware versions
- SCA06 MATH block was not correctly enabling the tag button for double markers

- It released double marker in the IDATA for equipments different from the SCA06
- It released the double option in the USERFB configuration for equipments different from the SCA06
- The parameter value window did not indicate the correct project pass when saving a file

WLP V8.22

Version to correction of WSCAN V1.80 functional deviations.

WLP V8.21

Correction of V8.20 functional deviations:

- Fixed the table parameters for the CFW11.
- In PLC11-02 analog inputs and outputs were not allowed in the TRANSFER block.

WLP V8.20

New supported equipment:

- SCA06

Verify block [compatibility](#)^[103] and [data type](#)^[90] for more details.

New function blocks for the SCA06:

- MC_Power : Real axis enabling
- MC_Reset : Fault reset
- MC_Stop : Stop execution
- MW_IqControl : Iq control
- MC_MoveAbsolute : Absolute positioning
- MC_MoveRelative : Relative positioning
- MC_StepAbsSwitch : Search of zero switch
- MC_StepLimitSwitch : Search of limit switch
- MC_StepRefPulse : Search of reference pulse
- MC_StepDirect : Axis position value change
- MC_FinishHoming : Axis status change
- MC_MoveVelocity : Speed movement
- MC_GearIn : Speed synchronism
- MC_GearInPos : Synchronism in position
- MC_Phasing : Axis shift execution
- MC_GearOut : Finalize synchronism

WLP V8.00

New supported equipment:

- PLC11-02
- SRW01-RCD

Verify block [compatibility](#)^[103] and [data type](#)^[90] for more details.

New functions:

- The [MMC](#)^[229] block for the SSW06 was added (one block per ladder and only with the SSW06 optional IOS6 board).
- The CANopen [Follow](#)^[171] block for PLC11-01 and PLC11-02 was added.
- Support to Spanish language for SRW01-PTC and SRW01-RCD.

Modifications:

- The equipment SRW01 was changed to SRW01-PTC.

Verify block [compatibility](#)^[103] and [data type](#)^[90] for more details.

WLP V7.23

New functions:

- An english wizard for the SWDA, SWLC and SWMT surface winders has been included.
- Before recording a backup, it verifies if the file has been saved.
- The SRW wizard has been changed in order to inform that the unbalance protection is only for three-phase motors.
- It generates a compilation error when putting SX system markers in contacts and coils for PLC1, PLC2, POS2 and SRW.

Correction of V7.24 functional deviations:

- "Illegal Operation Error" was indicated when an anybus table was opened, only one output was put in and the "Close" button was clicked.
- By changing the CAME number of points to a constant and defining a value, it always indicated an out of range error when OK was pressed.
- Errors regarding the PW-PD term and wrong comments in BTBA, BTCC and BTM applications, were corrected.
- The sign logic in the position conversion to floating point (it was inverted) in the PO2FLOAT user block has been corrected.
- The wake up mode activation logic to enable the multipump system for the MBCF, MBCM, MPFIC and MPFLC applications, has been corrected.
- The visualization of the Line Speed Reference variable in the Surface Winder monitoring dialog box for BTBA, BTCC, BTM, SWDA, SWLC and SWMT applications, has been corrected.
- The logic to switch off the pump driven by the inverter when this pump is disabled during operation with MBCM and MPFLC applications, has been corrected.

WLP V7.22

Included V1.30 of CFW11.
Final version for PLC11-01.

WLP V7.21

Included V1.30 of SRW01.

Correction of V7.20 functional deviations:

- Sometimes when the "Print Preview" function was used, it could not quit WLP anymore;
- When downloading a program with the ladder file closed, if it was needed to compile, an 'Illegal Operation' was issued.

WLP V7.20

Final version for SRW01;

Check the modifications of the V7.10 Beta, V7.11 Beta, V7.12 Beta, V7.13 Beta and V7.14 Beta versions.

Correction of VB7.14 functional deviations:

- If more than one project is open with different equipment, when changing from one project to another and executing the "compile" command in certain situations, the address range of the other project was used, causing a compilation error in several points because the addresses are not completely compatible (ex: one PLC2 project and one PLC11 project).
 - Illegal operation when the customized monitoring window was closed.
 - Optimized time to close the customized monitoring window.
 - User blocks (USERFB) were corrected so that they are compatible with the PLC1, PLC2, POS2, PLC11 and CFW11 equipment.
 - In certain situations, online monitoring did not open, which loaded different communication configurations from the macros or the subprograms.
 - Illegal operation when converting a project with a macro.
-

- Compiler generated invalid program for the 0.5X versions of the PLC11-01.

WLP V7.14 Beta

New blocks:

- * [REF](#)^[168]; Send speed reference or the torque current reference for the drive.
- * [CALCCAM](#)^[152]; Calculate CAM.

For more details verify the block [compatibility](#)^[103].

New functions:

- * [Force Inputs/Outputs](#)^[65]
- * [General Information \(Online\)](#)^[65]
- * CFW11: the [USERERR](#)^[211] and [RTC](#)^[182] blocks for use in the ladder were released.

Correction of VB7.13 functional deviations:

- Error message when creating new USERFB.
- Conversion of equipment to sat block did not work for markers that were not float.
- When creating a project with a name that contained "-;,:;" the text was erased from the character on and a project was created (sometimes overwriting projects).
- Error message was inserted for when the SSW06 program is > 1024 bytes.
- System marker monitoring generated error.
- Modbus upload function via serial was corrected (SSW-06 decompiler sometimes did not work).
- USB error messages were simplified.
- A method was created to prevent illegal operations accessing monitoring dialogs which sometimes occurred because a monitoring thread had not been completely finished.
- Error when creating marker description with "Tag" text (wlp understood that it was a tag definition again).
- USERFB parameter does not work at the output of the dmux block to the PLC11.
- USERFB block + fieldbus configuration in the same PLC11 project blocks the card.
- Dmux does not allow PM to be inserted in the conversion bits.
- USERFB parameter monitoring does not work for SoftPLC CFW11.
- Combobox error in the transfer to PM of the SoftPLC CFW11.
- Modbus offset for SX and SW system markers are incorrect for PLC1, PLC2 and POS2.

WLP V7.13 Beta

Correction of VB7.12 functional deviations:

- CFW11 SoftPLC: the PID and FILTER blocks did not show the time base correctly.
- The TON block time base was altered when a ladder page was inserted in the program.
- The tag key of the CTENC block reset was not working.
- When a block was removed the unnecessary monitoring boxes were not automatically erased.
- Monitoring blocks moved themselves erratically when trying to rearrange them.
- SRW1: the %PM addresses for the TRANSFER block did not work correctly in the USERFB block ladder.
- SRW1: correction of the digital output addresses.
- SRW1: an image for monitoring the digital outputs was included.
- The fault that could cause the loss of the WLP tags while the "Save" or "Save as" commands of the "Project" menu were used, was corrected.

New functions:

- Tools for saving and restoring the WLP project back-up were created.
- A tool for exporting and importing applications was created.
- SRW1: the MUX and DMUX blocks for use in the ladder were released.
- PLC11: the PID and FILTER blocks for use in the USERFB block ladder were released.
- Now an attempt to monitor incorrect equipment aborts the monitoring.

WLP V7.12 Beta

Correction of VB7.11 functional deviations:

- Address of the SRW01 stack was incorrect, this caused an error when coils in parallel were used.
- It did not open VB6.21 and V6.22 version files
- The text of the parameters for the SRW01 wizards was updated.

New functions:

- The bit marker %SX3033 was inserted: torque reference (compatible with the VE1.20 CFW11 SoftPLC)
- Files of the SSW06 parameter HMI were added

WLP VB7.11

Correction of VB7.10 functional deviations:

- PLC11: subroutine must not access drive parameters.
- PLC11: by erasing a block that had internal float, it generated error in USERFB address calculation.
- PLC11: internal resources calculation bug when using a USERFB.
- PLC11: the description of the SX3068 and SX3070 markers when the tag option is selected was corrected.
- when compiling (F7) or downloading (F8) it must save all the files.
- PLC11: USERFB compilation error (output parameters with wrong mask).
- PLC11: boolean USERFB parameter monitoring error.
- PLC11: bug in the TRANSFER and IDATA inside the USERFB (the firmware was not identifying the type of USERFB parameter).
- PLC11: USERFB compiler bug was calculating wrong addresses for the USERFB parameters.
- the bug that could occasionally occur by adding/removing numerical value monitoring boxes due to the interaction between the main and the monitoring threads, was corrected.
- IDATA address value for constant type data was released, in order to allow the creation of a ladder routine that accesses specific drive parameter as a function of the equipment.

WLP VB7.10

New supported equipments:

- * PLC11-01
- * SRW01

For more details refer to block [compatibility](#)^[103] and [data types](#)^[90].

For the SRW01 relay, verify the new functions below.

New functions:

- * [Project tree](#)^[24]
- * [Configuration Wizards](#)^[26]
- * [Monitoring Dialogue Boxes](#)^[26]
- * [Monitoring via HMI](#)^[83]

New blocks:

- * [RTC](#)^[182]: real time clock
- * [USERERR](#)^[211]: it generates user error

Several modifications:

- MACRO block was renamed to [USERFB](#)^[216]

Correction of V7.01 functional deviations

- During the compilation a fatal error is generated for blocks with two inputs, when one is connected directly to the left bar.

WLP V7.01

Correction of functional deviations V7.00:

- Online monitoring of CFW-11 SoftPLC V1.00 showed values captured in the middle of scan cycle. This deviation generate incorrect transitions on monitoring values.

Note: This correction was done with firmware V1.01 of CFW-11.

WLP V7.00

Supported new equipments:

* CFW-11 SoftPLC

* SSW-06 SoftPLC

For more details verify the block [compatibility](#)^[103] and [data type](#)^[90].

New functions:

* [USB communication](#)^[88] with the CFW-11 SoftPLC.

* [Upload/decompiler](#)^[63]: It is possible to read the ladder program from the CFW-11 SoftPLC and from the SSW-06 SoftPLC.

* Configuration possibility for the presentation format of the numeric values during on-line monitoring. For more details verify the [numeric value monitoring](#)^[74] and the communication menu.

Correction of functional deviations V6.20:

- The online monitoring keeps monitoring boxes from blocks that have been erased and changed by others.
- Several problems related to button bars and windows blinking during online monitoring were solved.
- During online monitoring incorrect values were read when trying parameter upload in the parameter box.
- It allowed project page erasing when it was a single page, which caused an illegal operation.
- An error occurred while moving blocks that had exceeded the edition area due to increase of their size, compared to the saved version of the project.

WLP V6.20

New Blocks:

* [CAM](#)^[139]: creation of CAM positioning profiles for POS2.

* [SPEED](#)^[166]: drive speed reference.

Changed blocks:

* [SETSPEED](#)^[161], [JOG](#)^[164], [SCURVE](#)^[125], [TCURVE](#)^[128], [TCURVAR](#)^[137], [HOME](#)^[131], [INPOS](#)^[175], [INBWG](#)^[177], [STOP](#)^[120], [QSTOP](#)^[123],

[FOLLOW](#)^[171], [MSCANWEG](#)^[212], [SHIFT](#)^[155]: Added [axis](#)^[109] selection parameter.

* [STOP](#)^[120], [QSTOP](#)^[123]: Added [control](#)^[110] selection parameter.

Correction of functional deviations V6.11:

- File opening fault with blocks of different sizes in projects of version V5.10R2.
- Macro parameter inclusion for all [PID](#)^[186] parameters.
- Comment block fault when Control+Enter is used for more than one line.
- [TCURVAR](#)^[137] block copy/paste fault not all markers were copied.
- Fault for transporting project to another computer without any project macro, no project will be transmitted.
- No network markers in the address table.
- When the address table was closed, the WLP application focus was lost.
- No user parameters are opened in English language during variable monitoring.
- Macros text font has been changed, including space character and increasing the number of the macro parameter characters.

WLP V6.11

Correction of functional deviations V6.10:

- Problem on opening projects that have been created on the WLP ve5.10.r2.
- Problem on opening projects that have been created on the WLP 4.20 or minor.
- Problem on the online monitoring dialog box. The dialog boxes disappeared after a SAVE command.
- Problem on the macro block. This block had a problem when [INT2FL](#)^[208] or [FL2INT](#)^[209] blocks were used in the same project.
- Problem on the [SCURVE](#)^[125] and [TCURVE](#)^[128] simulator.
- Problem on opening macro files.
- Minor bugs have been fixed.

WLP V6.10

New features:

- * CANopen master to PLC2, using [WSCAN](#)^[52] (WEG Software CANopen) software.

New ladder blocks :

- * [SDO](#)^[213]: service data object - CANopen master.
- * [TCURVAR](#)^[137]: executes a positioning with variable trapezoidal.
- * [QSTOP](#)^[123]: stops a movement adendant for the fast entrance of the connector X8, bolt 8 (null pulse of encoder).
- * [MUX](#)^[204] and [DMUX](#)^[206]: multiplexer and demultiplexer.
- * [IDATA](#)^[210]: indirect data transfer.

Obs.: this new blocks is available for the followings firmware versions: V1.80 of the PLC1, V1.20 of the PLC2 and V1.30 of the POS2.

Blocks changed:

- * New options on [MATH](#)^[195] block: operations in word - pow, or, and, xor, nor, nand, xnor, shift and aschift; operations in float - pow
- * New options on [FUNC](#)^[202] block: exp, ln, log10, trunc, frac, round
- * New options on [INPOS](#)^[175] block: <=, =
- * 6 more types of homing on [HOME](#)^[131] block
- * New options on [PID](#)^[186] block: manual or automatic selection, direct or reverse and filter on reference
- * New option on [SHIFT](#)^[155] block: degrees / scan cycle

WLP V5.00

New ladder blocks :

- * [MACRO](#)^[216]: the user can create and use ladder sub-routines into the program.
- * [CTENC](#)^[191]: encoder pulses counter.
- * [MATH](#)^[195]: possibility of executing math instructions with words.
- * [COMP](#)^[194]: possibility of executing comparison instructions with words.
- * [FUNC](#)^[202]: possibility of executing math functions with words.
- * [SETSPEED](#)^[161]: possibility of using float marker do set speed of block.
- * [MSCANWEG](#)^[212]: possibility of select between real speed and reference speed to send for slaves.

Obs.: this new blocks is available for the followings firmware versions: V1.70 of the PLC1, V1.10 of the PLC2 and V1.20 of the POS2.

New functions :

- WLP edit environment : save all projects and close project
- [Variables Monitoring](#)^[75] : remember last file and save as file
- [Trend of Variables](#)^[77] : remember last files, save as file and pause trend

WLP V4.20

Launching of the new board PLC2, used by the drive CFW-09. The user must select the equipment and the respective firmware version that will be used for this project, via [Menu-Project-Proprieties](#)^[29]. This board included in hardware all features of the PLC1 board and add 1 encoder input, 1 analog input with 14 bits of resolution, 1 PTC input and 2 analog outputs.

NOTE: The V1.10 version of the POS2 board is only compatible with the WLP V4.20.

WLP V4.10

Launching of the new board POS2, used by the servodrive SCA-05. The user must select the equipment and the respective firmware version that will be used for his project, via [Menu-Project-Proprieties](#)^[29]

Blocks implemented for the board POS2 :

- * [TRANSFER](#)^[207] : it compares the current position with the programmed one.
- * [SAT](#)^[203] : 2 new programming modes have been created. It follows the master in position, but it can also follow it speed. In addition, the synchronization source may be via CAN network or via Encoder.
- * [INT2FL](#)^[208] : it executes the position increment of the motor shaft.
- * [COMP](#)^[194] : it executes positioning correction at each received signal.
- * [PID](#)^[186] : it allows speed and position read received via CAN network.

Variable write functions have been implemented for the following online monitoring items:

[Online Monitoring](#)^[71]
[Variables Monitoring](#)^[75]

WLP V4.01

The online monitoring on WLP V4.00 does not work in Windows 95/98. This bug is already fixed.

WLP V4.00

Online monitoring functions were implemented in this version. These functions are:

- * [Online Monitoring](#)^[71] : view the states of the contacts and coils and values of the function blocks in the ladder editor.
- * [Variables Monitoring](#)^[75] : a dialog with variables monitoring.
- * [Trend of Variables](#)^[77] : a graphic with the values of the variables in real time.
- * [I/O Monitoring](#)^[81] : a dialog that shows the states of the inputs and outputs.
- * [Parameters Table](#)^[86] : a dialog with options of saving or loading from a file, upload and download the values to the PLC.

WLP V3.42

WLP V3.41 is only compatible with the firmware version V1.41 of PLC. Now, WLP is compatible with all

firmware version up V1.30 of PLC.

WLP V3.41

Permit to the user select between english language or the portuguese language.

Implemented blocks:

- * [FOLLOW](#)^[171]: follow the speed of the master motor de according with the synchronous relation.
- * [CAN2MS](#)^[212]: send throw the CAN net the speed and position reference to the slave.

WLP V3.31

Access options to the system parameters (P750 to P799) of the PLC1 and access to the drive parameters in the source fields (SRC) and destination (DST) of the Transfer block have been inserted.

WLP V3.30

The WLP V3.30 is used for PLC1 board programming of the CFW-09.

IMPORTANT: It is not possible to compile projects of this version for the POS-01 board of the SCA-04.

Implemented blocks:

- * [INBWG](#)^[177]: monitors the motor speed through a programmed value.
- * [SCURVE](#)^[125]: executes a positioning with S-profile in positioning loop.
- * [TCURVE](#)^[128]: executes a positioning with trapezoidal profile in positioning loop.
- * [HOME](#)^[131]: executes a machine home position.
- * [STOP](#)^[120]: cancels or stops a movement that is being executed.
- * [JOG](#)^[186]: executes a movement in speed loop.
- * [SETSPEED](#)^[161]: operates in speed different as the POS-01 board set speed.
- * [TRANSFER](#)^[207]: executes a data transfer
- * [INT2FL](#)^[208]: converts an entire and fractional word to float point word.
- * [FL2INT](#)^[209]: converts a float point Word to an entire and fractional word
- * [MATH](#)^[195]: executes adding, subtracting, multiplication and division operations with float point.
- * [COMP](#)^[194]: executes comparisons between 2 data with float point.
- * [PID](#)^[186]: executes a PID type control (max. 2 controls per project)
- * [SAT](#)^[203]: executes data saturation in float point, in required.
- * [FUNC](#)^[202]: executes mathematical functions, such as: square root, sine, cosine, tangent, etc.
- * [FILTER](#)^[189]: executes a low-pass filter or high-pass filter of a variable with float point.

2.2 General Information

This guide is intended to provide you with comprehensive information on how to use the functions and tools available in the WLP software.

The WLP or "Weg Ladder Programmer" is a Windows based software that allows the user to program using ladder language, command and monitor the following equipments.

- PLC1 optional boards for the CFW-09 series
- PLC2 optional boards for the CFW-09 series
- POS2 optional boards for the SCA-05 series

- SoftPLC of the CFW-11 series
- SoftPLC of the SSW-06 series
- PLC11-01 optional board for the CFW-11 series
- PLC11-02 optional board for the CFW-11 series
- SRW01-PTC relay.
- SRW01-RCD relay
- SoftPLC of the SCA-06 series

The main characteristics of the software are listed below:

- Program edition using many ladder function blocks.
- Compilation of the ladder program to a board-compatible language.
- Transfer of the compiled program to the boards.
- Receive of the program from the boards. (1) ⁽²⁾
- Online monitoring of the program that is running on the board.
- Point-to-point RS-232 Serial or USB (2) ⁽²⁾ communication with the boards.
- Multi-drop RS-485 Serial Communication with up to 30 boards, since a RS-232 to RS-485 converter is used.
- Online Help for all software functions and blocks.

(1) Only for SoftPLC of CFW-11, SoftPLC of SSW-06, PLC11-01 and PLC11-02.

(2) USB only available for SoftPLC of CFW-11, PLC11-01, PLC11-02, SRW01-PTC, SRW01-RCD and SoftPLC of SCA06.

NOTE!

This help has a basic training tutorial for WLP software programming. Its reading is recommended for those who are not familiar with the Ladder language.

2.3 Installation and initialization of the WLP

INSTALLATION :

To install the WLP software on your computer using the product CD, complete the following steps:

1. Insert the CD-ROM on the source drive.
2. Through "My Computer" icon explore the CD-ROM.
3. Find the "wlp-X.YZ.setup.exe" file and execute it.
4. Follow the setup instructions.

It is also possible to download the WLP software from the WEG website <http://www.weg.net>. After downloading the WLP installer (a ZIP format file), extract the files to a temporary folder before running the installation program.

To extract the ZIP file you can use the Zip software (<http://www.7-zip.org/>) or the WinZip software (<http://www.winzip.com/>).

Your files have now been extracted to the folder you specified. Go to the temporary folder and run the WLP installer (wlp-X.YZ.setup.exe) by double-clicking it.

INITIALIZATION :

Perform the following main steps to create a new program and transfer it to the board.

1. Open the WLP.
2. Choose the option "New Project".
3. Choose a name for the project.

4. Start programming by using the commands available on the edition bar.
5. After finishing the program, press <F7> or select Menu-Built-Compile in order to compile the program and correct the errors (if necessary).
6. Connect the PC cable to the board.
7. Configure the communication by selecting the port, the board network address and the baud rate (<Shift>+<F8> or under Menu-Communication-Configurations).
- NOTE: Always use "No parity" option.
8. Transfer the program (<F8> or under Menu-Communication-Transfer User Program).


2.4 Introduction

Ladder diagram is a graphic presentation of Boolean equations, by combining contacts (input arguments) with coils (output results) and functional blocks.

The Ladder program allows to test and change data by standard graphic symbols. The symbols are positioned in the ladder program similar to a logic diagram line with relays. The Ladder diagram is limited at the right and at the left by bar lines.

GRAPHIC COMPONENTS

See below the basic graphic components of a Ladder Diagram:

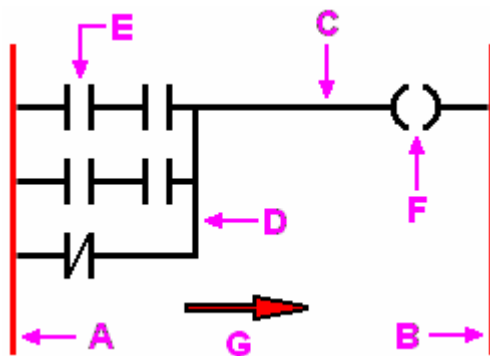

- A - Left power rail
- B - Right power rail
- C - Horizontal connection
- D - Vertical connection
- E - Contact
- F - Coil
- G - Power flow

Power rails

The Editor is left delimited by a vertical line known as left power rail and right delimited by a vertical line known as right power rail.

Connections, Elements and States

The connection elements may be horizontal or vertical. The status of the elements can be denoted by 1 or 0, corresponding to true 1 or false 0, boolean values, respectively. The term Connection Status should be synonym of the term Power Flow.

The status of the left power rail can be considered always equal to 1. No status is defined for the right power rail.

A horizontal line should indicate a horizontal connection element

A horizontal connection element transmits the status of the elements immediately to the left for the

immediate right element.


A vertical connection element must consist of vertical lines intersected by one or more horizontal connections at each side. The vertical connection status should represent the OR of the 1 status of the horizontal connections of the left side, i.e., the status of the vertical connections should be:

- 0, if all horizontal connections, including the left ones, are 0
- 1 if the status of one or more horizontal connections, including the left, ones, is 1

The status of the vertical connections should be copied for all horizontal connections associated to the right ones. The status of the vertical connections cannot be copied for all horizontal connections associated to the left ones

EXECUTION CONTROL

Figure 1 shows how the Ladder program is executed. PLC1 executes continuously one scan cycle. The cycle starts reading the values of the inputs and outputs signals and saving them in the internal memory.

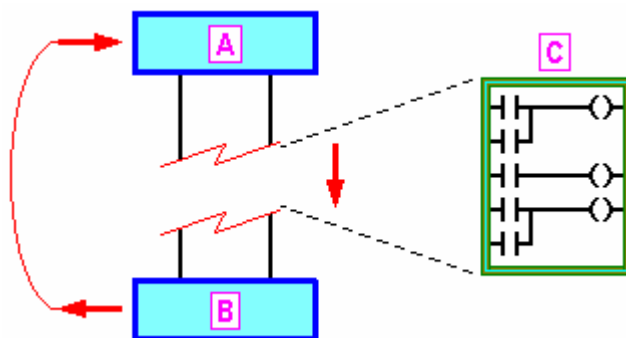

- A - Inputs read to the memory
- B - Memory write at the outputs
- C - Ladder line scanning


Then the lines of the Ladder program are executed in a fixed order, by starting with the first line. During the program scanning new values of the physical outputs, as determined by the logic of the different Ladder lines, can be modified into the memory.

Finally, after Ladder program concluded the program execution (one scan cycle), the outputs image is written to the physical outputs in a unique operation.

LOGIC CALCULATION FORM

The logics are calculated from top to bottom and from left to right, as shown in the Ladder Diagram.

TRAJECTORY EXAMPLE

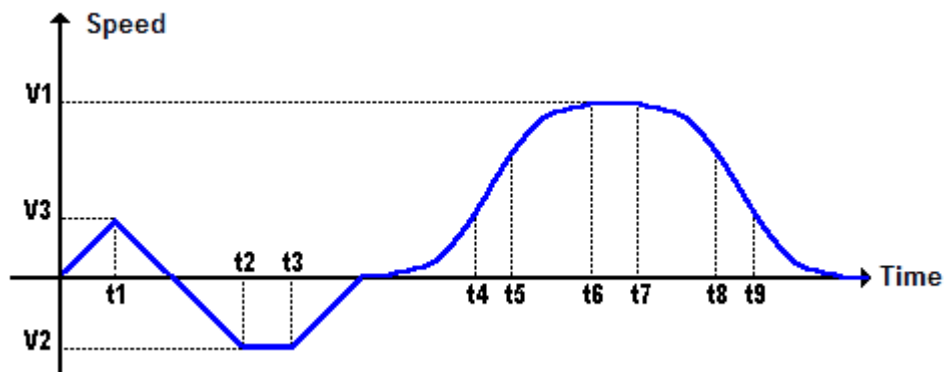

2.5 Project Architecture

A project consists of a set of configurations and source files that all together determine the output file that you want.

SOURCE FILE

The project is divided into several source files in the project directory. The source files are as follows:

- <Project>.ldd = source file
- <Project>.mld = USERFB source file
- <Project>.wcn = WSCAN source file (CANOpen master configuration)
- <Project>.mol = online monitoring file
- <Project>.bus = fieldbus network configuration
- <Project>.ai = file with the analog input tags
- <Project>.ao = file with the analog output tags
- <Project>.di = file with the digital input tags
- <Project>.do = file with the digital outputs tags
- <Project>.mx = file with the bit marker tags
- <Project>.mw = file with the float marker tags
- <Project>.rw = file with the read words tags
- <Project>.rb = file with the write words tags
- <Project>.ww = file with the read bytes tags
- <Project>.wb = file with the write bytes tags
- <Project>.pp = files with the tags of the programmable user parameters
- <Project>.tp = files with the tags of the memorized points
- <Project>.par = files with the values of parameters
- <Project>.tr = file of trend variables (graphic)
- <Project>.mv = file of variables monitoring

WORK FILES (WORK FOLDER)

These files are created after compiling process.

- CmpInfo.txt = information about the compiling, programs and files
- Errors.crd = coordinates of the errors detected in the source program
- Errors.txt = Message about the errors detected in the source program
- <Project>.bin = executable program that can be run in the PLC


DEBUGGING FILES (DEBUG FOLDER)

Files created after compiling. Files reserved by the System.

2.6 Project Tree

By means of this box it is possible to access the files and the functionalities available for the project. In order to activate this box use the [View – Project Tree menu](#) .

PROJECT TREE

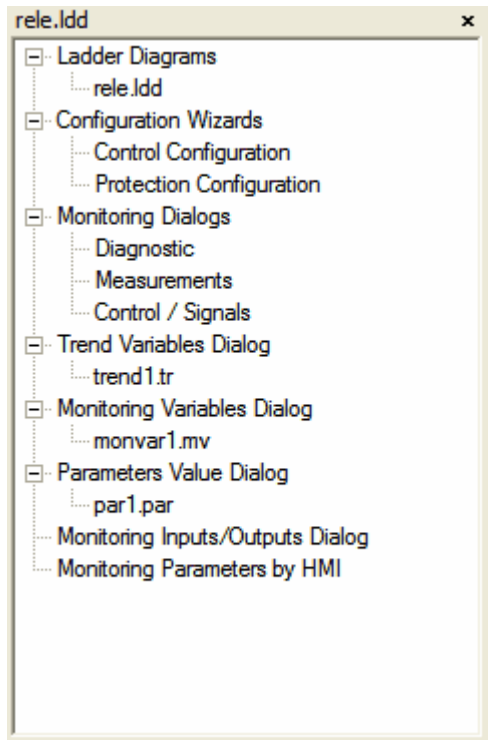

The project tree has the following items:

- Ladder Diagrams:

It lists all the ladder files of the project.

In order to open the ladder file give a double click on the file name.

For the PLC11-01 and PLC11-02, besides the main ladder, the following files will exist:

- INITIALIZE.sld: it is the ladder program executed only during the board initialization
- INT_DI108.sld: it is the ladder program executed by the DI108 interruption digital input signal
- INT_DI109.sld: it is the ladder program executed by the DI109 interruption digital input signal
- INT_TIMER.sld: it is the ladder program executed by means of a programmable time interruption

- Configuration Wizards:

It lists all the project configuration wizards.

In order to execute the configuration wizard, double click the wizard name.

When selecting the configuration wizard at the project configuration tree, the following items of the icon bar will be activated:



: Download of the configuration wizard settings to the equipment.



: Upload of the equipment configuration wizard settings.

Note:

The configuration wizard download will only become active after executing the configuration wizard and thus generating a valid configuration, i.e., after finishing the configuration wizard.

- Monitoring Dialog:

It lists all the [monitoring dialog](#) ²⁶ boxes of the project.

In order to open the dialog box, double click the dialog box name.

- Trend Variable Dialog:

It lists all the [trend variable](#)^[77] files of the project.

In order to open the trend variable dialog box, double click the text “Trend Variable Dialog” or the file name.

- Monitoring Variables:

It lists all the [variable monitoring](#)^[75] files.

In order to open the variable monitoring dialog box, double click the text “Variable Monitoring Dialog” or the file name.

- Parameters Value Dialog:

It lists all the [parameter value](#)^[51] files.

In order to open the parameter value dialog box, double click the text “Parameters Value Dialog” or the file name.

- Monitoring Inputs/Outputs:

It gives access to the [input/output monitoring dialog](#)^[81] box.

In order to open the input/output monitoring box, double click the text “Monitoring Inputs/Outputs”.

- Monitoring Parameter by HMI:

It gives access to the [parameter monitoring](#)^[83] through the HMI dialog box.

In order to open the parameter monitoring through the HMI dialog box, double click the text “Monitoring Parameter by HMI”.

2.7 Configuration Wizards

They are routines especially created to configure in a guided way the equipment applied in the project. Those routines guide the user in order to configure the equipment in a simple and self explained form. Those routines are presented according to the equipment to be configured and to the selected project. The configuration wizards are also available in the “Equipment” sub-menu of the “Tools” menu.

The following equipments have defined configuration wizards:

SRW01-PTC and SRW01-RCD:

- Control Configuration: It configures the SRW01 relay control mode.
- Protection Configuration: It configures the SRW01 relay protection actuation.

2.8 Monitoring Dialogs

They are dialog boxes especially created to monitor the equipment configured in the project. Those dialog boxes monitor equipment exclusive information.

Those dialog boxes are presented according to the configured equipment and to the selected project. The monitoring dialog boxes are also available in the “Equipment” sub-menu of the “Communication” menu.

The following equipments have defined monitoring dialog boxes:

SRW01-PTC and SRW01-RCD:

- Diagnosis: it presents information on the SRW01 relay general status.
- Measurements: it presents information on the SRW01 relay motor measurements.
- Control/Signals: it presents commands/information for the SRW01 relay control.

3 Menus

3.1 Project

3.1.1 New

ACCESS

Menu: **Project - New**

Hot Key: **Ctrl+N**

Standard Toolbar: 

FUNCTION

Creating a new project.

DESCRIPTION

Enter the name of the new project. If the chosen name is valid, the project will be open after the confirmation with OK button. If the Cancel button is pressed, the project is interrupted and dialog box is closed.

Note: If the creation of a new project is required still during the application initialization, you must activate button Open and then follows the previous steps.

3.1.2 Open

ACCESS

Menu: **Project - Open**

Hot Key: **Ctrl+O**

Standard Toolbar: 

FUNCTION

Opens an existing project.

DESCRIPTION

Select the project you want to open in the Project List and press the button Open Project or double-click the project with the left mouse button.

Note: In the WLP initialization, do the same as described before.

3.1.3 Save

ACCESS

Menu: **Project - Save**

Hot Key: **Ctrl+S**

Standard Toolbar: 

FUNCTION

Saves current project

3.1.4 Save As

ACCESS

Menu: **Project - Save As**

Hot Key: **Ctrl+Shift+S**

FUNCTION

Saves the current project with another name.

DESCRIPTION

Enter a new name for the current project. If the chosen name is valid, the project will be open after conformation with OK button. If Cancel button is activated, the project is interrupted and dialog box is closed.

3.1.5 Save All

ACCESS

Menu: **Project - Save All**

Hot Key: **Ctrl+Alt+S**

FUNCTION

Save all projects opened.

3.1.6 Close

ACCESS

Menu: **Project - Close**

Hotkey: **Ctrl+F4**

Standard Toolbar: 

FUNCTION

Close the current project.

3.1.7 Remove

ACCESS

Menu: **Project - Remove**

Hot Key: **Alt+Del**

FUNCTION

Deletes the selected project.

DESCRIPTION

Select one of the projects of the existing project list and press button Remove Project and confirm its deleting.

3.1.8 Print

ACCESS

Menu: **Project - Print**

Hot Key: **Ctrl+P**

Standard Toolbar: 

FUNCTION

Prints the active project.

3.1.9 Print Preview

ACCESS

Menu: **Project - Print Preview**

Hot Key: **Ctrl+W**

Standard Toolbar: 

FUNCTION

Shows how the project will be printed.

3.1.10 Print Setup

ACCESS

Menu: **Project - Print Setup**

Hot Key: **Ctrl+U**

FUNCTION

Changes the printer configurations and printing options.

3.1.11 Units

ACCESS

Menu: **Project - Units**

Hot Key: **Alt+U**

FUNCTION

It allows the user to define the units for positioning, speed, acceleration and jerk when the values are constants.

3.1.12 Proprieties


ACCESS

Menu: **Project - Properties**

Hot Key: **Alt+P**

FUNCTION

It permits selecting the equipment and the respective firmware version that will be used in the project.

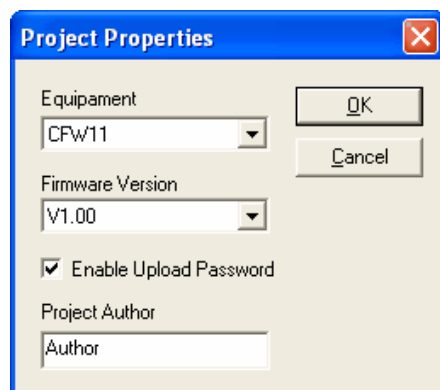

In this dialog is possible to define upload password for SoftPLC of the CFW-11, PLC11-01 and PLC11-02.

DESCRIPTION

After the equipment and the respective firmware version have been selected, the WLP disables and/or disables the commands available in the selected firmware version.

3.1.13 Language

ACCESS

Menu: **Project - Language**

FUNCTION

Allow the user to select between portuguese or english languages. However, this change is only update after the user exits from the application and open it again.

3.1.14 Load the last Project during initialization

ACCESS

Menu: **Project - Load the Last Project during initialization**

FUNCTION

It opens the last project that is used automatically when the WLP is started and when this command is enabled.

3.1.15 Exit

ACCESS

Menu: **Project - Exit**

Hot Key: **Alt+F4**

FUNCTION

It closes the application.

3.2 Edit

3.2.1 Undo

ACCESS

Menu: **Edit - Undo**

Hot Key: **Ctrl+Z**

Standard Toolbar: 

FUNCTION

The last executed action is undone.

DESCRIPTION

Only 10 actions can be undone.

3.2.2 Redo

ACCESS

Menu: **Edit - Redo**

Hot Key: **Ctrl+Y**

Standard Toolbar: 

FUNCTION

The last undo executed is redo.

DESCRIPTION

Up to 10 actions can be redone. This command remains disabled if there are no redo to be done.

3.2.3 Cut

ACCESS

Menu: **Edit - Cut**

Hot Key: **Ctrl+X**

Standard Toolbar: 

FUNCTION

It copies selected cells to a transfer area and deletes them.

DESCRIPTION

This command is only enabled when any [cell has been selected](#) ⁶⁸.

3.2.4 Copy

ACCESS

Menu: **Edit - Copy**

Hot Key: **Ctrl+C**

Standard Toolbar: 

FUNCTION

Copies selected cells to the clipboard.

DESCRIPTION

This command is only enabled when [cells have been selected](#) ⁶⁸.

3.2.5 Paste

ACCESS

Menu: **Edit - Paste**

Hot Key: **Ctrl+V**

Standard Toolbar: 

FUNCTION

Makes a copy of the data from the transfer area to the Editor.

DESCRIPTION

This command only is enabled if there are data in the transfer area, i.e., after a [copy](#) ³¹ or [cut](#) ³¹ command has been executed.

See item [Paste Cells](#) ⁷⁰

3.2.6 Find

ACCESS

Menu: **Edit - Search**

Hot Key: **Ctrl+F**

Standard Toolbar: 

FUNCTION

Searches the coordinates in the element editor with the indicated address, after Start button has been pressed. The a window with the page, line and column of all found elements is open. This window is only closed when button Close or button Sys (X) is pressed.

DESCRIPTION

For searching addresses in the editor, you must specify a possible address. Otherwise the button that starts the search will be disabled. To see possible address range, see [Data Type](#) ⁹⁰.

3.3 View

3.3.1 Standard Bar

ACCESS

Menu: **View - Standard Bar**

Hot Key: **Ctrl+Shift+P**

FUNCTION

Shows or hides the standard bar.

3.3.2 Communication Bar

ACCESS

Menu: **View - Communication Bar**

Hot Key: **Ctrl+Shift+C**

FUNCTION

Shows or hides the communication bar.

3.3.3 Edition Bar

ACCESS

Menu: **View - Edition Bar**

Hot Key: **Ctrl+Shift+D**

FUNCTION

Shows or hides the Edit Bar.

3.3.4 Block Bar

ACCESS

Menu: **View - Block Bar**

Hot Key: **Ctrl+Shift+B**

FUNCTION

Shows or hides the block bar.

3.3.5 Page Bar

ACCESS

Menu: **View - Page Bar**

Hot Key: **Ctrl+Shift+G**

FUNCTION

Shows or hides the page bar.

3.3.6 Status Bar

ACCESS

Menu: **View - Status Bar**

Hot Key: **Ctrl+Shift+U**

FUNCTION

Shows or hides the Status Bar.

3.3.7 Project Tree

ACCESS

Menu: **View - Project Tree**

Hot Key: **Ctrl+Shift+H**

FUNCTION

Shows or hides the [Project Tree](#) .

3.3.8 Grid

ACCESS

Menu: **View - Grid**

Hot Key: **Ctrl+Shift+G**

Standard Toolbar: 

FUNCTION

Shows or hides the Grid.

3.3.9 Tag/Address

ACCESS

Menu: **View - Tag / Address**

Hot Key: **Ctrl+Shift+T**

Standard Toolbar: 

FUNCTION

It shows the tag or the element address.

3.3.10 Compilation errors

ACCESS

Menu: **View - View - Compilation Errors**

Hot Key: **Ctrl+E**

Standard Toolbar: 

FUNCTION

Shows the errors of the last compilation.

3.3.11 Searching errors

ACCESS

Menu: **View - Errors Search**

Hot Key: **Ctrl+L**

Standard Toolbar: 

FUNCTION

Shows the cell where occurred an error during the last compilation

3.3.12 Compilation Info

ACCESS

Menu: **View - Compilation Information**

Hot Key: **Ctrl+I**

Standard Toolbar: 

FUNCTION

Shows the information about de last compilation.

3.3.13 Address table

ACCESS

Menu: **View - Address table**

Hot Key: **Ctrl+T**

Standard Toolbar: 

FUNCTION

It shows all existing addresses, data types, tags and description of the current project.

It also permits to search the address that has been selected, to insert a new address and exclude the address that has been selected.

3.3.14 User parameter table

ACCESS

Menu: **View - User Parameter Table**

Hot Key: **Ctrl+T**

Standard Toolbar: 

FUNCTION

It displays all parameters of the current project that may be programmed by the user.

3.4 Page

3.4.1 Insert before

ACCESS

Menu: **Page - Insert Before**

Hot Key: **Ctrl+B**

Standard Toolbar: 

FUNCTION

Inserts a page before the current page.

DESCRIPTION

This command will be disabled if the project already has 255 pages.

3.4.2 Inserte after

ACCESS

Menu: **Page - Insert After**

Hot Key: **Ctrl+A**

Standard Toolbar: 

FUNCTION

Inserts a page after the current page.

DESCRIPTION

This command will be disabled if the project already has 255 pages.

3.4.3 Delete

ACCESS

Menu: **Page - Delete**

Hot Key: **Ctrl+Del**

Standard Toolbar: 

FUNCTION

Deletes current page.

DESCRIPTION

This command will be enabled only if the project has more than 1 page.

3.4.4 Previous

ACCESS

Menu: **Page - Previous**

Hot Key: **Page Up**

Standard Toolbar: 

FUNCTION

Goes to the previous page in the current project.

3.4.5 Next

ACCESS

Menu: **Page - Next**

Hot Key: **Page Down**

Standard Toolbar: 

FUNCTION

It skips to the next page.

DESCRIPTION

This command is only disabled if the current page is the last page of the project.

3.4.6 Go to

ACCESS

Menu: **Page - Go To**

Hot Key: **Ctrl+G**

Standard Toolbar: 

FUNCTION

Goes to the chosen page.

DESCRIPTION

This command will open a dialog box where it is possible to choose the wished page, define a name for the page and also a comment for the page.

3.5 Insert

3.5.1 Select

ACCESS

Menu: **Insert - Select**

Hot Key: **ESC**

Standard Toolbar: 

FUNCTION

[Select](#)  and change the element properties.

DESCRIPTION

For component property change, double-click with the left mouse button within the element.

3.5.2 Delete Element

ACCESS

Menu: **Insert - Delete**

Hot Key: **DEL**

Standard Toolbar: 

FUNCTION

Deletes an element.

DESCRIPTION

The cursor acts like a eraser. Click with the left mouse button on the element that should be deleted.

3.5.3 Comment

ACCESS

Menu: **Insert - Comment**

Standard Toolbar: 

FUNCTION

Inserts a [comment](#)^[112].

DESCRIPTION

The cursor becomes similar to the toolbar button shown above. You can insert a comment by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the comment cannot be inserted and an information is written on the status bar.

3.5.4 Connection

3.5.4.1 Horizontal

ACCESS

Menu: **Insert - Connection - Horizontal**

Standard Toolbar: 

FUNCTION

It draws an horizontal connection.

DESCRIPTION

The cursor becomes similar to the toolbar button shown above. You can insert a horizontal connection by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the horizontal line cannot be inserted and an information is written on the status bar.

3.5.4.2 Vertical

ACCESS

Menu: **Insert - Connection - Vertical**

Standard Toolbar: 

FUNCTION

It draws a vertical connection.

DESCRIPTION

The cursor becomes similar to the toolbar button shown above. You can insert a vertical connection by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the vertical line cannot be inserted and an information is written on the status bar.

3.5.5 Contacts

3.5.5.1 NO CONTACT

ACCESS

Menu: **Insert - Contact - NO CONTACT**

Standard Toolbar: 

FUNCTION

It inserts a [NO Contact](#) ^[113] element

DESCRIPTION

You can insert a contact by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the contact cannot be inserted and an information is written on the status bar.

3.5.5.2 NC CONTACT

ACCESS

Menu: **Insert - Contact - NC CONTACT**

Standard Toolbar: 

FUNCTION

It inserts a [NC Contact](#) ^[113] element

DESCRIPTION

You can insert a contact by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the contact cannot be inserted and an information is written on the status bar.

3.5.6 Coils

3.5.6.1 COIL

ACCESS

Menu: **Insert - Coils - COIL**

Standard Toolbar: 

FUNCTION

Inserts a [coil](#) ^[114] element

DESCRIPTION

You can insert a coil by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the coil cannot be inserted and an information is written on the status bar.

3.5.6.2 NEG COIL

ACCESS

Menu: **Insert - Coils - NEG COIL**

Standard Toolbar: 

FUNCTION

Inserts a [negated coil](#) ^[115] element

DESCRIPTION

You can insert a coil by clicking with the left mouse button on the desired position. If the cursor changes to

the symbol "Not-Allowed", the coil cannot be inserted and an information is written on the status bar.

3.5.6.3 SET COIL

ACCESS

Menu: **Insert - Coils - SET COIL**

Standard Toolbar: 

FUNCTION

Inserts a [set coil](#) ^[116] element

DESCRIPTION

You can insert a coil by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the coil cannot be inserted and an information is written on the status bar.

3.5.6.4 RESET COIL

ACCESS

Menu: **Insert - Coils - RESET COIL**

Standard Toolbar: 

FUNCTION

Inserts a [reset coil](#) ^[117] element

DESCRIPTION

You can insert a coil by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the coil cannot be inserted and an information is written on the status bar.

3.5.6.5 PTS COIL

ACCESS

Menu: **Insert - Coils - PTS COIL**

Standard Toolbar: 

FUNCTION

Inserts a [positive transition coil](#) ^[118] element

DESCRIPTION

You can insert a coil by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the coil cannot be inserted and an information is written on the status bar.

3.5.6.6 NTS COIL

ACCESS

Menu: **Insert - Coils - NTS COIL**

Standard Toolbar: 

FUNCTION

Inserts a [negative transition coil](#) ^[119] element

DESCRIPTION

You can insert a coil by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the coil cannot be inserted and an information is written on the status bar.

3.5.7 Function Blocks

3.5.7.1 Controle de Movimento

3.5.7.1.1 STOP

ACCESS

Menu: **Insert - Function Block - Stop - STOP**

Standard Toolbar: 

FUNCTION

Inserts a [Stop](#)^[120] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.1.2 QSTOP

ACCESS

Menu: **Insert - Function Block - Stop - QSTOP**

Standard Toolbar: 

FUNCTION

Inserts a [Quick Stop](#)^[123] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.2 Positioning

3.5.7.2.1 SCURVE

ACCESS

Menu: **Insert - Function Blocks - Positioning - SCURVE**

Standard Toolbar: 

FUNCTION

Inserts a [S-Curve](#)^[125] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.2.2 TCURVE

ACCESS

Menu: **Insert - Function Blocks - Positioning - TCURVE**

Standard Toolbar: 

FUNCTION

Inserts a [Trapezoidal-Curve](#)^[128] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.2.3 HOME

ACCESS

Menu: **Insert - Function Blocks - Positioning - HOME**

Standard Toolbar: 

FUNCTION

Inserts an [Home](#)^[131] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.2.4 TCURVAR

ACCESS

Menu: **Insert - Function Blocks - Positioning - TCURVAR**

Standard Toolbar: 

FUNCTION

Inserts a [Variable Trapezoidal-Curve](#)^[137] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.2.5 CAM

ACCESS

Menu: **Insert - Function Blocks - Positioning - CAM**

Standard Toolbar: 

FUNCTION

Inserts a [CAM](#)^[139] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.2.6 CALCCAM

ACCESS

Menu: **Insert - Function Blocks - Positioning - CALCCAM**

Standard Toolbar: 

FUNCTION

Inserts a [CALCCAM](#) ^[152] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.2.7 SHIFT

ACCESS

Menu: **Insert - Function blocks - Positioning - Shift**

Edit Tool Bar: 

FUNCTION

Inserts a [Shift](#) ^[155] element.

DESCRIPTION

You can insert the function block by clicking the left mouse button to the desired position. If the cursor changes to symbol "Denied", the function block can not be inserted and one information is written to the status bar.

3.5.7.2.8 MC_CamTableSelect

ACESSO

Menu: **Inserir - Bloco de Função - Posicionamento - MC_CamTableSelect**

Barra de Ferramentas de Edição: 

FUNÇÃO

Insere um elemento [MC_CamTableSelect](#) ^[157].

DESCRIÇÃO

Você pode inserir o bloco de função clicando o botão esquerdo do mouse na posição desejada. Se o cursor se alterar para o símbolo de proibido, o bloco de função não pode ser inserida e uma informação é escrita na barra de status.

3.5.7.2.9 MC_CamCalc

ACESSO

Menu: **Inserir - Bloco de Função - Posicionamento - MW_CamCalc**

Barra de Ferramentas de Edição: 

FUNÇÃO

Insere um elemento [MW_CamCalc](#) ^[158].

DESCRIÇÃO

Você pode inserir o bloco de função clicando o botão esquerdo do mouse na posição desejada. Se o cursor

se alterar para o símbolo de proibido, o bloco de função não pode ser inserida e uma informação é escrita na barra de status.

3.5.7.2.10 MC_CamIn

ACESSO

Menu: **Inserir - Bloco de Função - Posicionamento - MC_CamIn**

Barra de Ferramentas de Edição:



FUNÇÃO

Insere um elemento [MC_CamIn](#) ¹⁵⁹.

DESCRIÇÃO

Você pode inserir o bloco de função clicando o botão esquerdo do mouse na posição desejada. Se o cursor se alterar para o símbolo de proibido, o bloco de função não pode ser inserida e uma informação é escrita na barra de status.

3.5.7.2.11 MC_CamOut

ACESSO

Menu: **Inserir - Bloco de Função - Posicionamento - MC_CamOut**

Barra de Ferramentas de Edição:



FUNÇÃO

Insere um elemento [MC_CamOut](#) ¹⁶⁰.

DESCRIÇÃO

Você pode inserir o bloco de função clicando o botão esquerdo do mouse na posição desejada. Se o cursor se alterar para o símbolo de proibido, o bloco de função não pode ser inserida e uma informação é escrita na barra de status.

3.5.7.3 Movement

3.5.7.3.1 SETSPEED

ACCESS

Menu: **Insert - Function Blocks - Movement - Set Speed**

Standard Toolbar:



FUNCTION

Inserts a [Set Speed](#) ¹⁶¹ element.

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.3.2 JOG

ACCESS

Menu: **Insert - Function Blocks - Movement - JOG**

Standard Toolbar:



FUNCTION

Inserts a [Jog](#)^[164] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.3.3 SPEED**ACCESS**

Menu: **Insert - Function Block - Movement - SPEED**

Standard Toolbar: 

FUNCTION

Inserts a [SPEED](#)^[166] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.3.4 REF**ACCESS**

Menu: **Insert - Function Block - Movement - REF**

Standard Toolbar: 

FUNCTION

Inserts a [REF](#)^[168] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.4 Gear-Box**3.5.7.4.1 FOLLOW****ACCESS**

Menu: **Insert - Function Blocks - Gear-Box - FOLLOW**

Standard Toolbar: 

FUNCTION

Inserts a [FOLLOW](#)^[171] element. See also [MSCANWEG](#)^[212].

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar

3.5.7.4.2 AUTOREG

ACCESS

Menu: **Insert - Function Blocks - Gear-Box - AUTOREG**

Standard Toolbar: 

FUNCTION

Inserts a [AUTOREG](#)^[173] element.

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar

3.5.7.5 Verify

3.5.7.5.1 INPOS

ACCESS

Menu: **Insert - Function Blocks - Verify - INPOS**

Standard Toolbar: 

FUNCTION

Inserts an [In Position](#)^[175] element.

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar

3.5.7.5.2 INBWG

ACCESS

Menu: **Insert - Function Blocks - Verify - INBWG**

Standard Toolbar: 

FUNCTION

Inserts an [In Movement](#)^[177] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the function block cannot be inserted and an information is written on the status bar.

3.5.7.6 PLC

3.5.7.6.1 TON

ACCESS

Menu: **Insert - Function Blocks - PLC - TON**

Standard Toolbar: 

FUNCTION

Inserts a [Timer On](#)^[179] element.

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.6.2 RTC

ACCESS

Menu: **Insert - Function Blocks - PLC - RTC**

Standard Toolbar: 

FUNCTION

Inserts a [RTC](#)^[182] element.

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.6.3 CTU

ACCESS

Menu: **Insert - Function Blocks - PLC - CTU**

Standard Toolbar: 

FUNCTION

Inserts a [Counter Up](#)^[183] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.6.4 PID

ACCESS

Menu: **Insert - Function Blocks - PLC - PID**

Standard Toolbar: 

FUNCTION

Inserts a [PID](#)^[186] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.6.5 FILTER

ACCESS

Menu: **Insert - Function Blocks - PLC - FILTER**

Standard Toolbar: 

FUNCTION

Inserts a [Filter](#)^[189] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.6.6 CTENC

ACCESS

Menu: **Insert - Function Blocks - PLC - CTENC**

Standard Toolbar: 

FUNCTION

Inserts a [Encoder Counter](#)^[191] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.7 Calculation

3.5.7.7.1 COMP

ACCESS

Menu: **Insert - Function Blocks - Calculation - COMP**

Standard Toolbar: 

FUNCTION

Inserts a [Comparator](#)^[194] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.7.2 MATH

ACCESS

Menu: **Insert - Function Blocks - Calculation - MATH**

Standard Toolbar: 

FUNCTION

Inserts an [Arithmetical](#)^[195] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.7.3 FUNC

ACCESS

Menu: **Insert - Function Blocks - Calculation - FUNC**

Standard Toolbar: 

FUNCTION

Inserts an [mathematical function](#) ^[202] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.7.4 SAT

ACCESS

Menu: **Insert - Function Blocks - Calculation - SAT**

Standard Toolbar: 

FUNCTION

Inserts a [Saturation](#) ^[203] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.7.5 MUX

ACCESS

Menu: **Insert - Function Blocks - Calculation - MUX**

Standard Toolbar: 

FUNCTION

Inserts a [Multiplexer](#) ^[204] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.7.6 DMUX

ACCESS

Menu: **Insert - Function Blocks - Calculation - DMUX**

Standard Toolbar: 

FUNCTION

Inserts a [Demultiplexer](#) ^[206] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written

on the status bar.

3.5.7.8 Transference

3.5.7.8.1 TRANSFER

ACCESS

Menu: **Insert - Function Blocks - Transference - TRANSFER**

Standard Toolbar: 

FUNCTION

Inserts a [Transfer](#)^[207] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.8.2 FL2INT

ACCESS

Menu: **Insert - Function Blocks - Transference - FL2INT**

Standard Toolbar: 

FUNCTION

Inserts a [Float to Integer](#)^[209] element.

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.8.3 INT2FL

ACCESS

Menu: **Insert - Function Blocks - Transference - INT2FL**

Standard Toolbar: 

FUNCTION

Inserts an [Integer to Float](#)^[208] element.

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.8.4 IDATA

ACCESS

Menu: **Insert - Function Blocks - Transference - IDATA**

Block Bar: 

FUNCTION

Inserts a [IDATA](#)^[210] element.

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.8.5 USERERR

ACCESS

Menu: **Insert - Function Blocks - Transference - USERERR**

Block Bar: 

FUNCTION

Inserts a [USERERR](#) ^[211] element.

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.9 CAN Network

3.5.7.9.1 MSCANWEG

ACCESS

Menu: **Insert - Function Blocks - CAN Network - MSCANWEG**

Standard Toolbar: 

FUNCTION

Inserts a [MSCANWEG](#) ^[212] element. See also [FOLLOW](#) ^[171].

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.9.2 RXCANWEG

ACCESS

Menu: **Insert - Function Blocks - CAN Network - RXCANWEG**

Standard Toolbar: 

FUNCTION

Inserts a [RxCANWEG](#) ^[213] element.

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.9.3 SDO

ACCESS

Menu: **Insert - Function Blocks - CAN Network - SDO**

Block Toolbar: 

FUNCTION

Inserts a [SDO](#) ^[213] element.

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.10 USERFB

ACCESS

Menu: **Insert - Function Block - USERFB**

Standard Toolbar: 

FUNCTION

Inserts a [USERFB](#) ^[216] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.5.7.11 MMC

ACCESS

Menu: **Insert - Function Block - MMC**

Standard Toolbar: 

FUNCTION

Inserts a [MMC](#) ^[229] element

DESCRIPTION

You can insert the function block by clicking with the left mouse button on the desired position. If the cursor changes to the symbol "Not-Allowed", the Function block cannot be inserted and an information is written on the status bar.

3.6 Tools

3.6.1 Parameter Values

ACCESS

Menu: **Tools - Parameters Value**

Hot Key: **F10**

Communication Bar: 

FUNCTION

Allow upload the values of the parameters and save in a file (.par). Also load a file (.par) and download to the

parameters.

Note: The Upload and Download function of the SRW01 should only be used if:

The relays have the same hardware and same firmware version. Please refer to the identification label to verify the product version.

A "different hardware" would be the model of the control unit (CU) with PTC protection (SRW01-PTC) or earth leakage (SRW01-RCD) and a "different version" would be those with different "x" or "y" numbering, assuming that the firmware version is described as Vx.yz.

3.6.2 Anybus

ACCESS

Menu: **Tools - Anybus**

Hot Key: **F11**

FUNCTION

Allow to the user define the input and output variables that will be used by anybus.

3.6.3 CANOpen

ACCESS

Menu: **Tools - CANopen**

Hot Key: **Shift+F11**

FUNCTION

Configures the CANopen master network.

3.6.4 Cam Profiles

ACESSO

Menu: **Ferramentas - Cam Profiles**

Barra de Ferramentas: 

FUNÇÃO

Permite carregar e editar as tabelas de pontos das curvas CAM.



DESCRIÇÃO

As tabelas de pontos (Cam Table) de 1 à 10 são tabelas de pontos fixos, que serão transmitidos no momento do download do aplicativo. Para usar as tabelas de 1 à 10, primeiramente o bloco [MC_CamTableSelect](#)^[157] deve ser executado com a tabela desejada e após o bloco [MC_CamIn](#)^[158].

As tabelas de pontos de 11 à 20, são tabelas de pontos variáveis. Para usar as tabelas de 11 à 20, primeiramente o bloco [MC_CamCalc](#)^[158] deve ser executado com a tabela desejada e após o bloco [MC_CamIn](#)^[159].

Para o equipamento SCA06 é permitido programar no máximo 200 pontos fixos e 100 pontos variáveis, sendo que o número máximo de pontos variáveis de cada tabela deve ser configurado na coluna Max Points, conforme abaixo:



Para editar a tabela cam clique no botão "Editar", o editor de perfil cam abrirá, conforme figura a seguir :

CAM

Profile
toy

Open Create Save As... Remove

Cam Profile Type
☒ Fixed ☐ Calculable

Maximum Number of Points
Constant 5

First Master Point
Float Marker 9000 *Tag...

First Slave Point
Float Marker 9001 *Tag...

First Curve Type
Bit Marker 1000 *Tag...


Number of Points
%MW: Marcador de Word 6000 *Tag...

%MW: Retentive Word Marker : 6000 ... 6099
%MW: Volatile Word Marker : 7000 ... 7649

OK Cancel Help

Nessa janela existe os seguintes controles :


Tabela de pontos :

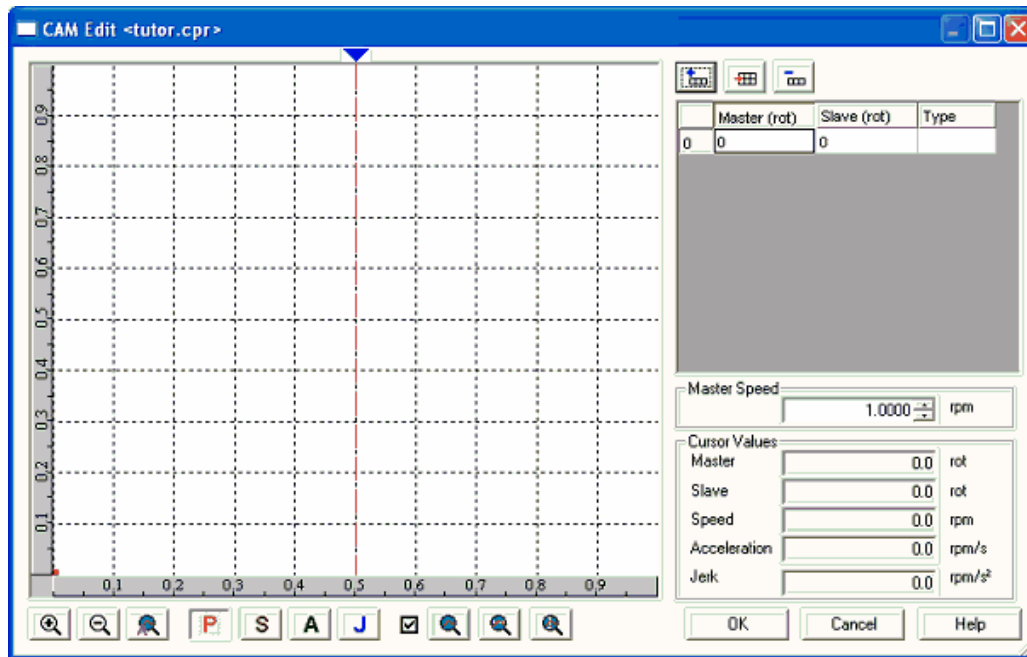


NOTAS!

- Como citado anteriormente o bloco CAM é sempre relativo, logo o primeiro ponto da tabela de pontos sempre será mestre=0 e escravo=0.
- Mestre = eixo virtual
- Escravo = eixo real (drive)

Gráfico do perfil :

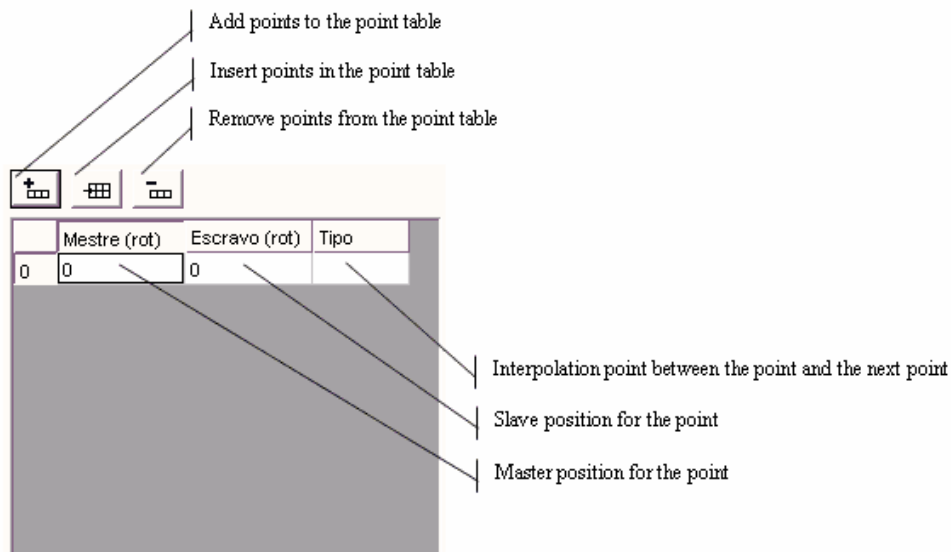


Ferramentas de controle do gráfico :

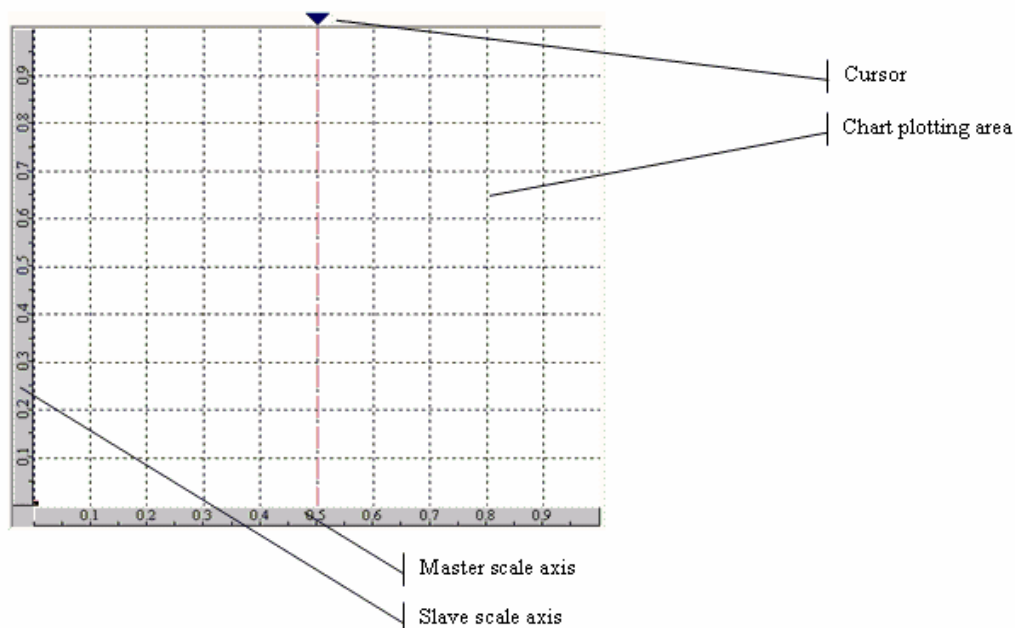

Valores do cursor :

Valores relativos ao ponto selecionado do cursor.

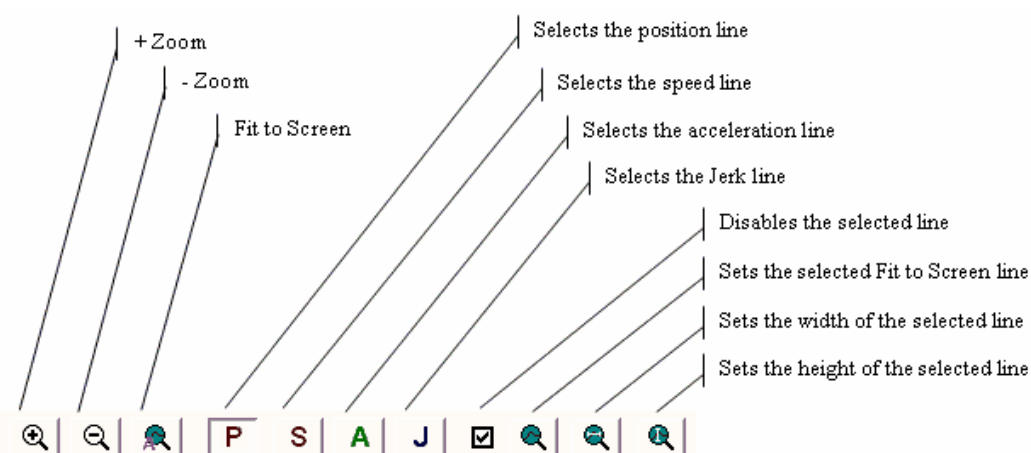

Velocidade do mestre :

Velocidade utilizada para cálculo da velocidade, aceleração e jerk do escravo.

Cursor Values		
Master	0.0	rot
Slave	0.0	rot
Speed	0.0	rpm
Acceleration	0.0	rpm/s
Jerk	0.0	rpm/s ²

! NOTA

- A velocidade, aceleração e jerk do escravo devem ser utilizados como referência para o desenvolvimento do perfil cam, onde os mesmos são calculados numericamente e não levam em

consideração carga, inércia, torque e a dinâmica do drive.

Adicionando um novo ponto no perfil cam:

Um ponto pode ser adicionado através dos botões adicionar ou inserir ponto ou através de um duplo clique do mouse no gráfico na posição onde deseja-se adicionar o ponto. O duplo clique pode ser feito em qualquer região do gráfico. Caso já exista uma interpolação nessa região o editor irá inserir esse ponto entre os dois pontos da interpolação.

O ponto é sempre adicionado como interpolação do tipo linear.


Quando é adicionado ou inserido um ponto através dos respectivos botões os valores de mestre e escravo vem zerados. No caso da inserção de ponto isso pode ocasionar uma interrupção do perfil, pois a posição do mestre deve sempre crescer em relação a origem, então, deve-se editar o valor do mestre e escravo clicando sobre suas células na tabela de pontos.

Na figura a seguir foi inserido um ponto através do duplo clique do mouse:




Para alterar o tipo da interpolação clique na célula de tipo na linha correspondente a origem da interpolação e selecione a desejada.


Na figura a seguir foi alterado o ponto para interpolação tipo cúbica.

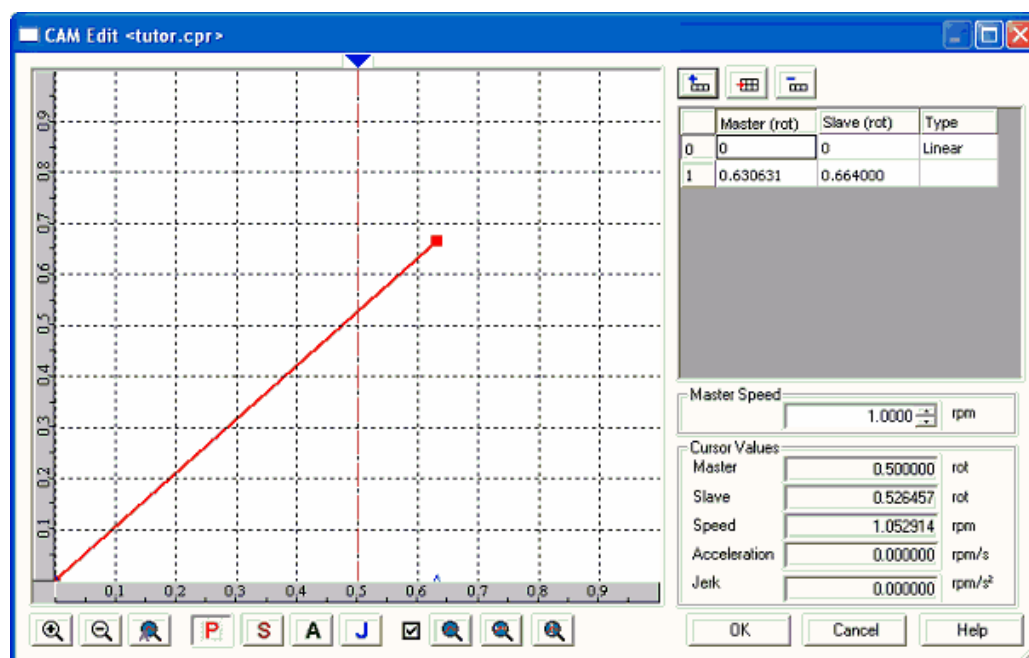


Agora nessa curva já é possível observar outras grandezas além da posição como velocidade, aceleração e jerk. Para uma melhor visualização de todas grandezas podemos utilizar o botão "Ajusta Zoom Tudo" conforme figura a seguir.

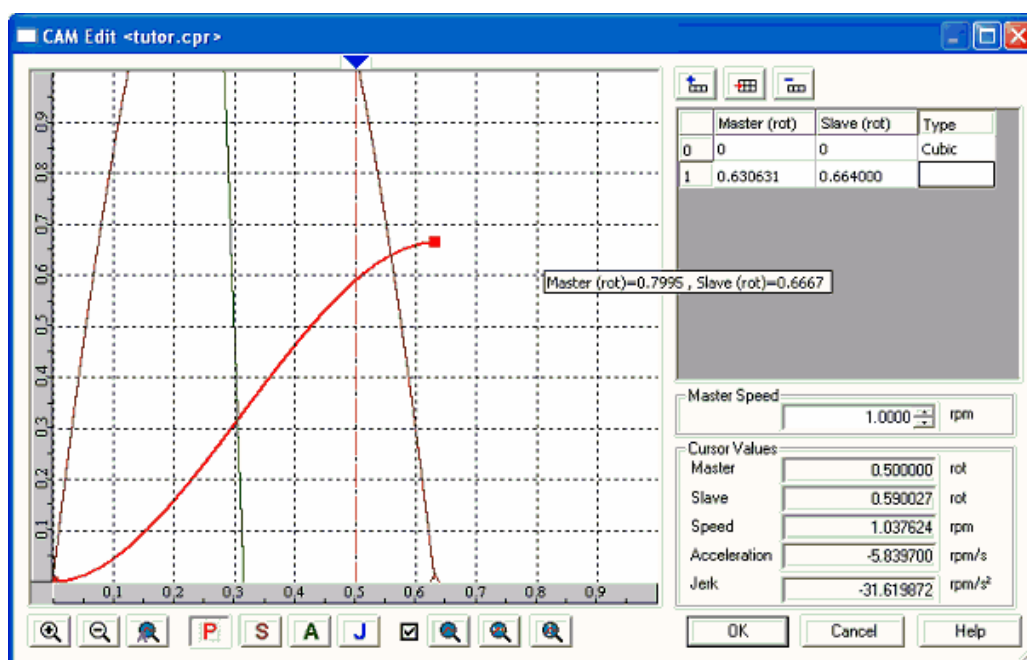


Da mesma maneira podemos escolher uma das grandezas e utilizar o botão "Aplica Zoom Seleccionado". No exemplo a seguir foi efetuado um zoom na velocidade.

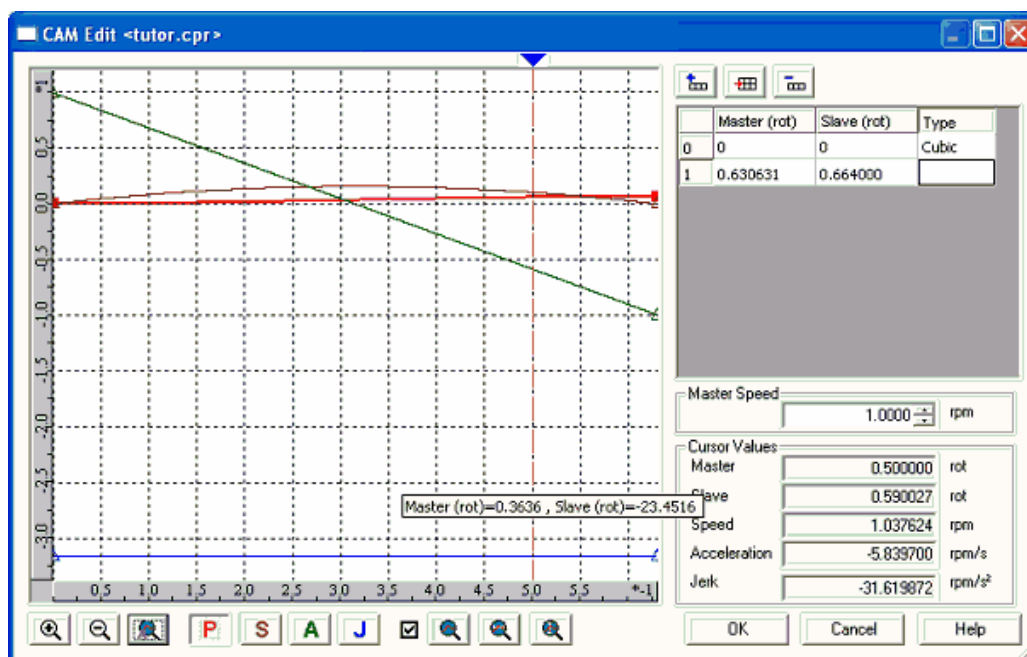

Outra ferramenta interessante de ser citada é o cursor. No exemplo a seguir posicionaremos o cursor no ponto de máxima velocidade.

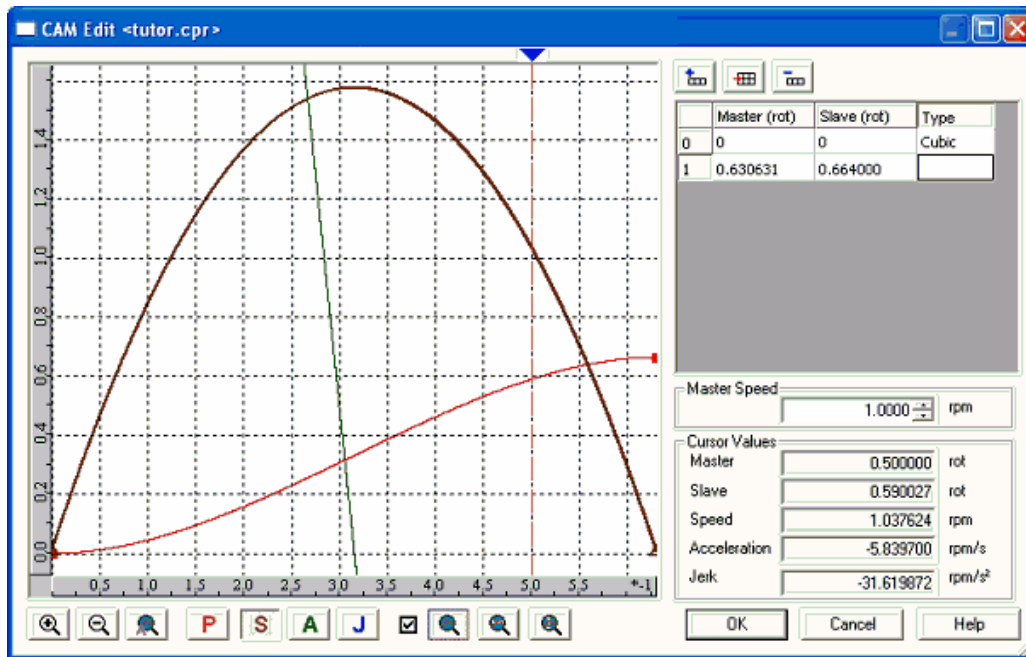

Deve-se lembrar que as grandezas velocidade, aceleração e jerk do escravo são dependentes da velocidade do mestre, então é interessante altera-la de modo a simular algo muito próximo ao real. Na figura a seguir a velocidade do mestre será alterada para 1000 rpm e analisaremos a mesma posição do cursor.

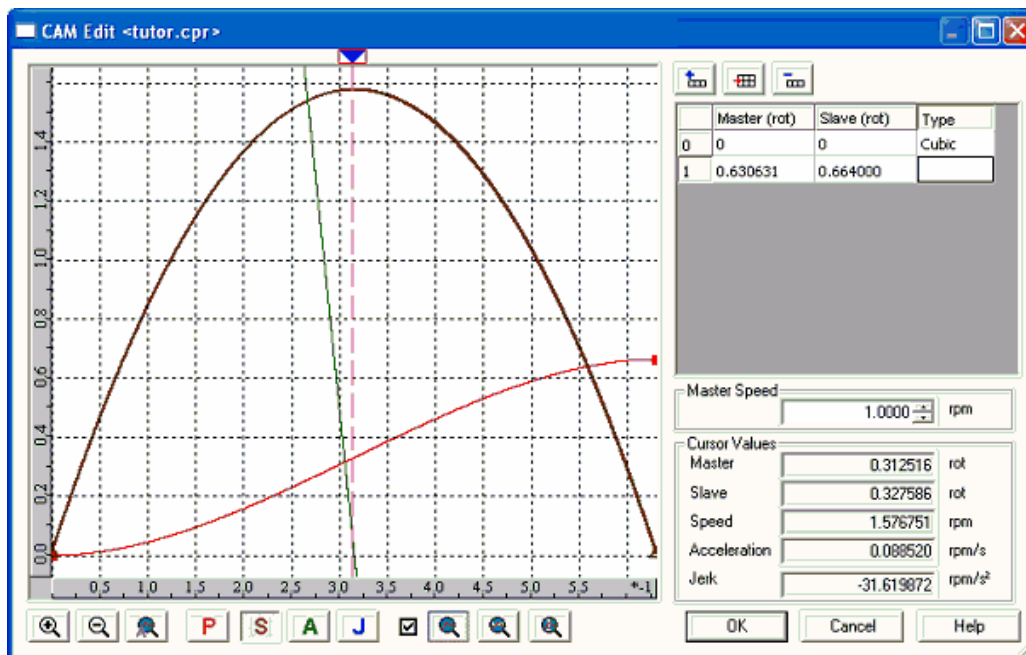

Durante o projeto do perfil cam todas essas grandezas devem ser observadas pois as mesmas poderão ou não ser cumpridas em função de limitações mecânicas, elétricas e eletrônicas dos equipamentos envolvidos.

Como os gráficos de aceleração e jerk são calculados levando em consideração a interpolação entre dois pontos, nas junções entre interpolações lineares a aceleração e jerk serão mostrados como iguais a zero. Mas sabemos que teoricamente num degrau de velocidade a aceleração e jerk são infinitos, na prática a aceleração e jerk nesse momento dependerá também das limitações mecânicas, elétricas e eletrônicas dos equipamentos envolvidos. Esses degraus de velocidade devem ser observados e considerados no projeto do perfil cam. Na figura a seguir é exemplificado esta situação.

Master Speed	1000	rpm
Cursor Values		
Master	0.312516	rot
Slave	0.327586	rot
Speed	1576.751405	rpm
Acceleration	88519.822218	rpm/s
Jerk	-31619871813.905342	rpm/s ²

O bloco CAM tem disponível dois tipos de interpolação, linear e cúbica. Sendo utilizada as seguintes equações :

- Linear :

$$pe = pie * \left(\frac{p_{fm} - pm}{p_{fm} - pim} \right) + pfe * \left(\frac{pm - pim}{p_{fm} - pim} \right)$$

$$ve = \left(\frac{-pie}{p_{fm} - pim} + \frac{pfe}{p_{fm} - pim} \right) * vm$$

$$ae = 0$$

$$je = 0$$

- Cúbica :

$$pe = a * (pm - pim)^3 + b * (pm - pim)^2 + c * (pm - pim) + pie$$

$$ve = (3 * a * (pm - pim)^2 + 2 * b * (pm - pim) + c) * vm$$

$$ae = (6 * a * (pm - pim) + 2 * b) * vm^2$$

$$je = 6 * a * vm^3$$

Onde :

pe = posição do escravo

ve = velocidade do escravo

ae = aceleração do escravo

je = jerk do escravo

pm = posição do mestre

vm = velocidade do mestre

pim = posição inicial do mestre

p_{fm} = posição final do mestre

pie = posição inicial do escravo

pfe = posição final do escravo

a = coeficiente calculado pelo editor CAM

b = coeficiente calculado pelo editor CAM

c = coeficiente calculado pelo editor CAM

Alterando um ponto no perfil cam:

Um ponto pode ser alterado através da tabela de pontos pela edição direta ou movendo o ponto no

gráfico. Para mover o ponto no gráfico leve o mouse até o ponto em questão que é marcado com um quadrado vermelho, clique sobre o mesmo e mantenha o mouse pressionado e arraste o mesmo para a nova posição.

Ao clicar sobre o ponto a tabela de pontos será deslocada para o ponto em questão, selecionando a célula relacionada.

A operação de mover o ponto no gráfico é interativa e calcula todo o perfil a cada mudança do ponto em questão. O novo ponto pode ser visto na tabela de pontos.

Removendo um ponto no perfil cam:

O mesmo é removido diretamente na tabela de pontos. Para isso selecione uma das células respectiva ao ponto e clique no botão "Remover Ponto".

Zoom de uma área determinada do gráfico:

Clique com o mouse sobre um dos cantos da região que deseja executar o zoom e mantenha o mouse pressionado, mova o mouse de modo a marcar uma região. Nesse momento um retângulo aparecerá no gráfico, solte o botão do mouse, e então dê um duplo clique sobre esse retângulo. Na figura a seguir um exemplo desse zoom.

- Linear :

$$pe = pie * \left(\frac{p_{fm} - pm}{p_{fm} - pim} \right) + p_{fe} * \left(\frac{pm - pim}{p_{fm} - pim} \right)$$

$$ve = \left(\frac{-pie}{p_{fm} - pim} + \frac{p_{fe}}{p_{fm} - pim} \right) * vm$$

$$ae = 0$$

$$je = 0$$

- Cúbico :

$$pe = a * (pm - pim)^3 + b * (pm - pim)^2 + c * (pm - pim) + pie$$

$$ve = (3 * a * (pm - pim)^2 + 2 * b * (pm - pim) + c) * vm$$

$$ae = (6 * a * (pm - pim) + 2 * b) * vm^2$$


$$je = 6 * a * vm^3$$

Movendo o gráfico:

Pressione a tecla SHIFT e clique com o mouse sobre o gráfico e mantenha o mouse pressionado, mova o mouse e gráfico moverá junto.

Menu gráfico:


Para ter acesso ao menu do gráfico clique com o botão direito do mouse sobre a área do gráfico, após o seguinte menu aparecerá.

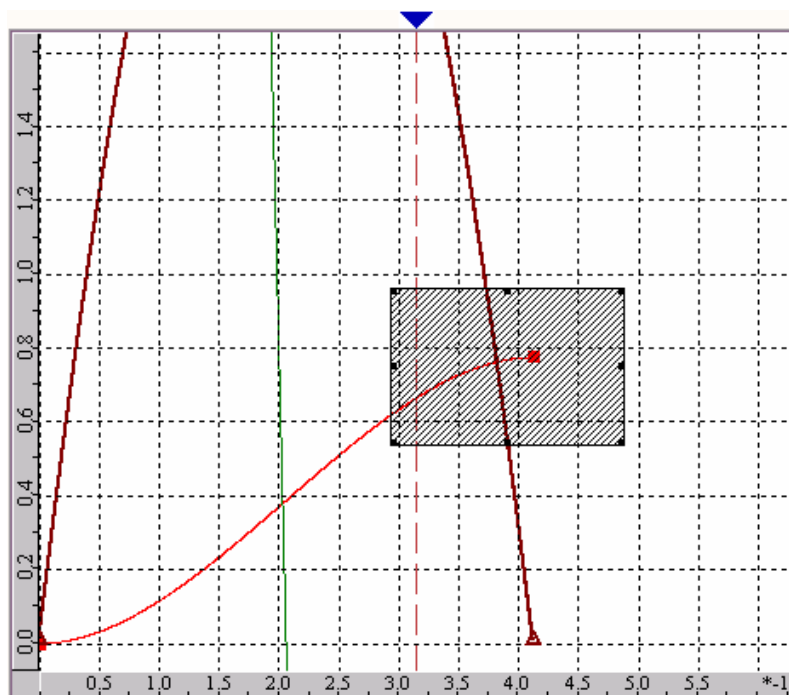

Nesse menu é possível executar as seguintes operações :

- Habilitar/desabilitar coordenadas do mouse.
- Habilitar/desabilitar eixos x e y.
- Executar operações de zoom.
- Executar operações de ajuste da tela.
- Abrir caixa com as propriedades do gráfico.

Na figura a seguir é mostrada a caixa de propriedades do gráfico.

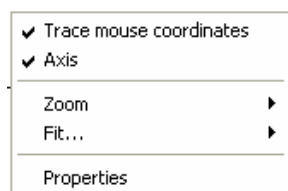

Nessa caixa de propriedades do gráfico é possível executar as seguintes operações :

- Ajustar manualmente a escala dos eixos x e y
- Habilitar/desabilitar coordenadas do mouse.
- Habilitar/desabilitar eixos x e y.

3.6.5 Application

3.6.5.1 Create

ACCESS

Menu: **Tools - Application - Create**

FUNCTION

It allows the user to create a new ladder project based on [applications](#)^[235] pre-defined in the WLP.

3.6.5.2 Configure

ACCESS

Menu: **Tools - Application - Configure**

FUNCTION

It allows the user to configure an [application](#) ^[235] that has been previously created.

3.7 Build

3.7.1 Compile

ACCESS

Menu: **Build - Compile**

Hot Key: **F7**

Standard Toolbar: 

FUNCTION

Compiles the project.

DESCRIPTION

After compiling, a dialog box is opened showing the possible [compiling errors](#) ^[34] and the [location of the errors](#) ^[34] in the ladder editor.

See also the error messages, [fatal errors](#) ^[231], [warnings](#) ^[234] and [information](#) ^[235] about compiler.

3.7.2 Compile Subroutine/USERFB

ACCESS

Menu: **Build - Compile**

Hot Key: **Ctrl+F7**

Standard Toolbar: 

FUNCTION

Compiles the subroutine/USERFB.

DESCRIPTION

After compiling, a dialog box is opened showing the possible [compiling errors](#) ^[34] and the [location of the errors](#) ^[34] in the ladder editor.

See also the error messages, [fatal errors](#) ^[231], [warnings](#) ^[234] and [information](#) ^[235] about compiler.

3.7.3 Debug

ACCESS

Menu: **Build- Debug**

Hot Key: **Shift+F7**

FUNCTION

It enables or disables the debugging information.

3.8 Communicate

3.8.1 Download

ACCESS

Menu: **Communicate - Download**

Hot Key: **F8**

Communication Toolbar: 

FUNCTION

Writes the user program into the board.

IMPORTANT

* Check the [Communication-Configurations](#) .

3.8.2 Upload

ACCESS

Menu: **Communicate - Upload**

Hot Key: **Alt+F8**

Communication Toolbar: 

FUNCTION

Reads the user program into the board.

IMPORTANT

* Check the [Communication-Configurations](#) .

* Only available for the CFW-11 SoftPLC and the SSW-06 SoftPLC.

* For the CFW-11 SoftPLC it is possible to protect this function via password. For more details verify the [project properties](#) .

3.8.3 Online Monitoring

ACCESS

Menu: **Communication - Online Monitoring**

Hot Key: **F9**

Communication Toolbar: 

FUNCTION

Activate or deactivate the online monitoring.

IMPORTANT

* Check the [Communication-Configurations](#) .

3.8.4 Config Online Monitoring

3.8.4.1 Signed

ACCESS

Menu: **Communication - Config Online Monitoring - Signed**

FUNCTION

During online monitoring it changes all the monitoring boxes to a format with signal.

3.8.4.2 Not Signed

ACCESS

Menu: **Communication - Config Online Monitoring - Not Signed**

FUNCTION

During online monitoring it changes all the monitoring boxes to a format without signal.

3.8.4.3 Decimal

ACCESS

Menu: **Communication - Config Online Monitoring - Decimal**

FUNCTION

During online monitoring it changes all the monitoring boxes to a decimal format.

3.8.4.4 Hexadecimal

ACCESS

Menu: **Communication - Config Online Monitoring - Hexadecimal**

FUNCTION

During online monitoring it changes all the monitoring boxes to an hexadecimal format.

3.8.4.5 Binary

ACCESS

Menu: **Communication - Config Online Monitoring - Binary**

FUNCTION

During online monitoring it changes all the monitoring boxes to a binary format.

3.8.5 Monitoring Variables

ACCESS

Menu: **Communication - Variables Monitoring**

Hot Key: **Shift+F9**

Communication Toolbar: 

FUNCTION

Activate or deactivate the [variables monitoring](#) ⁷⁵.

IMPORTANT

* Check the [Communication-Configurations](#) ⁶⁶.

3.8.6 Trend Variables

ACCESS

Menu: **Communication - Trend of Variables**

Hot Key: **Ctrl+F9**

Communication Toolbar: 

FUNCTION

Open a dialog showing a [trend graphic](#) ⁷⁷ with the chosen variables

IMPORTANT

* Check the [Communication-Configurations](#) ⁶⁶.

3.8.7 Monitoring Input/Outputs

ACCESS

Menu: **Communication - I/O Monitoring**

Hot Key: **Alt+F9**

Communication Toolbar: 

FUNCTION

Open a dialog that shows the [current state of the digital inputs and outputs](#) ⁸¹ from the PLC and drive.

IMPORTANT

* Check the [Communication-Configurations](#) ⁶⁶.

3.8.8 Monitoring by HMI

ACCESS

Menu: **Communication - Monitoring by HMI**

Hot Key: **Ctrl+Alt+F9**

Communication Toolbar: 

FUNCTION

Open a dialog that shows the [Monitoring by HMI Dialog](#) ⁸³.

IMPORTANT

* Check the [Communication-Configurations](#) ⁶⁶.

3.8.9 Force Inputs/Outputs

ACCESS

Menu: **Communication - Force Inputs/Outputs**

Communication Toolbar: 

FUNCTION

Open a dialog that shows the [Force Inputs/Outputs](#) ⁸⁴.

IMPORTANT

* Check the [Communication-Configurations](#) ⁶⁶.

3.8.10 General Information

ACCESS

Menu: **Communication - General Information**

Communication Toolbar: 

FUNCTION

Open a dialog that shows the [General Information](#) ⁸⁶.

IMPORTANT

* Check the [Communication-Configurations](#) ⁶⁶.

3.8.11 Config


ACCESS

Menu: **Communicate - Config**

Hot Key: **Shift+F8**

FUNCTION

Configures the communication.

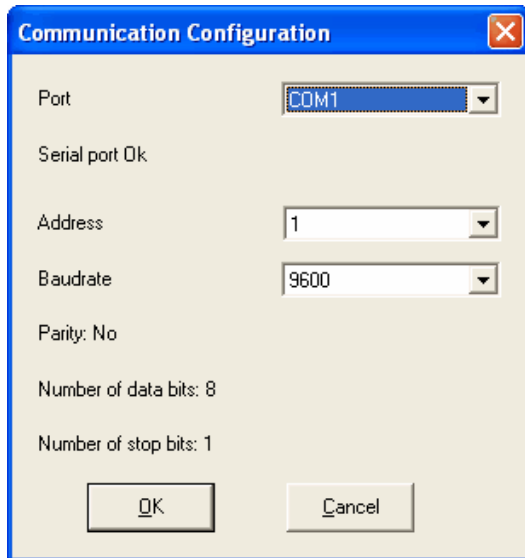

Port : COM1 to COM8 and USB.

3.9 User Block

3.9.1 Configuration

ACCESS

Menu: **User Block - Configuration**

Hot Key: **Ctrl+M**

FUNCTION

Change the configuration of the USERFB that is being edited.

DESCRIPTION

Through this menu it is possible to change the configurations that were previously stored during the USERFB creation wizard.

3.9.2 Information

ACCESS

Menu: **User Block - Information**

Hot Key: **Ctrl+Shift+M**

FUNCTION

Change the information about the USERFB that is being edited.

DESCRIPTION

Through this menu it is possible to change the information that appears when info button is pressed in the USERFB properties box.

3.10 Window

3.10.1 Cascade

ACCESS

Menu: **Window - Cascade**

FUNCTION

Cascade the windows of the all opening projects.

3.10.2 Tile Horizontally

ACCESS

Menu: **Window - Tile Horizontally**

FUNCTION

Arranges the windows as horizontal, nonoverlapping tiles.

3.10.3 Tile Vertically

ACCESS

Menu: **Window - Tile Vertically**

FUNCTION

Arranges the windows as vertical, nonoverlapping tiles.

3.11 Help

3.11.1 Contents

ACCESS

Menu: **Help - Contents**

Hot Key: **F1**

Standard Toolbar: 

FUNCTION

It shows the Help for the current task or command.

3.11.2 About WLP

ACCESS

Menu: **Help - About**

Hot Key: **Ctrl+Shift+A**

FUNCTION

It shows information about the program.


4 Edit Operations

4.1 Selecting Cells


1. Activate the pointer command
2. Click with the left mouse button on a cell and drag the mouse to the desired cell.

The selected cell may be deleted by clicking Delete.


CLICKING ON THE FIRST CELL

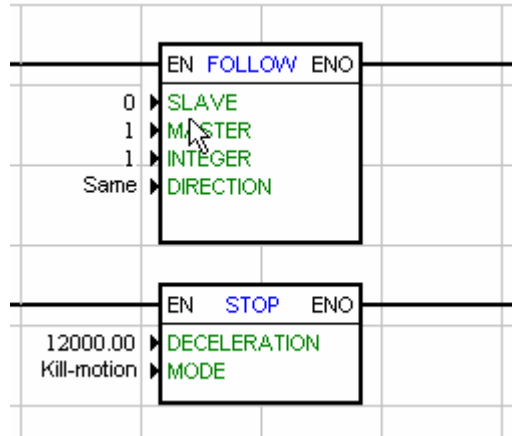

DRAGGING TO THE LAST CELL

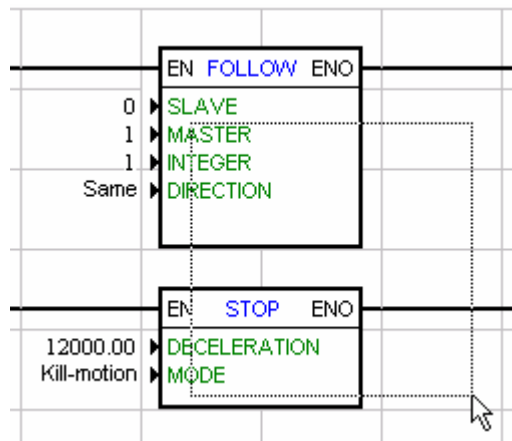


RELEASING THE LEFT MOUSE BUTTON

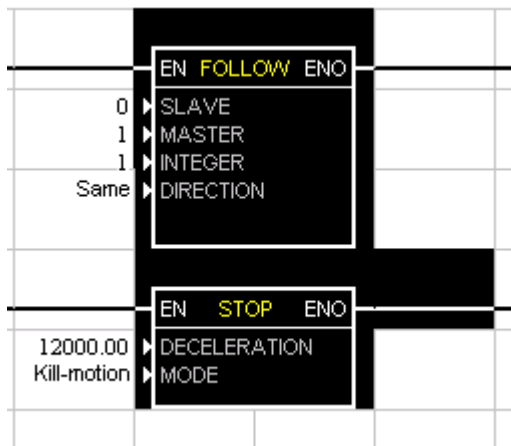


4.2 Moving Cells

1. [Select](#) ⁶⁸ the desired cells.
2. Click with the left mouse button on a cell and drag it to the desired cell.


CLICKING ON THE FIRST CELL

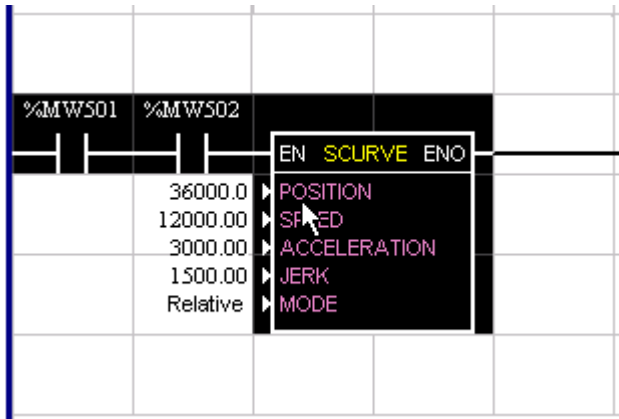

DRAGGING TO THE LAST CELL

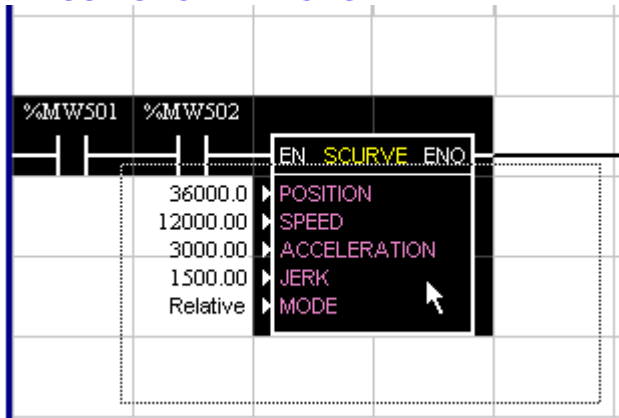


RELEASING THE LEFT MOUSE BUTTON

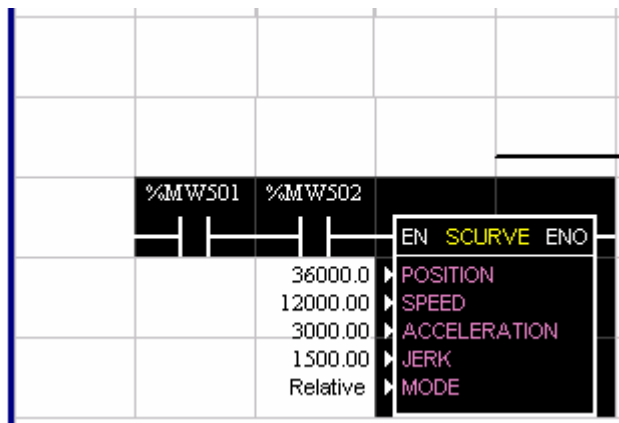

4.3 Pasting Cells

1. [Select](#) ^[68] the desired cells.
2. [Copy](#) ^[31] or [cut](#) ^[31] the cells to the transfer areas.
3. Activate command [Paste](#) ^[31].

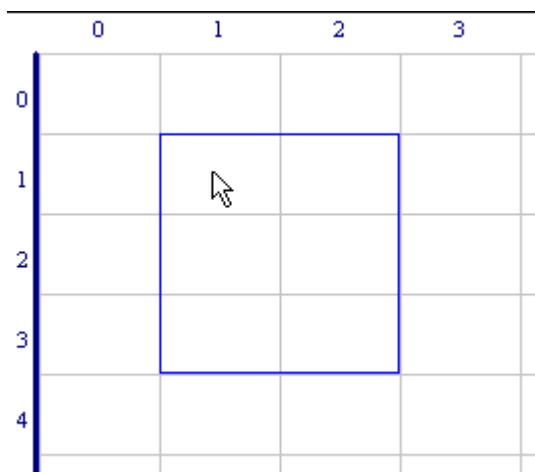

4. Click with the left mouse button on the desired position.
5. Click with the right mouse button to end the operation.

5 Monitoring

5.1 Introduction

The online monitoring is executed through the interface of the board and in the same manner as the Ladder program is loaded to the board, i. e., after the compiled Ladder program has been loaded, you can use the WLP program through the interface to display charts and to show through the logic status of the ladder program. By means of the online monitoring you can display the logic status of contacts and coil of the ladder program, as well as display the current values of the word and float markers and the parameter of the drive and board.

5.2 Toolbar

FIGURE :



On this toolbar you can find all functions relating to the online monitoring, which are:



- LADDER MONITORING



- VARIABLES MONITORING



- VARIABLESTREND



- MONITORING OF INPUTS AND OUTPUTS



- MONITORING PARAMETER BY HMI

All online monitoring functions can be used individually or jointly, i. e., all function use the same communication channel with the board realized through the shared interface. Please consider that the more monitoring function are used, the more information will be requested from the board which will slow down the monitoring functions.

5.3 Online Monitoring

After the Ladder program has been compiled and loaded to the board, you now can monitor the Ladder program by pressing the button online monitoring . Now the WLP tries establishing communication with the board and tests the communication with this board. When no communication errors is detected, following message will be displayed on the status bar at the bottom of the WLP.

Serial port 1 open successful.

On the same status bar you can find a blue LED that flashes, indicating the the communication is operating correctly .

If some coomunication error is detected, a box will be opened, indicating the detected fault and which required action should be adopted. After that the online monitoring will be disabled.

When the online monitoring is active, all editing tools are disabled and the Editing window displays the logic status of the ladder program. Press the online monitoring key again for disabling this function

Please find below the graphic presentation of the logic status of coil and contacts during online monitoring :



NORMAL OPEN (NO) CONTACT CLOSED



NORMAL OPEN (NO) CONTACT OPEN



NORMAL CLOSED (NC) CONTACT CLOSED



NORMAL CLOSED (NC) CONTACT OPEN

 



COIL ACTIVATED


 COIL DEACTIVATED

 NEGATED COIL DEACTIVATED

 NEGETAED COIL DEACTIVATED

 SET COIL ACTIVATED

 
 SET COIL DEACTIVATED

 
 RESET COIL ACTIVATED

 RESET COIL DEACTIVATED

 POSITIVE TRANSITION COIL ACTIVATED

  POSITIVE TRANSITION COIL DEACTIVATED

 NEGATIVE TRANSITION COIL ACTIVATED

 
 NEGATIVE TRANSITION COIL DEACTIVATED

NOTE!

The language to describe the Ladder operation does a comparison to an electric circuit with contactors and their respective contacts. When a contact in the ladder is mentioned as being conducting, it refers to its capability of being giving continuity (logic sequence) to the next program phase. In the same way, an "energized" coil has its contacts in the program logic:

- Normally Open - NO: conducting;
- Normally Closed - NC: not conducting.

Next, an example of ladder online monitoring using 4 digital inputs (each one represented by a NO or NC contact) and 4 coils:

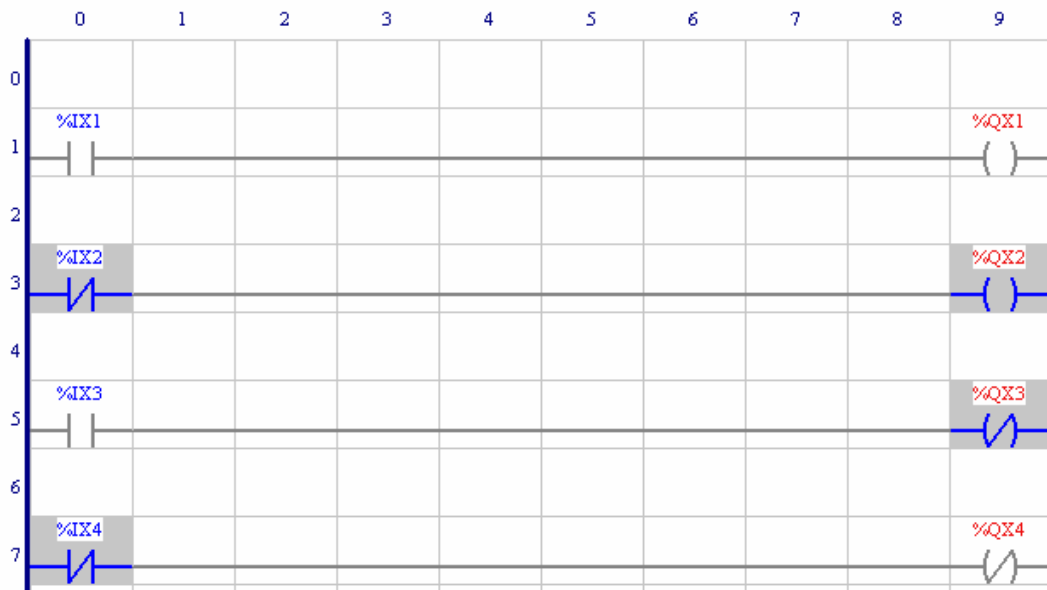


The previous figure presents the graphic representation of the logic status of the 4 digital inputs when they are deactivated, i.e., when there is no signal at their terminals.

Those DI's associated to NO contacts show no conduction, and those associated to NC contacts indicate conduction.

The normal coils will be energized if the contact connected to them allows conduction, i.e., the coil input is equal to 1.

The negated coils appear as energized only when the contact connected to them is not conducting, i.e., the coil input is equal to 0.

In next figure the digital inputs are active, with 24Vdc applied to their terminals. According to the indication, the contact logic status is the opposite of what was presented in the figure 5.4 (NO = conducting and NC = not conducting).

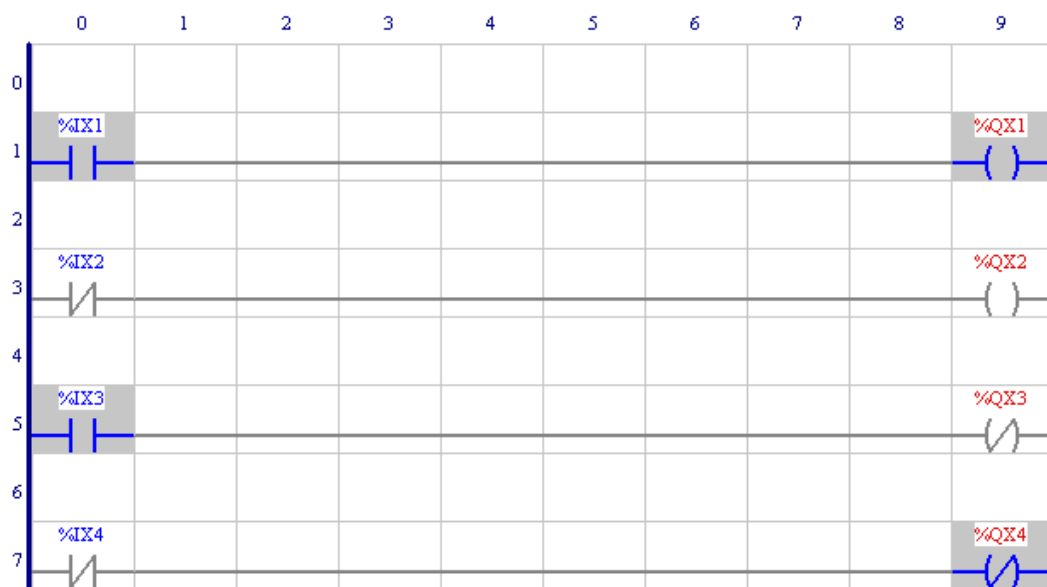


Now the logic status of the contacts and coils are exactly contrary the previous ones.

5.4 Monitoring Numerics Values in the Ladder

Some ladder function blocks, as for instance the SCURVE and TCURVE, use numeric variables with word markers, floating markers and board or drive parameters. The monitoring of those functions is done with the mouse click at the connector related to the numeric variable.

For example, for monitoring the actual time of a timer that is in the Word marker %MW6000, according to the next figure, you must click with the mouse on the position indicated by means of the next figure, and the variable value monitoring box will appear.

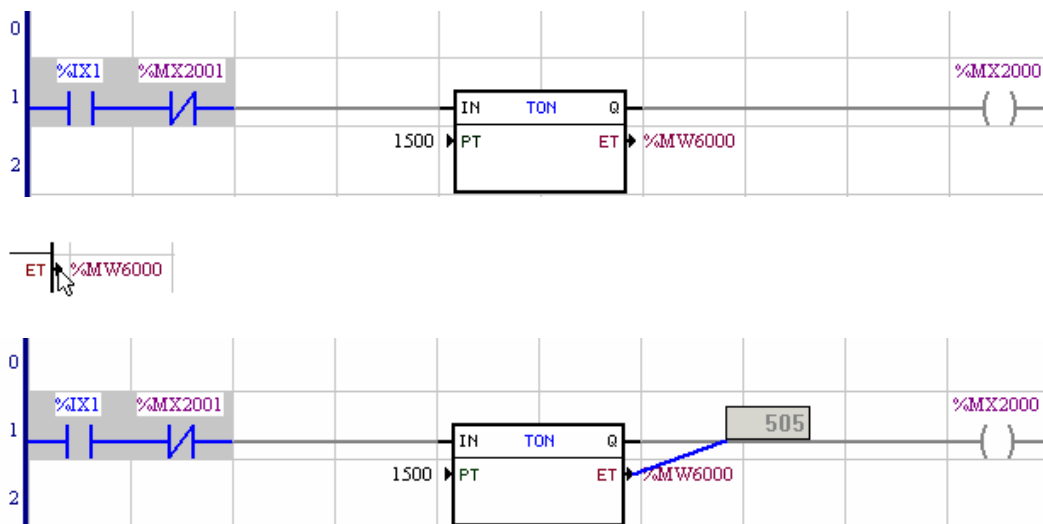

The monitoring box can be placed in any place in the ladder editing window; therefore it is necessary only to click on the box and while the mouse key is pressed, to drag it to the desired position.

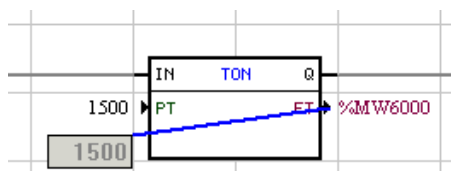


Figure - Monitoring box repositioned.

To delete the monitoring box, click on it, select it and then press key DEL.

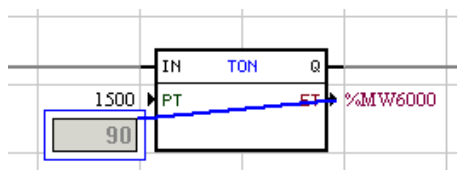


Figure - Monitoring box selected.

Undo the selection by clicking on ESC.

In order to change the monitoring format click on it with the mouse right button, so that the following menu shows up:

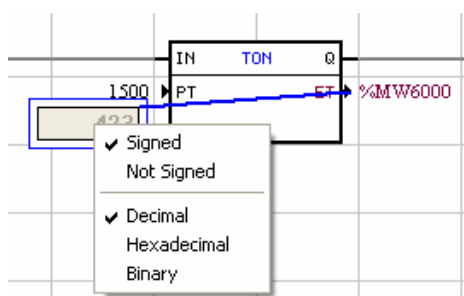


Figure - Format menu.

It is possible to choose the following options in that menu:


- With signal
- Without signal
- Decimal
- Hexadecimal
- Binary

It is also possible to select the format for all the monitoring boxes of the current page, therefore, verify in the option Menu – Communication – Online Monitoring Configuration.


5.5 Ladder Variable Write

When online monitoring is active, you can write values in variables of the type bit marker, word markers, float markers, system bit markers, user parameters, system parameters and digital outputs. To write in variables used in contacts or coils, you must give a double-click on it.

To write in variables used in function blocks, you must give a double-click on the variable connector as shown below.

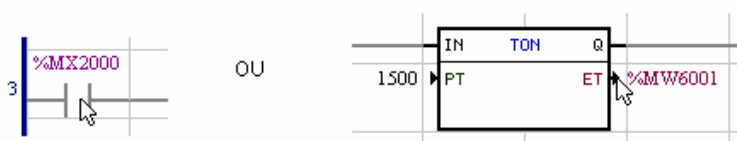

 After the double-click, following box will be displayed.




In this box you must write now the new value to be written and confirm it by key.

5.6 Variables Monitoring


Through the variable monitoring dialog box you can check the status of the variables used in the ladder program, indifferent if you are monitoring the ladder program or not. For loading this dialog box, press the

variable monitoring button . In the same manner as in the online monitoring, the WLP will try to establish the communication with the board, by testing the communication with this board, and it will execute the same operations described previously.


The variable monitoring dialog box has following features :

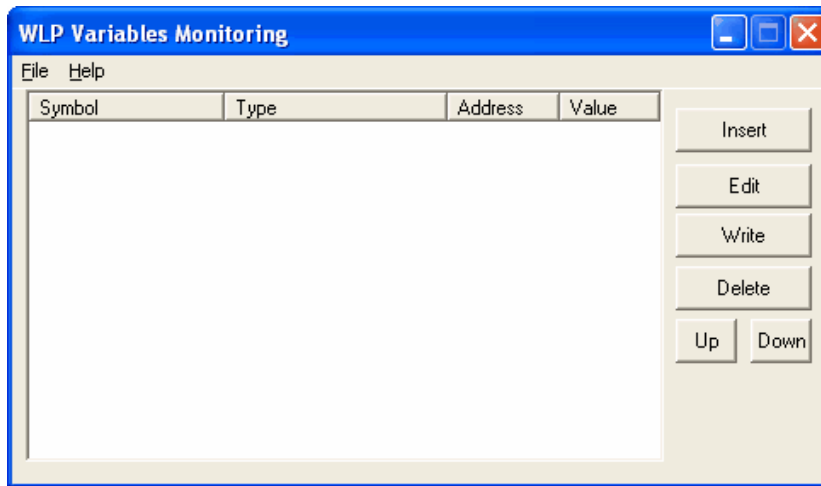


For inserting new variables, press the button insert and the following dialog box will be displayed:

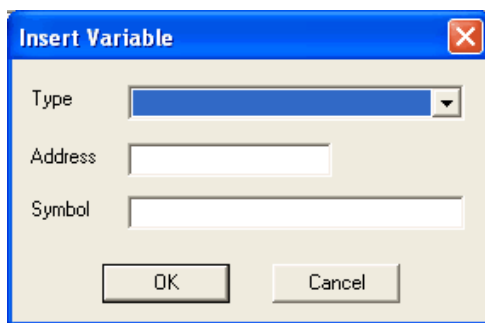

For executing this dialog, select Type, Address and a representative Symbol. In the example below has been selected the word marker %MW6000:

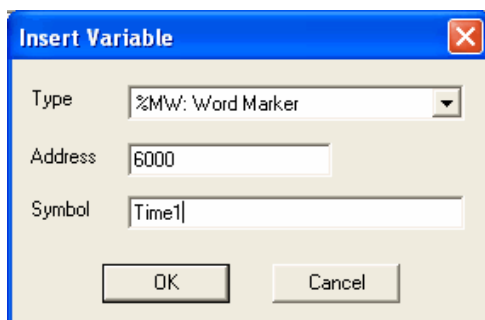

The monitoring dialog box will have following features after pressing the button OK:

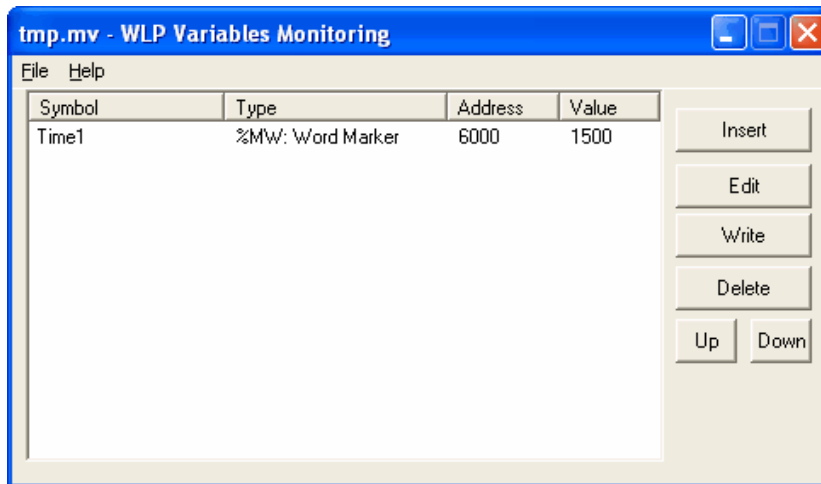


Now the number inserted in the column Value corresponds to the effective variable value acquired from the board through the communication interface.

In this dialog box you can also edit the variable, delete it, or move it up and down.

Through the menu File at the left bottom corner of the dialog box you can save and open the variable configurations that have been made in the respective dialog box.

When the variable monitoring box is active and has been configured, you can write values in variables of type bit marker, word marker, float marker, system bit marker, user parameter, system parameter and digital outputs.

 To write in variables, you must select with the mouse the variable to be written and click on the button, or give a double-click on the variable to be written. The following box will be displayed



In this box you must write the new value to be written and confirm it by the button.

5.7 Trend of Variables

Through the variable trend dialog box you can check the status of the variables used in the ladder program, indifferent if you are monitoring the ladder program graphically, for instance, with a pen plotter or not. For

loading this dialog box, press the button Variable Trend

The dialog box of the variable trend has following feature:




All configurations related to the variable trend are in the Graphic menu as shown below::

Graph	Help
Start Trend	S
✓ Stop Trend	O
Pause Trend	P
Disable Read Cycle Correction	
Configure	
Variable 1	
Variable 2	
Variable 3	
Variable 4	
Variable 5	
Variable 6	

The variable trend has a slight different operation when compared with the other ones mentioned above. For using this Trend, proceed as follows:


1. Configure the graphic through the option "Configure".
2. Configure the Variables to be plotted through the options "Variable 1 to 6".
3. Start the Trend through the option "Start Trend".

TREND CONFIGURATION

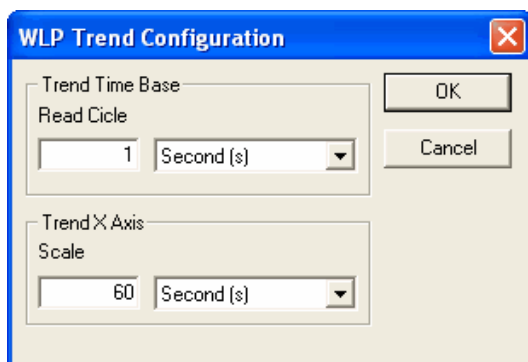


In this dialog box you can select the variable read cycle which corresponds to the time interval between each reading of the selected variables. The scale of the X shaft corresponds to the time that is available for the graphic visualization.

VARIABLES CONFIGURE

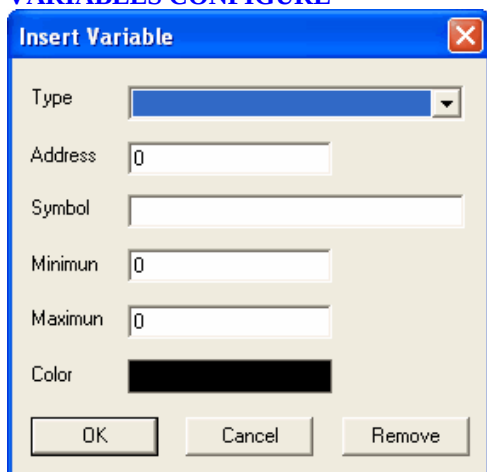


Select in this dialog box the Type, Address, a representative Symbol the Minimum and the Maximum and the Color of the variable.

In the example below has been selected the word marker %MW6001:

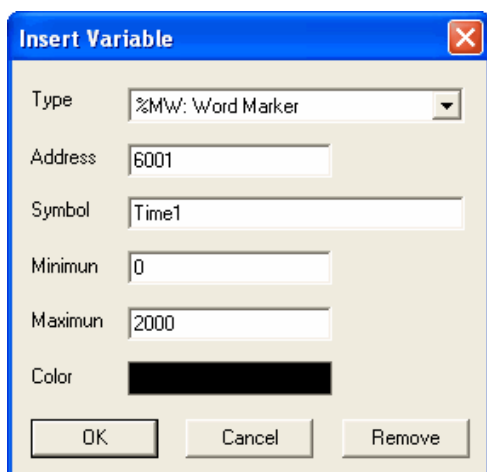


After pressing OK, the dialog box of the variable trend will be as follows:

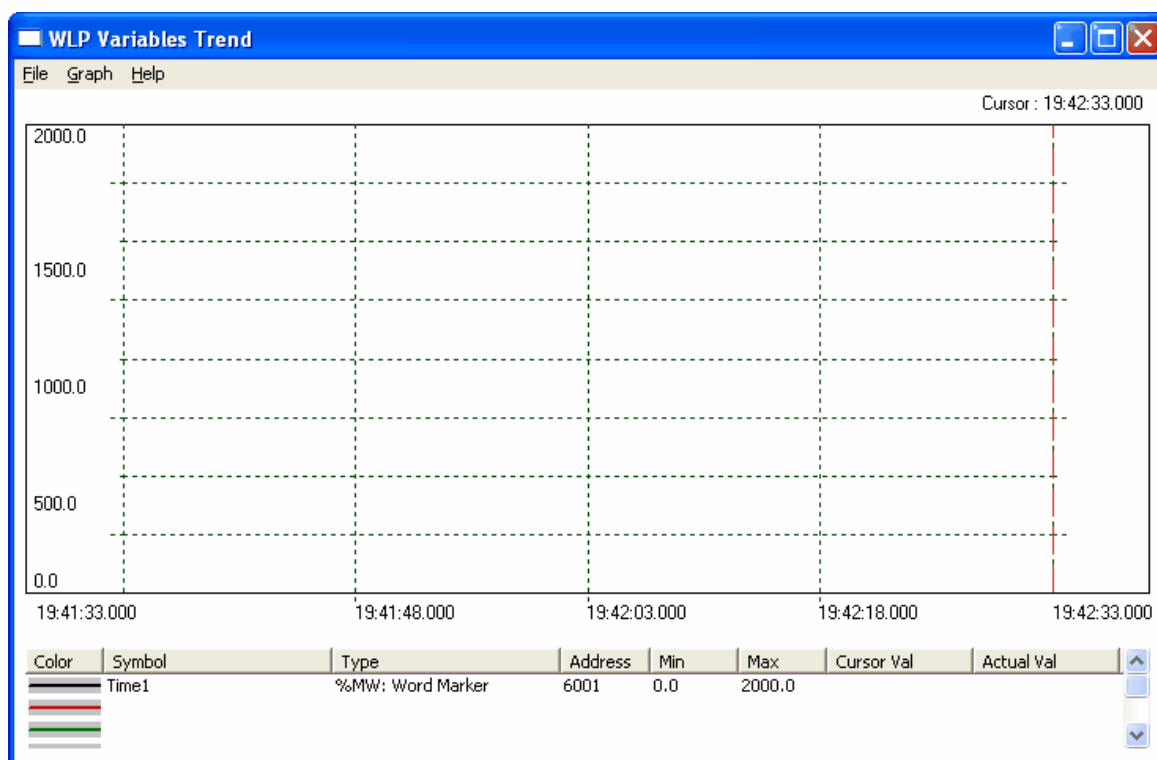

START TREND

As during the online monitoring process, when the option "Start Trend" is pressed, the WLP tries to establish the communication with the board and it will test the communication and executes the same operations as described above. After the communication has been established, the Trend will acquire the variables according to the requested cycle and will draft them on the screen as shown below :

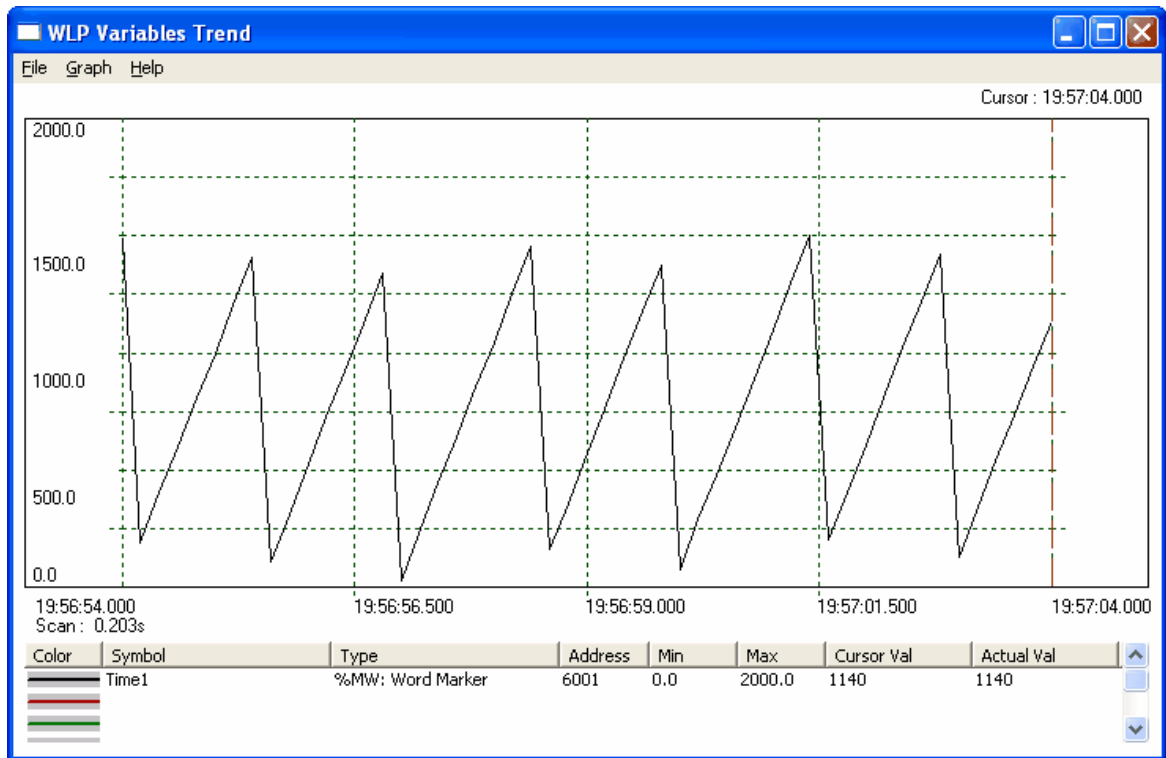

In this dialog box you can also edit and delete the variable.

In the menu File at the left bottom corner of the dialog box you can save and open these trend configurations from the dialog box, as well as print the respective trend.

5.8 Inputs/Outputs Monitoring


You can check the status of the digital inputs/outputs of the board and drive through the input/outputs

monitoring dialog box. Press button Input/Output Monitoring  for loading this dialog box.


As during the online monitoring process, the WLP tries to establish the communication with the board and it will test the communication and executes the same operations as described above.

The input/output monitoring dialog box has following features:


PLC1, PLC2 e POS2 :

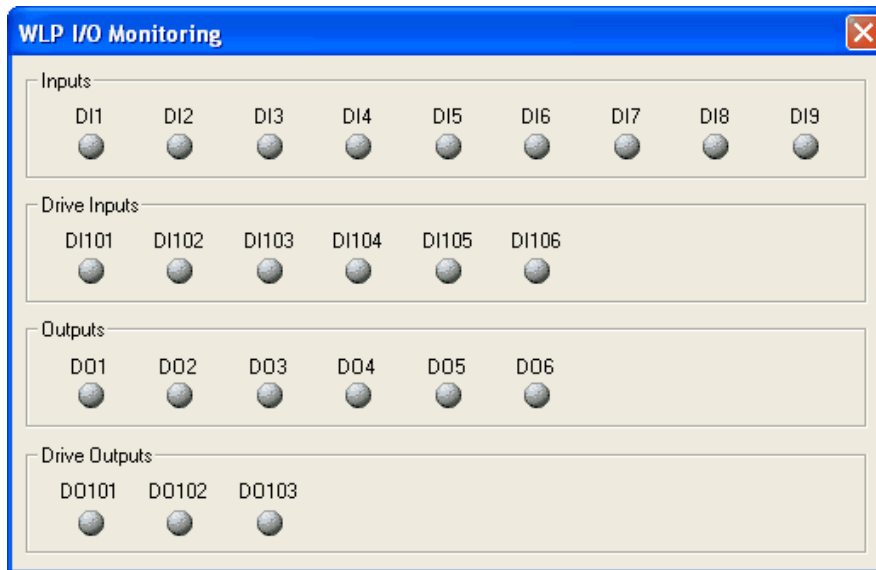


SOFTPLC CFW-11 :

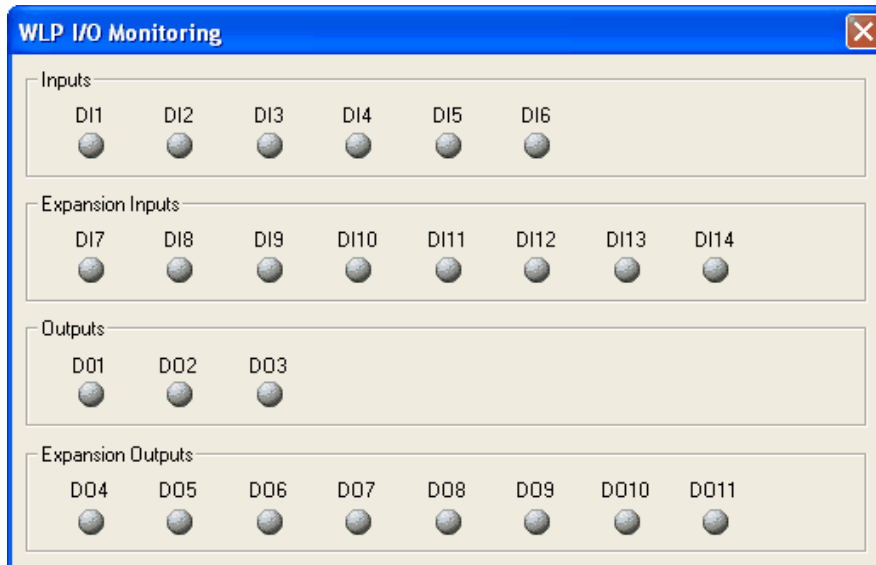


SOFTPLC SSW-06 :

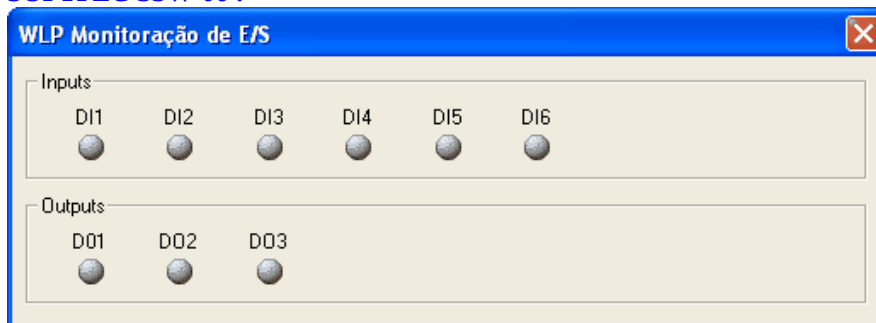

PLC11-01 and PLC11-02:

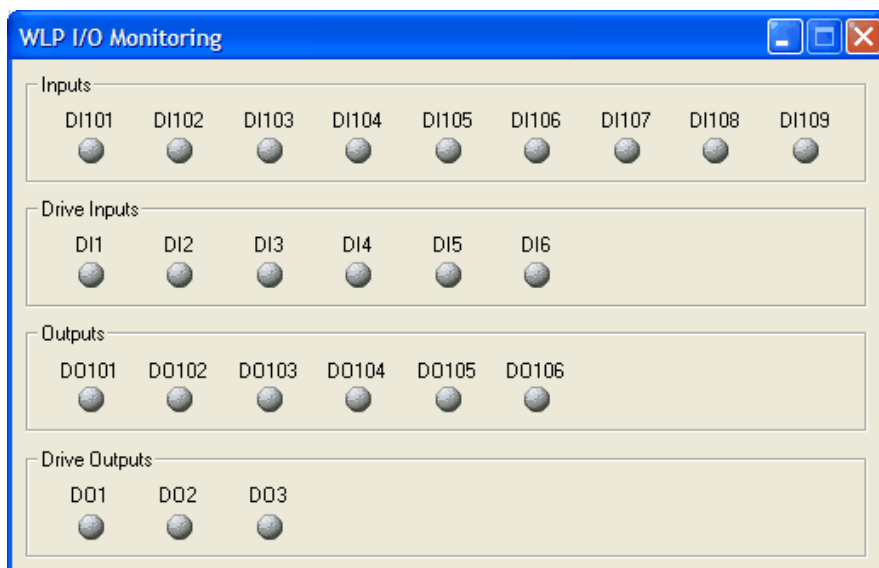

SRW01-PTC and SRW01-RCD:

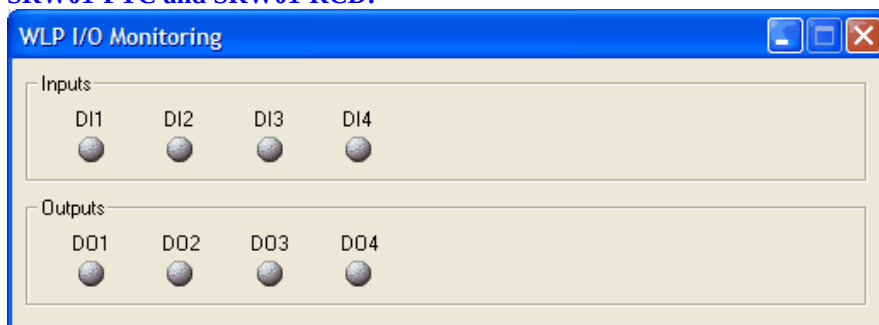


The active inputs/outputs are displayed in green color and the inactive inputs/outputs are displayed in gray color.

5.9 Monitoring via the HMI

Through the HMI monitoring window, it is possible to monitor and edit the parameter values. In order to load this window, it is necessary only to press the monitoring key on the HMI . In the same manner as in the online monitoring, in this moment the WLP will try to establish the communication with the board by testing the communication with it, and it will perform the same operations previously described.

The monitoring box via HMI has the following aspect:

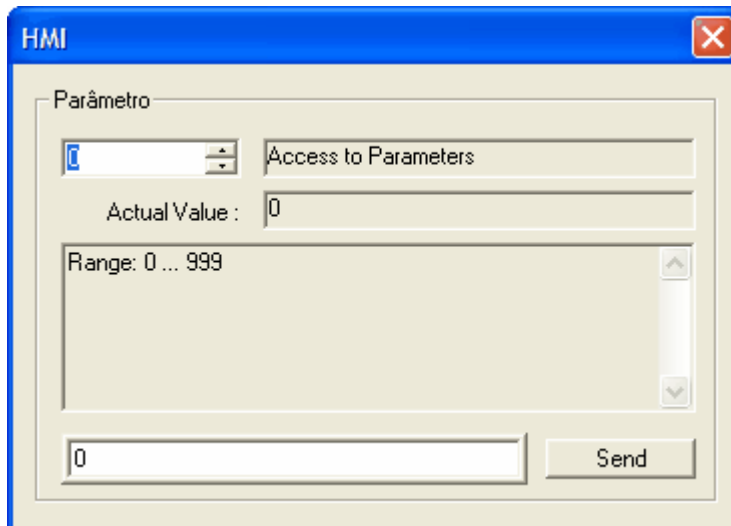

5.10 Force Inputs/Outputs

Through the force inputs/outputs monitoring window, it is possible to force the inputs/outputs value of the drive or board. In order to load this window, it is necessary only to press the force inputs/outputs button . In the same manner as in the online monitoring, in this moment the WLP will try to establish the communication with the board by testing the communication with it, and it will perform the same operations previously described.

The force inputs/outputs window has the following aspect:

SOFTPLC CFW-11 :

Force Inputs/Outputs

Digital Inputs [%IX]

	1	2	3	4	5	6	7	8	9	10	11	12	13	14
Enable :	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
Value :	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐

Digital Outputs [%QX]

	1	2	3	4	5	6	7	8	9
Enable :	☐	☐	☐	☐	☐	☐	☐	☐	☐
Value :	☐	☐	☐	☐	☐	☐	☐	☐	☐

Analog Inputs [%IW]

	Enable	Value
%IW1 :	☐	
%IW2 :	☐	
%IW3 :	☐	
%IW4 :	☐	

Analog Outputs [%QW]

	Enable	Value
%QW1 :	☐	
%QW2 :	☐	
%QW3 :	☐	
%QW4 :	☐	

Apply

Close

PLC11-01 and PLC11-02:

Force Inputs/Outputs

Digital Inputs [%IX]

	1	2	3	4	5	6	101	102	103	104	105	106	107	108	109
Enable :	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
Value :	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐

Digital Outputs [%QX]

	1	2	3	101	102	103	104	105	106
Enable :	☐	☐	☐	☐	☐	☐	☐	☐	☐
Value :	☐	☐	☐	☐	☐	☐	☐	☐	☐

Analog Inputs [%IW]

	Enable	Value
%IW1 :	☐	
%IW2 :	☐	
%IW101 :	☐	

Analog Outputs [%QW]

	Enable	Value
%QW1 :	☐	
%QW2 :	☐	
:QW101 :	☐	
:QW102 :	☐	

Apply

Close

IMPORTANT


* Only available for SoftPLC CFW-11, PLC11-01 and PLC11-02.

5.11 General Information (Online)

Through the general information window, it is possible to monitoring the general information of the board.

In order to load this window, it is necessary only to press the general information button . In the same manner as in the online monitoring, in this moment the WLP will try to establish the communication with the board by testing the communication with it, and it will perform the same operations previously described.


The general information window has the following aspect:

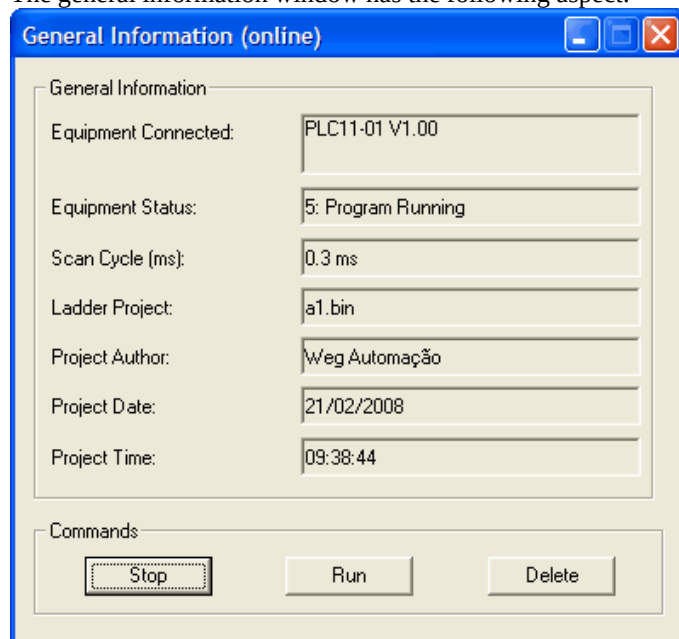

5.12 Parameters Value Table

It is a tool that allows to read the values of the parameters of the board, clicking on "Upload" button. Also it is possible to transfer values from the list of the dialog to the board clicking on "Download" button. This list can be edited, saved to a file or loaded from a file ".par".

Below follow an exemple of a reading process of the parameters values.

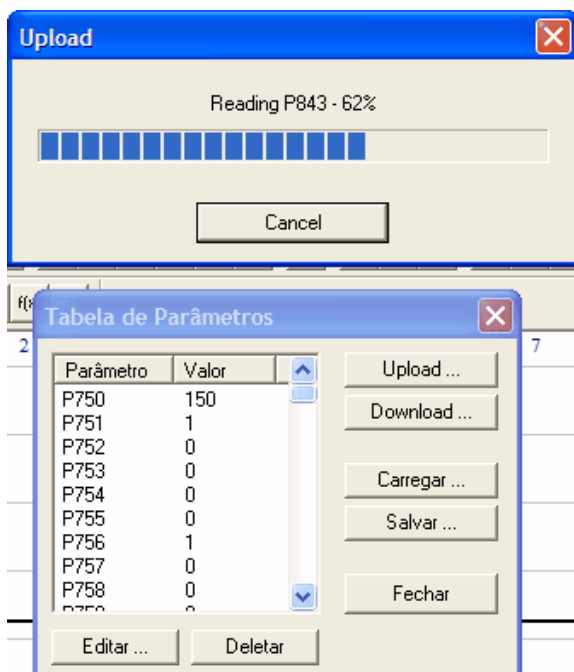

6 Communications

6.1 General Review

Comunicação :

[Download](#) ⁶³

[Upload](#) ⁶³

[Online Monitoring](#) ⁶³

[Variable Monitoring](#) ⁶⁴

[Trend of variables](#) ⁶⁴

[Inputs/Outputs Monitoring](#) ⁶⁵

[Monitoring via the HMI](#) ⁸³

[Config](#) ⁶⁶

[Serial Cable](#) ⁸⁷


[Installing/Uninstalling USB Driver](#) ⁸⁸

6.2 Serial Cable

XC7 Connector		Function	Specification
1	5VDC	5VDC supply	Current capacity: 50mA
2	RTS	Request to send	
3	GND	Reference	
4	RX	Receives	
5	GND	Reference	
6	TX	Transmits	

CONNECTION

The figure below shows how must be done the RS-232 link (point to point) between PC and drive.

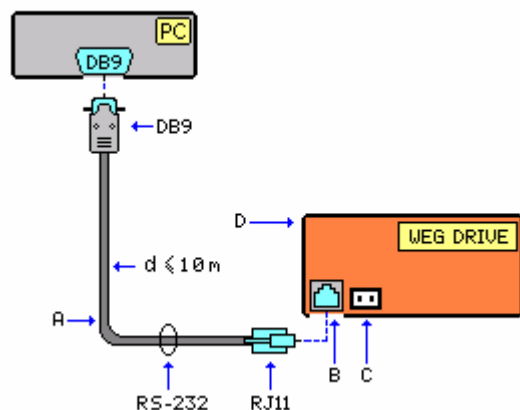


A - cable to RS-232

B - connector X4

D - Drive WEG

CABLE

The figure below identify the parts of the cable used to RS-232.

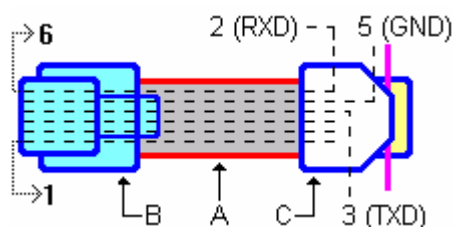

A - flat cable 6 wires (only 2, 3 and 5 pins of the DB9 connector are used)
maximum size 10m.

B - X4 connector RJ-11 (6x6)

C - female DB9 connector

Signal	PC (DB9)	Drive (XC7)
RXD	2	6
TXD	3	4
GND	5	5

6.3 Installing/Uninstalling USB Driver

INSTALLING

The procedure below explains the method of installing the USB driver onto the PC, to establish communication between the PC and drives through the USB port. Read it thoroughly before setting up the hardware/software.

- Close all applications on your PC. If you are using an anti-virus or firewall software, close them (or disable their function).
- After connecting the drive to the USB port of PC, Windows will find a new hardware. The Found New Hardware Wizard will launch. The operational system will ask you for necessary drivers. Choose Install from a list or specific location (Advanced) and click Next.
- Ensure the Search for the best driver in these locations and Include this location in the search boxes are

both checked.

- Click Browse. Now you need to enter the path to the driver. Folder "C:\Weg\WLP VX.YZ\DRIVER_USB" contains driver. Choose it and click Next.
- If the location you specified is correct, Windows will locate the drivers and proceed with the installation.
- After Windows has installed the necessary drivers, you will be notified by a window indicating that the wizard has finished installing the software. Click Finish to complete the installation process.

NOTE !

"C:\Weg\WLP VX.YZ\" is the folder where WLP is installed.

INSTALLATION CHECK

You can check if the installation was succesful from device manager (drive needs to be connected to the PC).

- To run device manager, click Start , click Run , type devmgmt.msc, and then click OK. Another way to reach device manager is by clicking on Settings > Control Panel > System > Hardware > Device Manager.
- In the device manager window that appears, near the bottom of the list you should find the entry USBIO controlled devices containing WEG USBIO R02. This indicates that the installation was successful.

UNINSTALLATION

- Connect the drive to the PC.
- Open the device manager and expand the entry USBIO controlled devices by clicking the + sign.
- Now right-click the WEG USBIO R02 and select Uninstall.
- You will be prompted to confirm the uninstall. Answer by clicking OK.
- Windows will uninstall the driver and then you can disconnect the drive from the PC.

 
Reconnecting the drive will start over the installation process described previously in Installing USB Driver.

7 Language

7.1 Introduction


7.1.1 Element Structure

CONTACT



The contact is a Boolean element that transfers the value to the horizontal link at the right side, which is equal to Boolean AND of the horizontal link value at the left side with proper input, output function and associated Boolean variable memory. The contact does not modify the value of the associated Boolean variable.

 COIL




The coil is a Boolean element that transfers the value contained at its input to its output and stores the current value. It can be used only as the last element of the logic.

FUNCTION BLOCK

The Function Block (FB) is part of a packed control program that may be used in different parts of the same

or in different programs. The FB function block provides a software solution for some small problems, such as for the creation of a timer pulse, or it can provide a control for a larger part of an equipment or machine, for example, the control of a pressure valve.

Comparisons have been made between the FB and the objects present programming oriented by objects. However this concept may be easily understood through the analogy with the hardware. In many cases, the FB can be compared with integrated circuits.

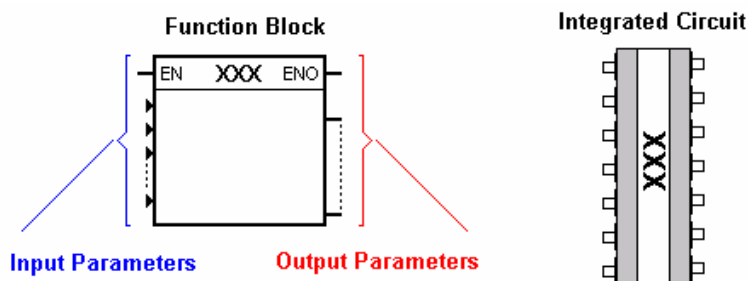

EN - Boolean variable indicates if the operation defined by a function can be executed or not.

ENO - Boolean variable indicates if the operations are executed successfully or not.

In short, these Boolean inputs allow the power flow through the block.

7.1.2 Data Types

Address Table PLC1, PLC2, POS2, SOFTPLC CFW-11 and SOFTPLC SSW-06:

DATA TYPE	BOARDS									
	PLC1 V2.0X CFW-09		PLC2 V1.5X CFW-09		POS2 V1.6X SCA-05		SOFTPLC V2.0X CFW-11		SOFTPLC V1.4X SSW-06	
	[First] [Last]	Qty	[First] [Last]	Qty	[First] [Last]	Qty	[First] [Last]	Qty	[First] [Last]	Qty
Retentive Bit Markers	%MX1000 %MX1671	672	%MX1000 %MX1671	672	%MX1000 %MX1671	672	-	-	-	-
Volatile Bit Markers	%MX2000 %MX3407	1308	%MX2000 %MX3407	1308	%MX2000 %MX3407	1308	%MX5000 %MX6099	1100	%MX5000 %MX6099	1100
Retentive Word Markers	%MW6000 %MW6099	100	%MW6000 %MW6099	100	%MW6000 %MW6099	100	-	-	-	-
Volatile Word Markers	%MW7000 %MW7649	650	%MW7000 %MW7299	300	%MW7000 %MW7649	650	%MW8000 %MW8199	200	%MW8000 %MW8199	200
System Bit Markers (1) 	%SX0 %SX2	2	%SX0 %SX3	4	%SX0 %SX3	3	%SX3000 %SX3040	21	%SX3000 %SX3030	21
System Word Markers (1) 	%SW0 %SW7	7	%SW0 %SW7	8	%SW0 %SW7	7	%SW3000 %SW3002	3	%SW3003 %SW3005	2
Retentive Float Markers	%M95000 %MF9524	25	%M95000 %MF9524	25	%M95000 %MF9524	25	-	-	-	-
Volatile Float Markers	%MF9000 %MF9174	175	%MF9000 %MF9174	175	%MF9000 %MF9174	175	%MF9000 %MF9199	200	-	-

DATA TYPE	BOARDS									
	PLC1 V2.0X CFW-09		PLC2 V1.5X CFW-09		POS2 V1.6X SCA-05		SOFTPLC V2.0X CFW-11		SOFTPLC V1.4X SSW-06	
	[First] [Last]	Qty	[First] [Last]	Qty	[First] [Last]	Qty	[First] [Last]	Qty	[First] [Last]	Qty
User Parameters	%UW800 %UW899	100	%UW800 %UW899	100	%UW800 %UW899	100	%UW1010 %UW1049	40	%UW952 %UW969	18
System Parameters	%PW750 %PW799	50	%PW750 %PW799	50	%PW750 %PW799	50	%PW0 %PW1009	1100	%PW0 %PW950	951
Drive Parameters	%PD0 %PD749	750	%PD0 %PD749	750	%PD0 %PD749	750	-	-	-	-
Board's Digital Inputs	%IX1 %IX9	9	%IX1 %IX9	9	%IX1 %IX9	9	-	-	-	-
Drive's Digital Inputs	%IX101 %IX106	6	%IX101 %IX106	6	%IX101 %IX106	6	%IX1 %IX14	14 (3) 97	%IX1 %IX6	6
Board's Digital Outputs	%QX1 %QX6	6	%QX1 %QX6	6	%QX1 %QX6	6	-	-	-	-
Drive's Digital Outputs	%QX101 %QX103	3	%QX101 %QX103		%QX101 %QX103	3	%QX1 %QX11	11 (3) 97	%QX1 %QX3	3
Board's Analog Inputs	-	-	%IW1	1	%IW1	1	-	-	-	-
Drive's Analog Inputs	%IW101 %IW102	2	%IW101 %IW102	2	%IW101 %IW102	2	%IW1 %IW4	4 (3) 97	-	-
Board's Analog Outputs	-	-	%QW1 %QW2	2	-	-	-	-	-	-
Drive's Analog Outputs	%QW101 %QW102	2	%QW101 %QW102	2	%QW101 %QW102	2	%QW1 %QW4	4 (3) 97	%QW1 %QW2	2
USERFB Parameters	%PM0 %PM31	32	%PM0 %PM31	32	%PM0 %PM31	32	-	-	-	-
Read Words (2) 96	-	-	%RW0 %RW31	32	-	-	-	-	-	-
Write Words (2) 96	-	-	%WW0 %WW31	32	-	-	-	-	-	-
Read Bytes (2) 96	-	-	%RB0 %RB31	32	-	-	-	-	-	-

DATA TYPE	BOARDS									
	PLC1 V2.0X CFW-09		PLC2 V1.5X CFW-09		POS2 V1.6X SCA-05		SOFTPLC V2.0X CFW-11		SOFTPLC V1.4X SSW-06	
	[First] [Last]	Qty	[First] [Last]	Qty	[First] [Last]	Qty	[First] [Last]	Qty	[First] [Last]	Qty
Write Bytes (2) 	-	-	%WB0 %WB31	32	-	-	-	-	-	-
CANOpen Status (2) 	-	-	%RS0 %RS63	64	-	-	-	-	-	-
CANOpen Contol (2) 	-	-	%WC0 %WC1	2	-	-	-	-	-	-

Address Table PLC11-01, PLC11-02, SRW01-PTC, SRW01-RCD and SCA06:

DATA TYPE	BOARDS									
	PLC11-01 V1.4X PLC11-02 V1.4X CFW-11		SRW01-PTC V4.0X SRW01-RCD V4.0X		SCA06 V1.0X		-		-	
	[First] [Last]	Qty	[First] [Last]	Qty	[First] [Last]	Qty				
Retentive Bit Markers	%MX6100 %MX6483	384	-	-	%MX6000 %MX7999	2000 (4) 97				
Volatile Bit Markers	%MX6500 %MX7987	1488	%MX6100 %MX7507	1408	%MX8000 %MX9999	2000 (4) 97				
Retentive Word Markers	%MW8200 %MW8399	-	-	-	%MW1200 0 %MW1299 9	1000 (4) 97				
Volatile Word Markers	%MW8400 %MW8999	600	%MW8200 %MW8849	650	%MW1300 0 %MW1499 9	2000 (4) 97				
System Bit Markers (1) 96	%SX3000 %SX3111	25	%SX3000 %SX3006	5	%SX3064 %SX3070	4				
System Word Markers (1) 96	%SW3300 %SW3404	9	%SW3300	1	%SW3404 %SW3408	3				
Retentive Float Markers	%M92000 %MF9399	200	-	-	%MF16000 %MF16499	500 (4) 97				
Volatile Float Markers	%MF9400 %MF9999	600	%MF9000 %MF9174	175	%MF17000 %MF17999	1000 (4) 97				
Retentive Double Markers	-	-	-	-	%MD18000 %MD18249	250 (4) 97				
Volatile Double Markers	-	-	-	-	%MD19000 %MD19499	500 (4) 97				
User Parameters	%UW1300 %UW1499	200	%UW800 %UW899	100	%UW800 %UW999	200				
System Parameters	%PW1200 %PW1299	100	%PW0 %PW799	800	%PW750 %PW799	50				
Drive Parameters	%PD0 %PD1049	1050	-	-	%PD0 %PD749	750				
Board's Digital Inputs	%IX101 %IX109	9	%IX1 %IX4	4	-	-				
Drive's Digital Inputs	%IX1 %IX6	6	-	-	%IX1 %IX3	3				

DATA TYPE	BOARDS									
	PLC11-01 V1.4X PLC11-02 V1.4X CFW-11		SRW01-PTC V4.0X SRW01-RCD V4.0X		SCA06 V1.0X		-		-	
	[First] [Last]	Qty	[First] [Last]	Qty	[First] [Last]	Qty				
Expansion's Digital Inputs	-	-	-	-	%IX101 %IX312	36				
Board's Digital Outputs	%QX101 %QX106	6	%QX1 %QX4	4	-	-				
Drive's Digital Outputs	%QX1 %QX3	3	-	-	%QX1 %QX1	1				
Expansion's Digital Outputs	-	-	-	-	%QX101 %QX306	18				
Board's Analog Inputs	%IW101	1	-	-	-	-				
Drive's Analog Inputs	%IW1 %IW2	2	-	-	%IW1 %IW1	1				
Expansion's Analog Inputs					%IW2 %IW2	1				
Board's Analog Outputs	%QW101 %QW102	2	-	-	-	-				
Drive's Analog Outputs	%QW1 %QW2	2	-	-	-	-				
Expansion's Analog Outputs	-	-	-	-	-	-				
USERFB Parameters	%PM0 %PM31	32	%PM0 %PM31	32	%PM0 %PM31	32				
Read Words (2) 	%RW4200 %RW4299	100	-	-	-	-				
Write Words (2) 	%WW4600 %WW4699	100	-	-	-	-				
Read Bytes (2) 	%RB4400 %RB4499	100	-	-	-	-				
Write Bytes (2) 	%WB4800 %WB4899	100	-	-	-	-				

DATA TYPE	BOARDS									
	PLC11-01 V1.4X PLC11-02 V1.4X CFW-11		SRW01-PTC V4.0X SRW01-RCD V4.0X		SCA06 V1.0X		-		-	
	[First] [Last]	Qty	[First] [Last]	Qty	[First] [Last]	Qty				
CANOpen Status (2) ⁹⁶	%RS4000 %RS4127	128	-	-	-	-				
CANOpen Control (2) ⁹⁶	%WC4136 %WC4137	2	-	-	-	-				

Address Table CFW700, CFW701, CTW900:

DATA TYPE	CARTÕES / EQUIPAMENTOS					
	CFW700		CFW701		CTW900	
	[First] [Last]	Qty	[First] [Last]	Qty	[First] [Last]	Qty
Retentive Bit Markers	-	-	-	-	-	-
Volatile Bit Markers	%MX5000 %MX6099	1100	%MX5000 %MX6099	1100	%MX5000 %MX6099	1100
Retentive Word Markers	-	-	-	-	-	-
Volatile Word Markers	%MX8000 %MX8199	200	%MX8000 %MX8199	200	%MX8000 %MX8199	200
System Bit Markers (1) ⁹⁶	%SX3000 %SX3040	23	%SX3000 %SX3040	23	%SX3000 %SX3040	28
System Word Markers (1) ⁹⁶	%SW3000 %SW3024	13	%SW3000 %SW3024	13	%SW3000 %SW3010	8
Retentive Float Markers	-	-	-	-	-	-
Volatile Float Markers	%MF9000 %MF9199	200	%MF9000 %MF9199	200		
Retentive Double Markers	-	-	-	-	-	-
Volatile Double Markers	-	-	-	-	-	-
User Parameters	%UW1010 %UW1059	50	%UW1010 %UW1059	90	%UW1010 %UW1059	50
System Parameters	%PW1000 %PW1003	4	%PW1000 %PW1003	4	%PW1000 %PW1002	3
Drive Parameters	%PD0000 %PD0999	1000	%PD0000 %PD0999	100	%PD0000 %PD0999	100
Board's Digital	-	-	-	-	-	-

Inputs						
Drive's Digital Inputs	%IX1 %IX8	8	%IX1 %IX8	8	%IX1 %IX8	8
Expansion's Digital Inputs	-	-	-	-	-	-
Board's Digital Outputs	-	-	-	-	-	-
Drive's Digital Outputs	%QX1 %QX5	5	%QX1 %QX5	5	%QX1 %QX5	5
Expansion's Digital Outputs	-	-	-	-	-	-
Board's Analog Inputs	-	-	-	-	-	-
Drive's Analog Inputs	%IW1 %IW2	2	%IW1 %IW3	3	%IW1 %IW4	4
Expansion's Analog Inputs	-	-	-	-	-	-
Board's Analog Outputs	-	-	-	-	-	-
Drive's Analog Outputs	%QW1 %QW2	2	%QW1 %QW2	2	%QW1 %QW4	4
Expansion's Analog Outputs	-	-	-	-	-	-
USERFB Parameters	%PM0 %PM31	32	%PM0 %PM31	32	%PM0 %PM31	32
Read Words (2) 	-	-	-	-	-	-
Write Words (2) 	-	-	-	-	-	-
Read Bytes (2) 	-	-	-	-	-	-
Write Bytes (2) 	-	-	-	-	-	-
CANOpen Status (2) 	-	-	-	-	-	-
CANOpen Control (2) 	-	-	-	-	-	-

(1) Verify [system marker function](#) 

(2) Refer to the WSCAN manual (WEG Software CANOpen Config) for further information.

- (3) With expansion modules
- (4) The amount of markers is dynamic according of user need, but included a total of 2000 bytes of retentive memory and 7344 bytes of volatile memory, which will also be used for the internal variables of the blocks.

7.1.3 Functions of the system markers

Functions of the system markers

- [CFW-11](#) ⁹⁹
- [CFW700](#) ¹⁰¹
- [CFW701](#) ¹⁰¹
- [CTW900](#) ¹⁰²
- [PLC1](#) ⁹⁷
- [PLC2](#) ⁹⁷
- [PLC11-01 e PLC11-02](#) ¹⁰⁰
- [POS2](#) ⁹⁸
- [SRW01-PTC](#) ¹⁰⁰
- [SRW01-RCD](#) ¹⁰¹
- [SCA06](#) ¹⁰¹
- [SSW06](#) ⁹⁹
- [SSW7000](#) ⁹⁷

PLC1 :

MARKER	READING FUNCTION	WRITING FUNCTION
%SX0	Drive Enabling Return	Drive Enable
%SX2	-	Fatal Error Reset
%SX3	Analog Input Alarm	-
%SW0	Drive Speed Return [rpm]	-
%SW1	Drive Speed Return [13 bits]	-
%SW2	-	Generate User Error
%SW3	Board Error Return	-
%SW4 ⁹⁷	-	Drive Logic Command
%SW5 ⁹⁸	Drive Logic State Return	-
%SW7	Reference Speed Return [rpm]	-

PLC2 :

MARKER	READING FUNCTION	WRITING FUNCTION
%SX0	Drive Enabling Return	Drive Enable
%SX1	Motor PTC Sensor Input	-
%SX2	-	Fatal Error Reset
%SX3	Analog Input Alarm	-
%SW0	Drive Speed Return [rpm]	-
%SW1	Drive Speed Return [13 bits]	-
%SW2	-	Generate User Error
%SW3	Board Error Return	-
%SW4 ⁹⁷	-	Drive Logic Command
%SW5 ⁹⁸	Drive Logic State Return	-
%SW6	Encoder Input Speed Return [rpm]	-
%SW7	Reference Speed Return [rpm]	-

%SW4 Drive Logic Command (PLC1/PLC2) :

The Word that defines the logic command is formed by 16 bits, 8 high bits and 8 low bits, having the following construction:

High bits - select the function to be activated when set to 1.

Bit 15 - Drive Error Reset;

Bit 14 - No function;

Bit 13 - Save P169/P170 parameter modifications in theEEPROM;

Bit 12 - Local/Remote command;

Bit 11 - JOG command;

Bit 10 - Direction of rotation;

Bit 09 - General Enabling;

Bit 08 - Start/Stop.

Low bits - determine the desired status for the functions selected with the high bits.

Bit 7 - Drive Error Reset: every transition from 01 causes thedrive errors to be reset (except for E24, E25, E26 and E27);

Bit 6 - No function / Stop detection. It is not necessary to activate the corresponding high bit (refer to parameter P310 description);

Bit 5 - Save P169/P170 in the EEPROM: 0 = Save, 1 = Not to save;

Bit 4 - Local/Remote command: 0 = Local, 1 = Remote;

Bit 3 - JOG command: 0 = Inactive, 1 = Active;

Bit 2 - Direction of rotation: 0 = Counter clockwise, 1 = Clockwise;

Bit 1 - General Enabling: 0 = Disabled, 1 = Enabled;

Bit 0 - Start/Stop: 0 = Stop, 1 = Start.

👉NOTES !

- The drive will only execute the low bit command if the corresponding high bit is set to 1 (one). If the high bit is set to 0 (zero) then the drive will disregard the corresponding low bit value.

- When P221 = 11 (local reference via PLC) and in local mode, or P222 = 11 (remote reference via PLC) and in remote mode, then the bits 0 and 2 (Start/Stop and Direction of Rotation) have no function. In this moment the Start/Stop and Direction of Rotation commands are defined exclusively by the movement and positioning function blocks of the PLC board. In this situation the speed reference will enter in the drive total reference, so that the ramp parameters P100, P101, P102 and P103 have no effect, and the ramps are being generated by the movement and positioning function blocks.

- When P224 = 4 (Local Start/Stop via PLC) and in local mode, or P227 = 4 (Remote Start/Stop via PLC) and in remote mode, then the logic command bit 1 and the system marker %SX0 have the same function, enabling the drive.

%SW5 Drive Logic Status Return (PLC1/PLC2) :

The word that defines the logic status is formed by 16 bits, 8 high bits and 8 low bits, having the following construction:

High bits -indicate the status of the associated function;

Bit 15 - Active error: 0 = No, 1 = Yes;

Bit 14 - PID regulator: 0 = Manual, 1 = Automatic;

Bit 13 - Undervoltage: 0 = No, 1 = with;

Bit 12 - Local/Remote command: 0 = Local, 1 = Remote;

Bit 11 - Jog command: 0 = Inactive, 1 = Active;

Bit 10 - Direction of Rotation: 0 = Counter clockwise, 1 = Clockwise;

Bit 09 - General Enabling: 0 = Disabled, 1 = Enabled;

Bit 08 - Start/Stop: 0 = Start, 1 = Stop;

Low bits - indicate the error code number.

POS2 :

MARKER	READING FUNCTION	WRITING FUNCTION
%SX0	Drive Enabling Return	Drive Enable
%SX2	-	Fatal Error Reset
%SX3	Analog Input Alarm	-
%SW0	Drive Speed Return [rpm]	-
%SW1	Drive Speed Return [13 bits]	-
%SW2	-	Generate User Error
%SW3	Board Error Return	-
%SW5	Drive Logic State Return	-
%SW6	Encoder Input Speed Return [rpm]	-
%SW7	Reference Speed Return [rpm]	-
%SW8	Virtual Axis Speed Return [rpm]	-

%SW5 Drive Logic Status Return (POS2) :

It indicates the servo drive actual status, according to below :

0 = Servo drive disabled and without error.

1 = Servo drive ready (enabled and without error).

2 = Servo drive in error status. The HMI display shows the error code.

SOFTPLC CFW-11 :

MARKER	READING FUNCTION	WRITING FUNCTION
%SX3000	General Enabling active	-
%SX3001	-	General Enabling
%SX3002	Ramp Enabled	-
%SX3003	-	Start/Stop
%SX3004	Speed Direction	-
%SX3005	-	Speed Direction
%SX3006	JOG	-
%SX3007	-	JOG
%SX3008	Local/Remote	-
%SX3009	-	Local/Remote
%SX3010	Fault	-
%SX3011	-	Error Reset
%SX3012	Undervoltage	-
%SX3014	PID Operation	-
%SX3016	Alarm	-
%SX3018	Configuration Mode	-
%SX3032	HMI Key "1"	-
%SX3034	HMI Key "0"	-
%SX3036	HMI Key "Revert Speed Direction"	-
%SX3038	HMI Key "Local/Remote"	-
%SX3040	HMI Key "JOG"	-
%SW3300	Motor Speed [13 bits]	-
%SW3301	-	Speed Reference [13 bits]
%SW3302	Motor Synchronous Speed [rpm]	-

SOFTPLC SSW-06 :

MARKER	READING FUNCTION	WRITING FUNCTION
%SX3000	Rotating Motor	-
%SX3001	-	1=Start/0=Stop
%SX3002	General Enabling active	-
%SX3003	-	1=General Enabling
%SX3004	In Jog	-
%SX3005	-	1=Jog
%SX3006	In Acceleration	-
%SX3007	-	0=Clockwise/1=Counterclockwise
%SX3008	In Current Limit	-

MARKER	READING FUNCTION	WRITING FUNCTION
%SX3009	-	0=Local/1=Remote
%SX3010	At Full Voltage	-
%SX3012	With Alarm	-
%SX3014	In Deceleration	-
%SX3015	-	1=Error Reset
%SX3016	In Remote	-
%SX3018	In Braking	-
%SX3020	In change of Speed Direction	-
%SX3034	In Counterclockwise sense	-
%SW3303	-	User Fault
%SW3305	-	User Alarm

PLC11-01 and PLC11-02:

MARKER	READING FUNCTION	WRITING FUNCTION
%SX3000	General Enabling active	-
%SX3002	Ramp Enabled	-
%SX3004	Speed Direction	-
%SX3006	JOG	-
%SX3008	Local/Remote	-
%SX3010	Fault	-
%SX3012	Undervoltage	-
%SX3014	PID Operation	-
%SX3016	Alarm	-
%SX3018	Configuration Mode	-
%SX3032	HMI Key "1"	-
%SX3034	HMI Key "0"	-
%SX3036	HMI Key "Revert Speed Direction"	-
%SX3038	HMI Key "Local/Remote"	-
%SX3040	HMI Key "JOG"	-
%SX3064	Blinker 2Hz	-
%SX3066	Pulse Stop/Run	-
%SX3068	Always 0	-
%SX3070	Always 1	-
%SX3101	-	General Enabling
%SX3103	-	Start/Stop
%SX3105	-	Speed Direction
%SX3107	-	JOG
%SX3109	-	Local/Remote
%SX3111	-	Error Reset
%SW3300	Motor Speed [13 bits]	-
%SW3302	Motor Synchronous Speed [rpm]	-
%SW3306	Speed Reference [rpm]	-
%SW3308	Alarm	-
%SW3310	Fault	-
%SW3400	Speed - Auxiliar Encoder	-
%SW3402	Control Mode	-
%SW3404	Scan Count	-

SRW01-PTC :

MARKER	READING FUNCTION	WRITING FUNCTION
%SX3000	Reset	Reset
%SX3001	Local Command 1	Local Command 1
%SX3002	Local Command 2	Local Command 2
%SX3003	Local Command 3	Local Command 3
%SX3005	Motor Running	-
%SX3006	Local/Remote	Local/Remote

MARKER	READING FUNCTION	WRITING FUNCTION
%SW3300	PTC	-

SRW01-RCD :

MARKER	READING FUNCTION	WRITING FUNCTION
%SX3000	Reset	Reset
%SX3001	Local Command 1	Local Command 1
%SX3002	Local Command 2	Local Command 2
%SX3003	Local Command 3	Local Command 3
%SX3005	Motor Running	-
%SX3006	Local/Remote	Local/Remote

SCA06 :

MARKER	READING FUNCTION	WRITING FUNCTION
%SX3064	Blinker 2Hz	-
%SX3066	Stop/Run Pulse	-
%SX3068	Always 0	-
%SX3070	Always 1	-
%SW3404	Scan Cycles Elapsed	-
%SX3406	Axis Status Real	-
%SW3408	Axis Status Virtual	-

CFW700 e CFW701:

MARKER	READING FUNCTION	WRITING FUNCTION
%SX3000	General Enabling	-
%SX3001	-	General Enabling
%SX3002	Motor Running	-
%SX3003	-	Start/Stop
%SX3004	Speed Direction	-
%SX3005	-	Speed Direction
%SX3006	JOG	-
%SX3007	-	JOG
%SX3008	Local/Remoto	-
%SX3009	-	Local/Remote
%SX3010	In Fault	-
%SX3011	-	Fault Reset
%SX3012	In Subvoltage	-
%SX3014	PID Operation Mode	-
%SX3016	In Alarm	-
%SX3018	In Config Mode	-
%SX3020	Active Ramp	-
%SX3021	-	2nd Rampa
%SX3022	State of Command Run (Only for CFW700)	-
%SX3023	-	Force Run SoftPlc
%SX3024	In Quick Stop	-
%SX3026	In Bypass (Only for CFW701)	-
%SX3028	In Fire Mode (Only for CFW701)	-
%SX3032	Start "1" Keyborad	-
%SX3033	-	Torque Reference
%SX3034	Stop "0" Keyboard	-
%SX3036	Speed Direction Keyboard	-
%SX3038	"Local/Remote" Keyboard	-
%SX3040	"JOG" Keyboard	-
%SW3300	Motor Speed [13 bits]	-
%SW3302	Synchronous Motor Speed [rpm]	-

MARKER	READING FUNCTION	WRITING FUNCTION
%SW3304	Motor Speed [rpm]	-
%SW3306	Speed Reference [rpm]	-
%SW3308	Alarm	-
%SW3310	Fault	-
%SW3312	Id Current Flux [13 bits]	-
%SW3314	Iq Current Torque [13 bits]	-
%SW3316	Id* Flux Current Reference [13 bits]	-
%SW3318	Iq* Torque Current Reference [13 bits]	-
%SW3320	Inverter Nominal Current (HD) [A x10]	-
%SW3322	Motor current without filter (P003) [A x10]	-
%SW3324	Motor torque without filter [% x10]	-

CTW900:

MARKER	READING FUNCTION	WRITING FUNCTION
%SX3000	Ready	-
%SX3001	-	General Enable
%SX3002	Run	-
%SX3003	-	Start
%SX3004	Counter-Clockwise	-
%SX3005	-	Conter-Clockwise
%SX3006	JOG	-
%SX3007	-	JOG
%SX3008	Remote	-
%SX3009	-	Remote
%SX3010	With Fault	-
%SX3011	-	Fault Reset
%SX3012	Subvoltage	-
%SX3013	-	Quickly Stop
%SX3014	Changing speed direction	-
%SX3016	With Alarm	-
%SX3018	In Config Mode	-
%SX3020	2nd Ramp	-
%SX3021	-	2nd Ramp Activate
%SX3022	Blocked	-
%SX3024	On Acceleration	-
%SX3026	On Deceleration	-
%SX3028	Auto Tunning	-
%SX3032	Start "1" Keyboard	-
%SX3033	-	Torque Reference
%SX3034	Stop "0" Keyboard	-
%SX3036	Speed Direction Keyboard	-
%SX3038	"Local/Remote" Keyboard	-
%SX3040	"JOG" Keyboard	-
%SW3300	Speed Motor [13 bits]	-
%SW3302	Nominal Speed Motor[rpm]	-
%SW3304	Speed Motor [rpm]	-
%SW3306	Speed Reference [rpm]	-
%SW3308	Alarm	-
%SW3310	Fault	-

7.1.4 Compatibility

In order to use the ladder blocks under WLP see the following compatibility table. This table presents which blocks are compatible with each board model.

PLC1, PLC2, POS2, SOFTPLC CFW-11 and SOFTPLC SSW-06:

LADDER BLOCK	BOARDS/EQUIPMENT COMPATIBILITY				
	PLC1 V2.0X CFW-09	PLC2 V1.5X CFW-09	POS2 V1.6X SCA-05	SOFTPLC V2.0X CFW-11	SOFTPLC V1.4X SSW-06
NO CONTACT	✓	✓	✓	✓	✓
NC CONTACT	✓	✓	✓	✓	✓
COIL	✓	✓	✓	✓	✓
NEGATE COIL	✓	✓	✓	✓	✓
SET COIL	✓	✓	✓	✓	✓
RESET COIL	✓	✓	✓	✓	✓
PTS COIS	✓	✓	✓	✓	✓
NTS COIL	✓	✓	✓	✓	✓
INPOS	✓	✓	✓	-	-
INBWG	✓	✓	✓	-	-
SCURVE	✓	✓	✓	-	-
TCURVE	✓	✓	✓	-	-
HOME	✓	✓	✓	-	-
FOLLOW	✓ (1) ¹⁰⁷	✓	✓	-	-
MSCANWEG	✓	✓	✓	-	-
SHIFT	✓	✓	✓	-	-
STOP	✓	✓	✓	-	-
JOG	✓	✓	✓	-	-
SETSPPEED	✓	✓	✓	-	-
TON	✓	✓	✓	✓	✓
CTU	✓	✓	✓	✓	✓
TRANSFER	✓	✓	✓	✓	✓
MATH	✓	✓	✓	✓	✓ (3) ¹⁰⁷
COMP	✓	✓	✓	✓	✓ (3) ¹⁰⁷
SAT	✓	✓	✓	✓	✓ (3) ¹⁰⁷
FUNC	✓	✓	✓	✓	✓ (3) ¹⁰⁷
INT2FLOAT	✓	✓	✓	✓	-
FLOAT2INT	✓	✓	✓	✓	-
PID	✓	✓	✓	✓	-
FILTER	✓	✓	✓	✓	-
AUTOREG	-	-	✓	-	-
RXCANWEG	✓	✓	✓	-	-
CTENC	✓	✓	✓	-	-
USERFB	✓	✓	✓	-	-
MUX	✓	✓	✓	✓	✓
DMUX	✓	✓	✓	✓	✓
IDATA	✓	✓	✓	✓	✓
TCURVAR	✓	✓	✓	-	-

LADDER BLOCK	BOARDS/EQUIPMENT COMPATIBILITY				
	PLC1 V2.0X CFW-09	PLC2 V1.5X CFW-09	POS2 V1.6X SCA-05	SOFTPLC V2.0X CFW-11	SOFTPLC V1.4X SSW-06
QSTOP	✓	✓	✓	-	-
SDO	-	✓ (2) ¹⁰⁷	-	-	-
CAM	-	-	✓	-	-
CALCCAM	-	-	✓	-	-
SPEED	✓	✓	✓	-	-
RTC	-	-	-	✓	-
USERERR	-	-	-	✓	-
REF	-	-	-	✓	-
MMC	-	-	-	-	✓ (5) ¹⁰⁷

PLC11-01, PLC11-02, SRW01-PTC, SRW01-RCD, SCA06, SSW7000 and CFW500:

LADDER BLOCK	BOARDS/EQUIPMENT COMPATIBILITY				
	PLC11-01 V1.4X PLC11-02 V1.4X CFW-11	SRW01-PTC V4.0X SRW01-RCD V4.0X	SCA06 V1.0X	SOFTPLC V1.1X SSW7000	SOFTPLC V1.0X CFW500
NO CONTACT	✓	✓	✓	✓	✓
NC CONTACT	✓	✓	✓	✓	✓
COIL	✓	✓	✓	✓	✓
NEGATE COIL	✓	✓	✓	✓	✓
SET COIL	✓	✓	✓	✓	✓
RESET COIL	✓	✓	✓	✓	✓
PTS COIS	✓	✓	✓	✓	✓
NTS COIL	✓	✓	✓	✓	✓
INPOS	✓	-	-	-	-
INBWG	✓	-	-	-	-
SCURVE	✓	-	-	-	-
TCURVE	✓	-	-	-	-
HOME	✓	-	-	-	-
FOLLOW	✓	-	-	-	-
MSCANWEG	✓	-	-	-	-
SHIFT	✓	-	-	-	-
STOP	✓	-	-	-	-
JOG	✓	-	-	-	-
SETSPED	✓	-	-	-	-
TON	✓	✓	✓	✓	✓
CTU	✓	✓	✓	✓	✓
TRANSFER	✓	✓	✓	✓	✓
MATH	✓	✓	✓ (4) ¹⁰⁷	✓	✓
COMP	✓	✓	✓ (4) ¹⁰⁷	✓	✓
SAT	✓	✓	✓ (4) ¹⁰⁷	✓	✓
FUNC	✓	✓	✓ (4) ¹⁰⁷	✓	✓
INT2FLOAT	✓	✓	✓ (4) ¹⁰⁷	✓	✓
FLOAT2INT	✓	✓	✓ (4) ¹⁰⁷	✓	✓

LADDER BLOCK	BOARDS/EQUIPMENT COMPATIBILITY				
	PLC11-01 V1.4X PLC11-02 V1.4X CFW-11	SRW01-PTC V4.0X SRW01-RCD V4.0X	SCA06 V1.0X	SOFTPLC V1.1X SSW7000	SOFTPLC V1.0X CFW500
PID	✓	-	✓	✓	✓
FILTER	✓	-	✓	✓	✓
AUTOREG	-	-	-	-	-
RXCANWEG	✓	-	-	-	-
CTENC	✓	-	-	-	-
USERFB	✓	✓	✓ (4) ¹⁰⁷	✓	✓
MUX	✓	✓	✓	✓	✓
DMUX	✓	✓	✓	✓	✓
IDATA	✓	-	✓ (4) ¹⁰⁷	✓	✓
TCURVAR	✓	-	-	-	-
QSTOP	✓	-	-	-	-
SDO	✓ (2) ¹⁰⁷	-	-	-	-
CAM	✓	-	-	-	-
CALCCAM	✓	-	-	-	-
SPEED	✓	-	-	-	-
RTC	✓	-	✓	✓	-
USERERR	✓	✓	✓	✓	✓
REF	✓	-	-	-	✓
MMC	-	-	-	-	-
MC_Power	-	-	✓	-	-
MC_Reset	-	-	✓	-	-
MC_MoveAbsolute	-	-	✓	-	-
MC_MoveRelative	-	-	✓	-	-
MC_MoveVelocity	-	-	✓	-	-
MW_IqControl	-	-	✓	-	-
MC_Stop	-	-	✓	-	-
MC_GearIn	-	-	✓	-	-
MC_GearInPos	-	-	✓	-	-
MC_Phasing	-	-	✓	-	-
MC_GearOut	-	-	✓	-	-
MC_StepAbsSwitch	-	-	✓	-	-
MC_StepLimitSwitch	-	-	✓	-	-
MC_StepRefPulse	-	-	✓	-	-
MC_StepDirect	-	-	✓	-	-
MC_FinishHomining	-	-	✓	-	-

CFW700, CFW701 e CTW900:

LADDER BLOCK	BOARDS/EQUIPMENT COMPATIBILITY				
	CFW700 CFW701	CTW900			
NO CONTACT	✓	✓			
NC CONTACT	✓	✓			
COIL	✓	✓			
NEGATE COIL	✓	✓			
SET COIL	✓	✓			
RESET COIL	✓	✓			
PTS COIS	✓	✓			
NTS COIL	✓	✓			
INPOS	-	-			
INBWG	-	-			
SCURVE	-	-			
TCURVE	-	-			
HOME	-	-			
FOLLOW	-	-			
MSCANWEG	-	-			
SHIFT	-	-			
STOP	-	-			
JOG	-	-			
SETSPPEED	-	-			
TON	✓	✓			
CTU	✓	✓			
TRANSFER	✓	✓			
MATH	✓	✓			
COMP	✓	✓			
SAT	✓	✓			
FUNC	✓	✓			
INT2FLOAT	✓	✓			
FLOAT2INT	✓	✓			
PID	✓	✓			
FILTER	✓	✓			
AUTOREG	-	-			
RXCANWEG	-	-			
CTENC	-	-			
USERFB	✓	✓			
MUX	✓	✓			
DMUX	✓	✓			
IDATA	✓	✓			
TCURVAR	-	-			
QSTOP	-	-			
SDO	-	-			
CAM	-	-			
CALCCAM	-	-			
SPEED	-	-			

LADDER BLOCK	BOARDS/EQUIPMENT COMPATIBILITY				
	CFW700 CFW701	CTW900			
RTC	-	✓			
USERERR	✓	✓			
REF	✓	✓			
MMC	-	-			
MC_Power	-	-			
MC_Reset	-	-			
MC_MoveAbsolute	-	-			
MC_MoveRelative	-	-			
MC_MoveVelocity	-	-			
MC_Stop	-	-			
MC_GearIn	-	-			
MC_GearInPos	-	-			
MC_Phasing	-	-			
MC_GearOut	-	-			
MC_StepAbsSwitch	-	-			
MC_StepLimitSwitch	-	-			
MC_StepRefPulse	-	-			
MC_StepDirect	-	-			
MC_FinishHoming	-	-			

- (1) only via CAN protocol
- (2) PLC board enabled as the CANOpen master
- (3) only in integer format
- (4) possibility of operations in double float.
- (5) one block at a ladder and only with optional board IOS6 of SSW06

7.1.5 Types of arguments

POSITION / POSITION OFFSET

The position / offset comprises three parts:

- signal
- number of revolutions
- fraction of revolution

Signal :

Depending on the chosen data type, the signal comprises a data type and an address or a constant value.

The data type of signal may be:

- constant
- user parameter
- bit marker
- digital input

For the constant data type, the value may be:

- positive
- negative

Number of Revolutions :

Depending on the chosen data type, the number of revolutions consists in a data type and an address or a constant value.

The data type may be:

- constant
- user parameter
- word marker

For the constant data type, the value must be programmed according to the unit that has been configured in the project, and the configuration of the field "Fraction of Revolution" is not required.

For the user parameters and the word markers, should be considered for this field the number of revolutions..

Fraction of Revolution :

The fraction of revolution consists only in an address, since it shares the same data type of the field "Number of Revolutions".

When the data type is constant, this value is ignored and only the constant configured in the field "Number of Revolutions".

For the user parameters and the word markers, the considered unit for this field is the pulse number, which may vary between 0 a 65535 pulses, and is equivalent to a range from 0 to 359,99450°.

SPEED / SPEED OFFSET

Depending on the chosen data type, the speed consists in a data type and an address or a constant value.

The speed data type may be:

- constant
- user parameter
- word parameter

For the constant data type, the value should be programmed according to the unit configured in the project.

For the user parameters and the word marker, the unit to be considered for this field is the RPM (rotation per minute).

ACCELERATION / DECELERATION

Depending on the chosen data type, the acceleration/deceleration consists in a data type and an address or just a constant value.

The acceleration/deceleration data type may be:

- constant
- user parameter
- word marker

For the constant data type, the value should be programmed according to the unit configured in the project.

For the user parameters and word markers, the unit to be considered for this field is the RPM/s (rotation per minute/second).

JERK

Depending on the chosen data type, the jerk consists in a data type and an address or constant value.

The jerk data type may be:

- constant
- user parameter

- word marker

For the constant data type, the value should be programmed according to the unit configured in the project. For the user parameters and word markers, the unit to be considered for this field is the RPM/s² (rotation per minute per second square).

MODE

The mode is always constant.

There are two options:

- relative
- absolute

In relative mode it refers to a positioning, starting from its last position. In this case, the direction of rotation of this positioning is given by the signal, i. e., clockwise direction of rotation when positive and counterclockwise direction of rotation, when negative.

The absolute mode refers to the machine zero position, but this zero position may be used only when a zero search (HOME block) has been executed previously.

DIRECTION OF ROTATION

It has 1 data type and 1 address.

The data type can be:

- constant
- bit marker
- digital input
- user parameter

When the data type was constant, we have the following options:

- clockwise
- counter-clockwise

DIRECTION

It has 1 data type and 1 address.

The data type can be:

- constant
- bit marker
- digital input
- user parameter

When the data type was constant, we have the following options:

- opposite
- same

AXIS

It determines for which axis will be generated the speed and/or position reference.

It offers following options:

- **Real** : axis controlled by the drive.
- **Virtual** : axis used by the CAM block as master.

NOTE !

The CAM block and the virtual axis will be only available for the POS2 card with firmware version ≥ 1.50 .

CONTROL

It determines the control type that is used for executing the block.

It offers following options:

- Automatic: as function of the control previously selected for the block.
- Speed
- Position

INTEGER

Depending on the chosen data type, the total part consists in a data type and an address or constant value.
The data type of the integer part may be:

- constant
- word marker
- user parameter

Attention: When the integer part refers to an output result of any block, the constant data type is not allowed.

The limits to integer are :

- maximum = 32767
- minimum = -32768

FLOAT

The float comprises a data type and an address.

The float data type may be:

- float constant
- float marker

Attention: When the float refers to an output result of any block, the float constant data type is not allowed.

The float limits are:

- maximum = 3.402823466e+38F
- minimum = 1.175494351e-38F

LIMITS

The limits consists in 2 parts:

- [integer](#)₁₁₀₁ / [float](#)₁₁₀₁ - maximum
- [integer](#)₁₁₀₁ / [float](#)₁₁₀₁ - minimum

INPUTS VALUES / OUTPUT VALUES

The values consists in 2 parts:

- [integer](#)₁₁₀₁ / [float](#)₁₁₀₁ - input
- [integer](#)₁₁₀₁ / [float](#)₁₁₀₁ - output

CONTROL MODE

It determines the type of reference that will be sent to the drive.

The data type may be:

- constant
- user parameter
- bit marker
- digital input

It offers following options :

- 0 : speed reference;

- 1 : torque current reference.

TORQUE CURRENT

Depending on the chosen data type, the torque current consists in a data type and an address or just a constant value.

The data type may be:

- constant
- user parameter
- word marker
- float marker

The torque current reference is set in percentage of the motor nominal current.

7.1.6 Quick reference

LOGIC

[NOCONTACT - Normally Open Contact](#) ^[113]

[NCCONTACT - Normally Closed Contact](#) ^[113]

[COIL - Coil](#) ^[114]

[NEGCOIL - Negated Coil](#) ^[115]

[SETCOIL - Set Coil](#) ^[116]

[RESETCOIL - Reset Coil](#) ^[117]

[PTSCOIL - Positive Transition Coil](#) ^[118]

[NTSCOIL - Negative Transition Coil](#) ^[119]

POSITIONING BLOCKS

[SCURVE - S Curve](#) ^[125]

[TCURVE - T Curve](#) ^[126]

[HOME - Search Zero Position](#) ^[131]

[TCURVAR - Variable T Curve](#) ^[137]

[CAM - Defined Curve](#) ^[139]

[SHIFT - Shift](#) ^[155]

MOVEMENT BLOCKS

[SETSPEED - Set Speed](#) ^[161]

[SPEED - Speed](#) ^[166]

[JOG - Move](#) ^[164]

[REF - Send Reference](#) ^[168]

STOP BLOCKS

[STOP - Stop](#) ^[120]

[QSTOP - Quick Stop](#) ^[123]

GEAR-BOX BLOCKS

[FOLLOW - Follower](#) ^[171]

[AUTOREG - Automatic Register](#) ^[173]

VERIFY BLOCKS

[INPOS - In Position](#) ^[175]

[INBWG - In Motion](#) ^[177]

PLC BLOCKS

[TON - Timer](#) ^[179]

[RTC - Real Time Clock](#) ^[182]

[CTU - Incremental Counter](#) ^[183]

[PID - PID Control](#)^[186]
[FILTER - First Order Filter](#)^[189]
[CTENC - Encoder Counter](#)^[191]

CALCULATION BLOCKS

[COMP - Comparator](#)^[194]
[MATH - Arithmetic](#)^[195]
[FUNC - Math Function](#)^[202]
[SAT - Saturation](#)^[203]
[MUX - Multiplexer](#)^[204]
[DEMUX - Demultiplexer](#)^[206]

TRANFERENCE BLOCKS

[TRANSFER - Transfer](#)^[207]
[INT2FL - Integer to Float Conversion](#)^[208]
[FL2INT - Float to Integer Conversion](#)^[209]
[IDATA - Indirect Transfer](#)^[210]
[USERERR - User Error](#)^[211]

CAN NETWORK BLOCKS

[MSCANWEG - CANWEG Master](#)^[212]
[RXCANWEG - Read CANWEG](#)^[213]
[SDO - Service Data Object](#)^[213]

OTHER BLOCKS

[USERFB - Subroutine](#)^[216]
[MMC - Multimotor Control](#)^[229]

TEXT

[Comment](#)^[112]

7.2 Texto


7.2.1 Comment

DESCRIPTION

To change the comment, double-click with the mouse left button on the comment line. Type the new text and confirm with Ok.

[See](#)^[37] how to insert a comment on WLP


DIALOG

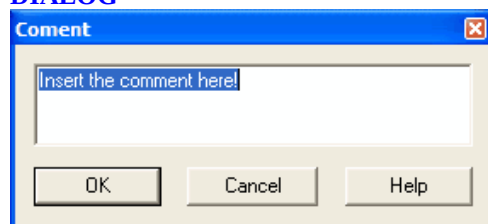

7.3 Contacts

7.3.1 NO CONTACT

 SYMBOL



DESCRIPTION

Consists of 1 input, 1 output and 1 argument.

The argument consists of one data type and one address.

The argument data type may be:


- bit marker
- digital input
- digital output
- user parameter

NOTE: In the user parameter option, the even values correspond to 0, while the odd ones correspond to 1.


OPERATION

When its argument value is 1, it transfers the signal contained in its input to its output. Otherwise it transfers 0 to the output.

CHART

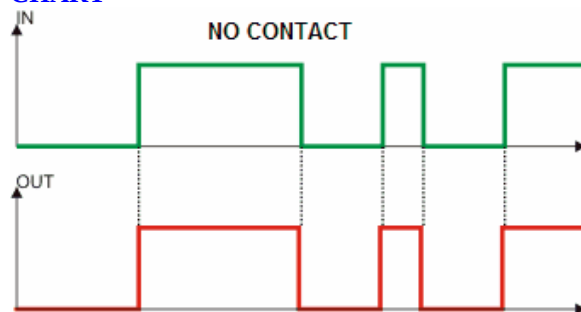

EXAMPLE

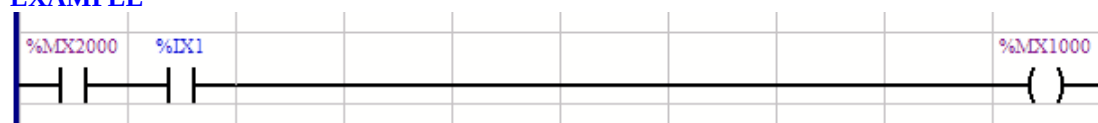

If the bit marker 2000 and the digital input 1 is 0, writes 1 in the bit marker 1000. Otherwise, writes 0.

7.3.2 NC CONTACT

SYMBOL



DESCRIPTION

Consists of 1 input, 1 output and 1 argument.

The argument consists of one data type and one address.

The argument data type may be:


- bit marker
- digital input
- digital output
- user parameter

NOTE: In the user parameter option, the even values correspond to 0, while the odd ones correspond to 1.


OPERATION

When its argument value is 0, it transfers the signal contained in its input to its output. Otherwise it transfers 0 to its output.

CHART

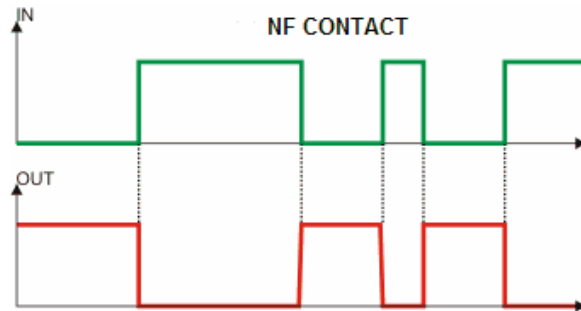

EXAMPLE

 


If the bit marker 2000 and the digital input 1 is 0, writes 1 in the bit marker 1000. Otherwise, writes 0.

7.4 Coils

7.4.1 COIL

 SYMBOL



DESCRIPTION

Consists of 1 input and 1 argument.

The argument comprises one data type and one address.

The argument data type may be:

- bit marker
- digital output
- user parameter


NOTE: In the user parameter option, the current value is not saved in the E2PROM memory, i. e. the last value is not recovered. In addition, the even values correspond to 0 or false and the odd ones correspond to 1

or true.


OPERATION

Transfers the signal contained in its input to its argument.

CHART

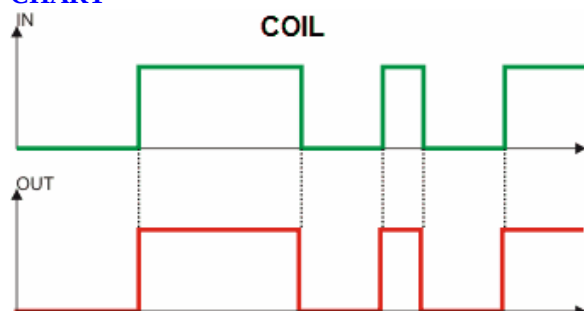

SAMPLE

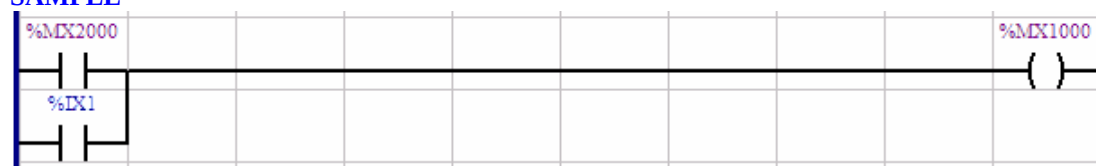

If the bit marker 2000 or the digital input 1 is 1, writes 1 in the bit marker 1000. Otherwise, writes 0.

7.4.2 NEG COIL

SYMBOL



DESCRIPTION

Consists of 1 input and 1 argument.

The argument consists of one data type and one address.

The argument data type may be:



- bit marker
- digital output
- user parameter

NOTE: In the user parameter option, the current value is not saved in the E2PROM memory, i. e., the last value is not restored. In addition, the even values correspond to 0 and the odd ones correspond to 1.

OPERATION

It transfers the negated signal contained in its input to its argument.

CHART

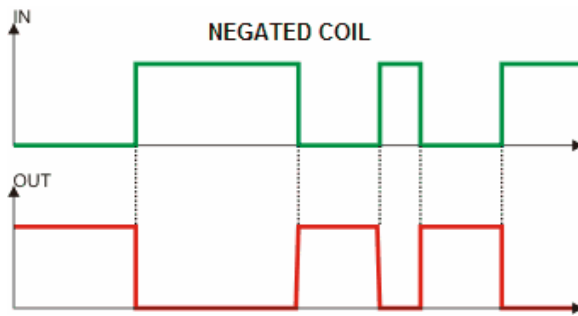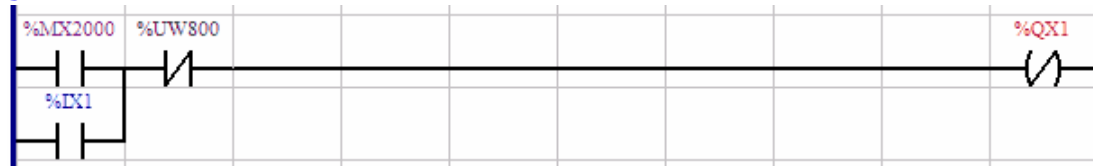**SAMPLE**

If the bit marker 2000 or the digital input 1 is 1, and the user parameter 800 is 0, write 0 to the digital output 1, otherwise, writes 1.

7.4.3 SET COIL

SYMBOL**DESCRIPTION**

Consists of 1 input and 1 argument.

The argument consists of one data type and one address.

The argument data type may be:


- bit marker
- digital output
- user parameter

NOTE: In the user parameter option, the current value is not saved in the E2PROM memory, i. e. the last value is not recovered. In addition, the even values correspond to 0 and the odd ones correspond to 1.


OPERATION

The argument is set, when the input signal is 1. The argument will be reset only when one component "resets coil" is activated.

CHART

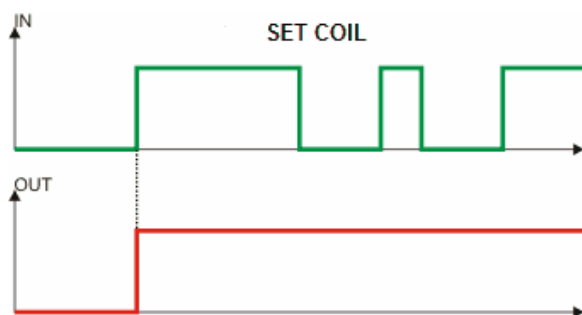

EXAMPLE

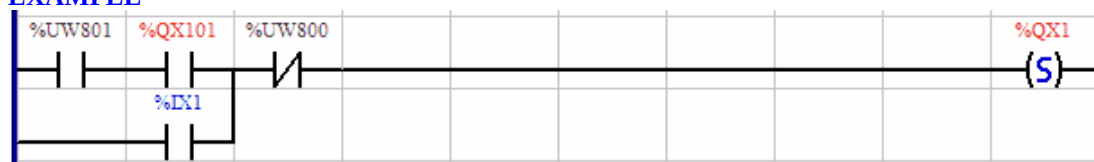

If the user parameter 801 and the digital output 1 of the drive are 1, or the digital input 1 is 1 and the user parameter 800 is 0, it sets the digital output 1. Otherwise, the output value is maintained.

7.4.4 RESET COIL

SYMBOL



DESCRIPTION

Consists of 1 input and 1 argument.

The argument consists of one data type and one address.

The argument data type may be:


- bit marker
- digital output
- user parameter

 
NOTE: In the user parameter option, the current value is not saved in the E2PROM memory, i. e., the last value is not recovered. In addition, the even values correspond to 0 and the odd ones correspond to 1.

OPERATION

When the input signal is 1, the argument is reset. The argument will be set only if a "set coil" component is activated.

CHART

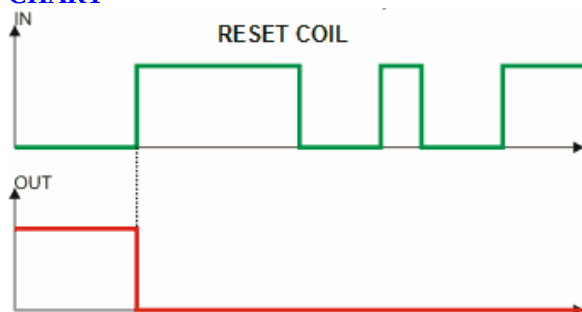

EXAMPLE

If the digital input 1 is 1, resets the user parameter 800. Otherwise, the parameter value is maintained.

7.4.5 PTS COIL**SYMBOL****DESCRIPTION**

Consists of 1 input and 1 argument.

The argument consists of one data type and one address.


 
The argument data type may be:

- bit marker
- digital output
- user parameter

NOTE: In the user parameter option, the current value is not saved in the E2PROM memory, i. e., the last value is not restored. In addition, the even values correspond to 0 or false and the odd ones correspond to 1 or true.

OPERATION


When there is a transition from 0 to 1 at the input signal, the argument is set during the scan cycle. Then the argument is reset, even if its input remains at 1.

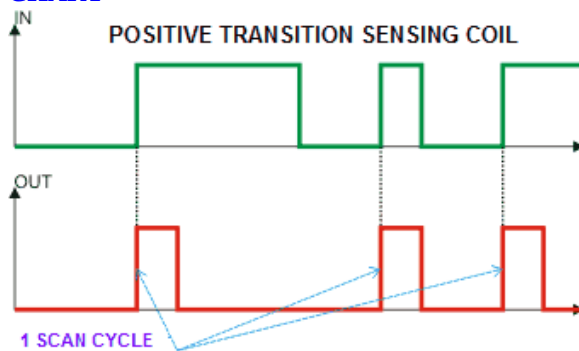CHART**SAMPLE**

When the digital input 1 commutates from 0 to 1, writes 1 for 1 scan cycle into the bit marker 2000.

7.4.6 NTS COIL

 SYMBOL



DESCRIPTION

Consists of 1 input and 1 argument.

The argument consists of one data type and one address.

The argument data type may be:


- bit marker
- digital output
- user parameter

NOTE: In the user parameter option, the current value is not saved in the E2PROM memory, i. e., the last value is not restored. In addition, the even values correspond to 0 or false and the odd ones correspond to 1 or true.


OPERATION

When there is a transition from 1 to 0 at the input signal, the argument is set for one scan cycle. Then the argument is reset, even if its input remains at 0.

CHART

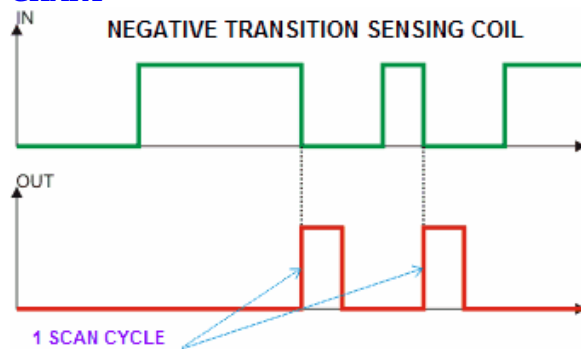

SAMPLE

 


When the digital input 1 commutates from 1 to 0, writes 1 for 1 scan cycle into the bit marker 2000.

7.5 Function Blocks

7.5.1 Controle de Movimento

7.5.1.1 STOP

SYMBOL

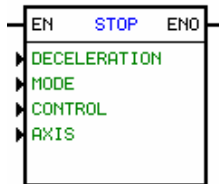

DESCRIPTION

It is formed by 1 EN input, 1 ENO output and 4 arguments:

- [deceleration](#) ^[108]
- [mode](#) ^[120]
- [control](#) ^[110]
- [axis](#) ^[109]

The EN input is responsible for the block enable.

The ENO output informs the moment when the block is terminated.

Mode

The mode is always a constant.

There are two options available:

- feed enable
- kill motion

OPERATION

If the EN input is 0, this block is not active, the ENO output remains at 0.

If the EN input goes 1, even for a short time (at least one scan cycle), a stop with trapezoidal profile will be executed, based on the characteristics programmed in the arguments.

When the stop has been finished, the ENO output goes 1 for one scan cycle and then returns to 0.

Once started, the stop block can not be cancelled until it has been completely finished, even if the EN input changes to 0 before the end of ramp.


The feed enable mode causes the block stop while the EN input is 1. As soon as the input EN changes to 0, the previous active positioning block is restored, since the current position do not be higher or equal to the desired one. This can occur if the deceleration of the stop block is too slow.

The kill motion mode does not restore the previous positioning if the EN input returns to 0.

Note: If a stop is done in the HOME block, it will be always cancelled, even if programmed as feed enable.


Important: This block does not change the control way, despite if it is in position loop or in speed loop.

FLOWCHART

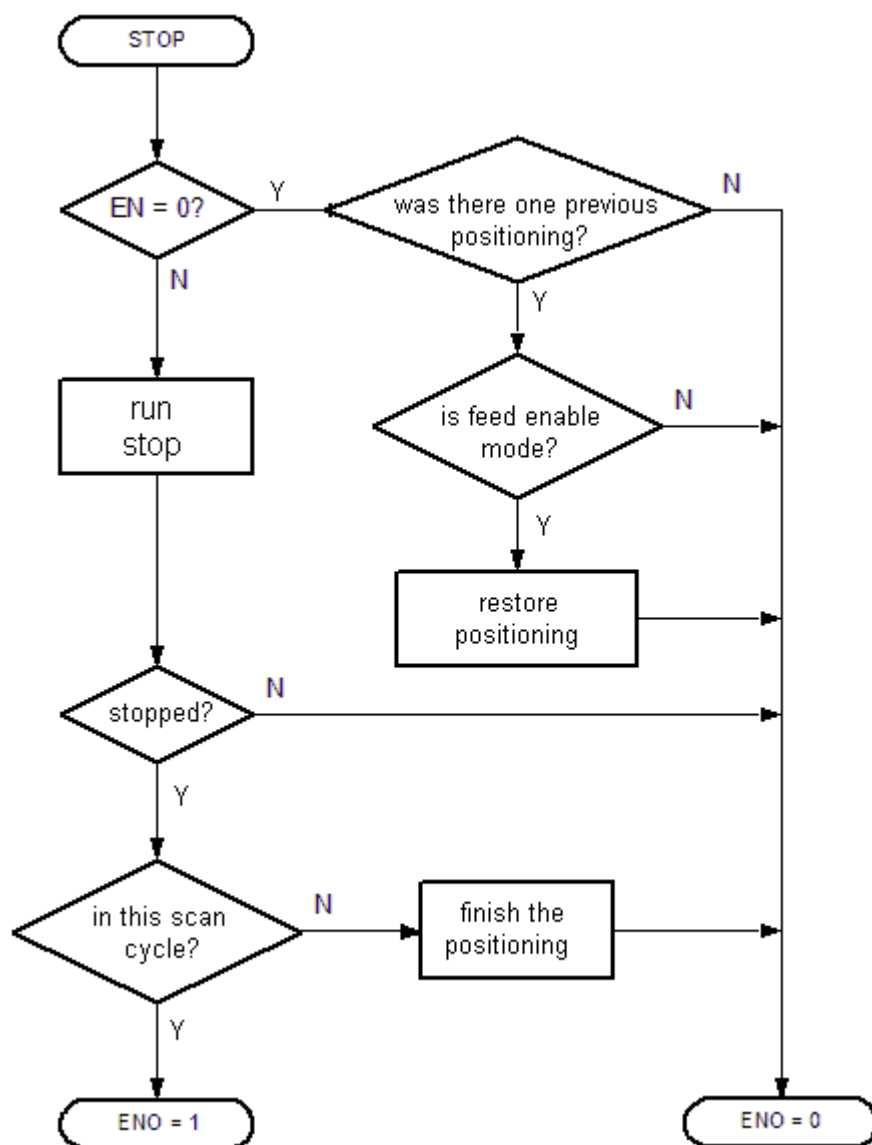


CHART

- Kill Motion Mode

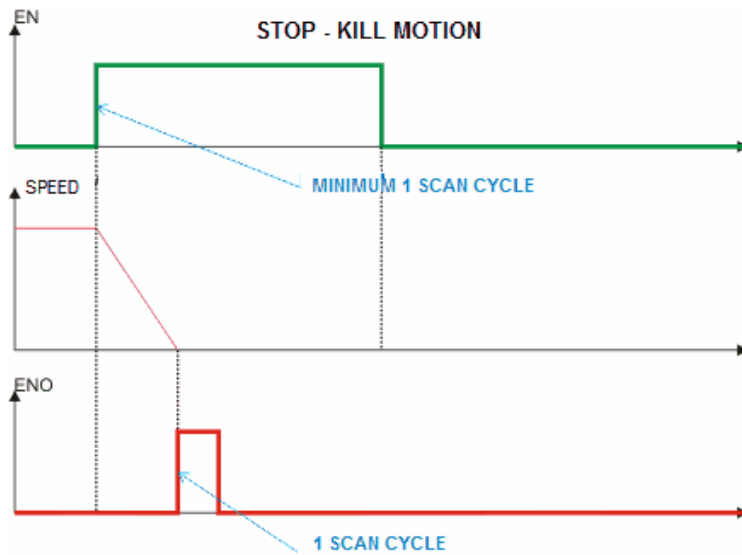


Please note that in this case, after the EN input returns to 0, a S-Curve is started, since this S-Curve was being executed before the stop command was given.

- Feed Enable Mode

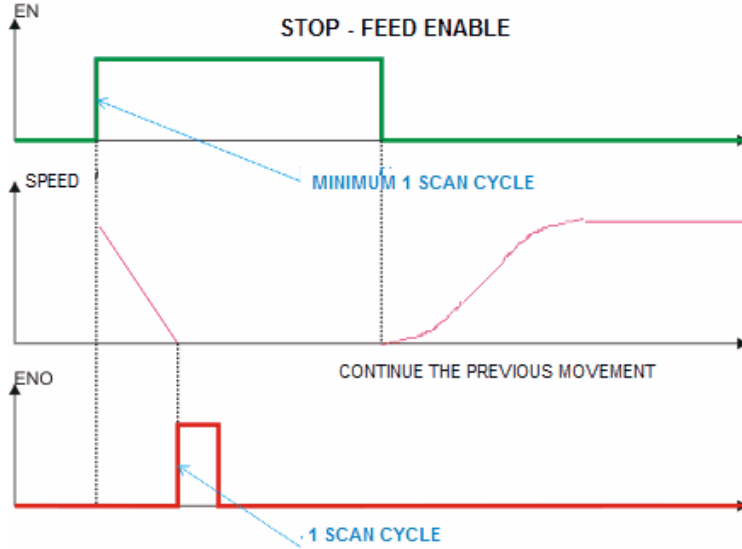


EXAMPLE

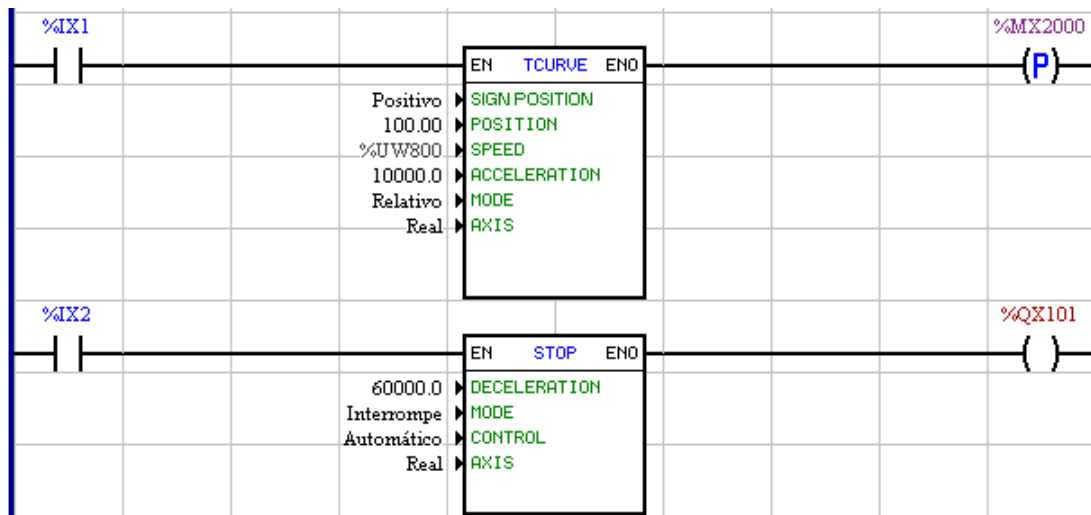

When the digital input 1 is 1, a positioning of 100 revolutions is enabled. When the digital input 2 is 1, the stop block is enabled, causing the positioning interruption. After stopping, the digital output 1 of the drive 1 goes 1 during one scan cycle. As soon as the digital input 2 returns to 0, the positioning of 100 revolutions is completed.

7.5.1.2 QSTOP

SYMBOL

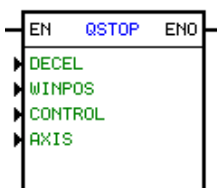

DESCRIPTION

It has 1 EN input, 1 ENO output and 4 arguments:

- [deceleration](#) ^[108]
- [position](#) ^[107]
- [control](#) ^[110]
- [axis](#) ^[109]

The EN input enables the block.

The ENO output inform the instant that the movement was finalized.

FUNCTION

If the EN input was 0, the block is not active and the ENO output is 0.

If the EN input goes to 1, the block is enabled. When the board detect a pulse in quickly input and the position elapsed was reached, it starts a stop.


When the stop was finalized, the ENO output goes to 1 during a scan cycle.

Other movement can only be started if this block was disabled after finished.


Quickly Input (marker of encoder) - 8-pin of X8 conector to POS2 or 8-pin of XC9 conector to PLC1 and PLC2

Important: This block do not change the control format, keeping the position loop or speed loop.

CHART

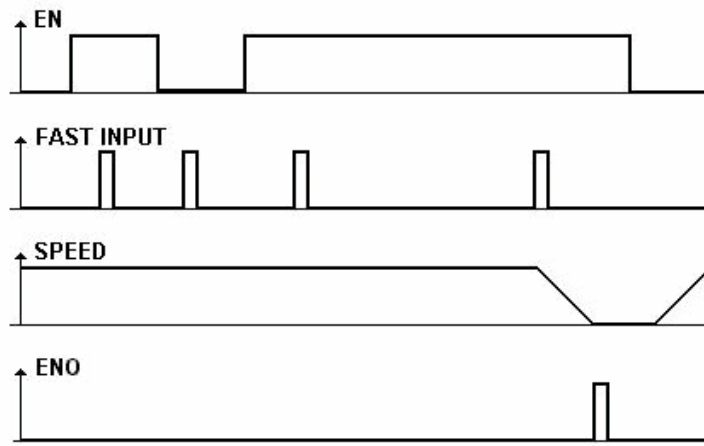

EXAMPLE

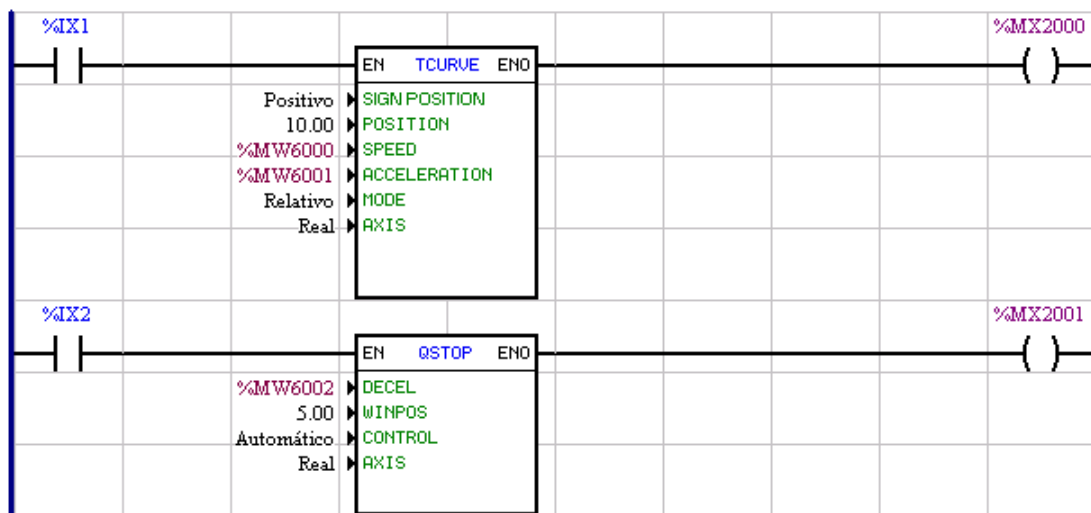


When the digital input 1 is 1, a 10 turn positioning will be enabled. If the digital input 2 is 1, a fast stop block will be enabled, passed 5 turns, when a pulse occurs at the X8 fast input the positioning will be canceled. When stopping, 1 is written in the bit marker 2001 during one scan cycle. At the moment when the digital input 2 goes back to 0, the positioning will be able to be restarted.

7.5.2 Positioning

7.5.2.1 SCURVE

SYMBOL

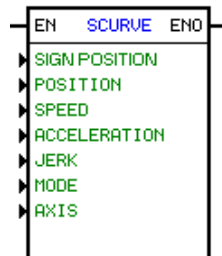

DESCRIPTION

It is formed by 1 EN input, 1 ENO output and 6 arguments, as follows:

- [position](#) ^[107]
- [speed](#) ^[108]
- [acceleration](#) ^[108]
- [jerk](#) ^[108]
- [mode](#) ^[109]
- [axis](#) ^[109]

The EN input is responsible for the block enable.
The ENO output goes to 1 when the move has finished.

OPERATION

If the EN input is 0, the block will not be executed and the ENO output keeps in 0.

If EN is activated for at least one scan cycle and there is no other active movement block, a positioning with S-profile will be executed, based on the arguments programmed.

When the positioning is finished, the ENO output goes to 1 for one scan cycle and then returns to 0.

Important: This block operates with position loop, so, when it stops, it continues in closed loop of position.

CINEMATIC EQUATIONS


$$x = x0 + v0*t + (1/2)*a0*t^2 + (1/6)*J*t^3$$


$$v = v0 + a0*t + (1/2)*J*t^2$$

$$a = a0 + J*t$$


- x = end position
- x0 = start position
- v = end speed
- v0 = start speed
- a = end acceleration
- a0 = start acceleration
- J = jerk

FLOWCHART

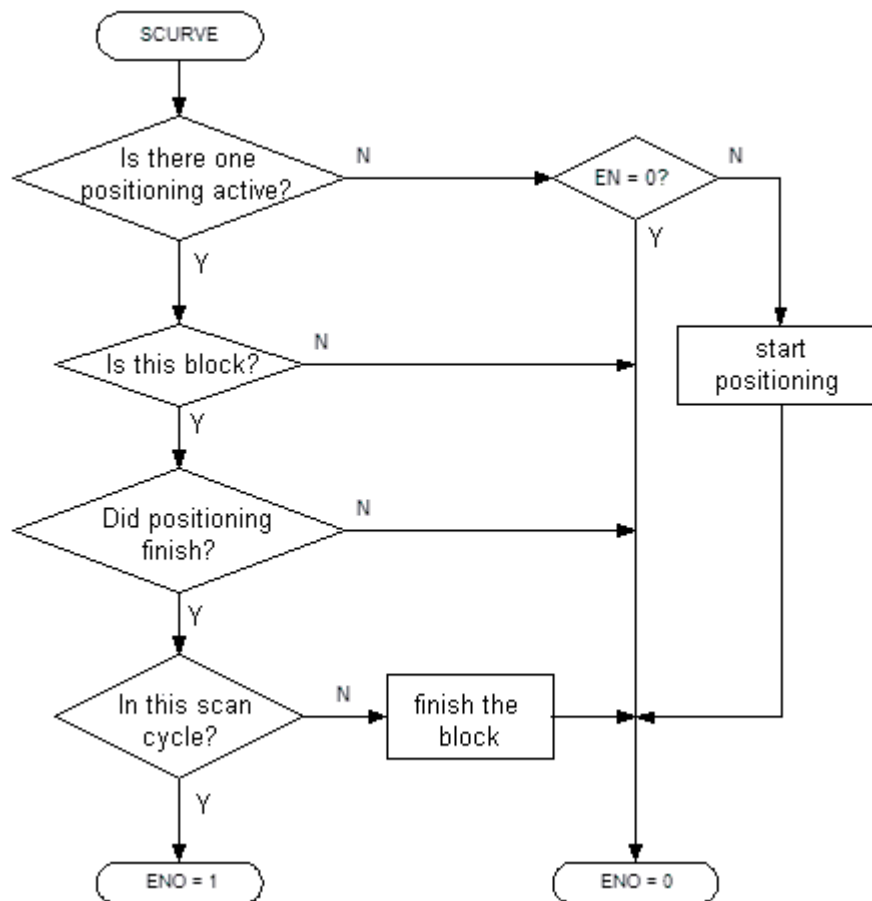**CHART**

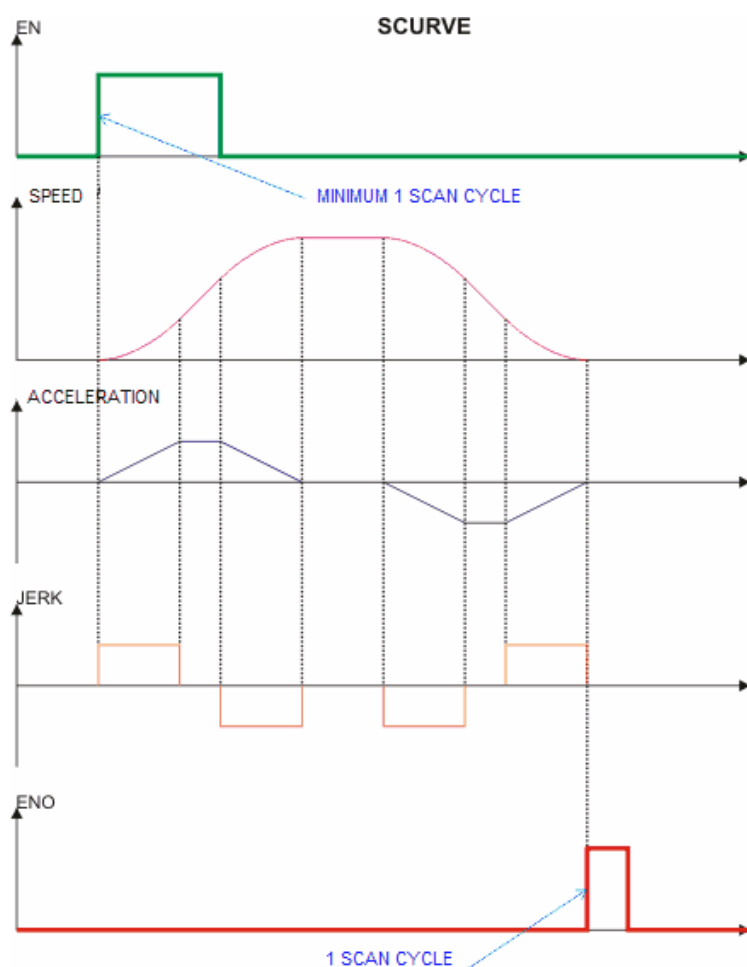

EXAMPLE

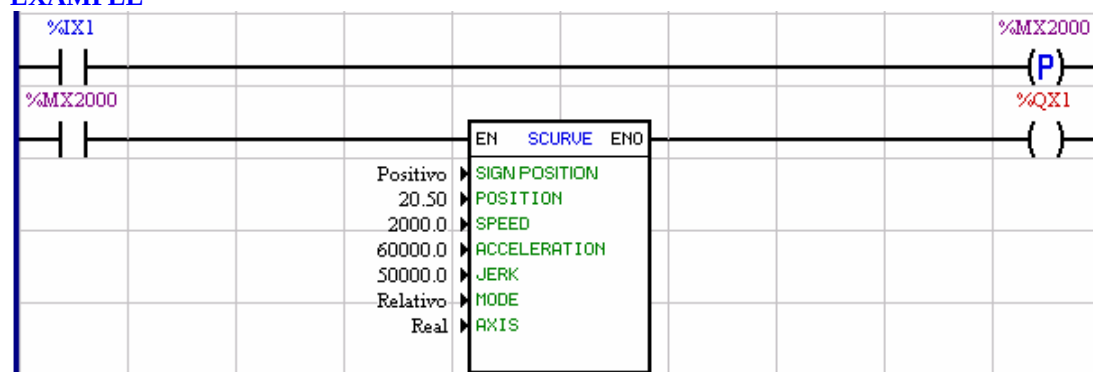


When a transition from 0 to 1 is captured at the digital input 1 a positioning is started with 20.5 revolution at a speed of 2000 rpm, with an acceleration of 50000 rpm/s and a jerk of 230000 rpm/s², in the clockwise direction of rotation, since the mode is relative and the positioning signal is positive. After the positioning process has been ended it writes 1 during 1 scan cycle to the digital output 1.

Remember that the jerk is the derivative of the acceleration as time function. Thus we can conclude that the max. acceleration will be reached at $50000 \text{ rpm/s} / 230000 \text{ rpm/s}^2 = 0.22 \text{ seconds}$.

7.5.2.2 TCURVE

SYMBOL

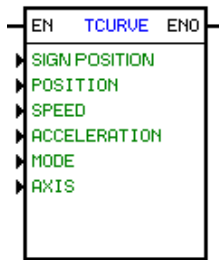

DESCRIPTION

It is formed by 1 EN input, 1 ENO output and 5 arguments, as follows:

- [position](#) ^[107]
- [speed](#) ^[108]
- [acceleration](#) ^[108]
- [mode](#) ^[109]
- [axis](#) ^[109]

The EN input is responsible for the block enable.

The ENO output informs the moment that the block is finished.

OPERATION

If the EN input is 0, the block will not be executed and the ENO output keeps in 0.

If EN is activated for at least one scan cycle and there is no other active movement block, a positioning with trapezoidal profile will be executed, based on the arguments programmed.

When the positioning is finished, the ENO output goes to 1 for one scan cycle and then returns to 0.

Important: This block operates with position loop, so, when it stops, it continues in closed loop of position.


CINEMATIC EQUATIONS

$$x = x0 + v0*t + (1/2)*a*t^2$$

$$v = v0 + a*t + (1/2)$$

- x = end position
- x0 = start position
- v = end speed
- v0 = start speed
- a = end acceleration


FLOWCHART

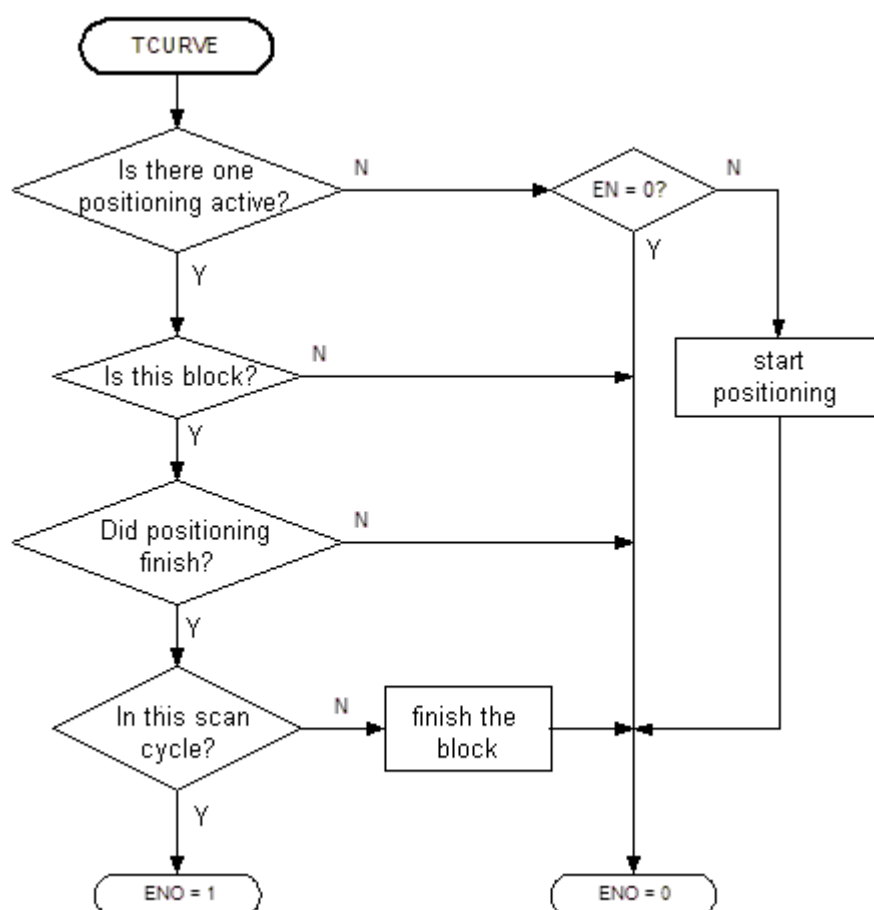

CHART

7.5.2.3 HOME

SYMBOL

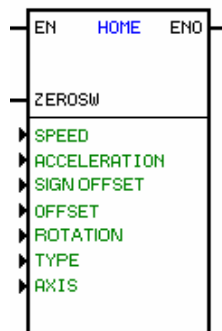

DESCRIPTION

It is formed by 1 EN input, 1 ZEROSW input, 1 ENO output and 6 arguments, as follows:

- [direction of rotation](#) ^[109]
- [speed](#) ^[108]
- [acceleration](#) ^[108]
- [offset \(signal, number of revolutions, fraction of revolution\)](#) ^[107]
- type :
 - [Standard](#) ^[131]
 - [Immediate](#) ^[131]
 - [Unidirectional with Sensor](#) ^[132]
 - [Unidirectional with Sensor and Null Pulse](#) ^[132]
 - [Unidirectional with Null Pulse](#) ^[132]
 - [Bi-Directional with Sensor](#) ^[132]
 - [Bi-Directional with Sensor and Null Pulse](#) ^[133]
- [axis](#) ^[109]

The EN input is responsible for the block enable.


The ZEROSW input is responsible for informing the block that the zero machine position has been reached.

The ENO output informs the moment when the block has been finished.

TYPE

Standard

It starts with a trapezoidal profile. When the signal in ZEROSW goes to 1, the block reaches the marker. In this moment, the block stop and come back to the marker position.

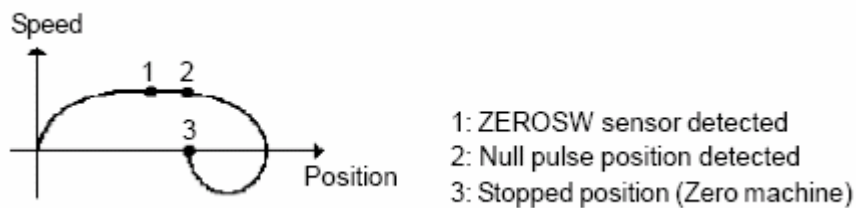

NOTE!

If the ZEROSW input was enable when the block starts, it run in opposite direction until ZEROSW goes to 1. After this, it changes its direction and will have the original behaviour.

Immediate (*)


In this case, the moviment are not executated and the current position is consideredated the zero machine.

**NOTE!**


In this option, this block can be executed without the drive is enabled.
It also can be executed during some other positioning function.

Uni-Diretional with Sensor (*)


This type can be used when the marker is not available and only one direction is required. It starts an trapezoidal profile. When the switch ZEROSW was detected, this current position was considered the zero machine and the block starts its deceleration until stop. If the ZEROSW input was enabled, the current position was considered like zero machine and it was not generated the moviment.

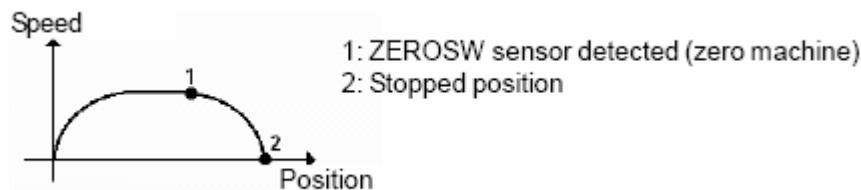**Uni-Diretional with Sensor and Null Pulse (*)**

This type can be used when the switch and the marker on encoder were available and only one direction is required. It starts an trapezoidal profile. When the switch ZEROSW was detected, it enabled to reach the marker. When the marker was detected, this current position was considered the zero machine and the block starts its deceleration until stop.

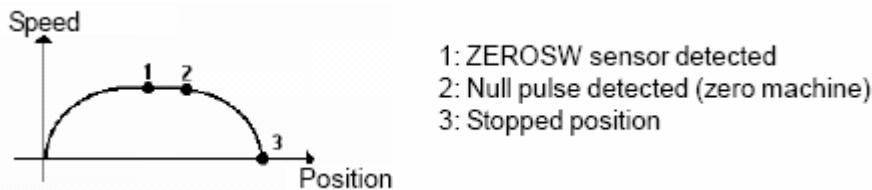
**Uni-Diretional with Null Pulse (*)**

This type can be used when the marker on encoder was available and only one direction is required. When the marker was detected, this current position was considered the zero machine and the block starts its deceleration until stop.

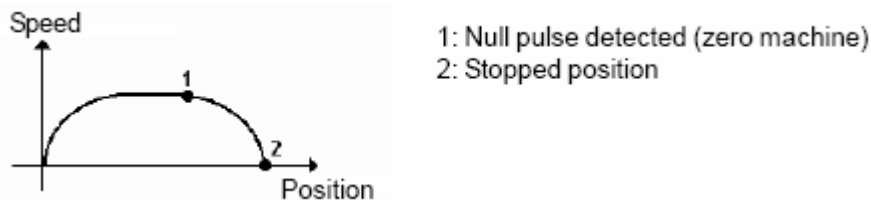**Bi-Diretional with Sensor (*)**

This type can be used when the marker is not available. It starts with a trapezoidal profile until reach the marker. Then, it makes that the motor invert its direction and it analyses when the switch goes to 0 and this position will be the zero machine. Then, it makes that the motor decelerate and come back to the zero machine position.


If the block was enabled and the ZEROSW=1, the movement run in the opposite direction until the ZEROSW=0. This position will be considered the zero machine. Then the block force the motor decelerate and came back to zero machine.

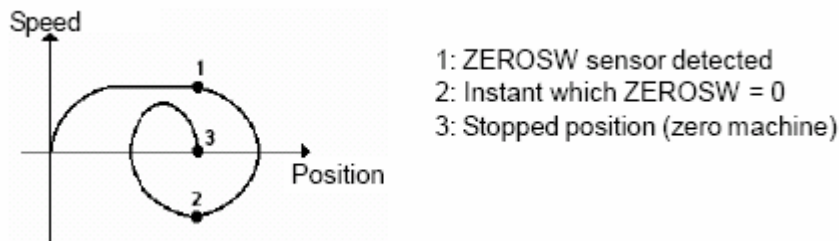

Bi-Directional with Sensor and Null Pulse (*)

It starts with a trapezoidal profile until reach the switch ZEROSW. Then it inverts its direction until ZEROSW=0. Then it reaches the marker and this position will be the zero machine. The block decelerates and comes back to the zero machine.

If the block and the switch ZEROSW were enabled, the block run in opposite direction until ZEROSW=0. Then it reached the marker, decelerated and came back to the zero machine.

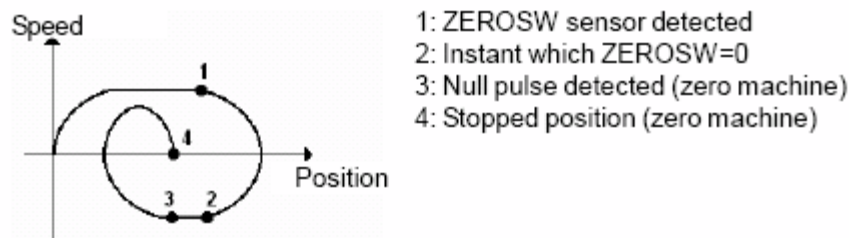

OPERATION

If the EN input is 0, the block is not executed and the ENO output remains at 0.

When the EN input is activated, and no other positioning block is active, the zero search is enabled with trapezoidal profile based on the characteristics of the programmed arguments.

When there is a pulse present for at least one scan cycle at the ZEROSW input, the search for the zero pulse is started. As soon as the zero pulse is found, the stop process is started and then the shaft returns to the zero pulse position.

At this point, the block is finished and the ENO output goes to 1 for one scan cycle and then returns to 0.


NOTE: If the block is enabled and the ZEROSW input is 1, the search is started in the opposite direction as programmed, until the ZEROSW input changes to 0. At this moment, the block reverses the direction of rotation and repeats the steps described in the item above.

When the block is finished, the found position will be referenced to the programmed offset value that is usually zero. If we program a negative offset with 25 revolutions and we execute a relative positioning with 50 revolutions and 0 fraction of revolution with positive signal, the final position would be 25 revolutions and 0 fraction with positive signal. However if the positioning is in absolute mode, the end position would be of 50 revolutions and 0 fraction of revolution with positive signal and, in fact, 75 revolutions in clockwise direction of rotation, would be done.

NOTE: The homing position, depends on the value of the parameter 769, that causes a position advance regarding to the zero pulse.


ATTENTION: After the homing, the control remains in position loop.

FLOWCHART

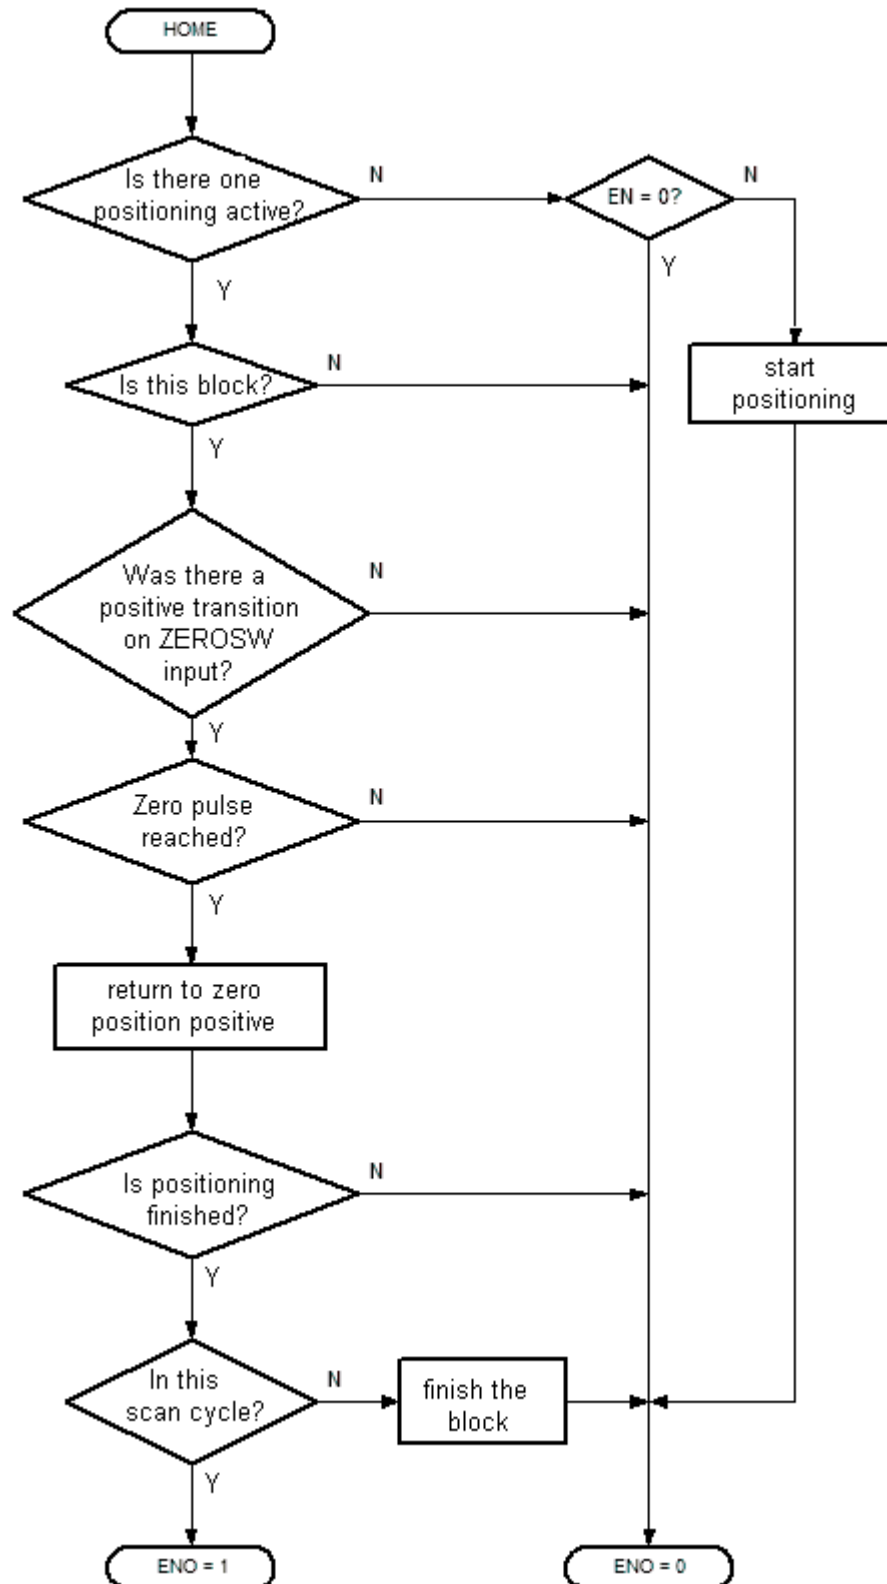


CHART


- Normal condition - ZEROSW = 0

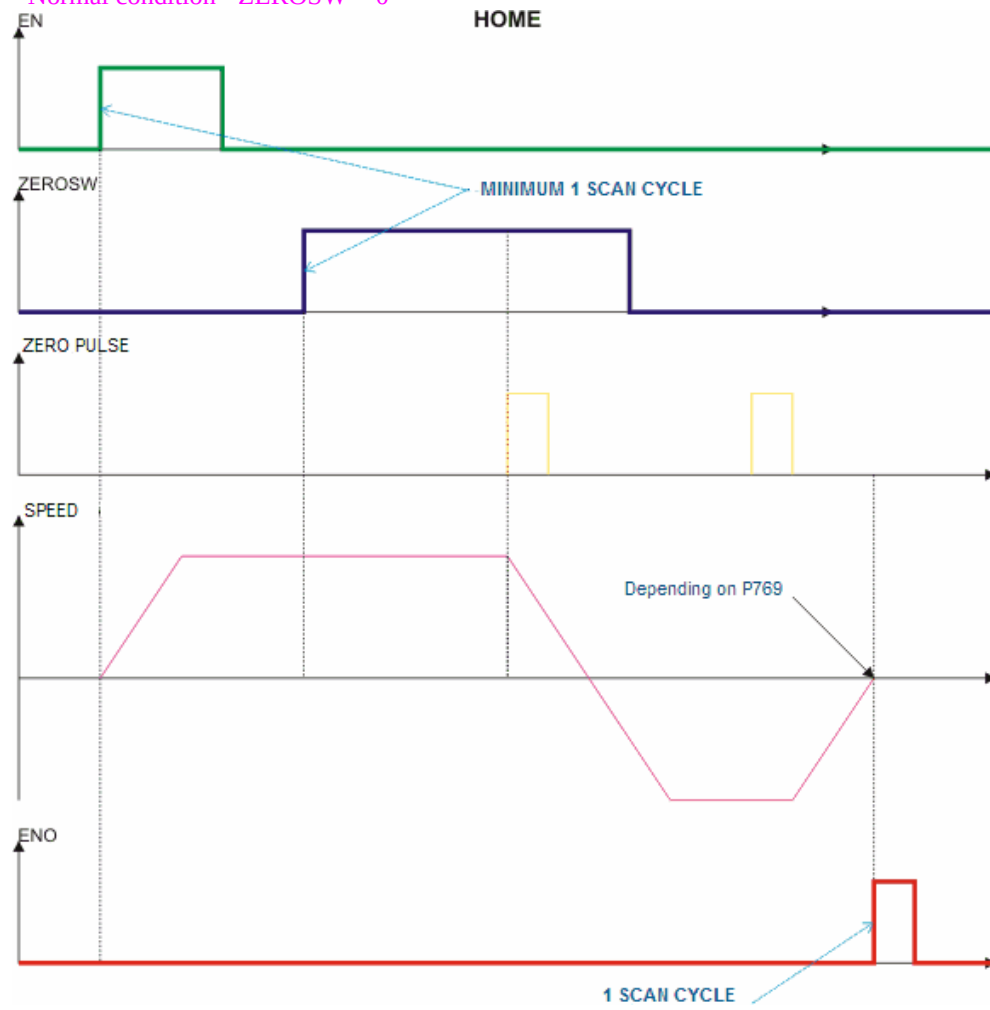

- Exceptiong - ZEROSW = 1

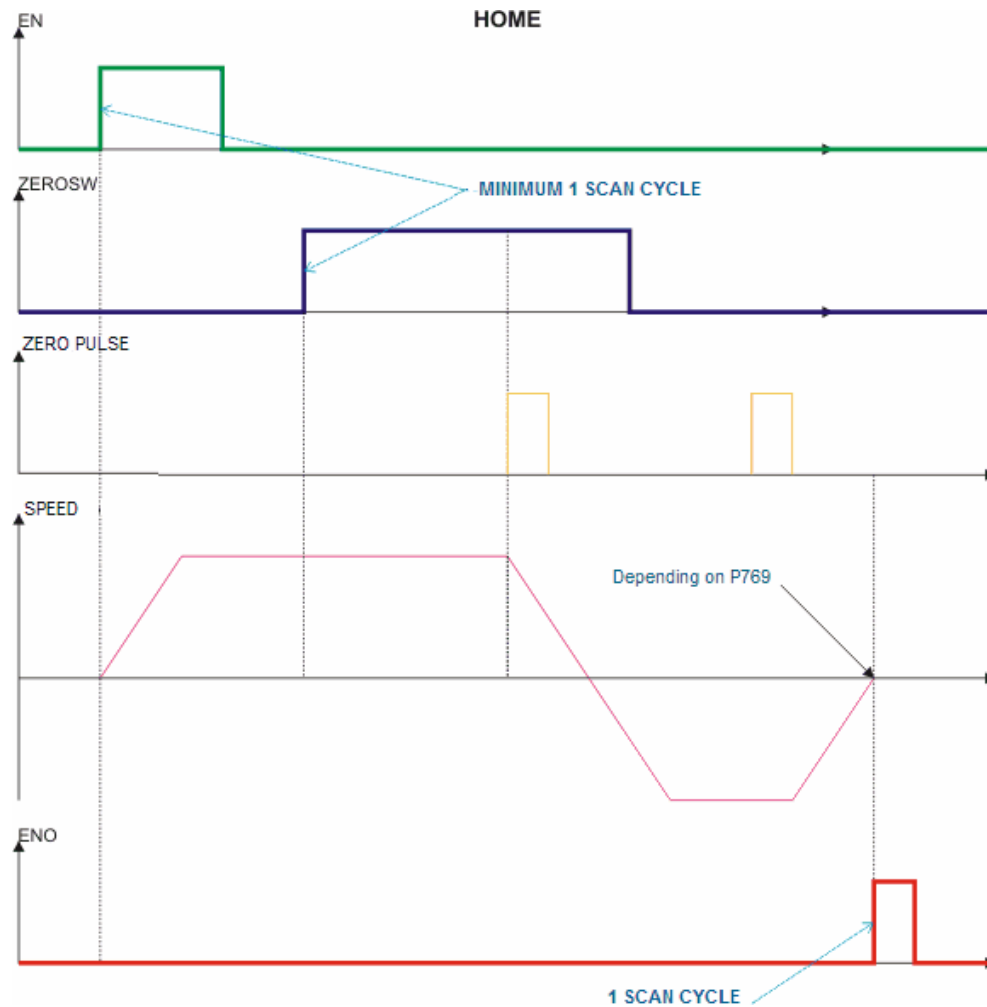


EXAMPLE

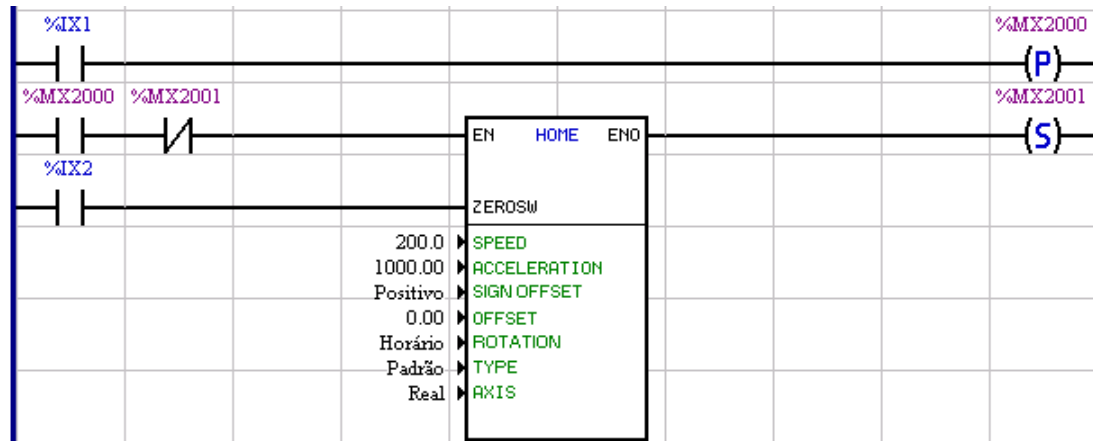

Considering that the drive has been reset recently or switched on, when the digital input 1 goes from 0 to 1, activates the homing, if the bit marker 2001 is at 0. The zero pulse search starts after the ZEROSW (%IX2 = zero switch) goes to 1. The motor decelerates and returns to the found zero pulse position plus the value of P769, as soon as the zero pulse is found. The bit marker 2001 is set as soon as the positioning process has been concluded and then a new homing is enabled.

7.5.2.4 TCURVAR

SYMBOL

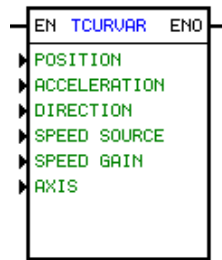

DESCRIPTION

It have 1 input EN, 1 output ENO e 6 arguments:

- [position](#) ⁽¹⁰⁷⁾
- [speed](#) ⁽¹³⁷⁾
- [acceleration](#) ⁽¹⁰⁸⁾
- [direction](#) ⁽¹⁰⁹⁾
- [synchronism](#) ⁽¹³⁷⁾
- [axis](#) ⁽¹⁰⁹⁾

The EN input is responsible to enable the block
The ENO output informs that the block was finished.

Speed

This field has 1 data type and 1 address.

The data type can be:

- encoder (auxiliary encoder of PLC2 or main encoder of POS2)
- user parameter
- word marker

When the data type was user parameter or word marker, the unit is RPM (revolutions per minute).

Synchronism

This field has 1 data type and 2 addresses or constants, depending on data type.

The data type can be:

- constant
- user parameter
- word marker

The addresses or constants are destined to the relationship between master and slave.

Important: The synchronism relationship only is applied when the field speed was encoder.

FUNCTION


If EN=0, the block is not executed and the ENO=0.

If 1 pulse (at least 1 scan cycle) was applied to EN and do not have other block active, will be executed a trapezoidal profile positioning where the speed can be changed during the positioning.


When the positioning finish, the ENO goes to 1 during 1 scan cycle.

Important: This block works in position loop, keeping this feature after its execution.


FLOWCHART

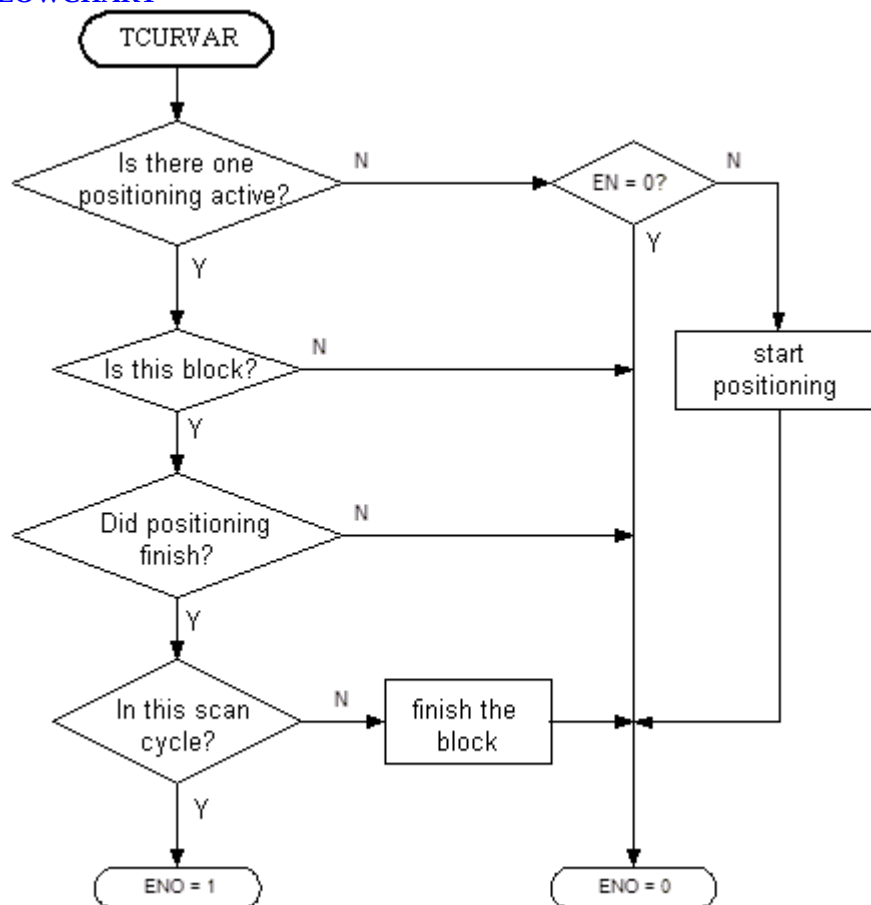

CHART

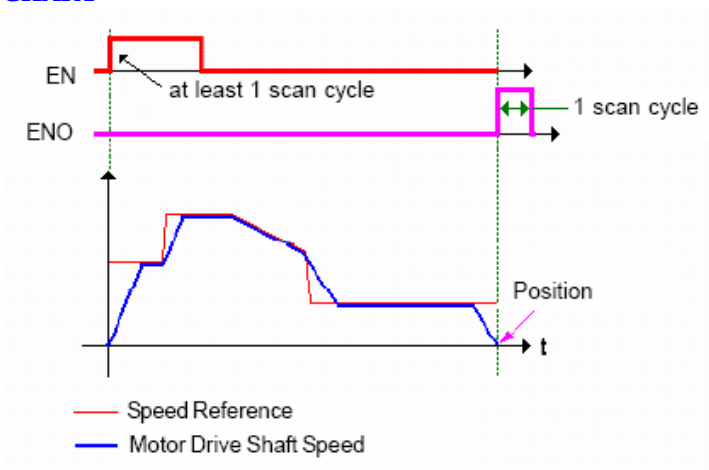


EXAMPLE

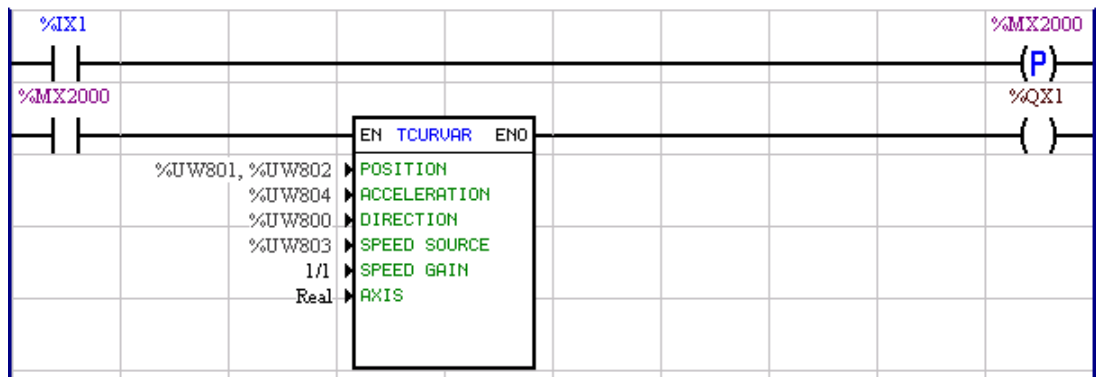

When a transition from 0 to 1 at the digital input 1 is captured, then a positioning will be triggered, with the signal from the user parameter P800, the number of turns from the user parameter P801, the turn fraction from the user parameter P802, the speed in rpm from the user parameter P803 and the acceleration in rpm/s based on the user parameter P804. When finished, it writes 1 during 1 scan cycle at the digital output 1.

7.5.2.5 CAM

 SYMBOL:



DESCRIPTION:

This block comprises 1 EN input, 1 ENO output and 2 argument, being:

- PROFILE:

CAM positioning profile.

- Cam Profile Type:

- **Fixed:** the positioning profile is transferred together with the user program and it will not be able to suffer modifications.

- **Calculable:** the positioning profile is transferred together with the user program and it will be able to suffer modifications through the execution of the CALCCAM block. For calculable positioning profiles the following parameters are necessary:

- Maximum Number of Points:

It is a constant value that configures the maximum number of points that this CAM will be able to have.

- First Master Point

It is a float marker that configures the position of the master of the first point of this CAM profile, the position of the master of the other points will be according to the contents of the float markers subsequent to the selected one. The contents of the used float markers must have the format of turns, for instance: 1.5 turns, 0.25 turn...

Important: If the master position of a point is smaller than the position of the master of the previous point at the moment of the CALCCAM block execution, this CAM profile will not be executed again if the CALCCAM block is not executed again with the use of the correct contents of the

markers.

- **First Slave Point**

It is a float marker that configures the position of the slave of the first point of this CAM profile, the position of the slave of the other points will be according to the contents of the float markers subsequent to the selected one. The contents of the used float markers must have the format of turns, for instance: 1.5 turns, 0.25 turn...

- **First Curve Type**

It is a bit marker that configures the interpolation type (0 for linear interpolation and 1 for cubic interpolation) of the first point of this CAM profile. The interpolation type of the other points will be according to the contents of the bit markers subsequent to the selected one.

- **Number of Points**

It is a word marker that configures the quantity of points of this CAM profile.

NOTES!

- If the programmed word marker contains a value bigger than the “**Maximum Number of Points**” argument at the moment of the CALCCAM block execution, this CAM profile will not be executed anymore if the CALCCAM block is not executed with the correct contents of the used marker.
- At the first scan cycle after the user program download, the CALCCAM block loads the number of points, the point values and the interpolation types for the arguments programmed in the calculable CAM blocks.

The EN input is responsible for the block enabling.

The ENO output informs the moment the block is started.

The block CAM is responsible for the positioning defined in its profile.

Fundamentally the CAM device has the function to convert a rotary motion into a forward and backward motion defines by a cam profile. Figure below shows how this cam profile is defined mechanically:

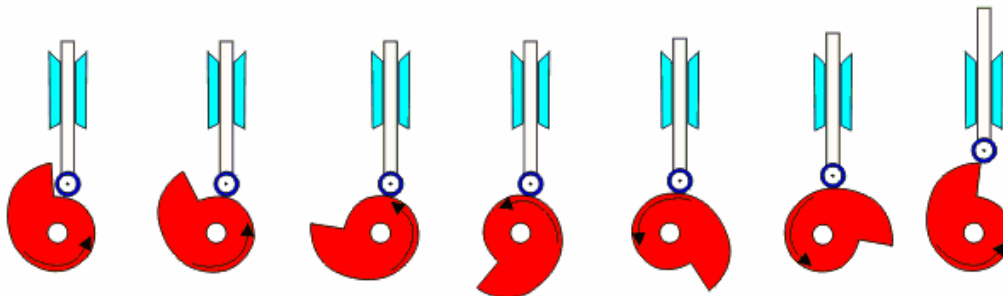


Figure - Mechanical CAM.

OPERATION:

If the EN input is 0, the block is not executed and the ENO output is 0.

If the EN input is 1, the block executes the programmed CAM profile, using the virtual axis as master.

All WLP positioning and speed blocks can be used for generating the reference for the virtual axis.

The CAM block is always relative, i.e., the position of the virtual axis will be considered as master zero position at the start.


As soon as the CAM profile is ended, the ENO output goes to 1 during one scan cycle, after that it returns to 0.

NOTE!


The virtual axis is the used axis as master for the CAM block. From the firmware version 1.50, all

positioning and motion blocks in POS 2 can generate a reference for the virtual axis:

CHART:

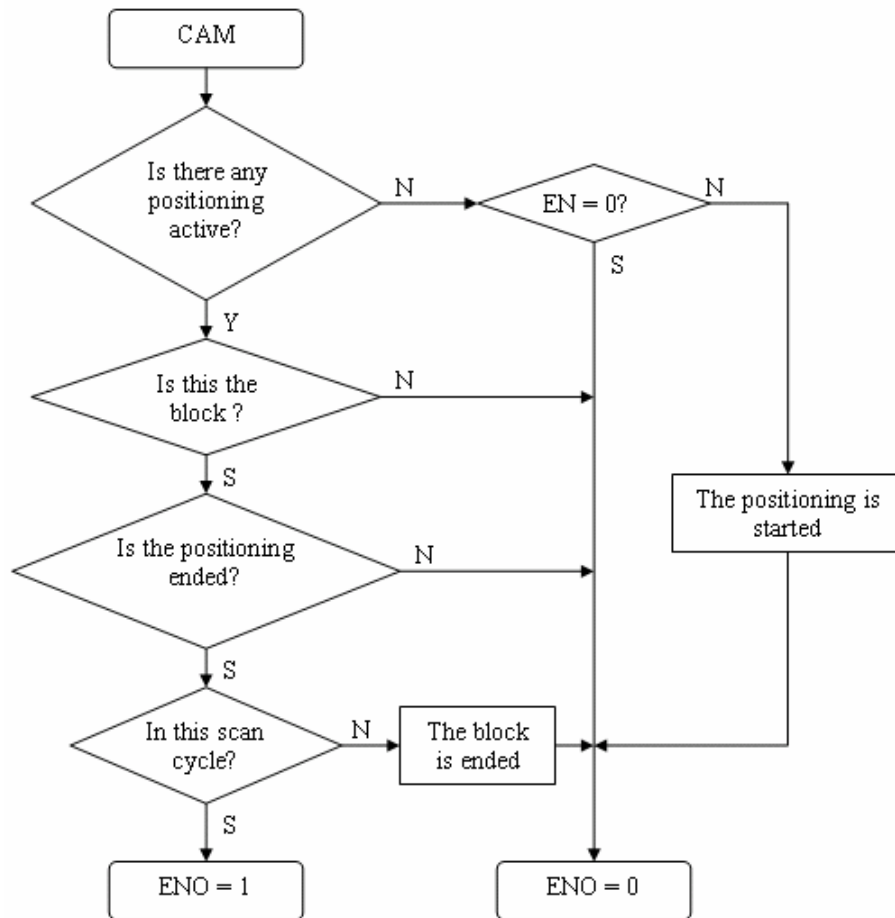

EXAMPLE:

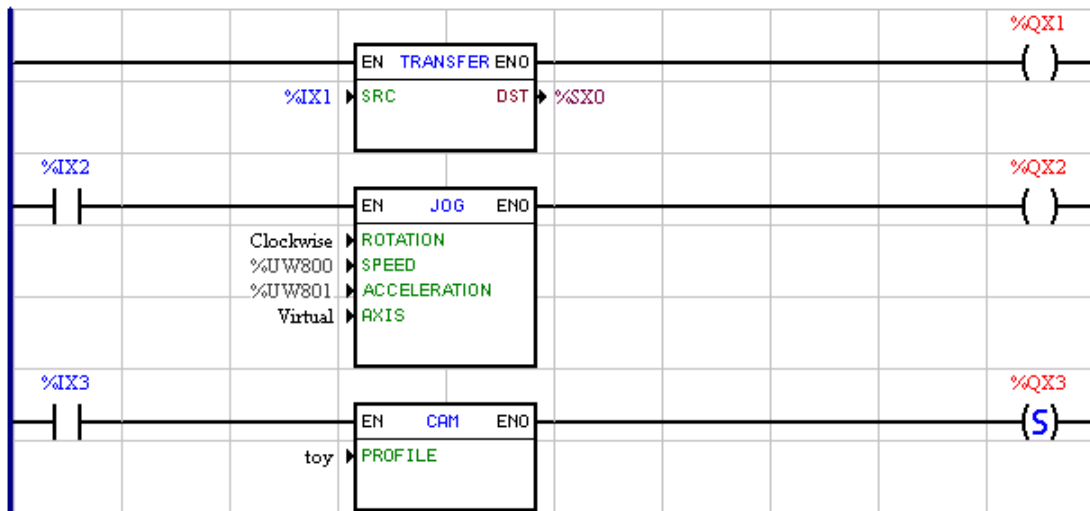

The digital input %IX1 enables the drive.


The digital input %IX2 enables the JOG block, which has been programmed for generating a speed

reference for the virtual axis defined by user parameter %UW800 with acceleration defined by the user parameter %UW801.


The digital input %IX3 enables the CAM block that from this moment n follows the master according to the profile defined in the parameter PROFILE. As soon as this profile is ended, the digital output %QX3 will be activated.

If the digital input %IX3 is always active, the CAM profile will be executed continuously.


The profile below was used in the example:

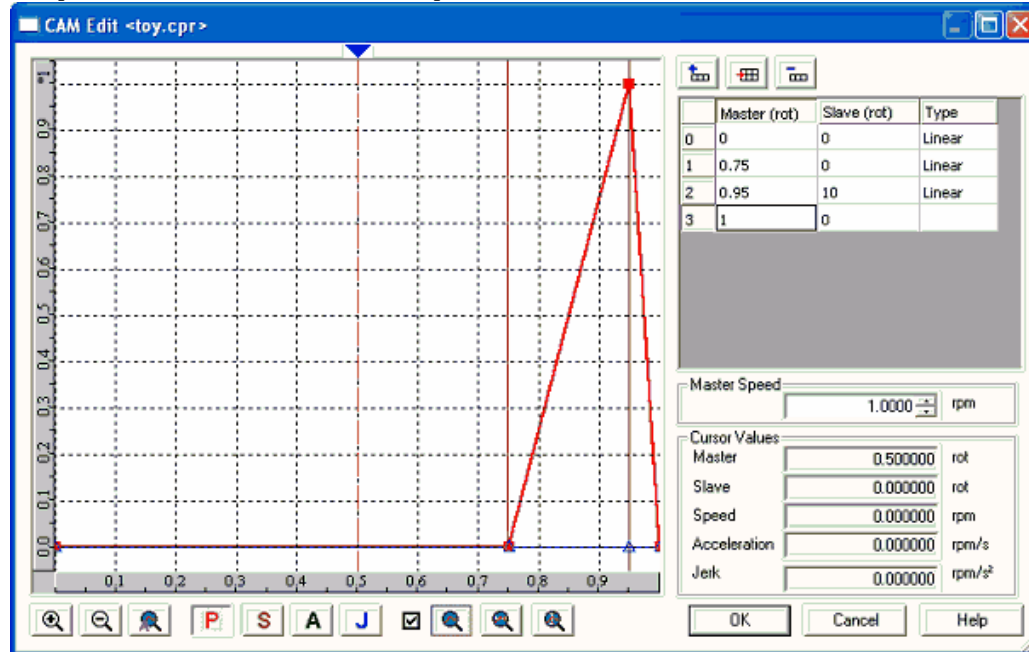

Through the online monitoring, following data were acquired:

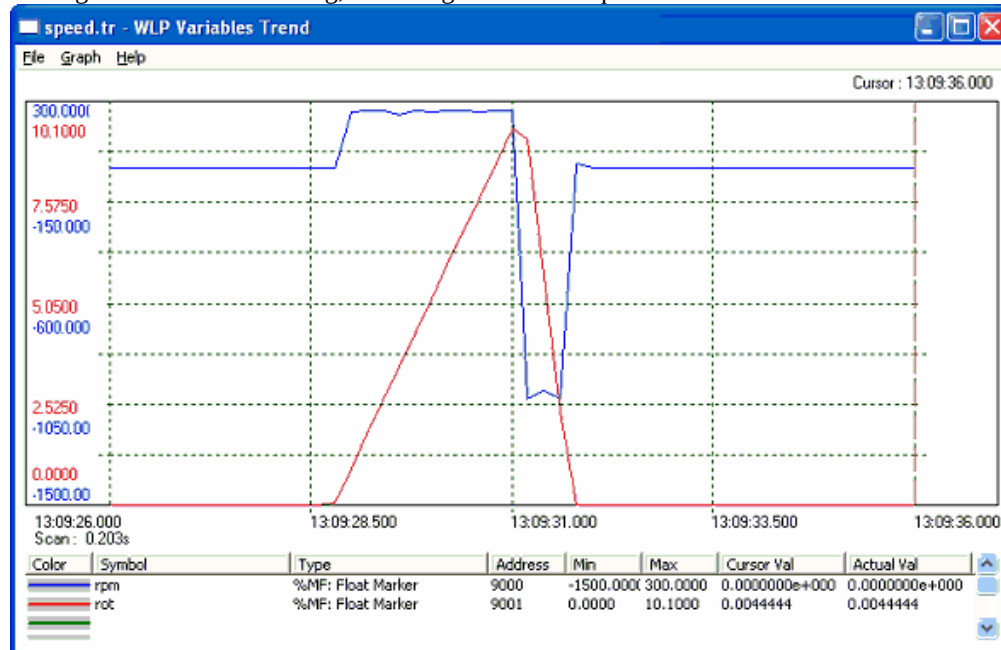

PROPERTIES BOX OF THE CAM BLOCK:

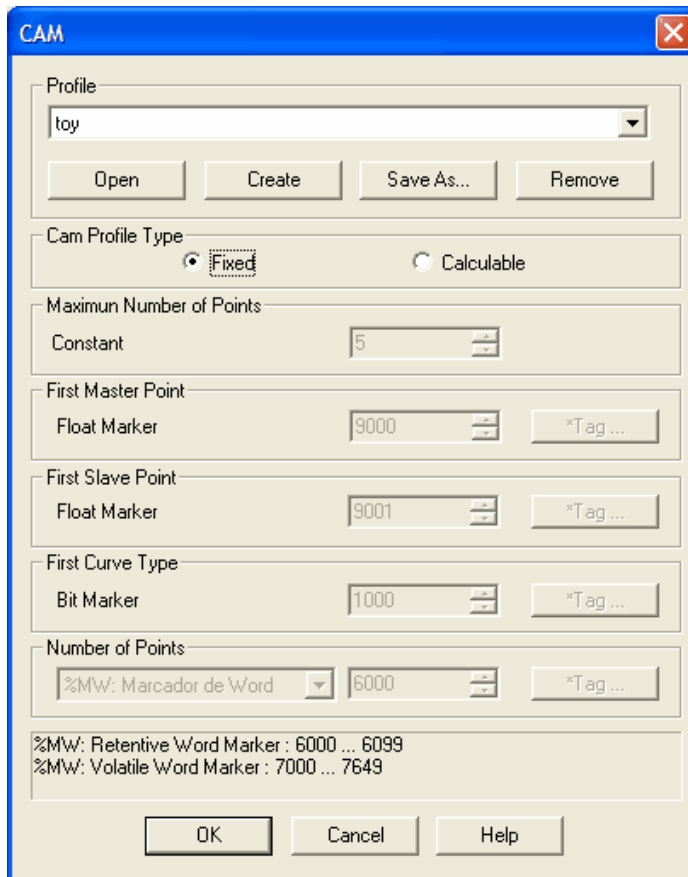


This box is called by giving a double click on the CAM block.

In this box you can execute following operations:

- Select the profile used through the "Profile" selection.
- Open the profile for editing through the button "Open" .
- Create a new profile through the button "Create".
- Remove the profile selected through the button "Remove".
- Save with other name the profile selected through the button "Save as..."


Creating a new CAM profile:

For creating a new Cam profile, click on the button "Create. An input box will ask you for the new profile name. After the cam profile editor will open as shown below:

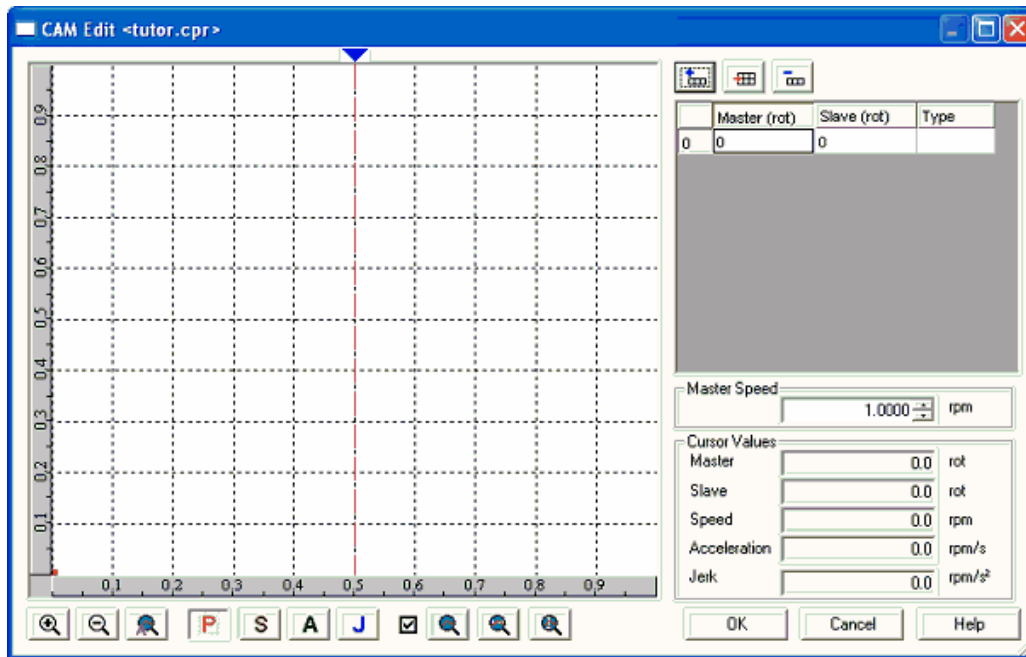

There are following control in this window:


Point table:

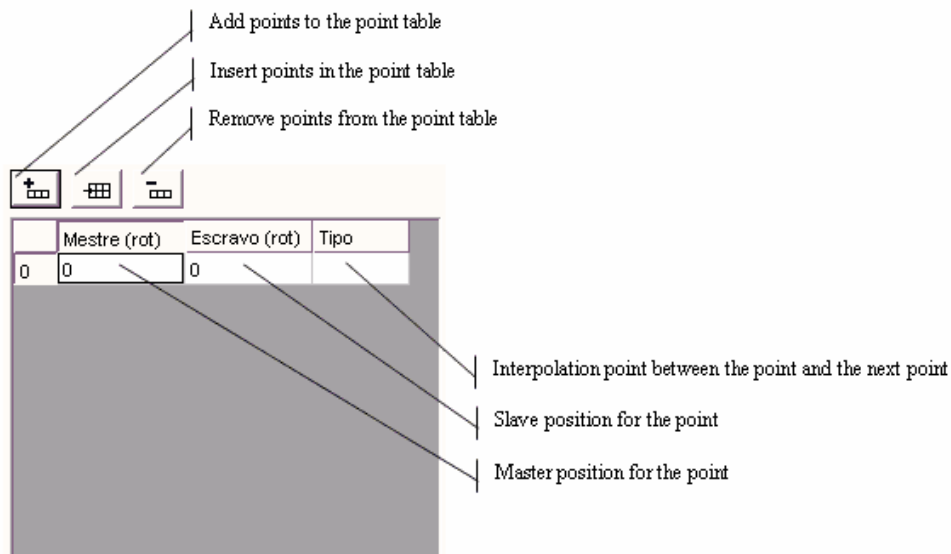


NOTES

- As already mentioned above, the CAM block is always relative. Thus the first point of the table point will be always master = 0 and slave = 0.
- Master = virtual axis
- Slave = effective axis (drive)

Tools for the chart control:

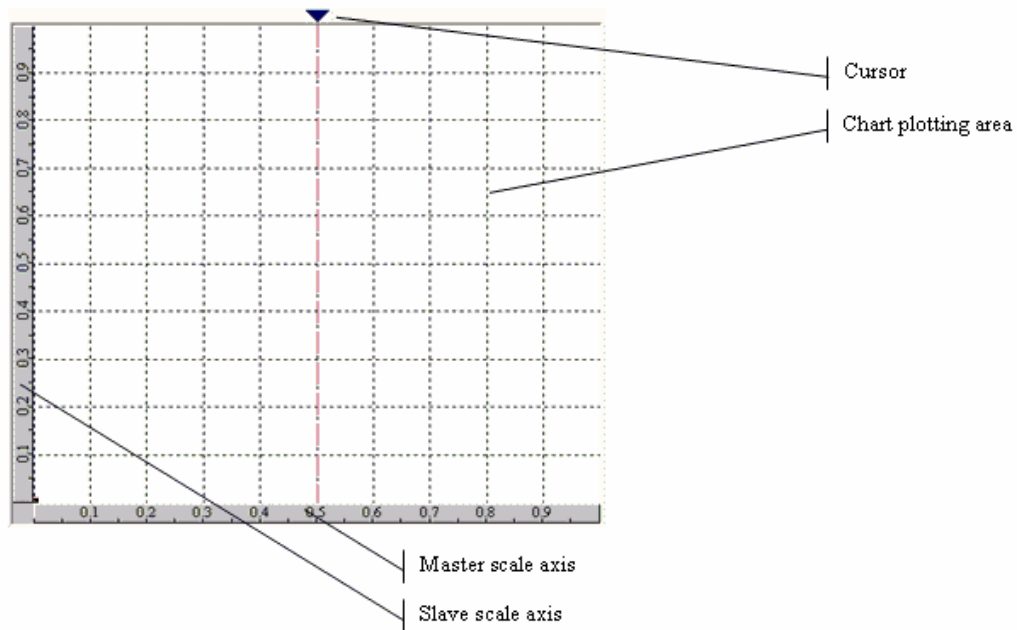

Tools for the chart control:

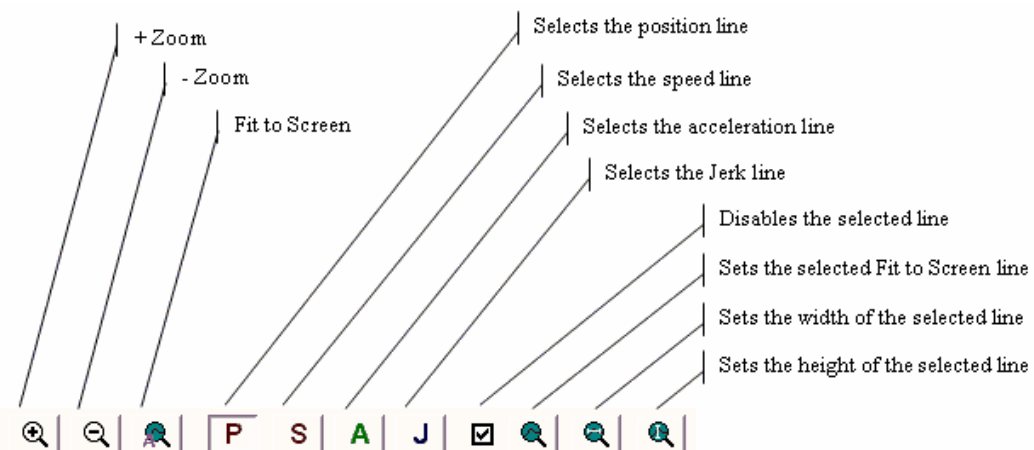

Cursor values:

Relative values for the point selected by the cursor.

Cursor Values			
Master	0.0	rot	
Slave	0.0	rot	
Speed	0.0	rpm	
Acceleration	0.0	rpm/s	
Jerk	0.0	rpm/s ²	

Master speed:

Speed used for the speed, acceleration and slave jerk calculation.

Master Speed rpm

NOTE!

- The speed, acceleration and slave jerk should be used as reference for the cam profile development, where they contents are calculated numerically without considering the load, inertia, torque and dynamic of the drive.


Adding a new point to the cam profile:

A point can be added by activating the button Add Point or Insert Point, or by giving a double click on the chart at the position the new point should be added. The double click can be given on any area of the chart. If there already was an interpolation at this area, the editor will insert this point between the two interpolation points.

The point will be always added as interpolation of linear type.


When a point is added or inserted through the respective buttons, the master and the slave values enter as zero. In the case the point is inserted, this can cause a profile interruption, since the master position must always increase relating to the origin. In this case the master and the slave value must be edited by clicking on their cells in the point table.

The figure below shows the insertion of a point through a double click.

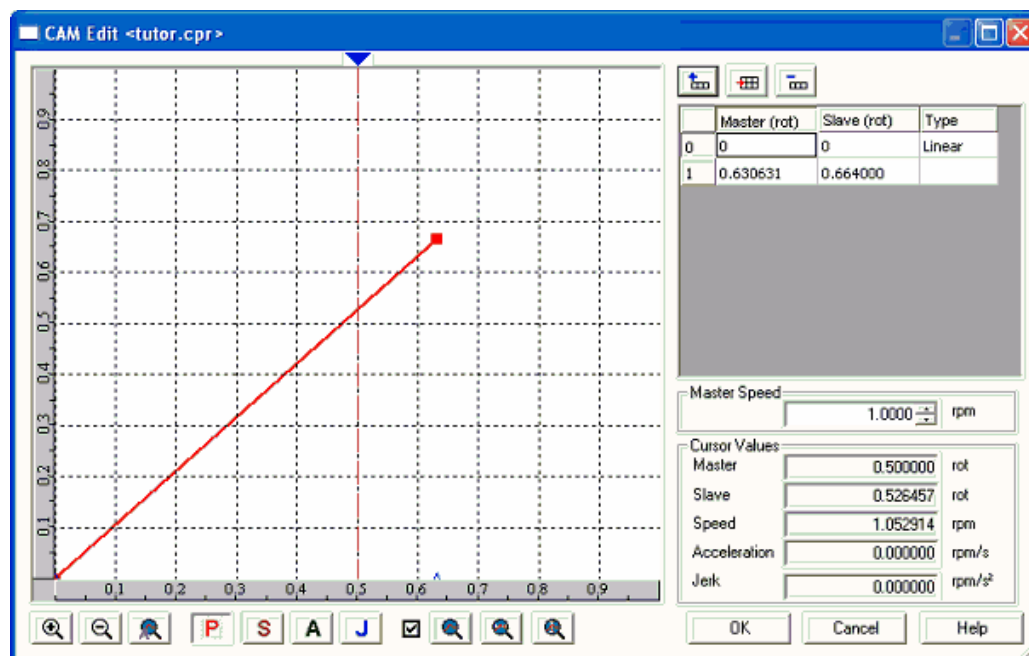


To change the interpolation type, click on the type cell on the line that corresponds to the interpolation origin and select the desired one.


In the figure below a point has been changed to the cubic type of interpolation.

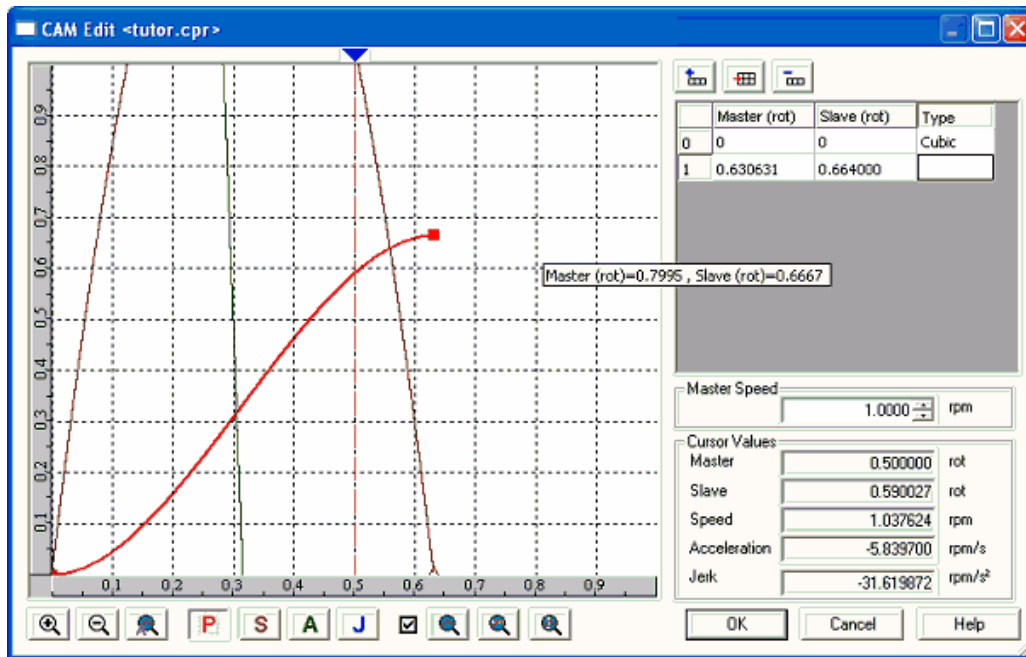


Now you can note other values in this curve beside the position, such as speed, acceleration and Jerk, For better viewing of all values, you can use the button "Fit to Screen", as shown below.

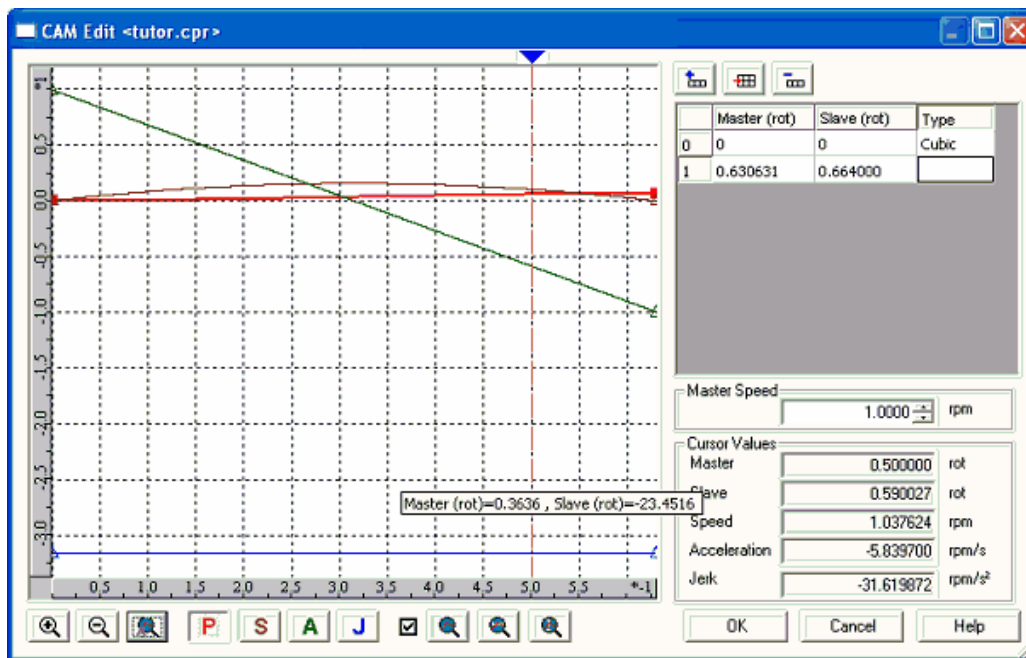

In the same way we can select one of the values and use the button "Apply selected Zoom". In the example below a zoom has been given for the speed.

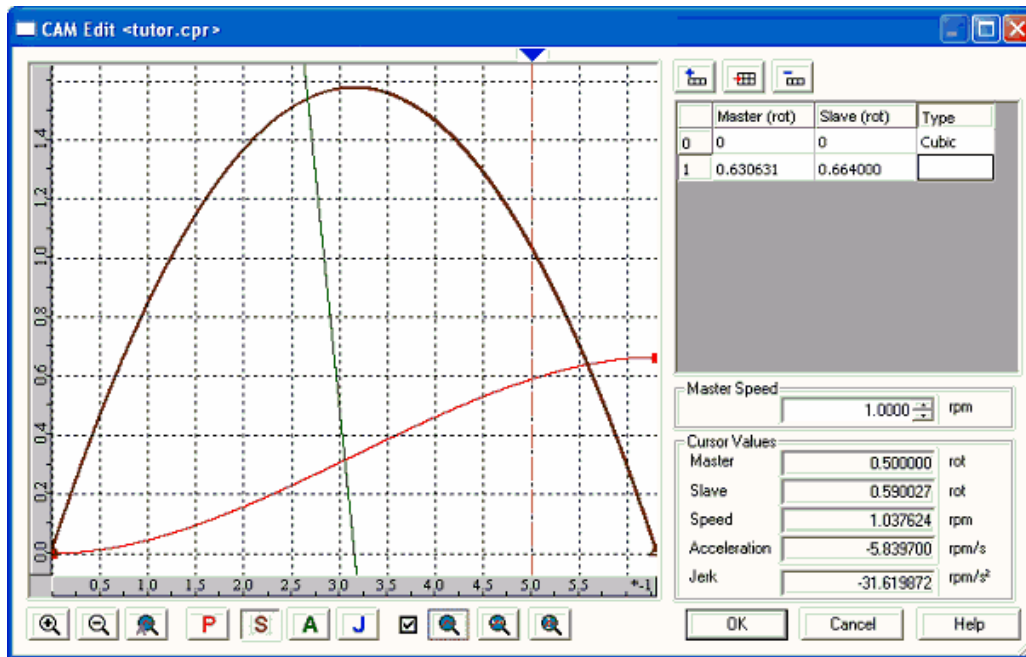

Another important tool to be mentioned is the cursor. In the example below the cursor is positioned on the point of the maximum speed.

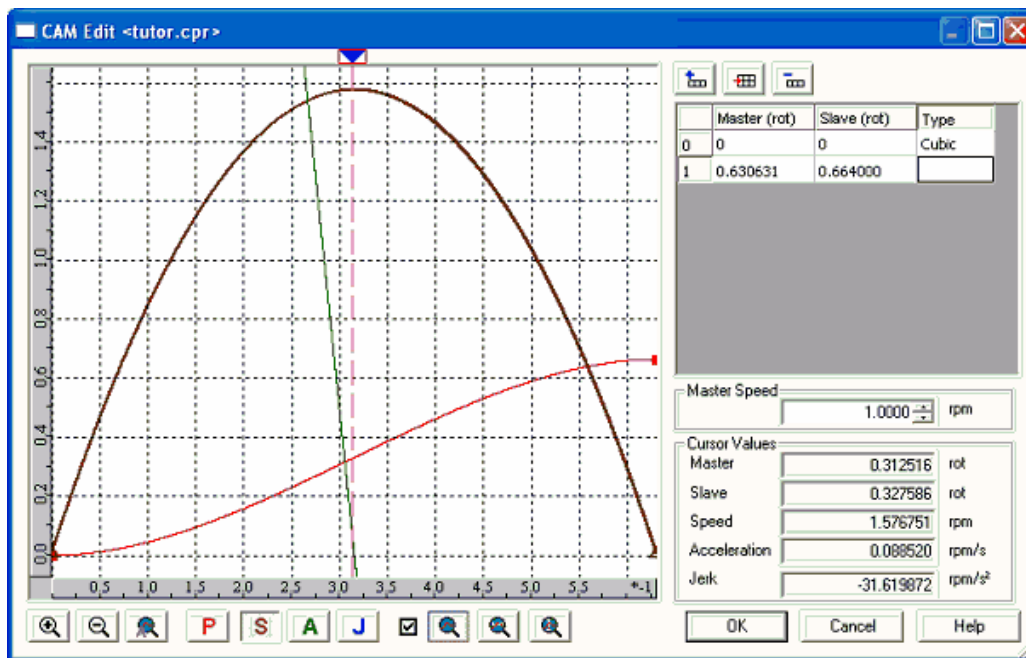


Please consider that the speed, acceleration and slave jerk values depend on the master speed. Thus we recommend changing them in order to simulate them very near the effective values. In the figure below the master speed will be changed to 1000 rpm and we will analyze the cursor at the same position.

Master Speed	1000	rpm
Cursor Values		
Master	0.312516	rot
Slave	0.327586	rot
Speed	1576.751405	rpm
Acceleration	88519.822218	rpm/s
Jerk	-31619871813.905342	rpm/s ²

During the cam profile design all these values must be considered since they may or not be executed due to the mechanical, electroelectronic limits of the installed equipment.

As the acceleration and the jerk charts are determined by considering the interpolation between two points at the junctions between the linear interpolations, the acceleration and jerk will be displayed as zero. However theoretically it is known that in a speed step the acceleration and jerk is infinitely variable. In the practice the acceleration and jerk depends at this moment on the mechanical, electrical and electronic limitations of the involved equipment. These speed steps should be noted and considered in the cam profile design. Figure below shows the condition as example.

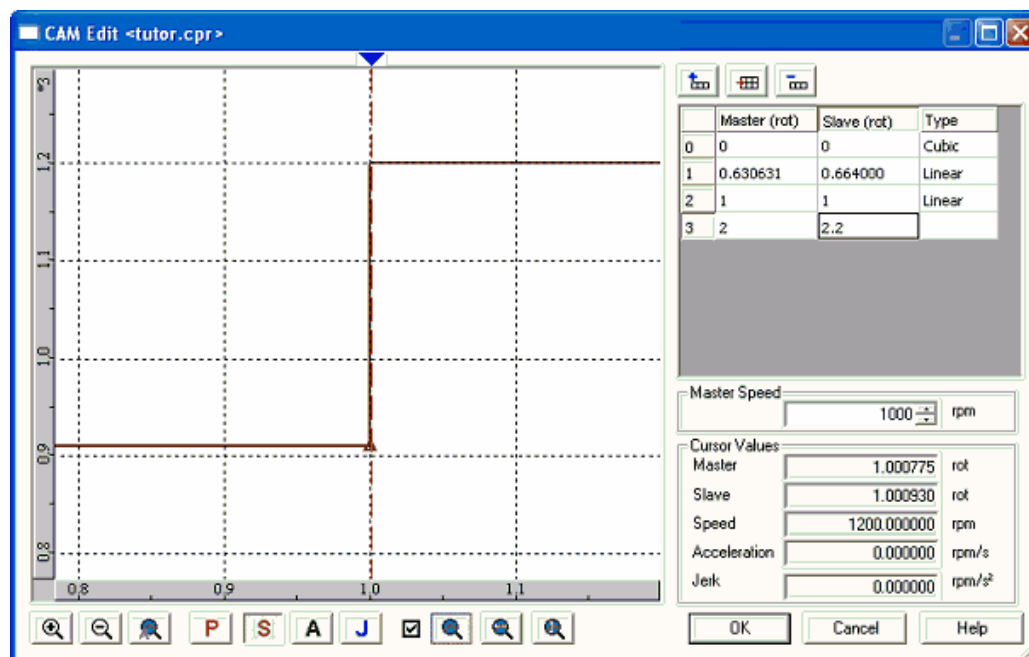

The CAM block has two different interpolation types: the linear and the cubic. Following equations are used:

- Linear :

$$p_e = p_{ie} * \left(\frac{p_{fm} - p_m}{p_{fm} - p_{im}} \right) + p_{fe} * \left(\frac{p_m - p_{im}}{p_{fm} - p_{im}} \right)$$

$$v_e = \left(\frac{-p_{ie}}{p_{fm} - p_{im}} + \frac{p_{fe}}{p_{fm} - p_{im}} \right) * v_m$$

$$a_e = 0$$

$$je = 0$$

- Cubic :

$$pe = a * (pm - pim)^3 + b * (pm - pim)^2 + c * (pm - pim) + pie$$

$$ve = (3 * a * (pm - pim)^2 + 2 * b * (pm - pim) + c) * vm$$

$$ae = (6 * a * (pm - pim) + 2 * b) * vm^2$$

$$je = 6 * a * vm^3$$

Were:

pe = slave position

ve = slave speed

ae = slave acceleration

je = slave jerk

pm = master position

vm = master speed

pim = initial master position

pfm = final master position

pie = initial slave position

pfe = final slave position

a = coefficient calculated bit the CAM editor

b = coefficient calculated bit the CAM editor

c = coefficient calculated bit the CAM editor

Changing one point in the cam profile:

One point in the cam profile can be changed through the point table by the direct editing or by moving the point in the chart. To move the point in the chart, place the cursor on the point which will be marked by a red square. Click on this red square and maintain the mouse activated and draw it to the new position.

Clicking on the point, the point table will be displaced to the desired point, selecting the related cell.


The moving operation of the chart point is interactive. The whole profile is calculated at every change of the point. The new point can be viewed in the point table.

Removing a point in the cam profile:

The point is removed directly on the point table. Select one of the cells relating to the point and click on the button "Remove Point".

Zoom of a determined chart area:

Click with the cursor on one of the edges of the region that should be zoomed and maintain the mouse button activated. Move the mouse to mark the region. At this moment a rectangle will be displayed on the chart. Release the mouse button and give a double click on this rectangle. Please find below an example of this zoom

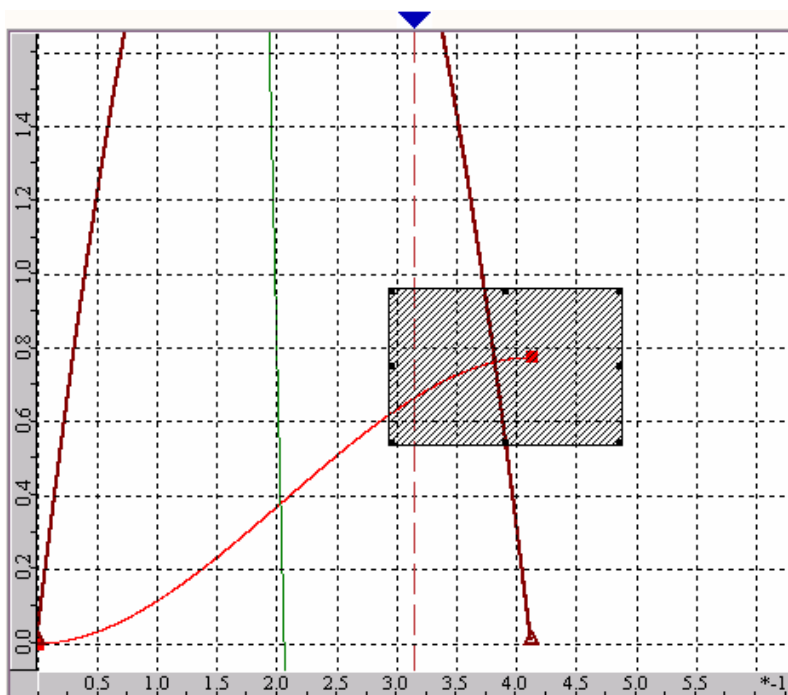


Moving the chart:

Press the key SHIFT and click with the cursor on the chart. Maintain the mouse button compressed. Move the cursor and the chart will move jointly.

Chart Menu:


To access the chart menu, place the cursor and click with the right mouse button on the chart area. Following menu will be displayed.

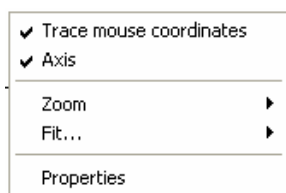

In this menu following operations can be executed:

- Enable/disable mouse coordinates
- Enable/disable x and y axis
- Execute Fit to Screen operations
- Execute Fit to Window operations
- Open the box with the chart properties

Figure below shows the box with the chart properties.

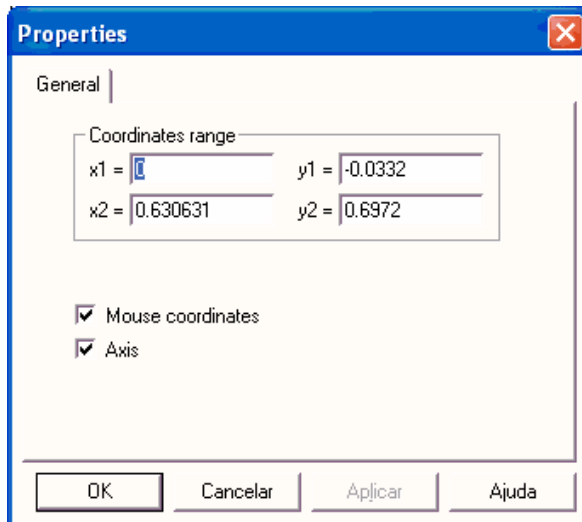


In the box of the chart properties you can execute following operations:

- Set manually the X and Y axis scale
- Enable/disable the mouse coordinates
- Enable/disable the X and Y axis

7.5.2.6 CALCCAM

 SYMBOL



DESCRIPTION

It is composed by 1 EN input and 1 ENO output.

The EN input is responsible for the block enabling.

The ENO output informs the instant when the block is finished.

The CALCCAM block is responsible for the calculable [CAM](#)^[139] blocks calculation (the CAM block profile type defined as calculable), according to the argument contents of these CAM blocks.

OPERATION

When the EN input changes from 0 to 1, the block is executed.


By finishing the calculable CAM blocks calculation, the ENO output changes to 1 during 1 scan cycle, returning later to 0.

NOTE!

At the first scan cycle after the download of the user program, the CALCCAM block loads the number of points, the values of the points and the interpolation types for the programmed arguments in the calculable CAM blocks.

EXAMPLE

Ladder:

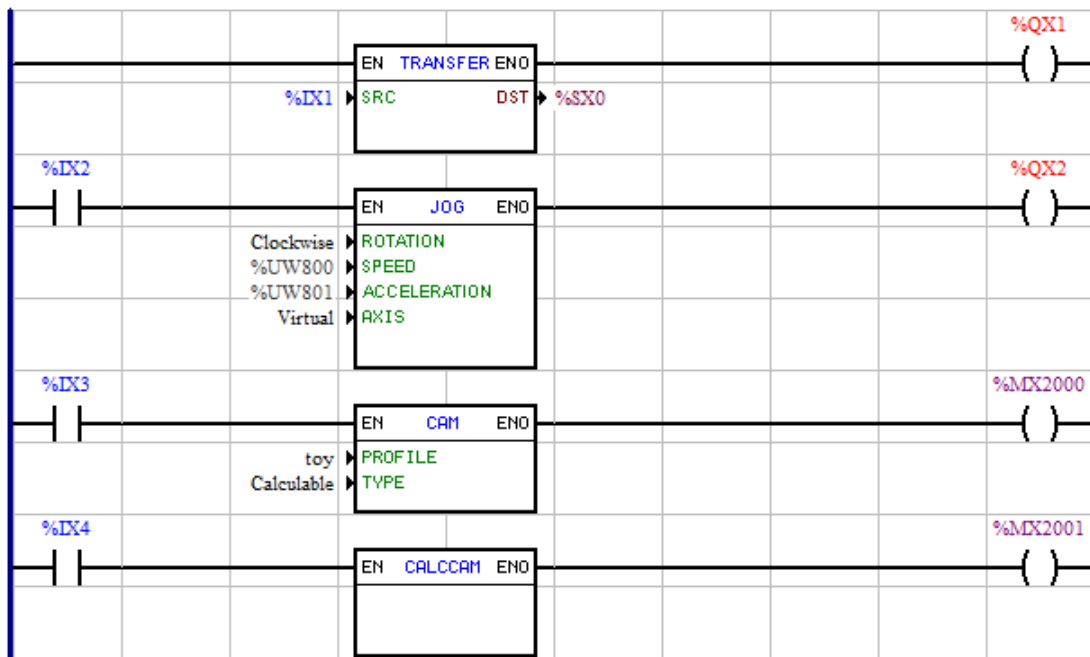

CAM block properties:

CAM

Profile
toy

Open Create Save As... Remove

Cam Profile Type
☐ Fixed ☒ Calculable

Maximum Number of Points
Constant 3

First Master Point
Float Marker 9500 Tag ...

First Slave Point
Float Marker 9503 Tag ...


First Curve Type
Bit Marker 1000 *Tag ...

Number of Points
%MW: Marcador de Word 6000 *Tag ...

Range: 1 ... 700

OK Cancel Help

CAM profile:

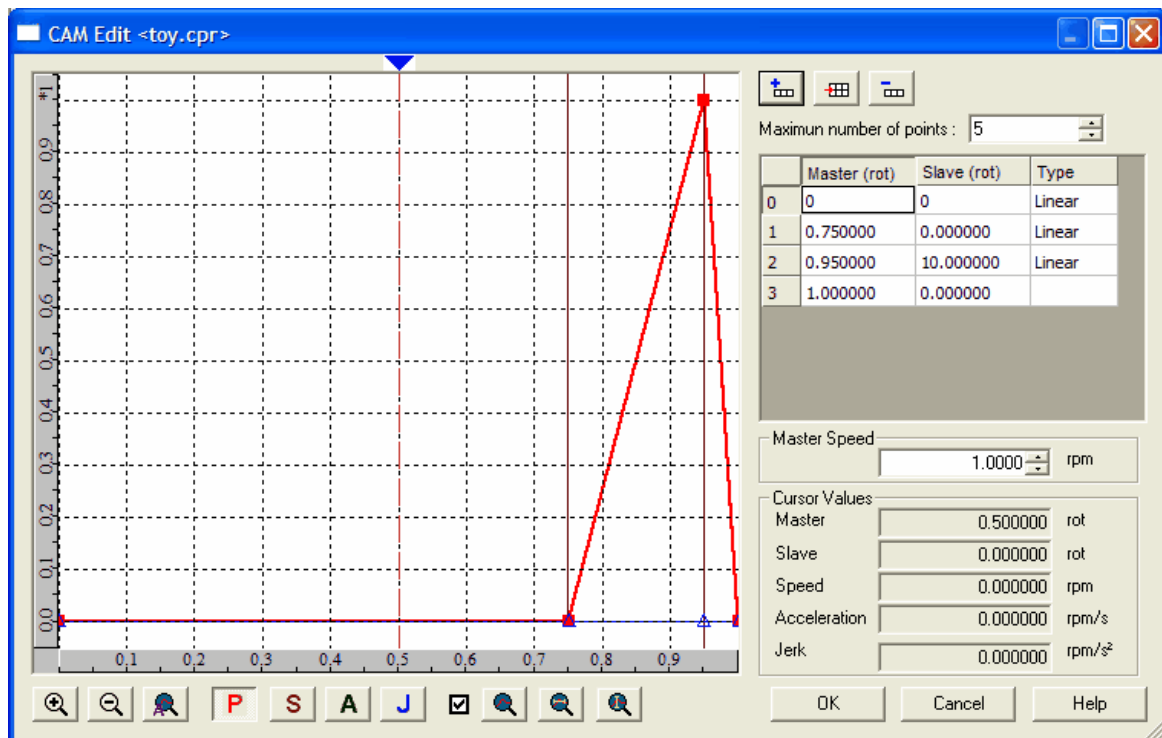

After the download of the user program the value 3 will be loaded into the %MW6000 word marker. The values 0.75, 0.95 and 1.0 into the %MF9500, %MF9501 and %MF9502 float markers, respectively. The values 0.0, 10.0 and 0.0 into the %MF9503, %MF9504 and %MF9505 float markers, respectively. And the values 0 (linear interpolation), 0 and 0 into the %MX1000, %MX1001 and %MX1002 bit markers, respectively.

When it is necessary to change a point of a calculable profile, it is enough to change the desired points at the respective defined markers and to execute the CALCCAM block.

In this example, in order to change the “toy” CAM profile previously demonstrated, it is enough to load the new values into the mentioned markers and to execute the CALCCAM block.

Important:


- The CALCCAM block will not be executed if a CAM block were active and the error E68 will be generated on its attempt.
- When executing the CALCCAM block with a marker used in the CAM profile containing an improper value, on the attempt of executing this CAM profile the error E53 will be generated and this CAM block will not be executed.

Improper Values:

- Number of Points value bigger than the Maximum Number of Points.
- Master Position value smaller than the Master Position of the previous point.

7.5.2.7 SHIFT

SYMBOL

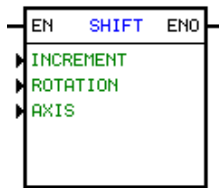

DESCRIPTION

It consists of 1 EN input, 1 ENO output and 3 arguments, as follows:

- increment
- [float result](#) ^[110]
- [axis](#) ^[109]

The EN input is responsible for the block enable.

OPERATION

If the EN input is 0, the block will not be executed and the ENO output remains at 0.


If the EN input is 1 and no positioning block is active, excepting the block Follow, then the block increments the motor shaft position by the positioning increment value per second.

As soon as the EN input changes to 0, the position increment stops and the ENO output changes to 1 during a scan cycle, and then returns to 0 again.


NOTE: The increment can be updated online.

Important: This block operates in position loop and remains in this status even after ending the work.


FLOW CHART

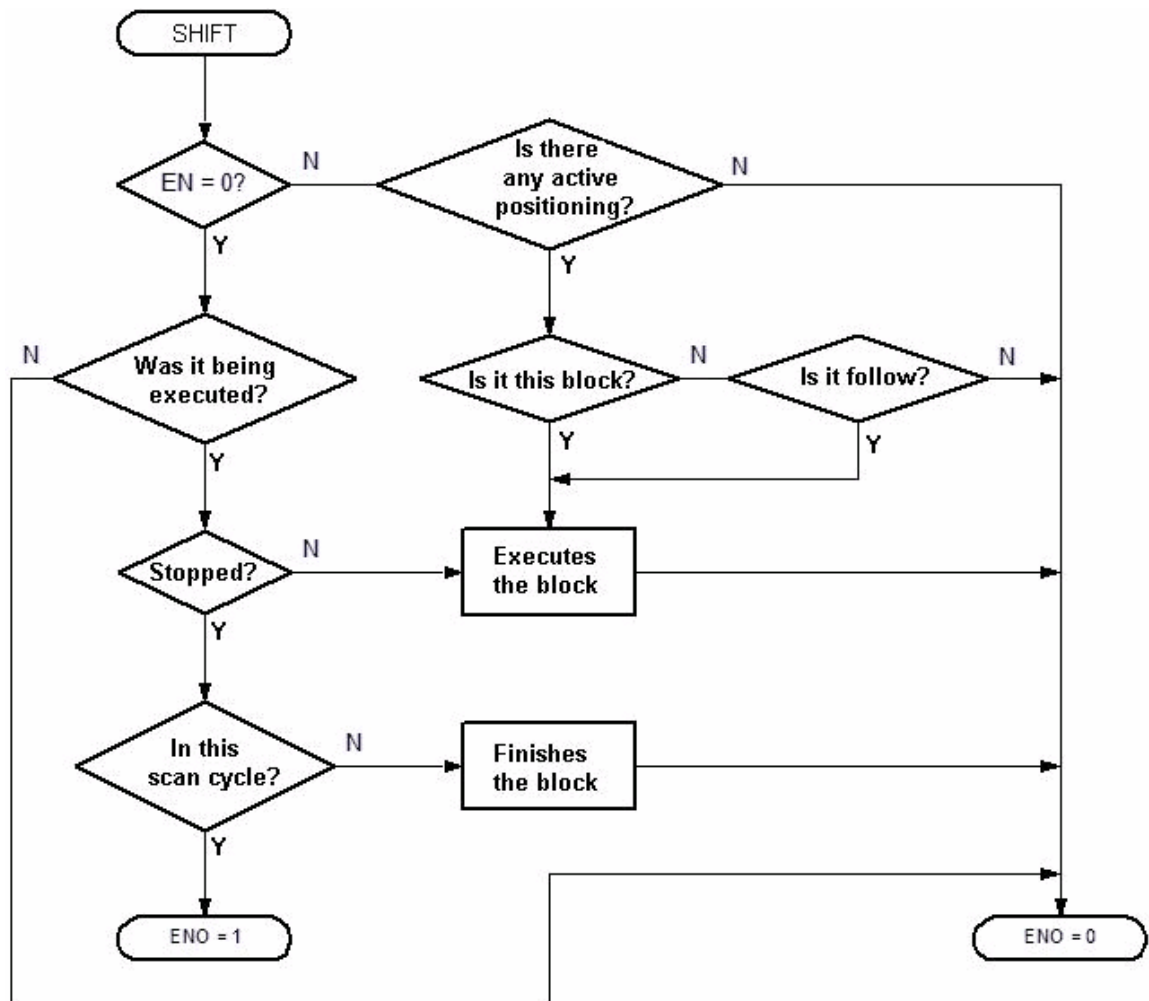

CHART

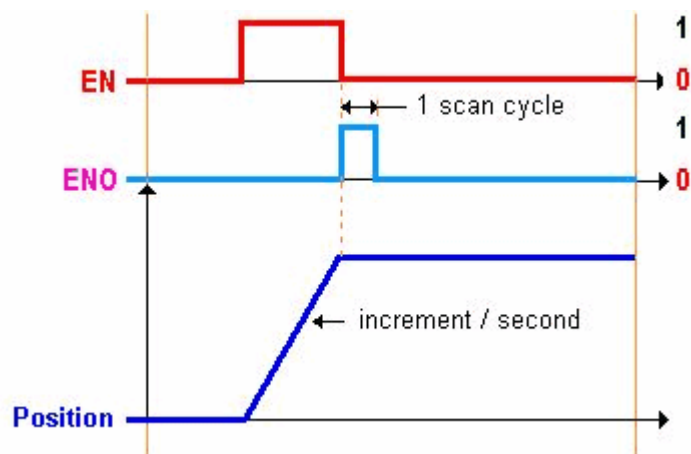

EXAMPLE

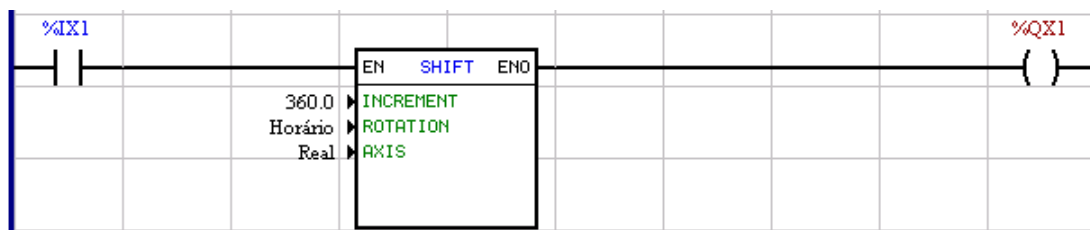

When the digital input 1 is activated, the motor shaft will run 360° within one second in the clockwise direction of rotation.

7.5.2.8 MC_CamTableSelect

SÍMBOLO



DESCRIÇÃO

Seleciona uma tabela de pontos de uma curva CAM previamente programada através da ferramenta CAM PROFILES.

Para o uso do bloco [MC_CamIn](#)^[159], uma tabela de pontos deverá ser selecionada através do bloco MC_CamTableSelect ou a tabela de pontos deverá ser calculada através do bloco [MW_CamCalc](#)^[158].

Quando houver uma transição de 0 para 1 na entrada Execute, o bloco será iniciado e executado de acordo com os argumentos configurados.

Quando a tabela for selecionada com sucesso, a saída Done vai para 1 durante um ciclo de scan ou enquanto a entrada Execute estiver em 1.

ARGUMENTOS

É composto por 1 entrada Execute, 1 saída Done e 9 argumentos, sendo eles:

- [Master](#)^[107]
- [Slave](#)^[107]
- [Cam Table](#)^[107]
- [Periodic](#)^[107]
- [Busy](#)^[107]
- [Error](#)^[107]
- [Error Id](#)^[107]
- [Cam Table ID](#)^[107]
- [Bloco Retentivo](#)^[107]

A entrada Execute é responsável pela habilitação do bloco.

A saída Done informa o instante em que o bloco é finalizado com sucesso.

ERROS DO BLOCO



EXEMPLO



Na transição de 0 para 1 do marcador de bit 8000, o bloco MC_CamTableSelect é executado, com isso a tabela de pontos "3" (conteúdo do marcador de word 13000) poderá ser utilizada pelo bloco MC_CamIn.

Ao executar o bloco, a saída Done, marcador de bit 8001, é setado e permanece em 1 enquanto a entrada Execute, marcador de bit 8000, está setado.

Nesse exemplo, o marcador de bit 8001 garante que o bloco MC_CamIn não será acionado antes do bloco MC_CamTableSelect ser executado com sucesso.

7.5.2.9 MW_CamCalc

SÍMBOLO



DESCRIÇÃO

Calcula uma tabela de pontos de uma curva CAM.

Quando houver uma transição de 0 para 1 na entrada Execute, o bloco será iniciado e executado de acordo com os argumentos configurados.

Quando a tabela de pontos estiver disponível, a saída Done vai para 1 durante um ciclo de scan ou enquanto a entrada Execute estiver em 1.

ARGUMENTOS

É composto por 1 entrada Execute, 1 saída Done e 13 argumentos, sendo eles:

- [Master](#)^[107]
- [Slave](#)^[107]
- [Number Of Points](#)^[107]
- [Master Points](#)^[107]
- [Slave Points](#)^[107]
- [Curve Type](#)^[107]
- [Periodic](#)^[107]
- [Table](#)^[107]
- [Busy](#)^[107]
- [Error](#)^[107]
- [Error Id](#)^[107]
- [Cam Table ID](#)^[107]
- [Bloco Retentivo](#)^[107]

A entrada Execute é responsável pela habilitação do bloco.

A saída Done informa o instante em que o bloco é finalizado.

ERROS DO BLOCO



EXEMPLO



Na transição de 0 para 1 do marcador de bit 8000, o bloco MW_CamCalc é executado e a tabela de pontos 11 (marcador de word 13001) será calculada de acordo com os argumentos do bloco.

Nesse exemplo, o número de pontos da curva será o conteúdo do marcador de word 13000 (2 pontos), a posição do eixo mestre será de acordo com os conteúdos dos marcadores de double 18000 e 18001 (3 e 7 voltas), a posição do eixo escravo será de acordo com os conteúdos dos marcadores de double 18010 e 18011 (10 e -5 voltas) e o tipo da curva será de acordo com os conteúdos dos marcados de word 13100 e 13101 (0 - linear e 1 - spline cúbica).

Colocando os mesmos valores na ferramenta CAM PROFILES podemos observar a curva abaixo:



Ao finalizar o cálculo da tabela de pontos 11, a saída Done, marcador de bit 8001 é setado enquanto a entrada Execute permanece setada.

Com o marcador de bit 8001 setado, o bloco [MC_CamIn](#)^[159] poderá ser executado.

7.5.2.10 MC_CamIn

SÍMBOLO



DESCRIÇÃO

O bloco MC_CamIn é responsável pela execução de um posicionamento definido por uma tabela de pontos de uma curva CAM previamente selecionada pelo bloco [MC_CamTableSelect](#)^[157] ou previamente calculada pelo bloco [MW_CamCalc](#)^[158].

Quando houver uma transição de 0 para 1 na entrada Execute, o bloco será iniciado e executado de acordo com os argumentos configurados.

ARGUMENTOS

É composto por 1 entrada Execute, 1 saída InGear e 11 argumentos, sendo eles:

- [Master](#)^[107]
- [Slave](#)^[107]
- [Cam Table ID](#)^[107]
- [Buffer Mode](#)^[107]
- [Busy](#)^[107]
- [Active](#)^[107]
- [Command Aborted](#)^[107]
- [Error](#)^[107]
- [Error Id](#)^[107]
- [End Of Profile](#)^[107]
- [Bloco Retentivo](#)^[107]

A entrada Execute é responsável pela habilitação do bloco.

A saída InGear informa o instante em que o bloco está ativo.

MODO DE OPERAÇÃO

Ao executar o bloco MC_CamIn, o drive passará a operar em malha de posição e permanece assim mesmo após a conclusão do bloco. Deve-se ajustar o ganho proporcional de posição (P0159) para obter um melhor desempenho do drive.

Na execução do bloco o estado do eixo mudará para "Synchronized Motion".

ERROS DO BLOCO



EXEMPLO



Na transição de 0 para 1 do marcador de bit 8000, o bloco MW_CamCalc é executado e a tabela de pontos 11 (marcador de word 13001) será calculada de acordo com os argumentos do bloco.

Ao finalizar o cálculo da tabela de pontos 11, a saída Done, marcador de bit 8001 é setado enquanto a entrada Execute permanece setada.

Com o marcador de bit 8001 setado, o bloco MC_CamIn poderá ser executado.

Na transição de 0 para 1 do marcador de bit 8002, o primeiro bloco MC_CamIn é executado.

Caso houver a necessidade de algum ajuste na tabela de pontos da curva CAM, basta fazer o ajuste nos marcadores de double 18000, 18001, 18010 e 18011, mudar o conteúdo do marcador de word 13001 para 12 e executar novamente o bloco MW_CamCalc.

Na transição de 0 para 1 do marcador de bit 8003, o segundo bloco MC_CamIn (Buffer Mode programado Buffered) será executado (sem perda de posição do eixo mestre) assim que o primeiro bloco MC_CamIn terminar de executar a curva em execução.

7.5.2.11 MC_CamOut

SÍMBOLO



DESCRIÇÃO

Finaliza o bloco [MC_CamIn](#)^[159].

Quando houver uma transição de 0 para 1 na entrada Execute, o bloco será executado e o sincronismo existente será finalizado. O eixo manterá a velocidade do instante em que o bloco é executado.

ARGUMENTOS

É composto por 1 entrada Execute, 1 saída Done e 5 argumentos, sendo eles:

- [Slave](#)^[107]
- [Busy](#)^[107]
- [Error](#)^[107]
- [Error Id](#)^[107]
- [Bloco Retentivo](#)^[107]

A entrada Execute é responsável pela habilitação do bloco.

A saída Done informa o instante em que o bloco [MC_CamIn](#)^[159] é finalizado.

MODO DE OPERAÇÃO

Ao executar o bloco MC_CamOut, o drive não opera em malha de posição.

Na execução do bloco o estado do eixo mudará para "Continuous Motion".


ERROS DO BLOCO



7.5.3 Movement

7.5.3.1 SETSPEED

SYMBOL

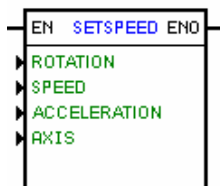

DESCRIPTION

The block is formed by 1 EN input, 1 ENO output and 4 arguments being:

- [direction of rotation](#) ^[109]
- [speed](#) ^[108]
- [acceleration](#) ^[108]
- [axis](#) ^[109]

The EN input is responsible for the block enable.

The output ENO informs when the motor speed reaches the programmed speed.

OPERATION

If the EN input is 0, the block is not executed and the ENO output remains at 0.


If the EN input changes from 0 to 1 and no other movement block is active, exception the block Set Speed, a trapezoidal profile is executed based on the characteristics programmed in the arguments and will not be finished unless a STOP block is activated. However other blocks Set Speed may be enabled online, thus changing the programming of its arguments.

To finish this movement you must use the stop block.


The ENO output changes to 1 onl during one scan cycle, as the block reaches the programmed speed. Otherwise it is always 0.

Important: This block works in speed loop and remains in this status even arter it has been concluded.


FLOWCHART

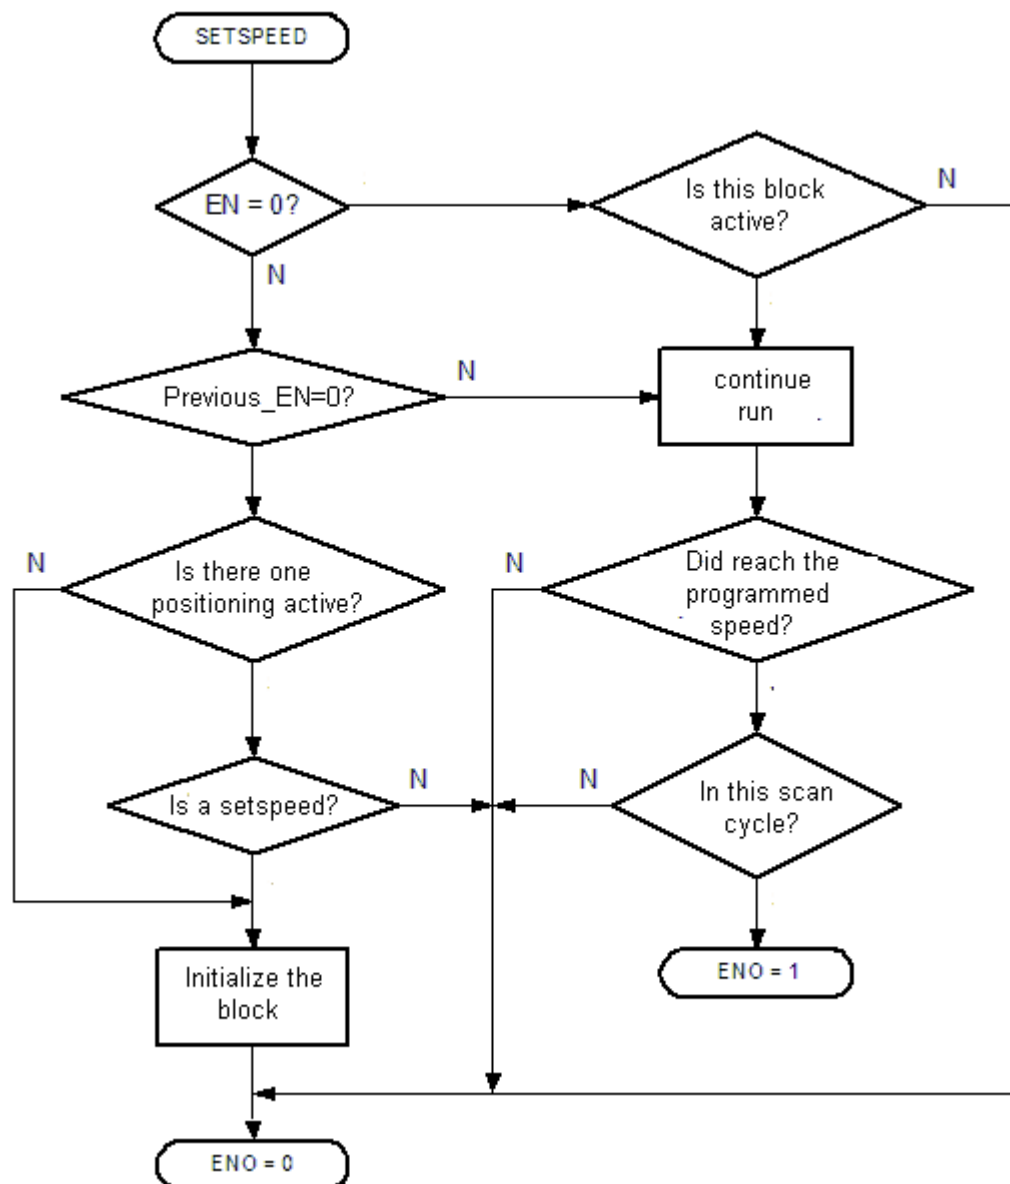

CHART

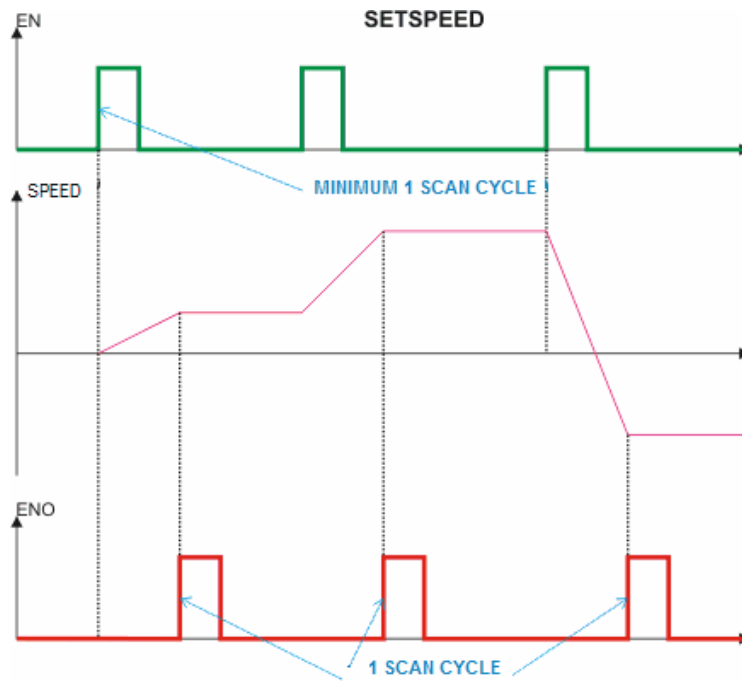

EXAMPLE

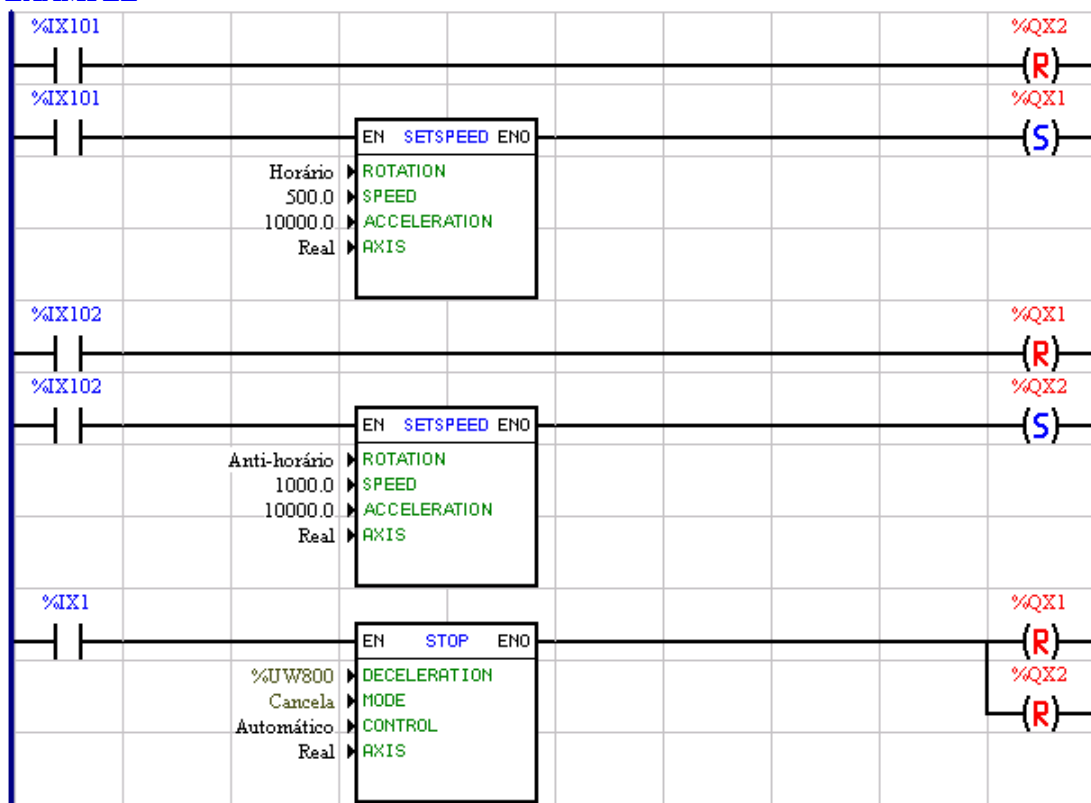


During the transition from 0 to 1 of the digital input 1 of the drive, the block with speed of 500 rpm in clockwise direction of rotation is triggered. As soon as this speed is reached, the digital output 1 is set. During the transition from 0 to 1 of the digital input 2 of the drive, the block with speed of 1000 rpm in counter-clockwise direction of rotation is triggered and the digital output 1 is reset. If the digital input 1 is

driven any one of the two previous movements that is active is cancelled and the motor stops and both outputs 1 and 2 are reset.

7.5.3.2 JOG

SYMBOL

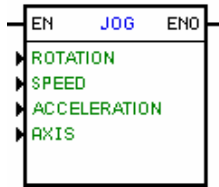

DESCRIPTION

It is formed by 1 EN input, 1 ENO output and 4 arguments, being:

- [direction of rotation](#) ^[109]
- [speed](#) ^[108]
- [acceleration](#) ^[108]
- [axis](#) ^[109]

The EN input enables this block.

OPERATION

If the EN input is 0, this block is not executed, the ENO output remains at 0.


If the EN input goes 1 and no other movement block is active, the block starts a trapezoidal profile based on the characteristics programmed in the arguments and then keeps in the desired velocity, until the EN input goes 0, then starts the deceleration.

When the speeds reaches the zero value, the block has been finished, the ENO output goes 1 for one scan cycle and then returns to 0.


NOTE: The JOG speed does not change unless you start another move.

Important: This block work in speed loop, and remains in this status when the block has been finished.


FLOWCHART

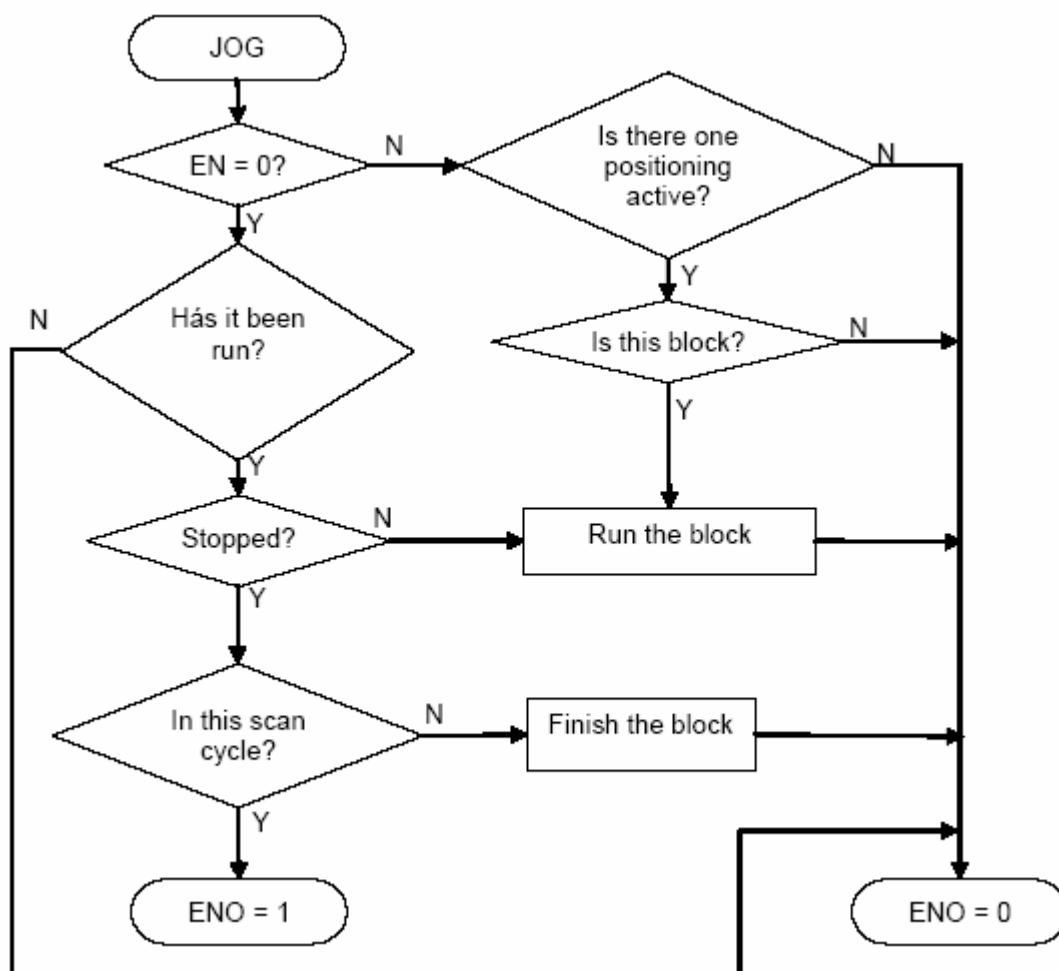

CHART

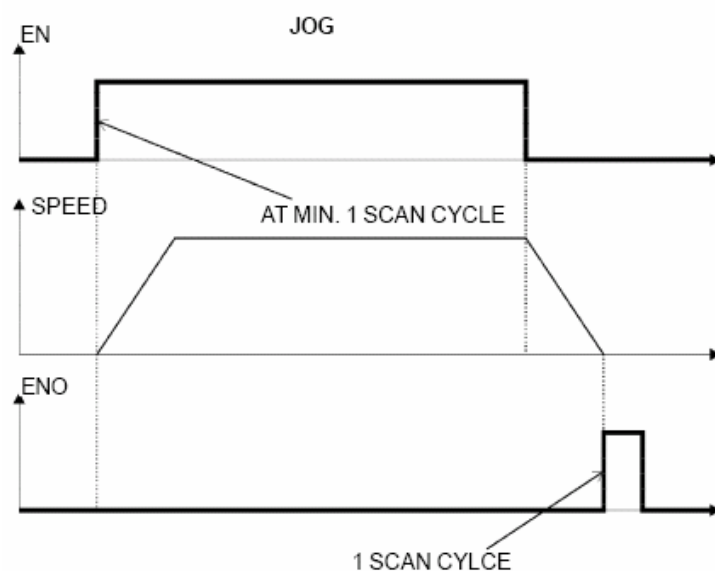


EXAMPLE

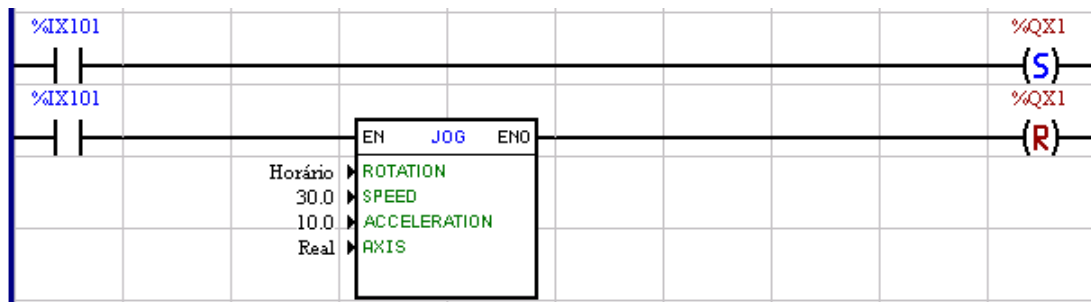

When the digital input 1 of the drive is 1, the digital output 1 is set and at the same time JOG is enabled at a speed of 0.3 RPS. When the input 1 returns to 0, at the moment when the block ends, i. e., when it stops completely, the output 1 is reset.

7.5.3.3 SPEED

SYMBOL:

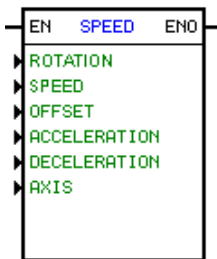

DESCRIPTION:

The SPEED block is formed by 1 input EN, 1 output ENO and 5 arguments, being:

- [direction of rotation](#) ^[109]
- [speed](#) ^[108]
- [offset](#) ^[108]
- [acceleration](#) ^[108]
- [deceleration](#) ^[108]
- [axis](#) ^[109]

The input EN enables this block.

The output ENO informs that this block is being executed.

The SPEED block is responsible for writing the speed reference according to the direction of rotation, speed, offset, acceleration and deceleration references for the axis selected by the axis parameter.

OPERATION:


When the input EN has been set to 0, the block does not operate and the output ENO is zero.

If the Input EN is 1 and no other moving block is active, a trapezoidal profile will be executed based on the characteristics that has been programmed in the arguments to reach the speed that has been programmed in the SPEED block. At this moment the argument OFFSET is added to the output of this profile and the output ENO changes to 1.

If the input EN changes from 1 to 0 and the SPEED block is active, a trapezoidal profile will be executed based on the characteristics that has been programmed in the moving arguments. When the speed is equal to zero the output ENO changes to 0.

Please find below more details about the block diagram, flow chart, graph and example.

BLOCK DIAGRAM:

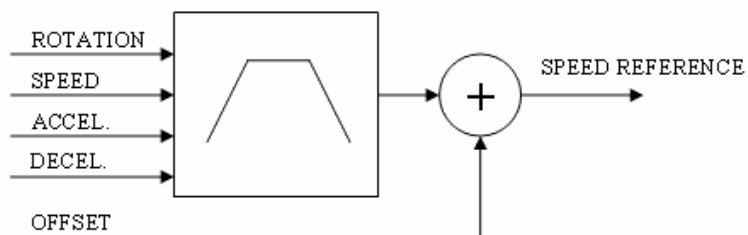

FLOWCHART:

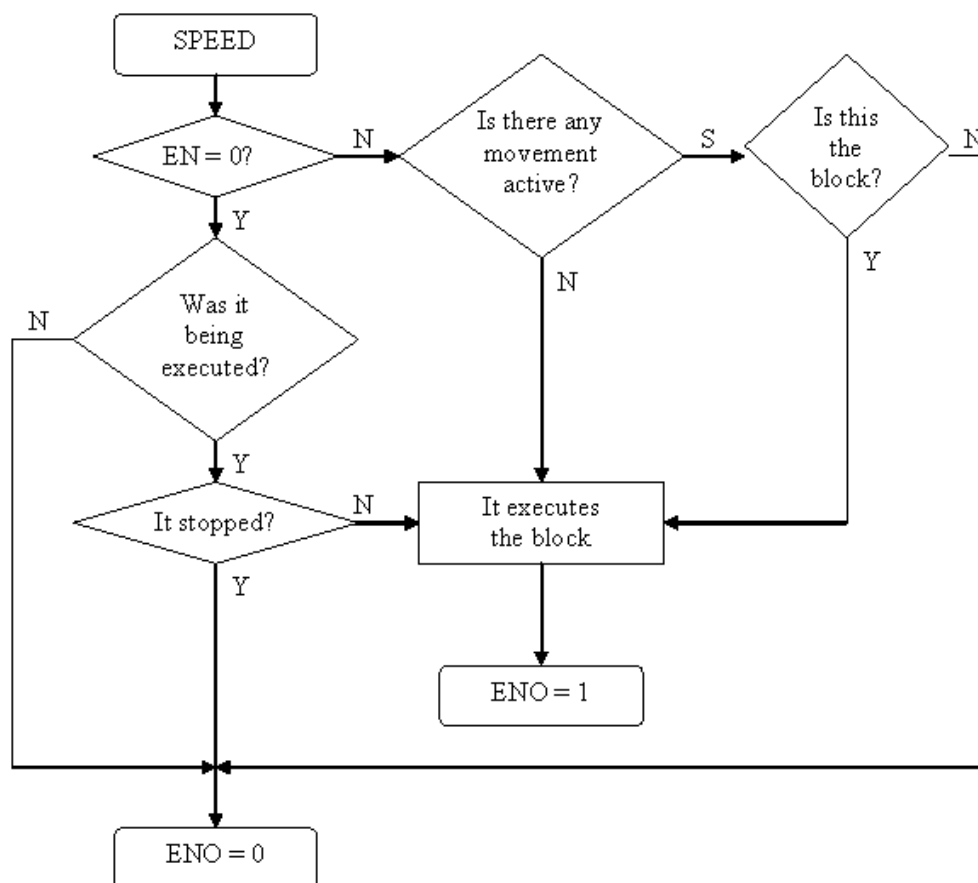
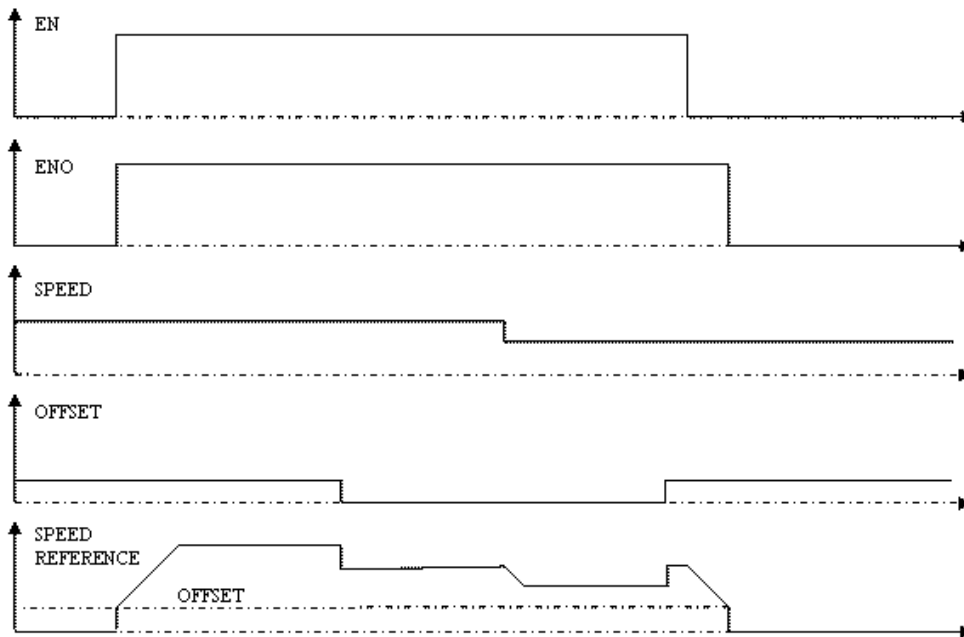
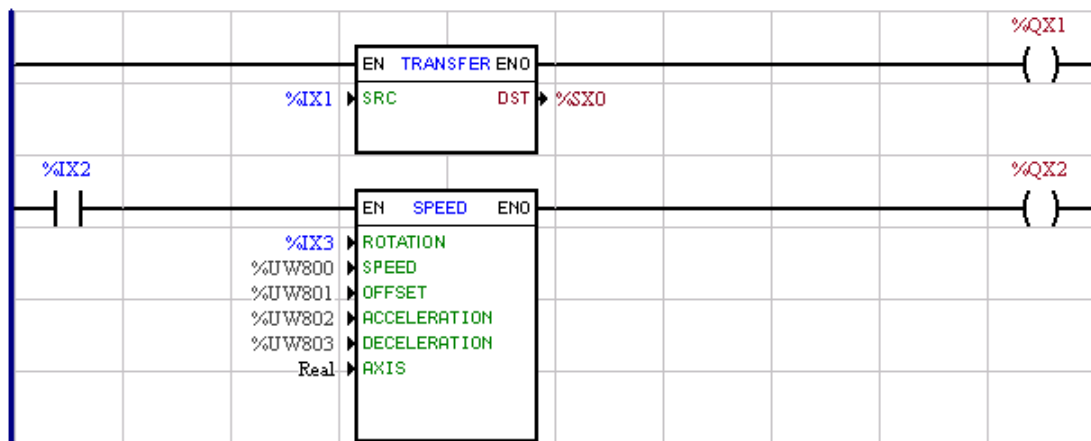
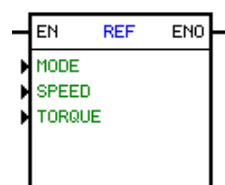


CHART:

**EXAMPLE:**

The digital input %IX1 enables the drive.

The digital input %IX2 enables the block SPEED which through its direction of rotation, speed, offset, acceleration and deceleration parameters will generate a speed reference for the effective axis.

7.5.3.4 REF**SYMBOL:**

DESCRIPTION:

It is composed by 1 EN input, 1 ENO output and the 3 following arguments:

- "MODE" – [Control Mode](#)^[110]
- "SPEED" – [Speed](#)^[108]
- "TORQUE" – [Torque Current](#)^[111]

The EN input is responsible for enabling the block and for sending the run/stop command to the drive. The ENO output informs that the block is enabled and being executed,

The REF block is responsible for writing the speed reference or the torque current reference for the drive control (ramps, speed direction, etc...). The selection of the reference type is done at the "MODE" argument. The speed reference has the options of 13 bit value or rpm. The torque current reference is set in percentage of the motor nominal current.

OPERATION:

- Speed Mode:

If the EN input is 0, then the block is not executed and the ENO output stays 0.

If the EN input is 1, the drive general enable is active, and no other movement block is active, then the run/stop command goes to 1, the speed reference is written at the drive and the ENO output goes to 1.

If the EN input suffers a transition from 1 to 0 while the block were active, the run/stop command goes to 0 and the ENO output also goes to 0.

- Torque Mode:



If the EN input is 0, then the block is not executed and the ENO output stays 0.


If the EN input is 1, the drive control mode is vector (with encoder or sensorless), the drive general enable is active, and no other movement block is active, then the run/stop command goes to 1, the torque current reference is written at the drive and the ENO output also goes to 1.

If the EN input suffers a transition from 1 to 0 while the block were active, the speed mode is activated, the run/stop command goes to 0 and the ENO output also goes to 0.


NOTE: Negative values for speed reference or torque current reference impose a opposite movement of the motor of the direction defined on the drive..

FLOWCHART:

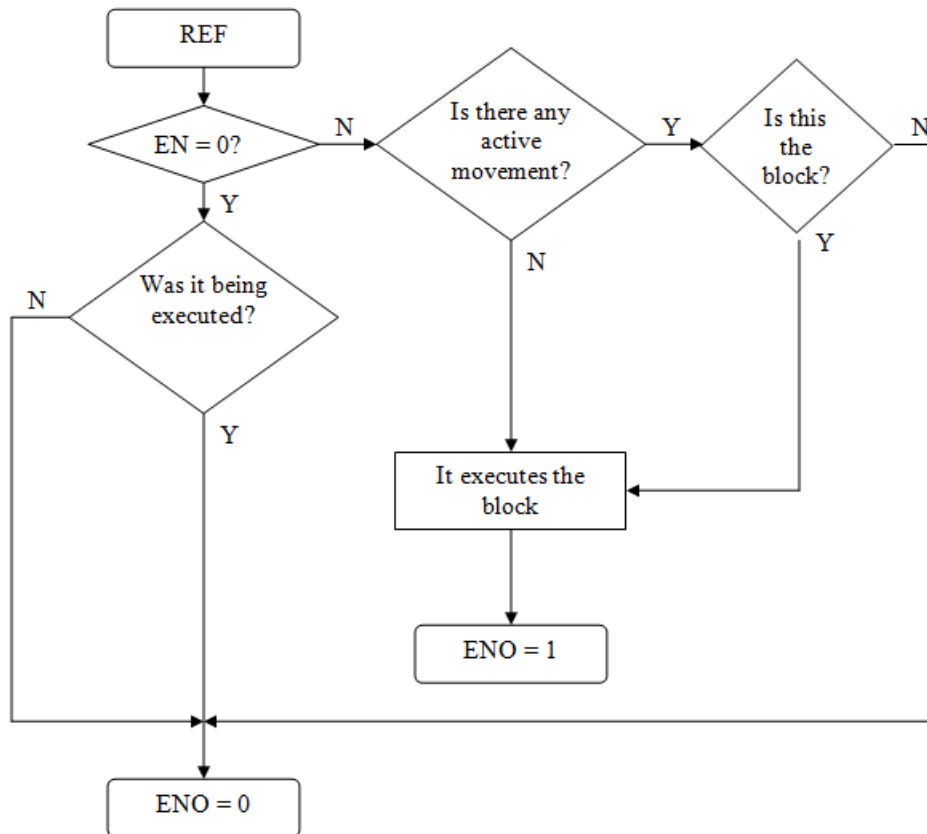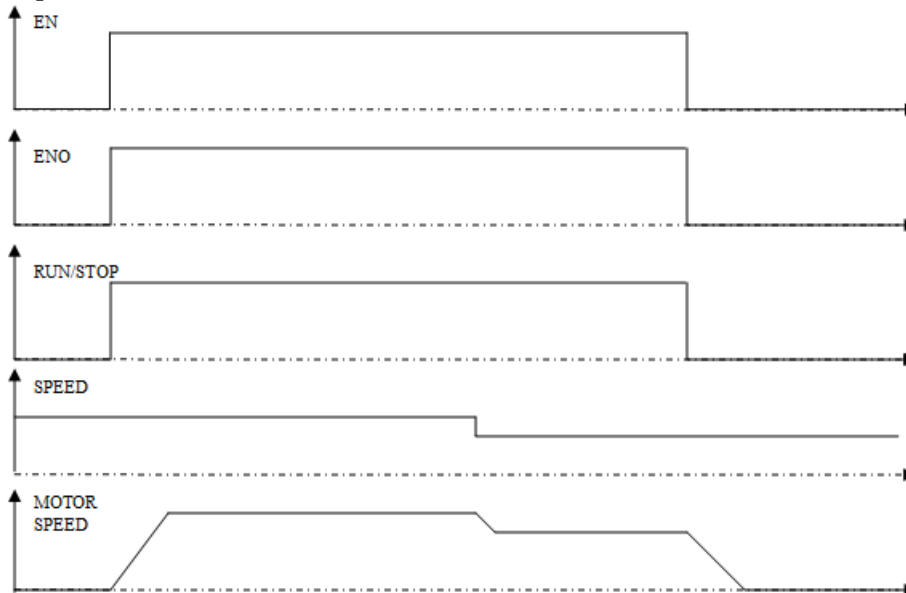**CHART:****- Speed Mode:****- Torque Current Mode:**

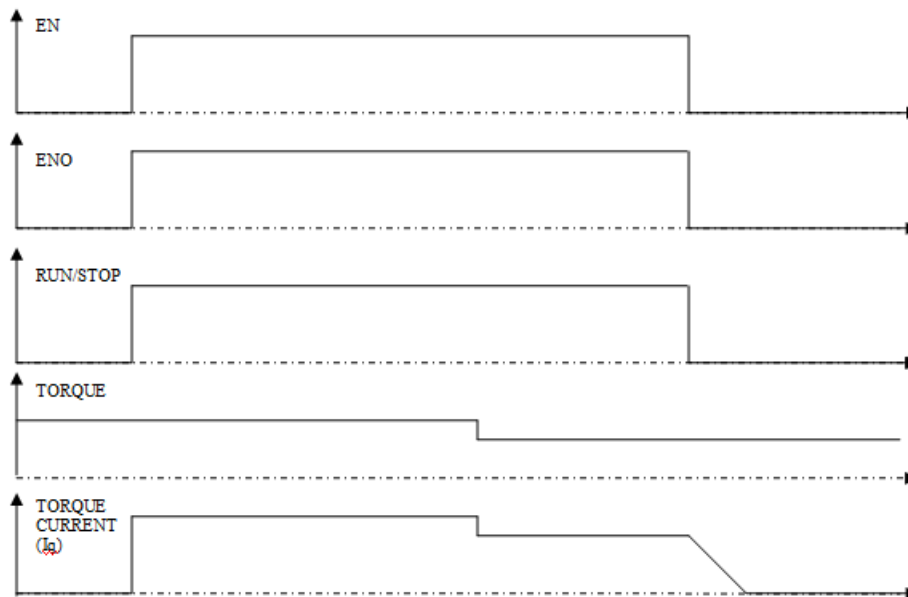

EXAMPLE:

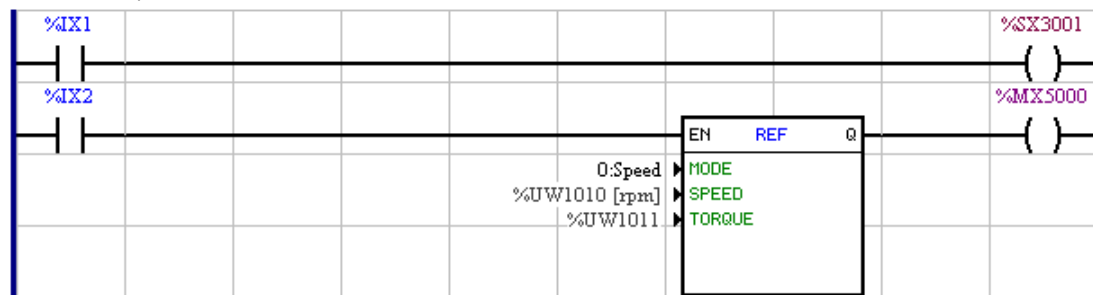


The %X1 digital input activates the drive general enable.

The %X2 digital input enables the REF block, which is programmed to be only speed reference, being then sent to the drive the speed reference value contained in the user parameter P1010.

7.5.4 Gear-Box

7.5.4.1 FOLLOW

SYMBOL

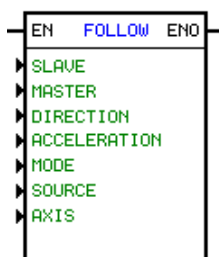

DESCRIPTION

It is formed by 1 EN input, 1 ENO output and 5 arguments being:

- [Synchronism Relation](#) ^[172]

- [Direction](#)^[109]
- [Acceleration](#)^[108] - If 0, the acceleration is disabled.
- [Mode](#)^[172]
- [Source](#)^[172]
- [Axis](#)^[109]

The EN input is responsible to keep the master sending position and speed data throw CAN net.
The ENO output informs if the CAN is enabled.

Synchronism Relation

The synchronism relation is formed by a data type and two address or constants values, depending on the chosen data type.

The data type may be:

- constant
- user parameter
- work marker

The address or constants values are destinate to master relation and slave relation.

Mode

The mode is a constant.

It may be:

- speed - control only the speed synchronism
- position - control the position and speed synchronism (only to POS2)

Source

The source of sincronism is a constant.

It may be:


- encoder (only to POS2)
- CAN network (master must have the block [MSCANWEG](#)^[212] enabled)
- CANopen network (enabled via [WSCAN](#)^[52] for PLC11-01 and PLC11-02 with firmware version >= 1.20)

OPERATION

If the master drive would be sending the data through CAN net, and the input EN of FOLLOW block would be activated, the slave motor follow the master motor with the values of the synchronism relation in speed loop.

Only when the slave motor achieves the specified relation of master motor, the output ENO of the block will be set.


EXAMPLE

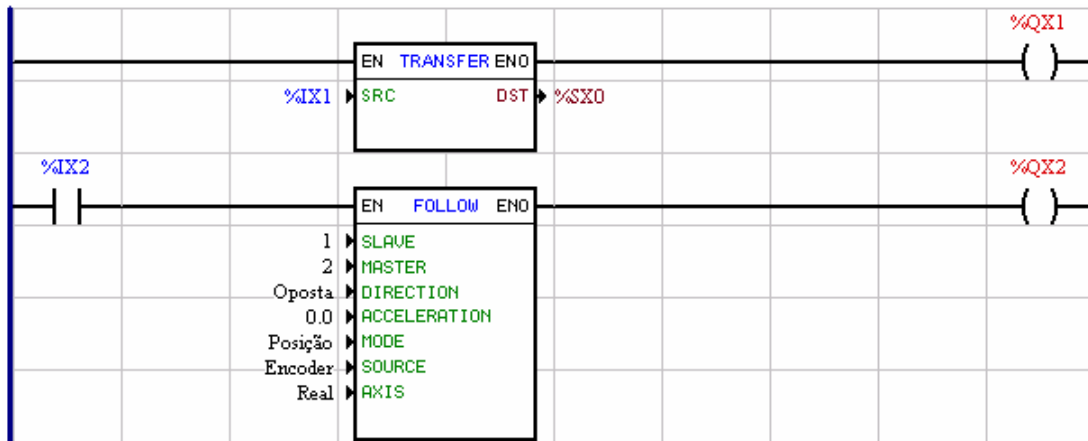

If the master are sending the data through the CAN net, the slave motor run the 1/2 times the speed of master motor.

7.5.4.2 AUTOREG

SYMBOL

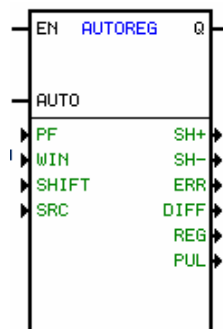

DESCRIPTION

The block Autoreg consists of 2 inputs EN and AUTO, 1 output ENO and 10 arguments, as follow:

- pf (print format) - float that defines the pulse distance between 2 signals received at index input (zero pulse)
- win (window) - float that defines the window that activate the reading of the signal in the index input
- shift - float that defines the maximum pulse number that can be corrected by scan cycle
- src (source) - constant word that defines if counting is executed by encoder or resolver
- sh+ - bit marker that indicates that the shift block in clockwise direction should be activated
- sh- - bit marker that indicates that the shift block in counterclockwise direction should be activated
- err - word marker that defines the current block error
- reg - float marker that indicates the number of pulses between the 2 last signals at the index input
- pul - indicates the number of pulses received since the last signal was received at the index input

EN input is responsible for the block enable.

AUTO input activates the error compensation.

ENO output changes to 1 only after the block captures the third index signal and there is no fatal error.

NOTE: The signal index is received by pin 8 of the connector XC8 (signal Z).

OPERATION

This function aims at to correct the synchronization always a position variation between 2 signals received by the photocell. The photocell signal, called INDEX, is received by the same pin through which the board receives the encoder zero pulse signals. Therefore the encoder zero pulse signal should NEVER be connected.

Thus always the block is enabled (EN = 1), the INDEX read is enabled. So when the 2 first INDEX's are detected, the received number of pulses received during this interim is stored in the REG (register). This number of pulses is supplied by the RESOLVER (SRC = 0) or by the ENCODER (SRC = 1). SRC (source) is a block programming option and the standard value is always given by the RESOLVER.

After first INDEX has been received, this function activates only the read of the next INDEX after the number of PF (PRINT FORMAT) pulses has been received in a window specified by WIN (WINDOW). Thus the INDEX read will be valid only in the $- WIN \leq PF + WIN$ (clockwise) or $PF + WIN$ and $PF - WIN$ (counter-clockwise).

PF must be configured with pulse value that REG should show, after the 2 first INDEX's have been captured (REG will not be changed longer). If there is a greater difference than the value configured in WIN (WINDOW), the code 2 will be shown in ERR (error code).

After the initialization, the values achieved among the INDEX's will be compared with the PF value. The value of this difference will be stored in DIFF (DIFFERENCE). If DIFF is higher than WIN, the code 1 will be displayed in ERR.

SH+ will be changed to 1 only, if the INDEX is received with lesser pulses than the PF and SH- will be changed to 1 only, if the INDEX is received with more pulses than the PF.

NOTE: When PF is set to 0, ERR, WIN and SHIFT have no function. The pulse difference module at each 2 INDEX is stored in DIFF. Is the difference is positive, SH + changes to 1. Otherwise, SH- changes to 1.

When AUTO (AUTOMATIC) is 0, the block operates in manual mode. When 1, the automatic mode is enabled, executing compensation and trying to bring DIFF to 0. The compensation is executed as function of the SHIFT value, which is given by scan cycle.

After the third INDEX, i. e., after the initialization, the Q output changes to 1, and remains in this status while EN is 1 and no error is detected, excepting the negative errors that are not fatal errors.

PUL is the number of pulses received after the last INDEX. This value is updated during the scan cycle.

OTHER INFORMATION

- EN: block enable. 0: inactive, 1 active

- AUTO: 0: the block is in Manual mode, i. e., no correction (SHIFT) is executed, even when a difference between PF and REG is detected.

1: block in automatic mode, i. e., any difference detected between PF and REG activates the SHIFT block (if it is not active yet) and forces a correction of this error.

- Q: 0: indicates that the block is not enabled, or it has not concluded the initialization process yet (it did not receive the 2 INDEX) or there is any error.

1: indicates that the block is operating normally, i. e., all parameters can be used already with safety.


- PF: is the PRINT FORMAT, i. e., it is the distance in number of pulses between 2 INDEX's. If any INDEX is received before the $PF - WIN$ or after the $PF + WIN$, the read is ignored. If its value is zero (0), the INDEX will be read always.

- WIN: window for INDEX actuation. See PF.
- SHIFT: values of the maximum correction during the scan cycle, when there is an error between PF and REG and the block is in automatic mode.
- SRC: 0: resolver, 1: encoder
- ERR: block error code.
 - 2: 1 INDEX was not received or it was received after PF + WIN (this error is not fatal)
 - 1: PF has a value different from REG after the 2 INDEX (this error is not fatal)
 - 0: no error
 - 1: INDEX received after PF + WIN
 - 2: $|PF - REG| > WIN$ after receiving 2 INDEX (initialization).
- SH+: 0: normal, 1: a positive correction is required
- SH-: 0: normal, 1: a negative correction is required
- DIFF: $|PF - REG|$ in pulses
- REG: number of pulses between 2 INDEX
- PUL: number of pulses detected after the last INDEX

7.5.5 Verify

7.5.5.1 INPOS

SYMBOL

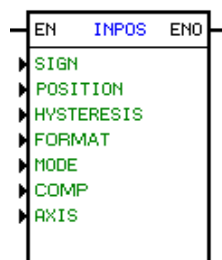

DESCRIPTION

It consists of 1 EN input, 1 ENO output and 4 arguments, as follows:

- [position](#) ^[107]
- [hysteresis](#) ^[175]
- [mode](#) ^[109]
- [axis](#) ^[109]

The EN input is responsible for the block enable.

The ENO input informs, if the effective position is higher or equal to value programmed for the direction of rotation.

Hysteresis

Depending on the chosen data type, the hysteresis is formed by 1 data type and 1 address or constant.

The data type may be:

- constant
- user parameter

· word marker

In value is given in percent.

OPERATION

If the EN input is 0, the block will not be executed and the ENO output remains at 0.


If the EN input is 1, the block compares the effective position signal and the effective position with the programmed signal, position and hysteresis arguments.

When the effective position has the same signal which has been programmed and it is higher or equal to the programmed position, increased by the programmed hysteresis value, then 1 is transferred to the ENO output. Otherwise, 0 is transferred to the ENO output.


The hysteresis is used for preventing oscillation at the block output when the effective position is very close or it is equal to the programmed position. For instance, for a position of 10 revolutions with 1% hysteresis, the block enables the ENO output when the effective position reaches 10,1 revolution and disables the ENO output when the position drops around 9,9 revolutions.

The hysteresis is given in percent and can vary between 0.0% and 50.0%. If it is programmed by parameter, the unit will be "per thousand", varying from 0 to 500.


FLOW CHART

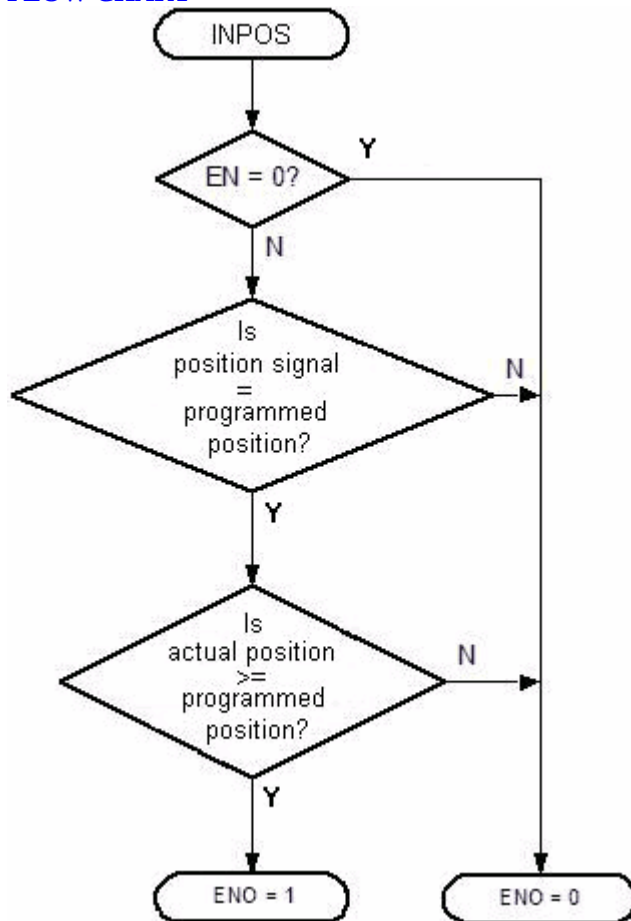

CHART

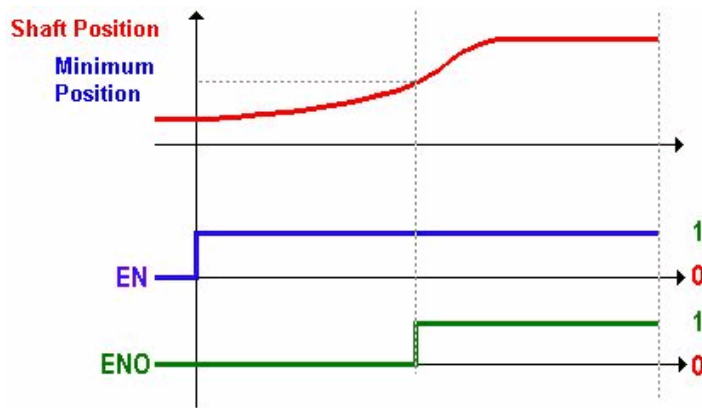

EXAMPLE

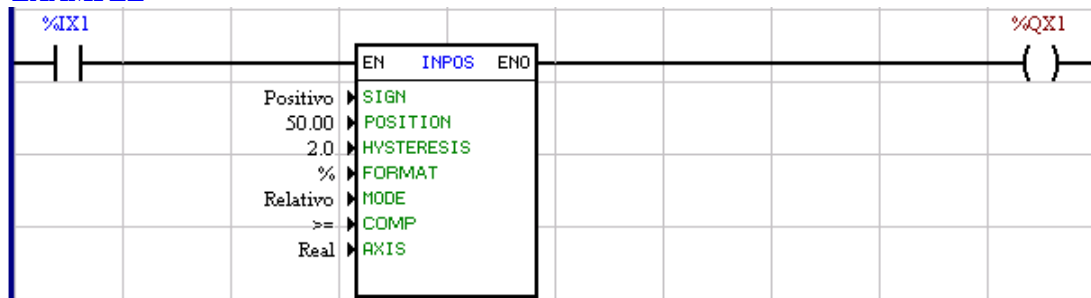


In this example, the block INPOS is always activated.

In this case, if the motor is in the positive position higher or equal to 50 revolutions (considering a 2% hysteresis) it writes 1 to the digital output, Otherwise, it writes 0.

7.5.5.2 INBWG

SYMBOL

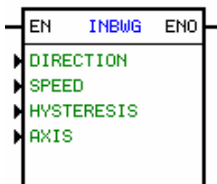

DESCRIPTION

It consists of 1 EN input, 1 ENO output and 4 arguments, being:

- [speed](#) ^[108]
- [direction of rotation](#) ^[109]
- [hysteresis](#) ^[177]
- [axis](#) ^[109]

The EN input is responsible for the block enabling.

The ENO output goes high when the motor speed is higher or equal to the programmed value plus the hysteresis and the direction of rotation is the same as the programmed.

Hysteresis

Depending on the chosen data type, the hysteresis is formed by 1 data type and 1 address or constant.

The data type may be:

- constant
- user parameter
- word marker

In value is given in percent.

OPERATION


If the EN input is 0, the block will not be executed and the ENO output keeps in 0.

If the EN input is 1, the block compares the motor real speed and direction of rotation with the programmed speed plus hysteresis and the direction of rotation.


If the motor is running in the same direction of rotation as programmed and the motor speed is higher or equal to the programmed speed argument plus the hysteresis, then the ENO output goes 1. Otherwise, 0 is transferred to the ENO output.

Note that if there is a hysteresis greater than 0, the real speed should decrease below the programmed speed minus the hysteresis, in order to deactivate the ENO output.


FLOWCHART

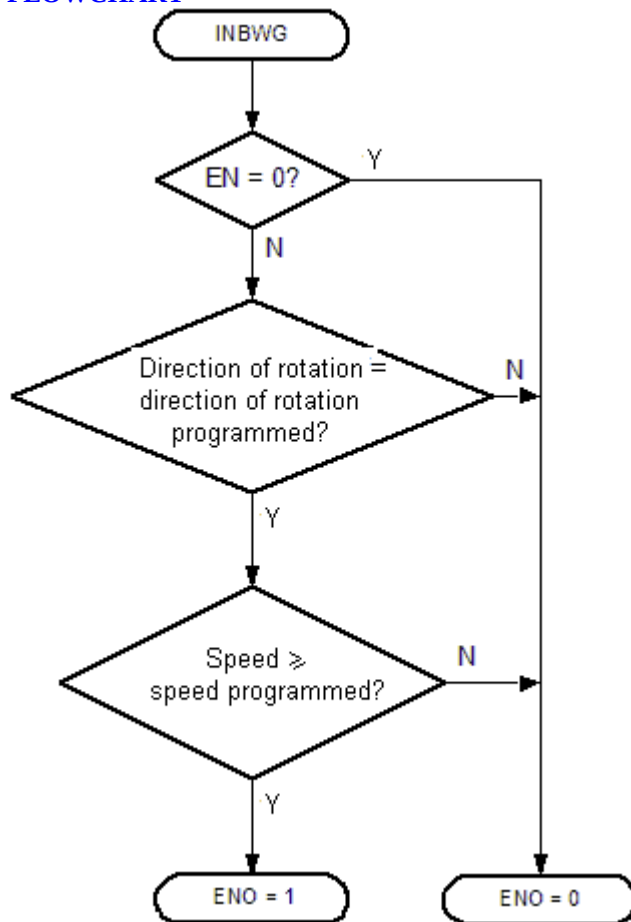

CHART

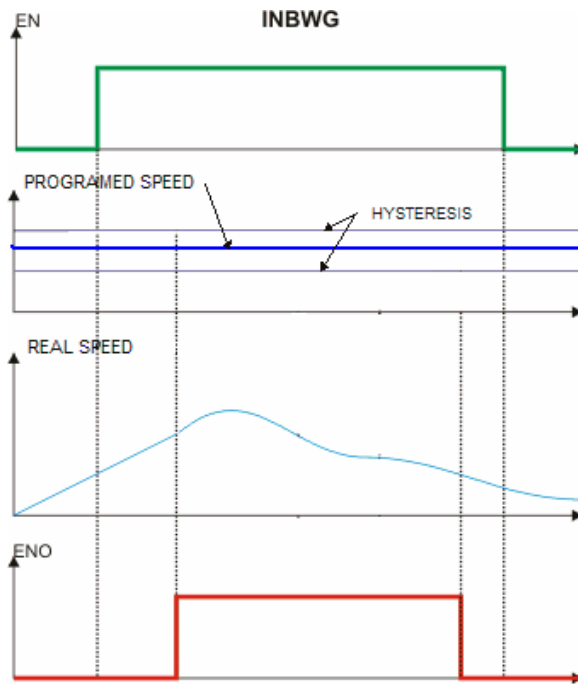

EXAMPLE

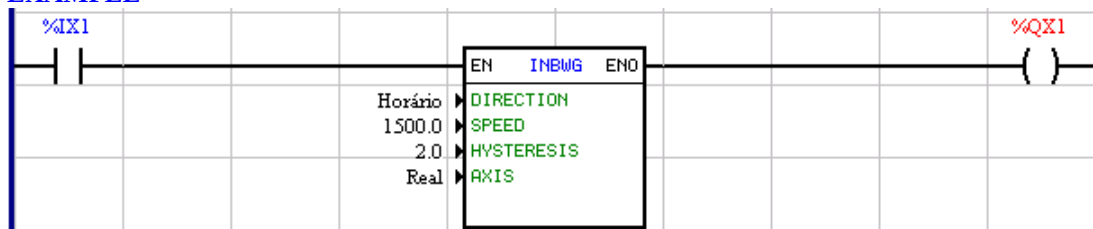


The INBWG block will be activated, while the digital input 1 is on. In this case, if the motor is running clockwise and its speed is higher or equal to 1530 rpm (respecting the hysteresis), it writes 1 to the digital output 1. Otherwise, if the speed is less than 1470 rpm, it writes 0.

7.5.6 PLC

7.5.6.1 TON

 SYMBOL



DESCRIPTION

This block is formed by 1 IN input, 1 Q output and 2 arguments, being:

- PT - preset time
- ET - elapsed time

The IN input is responsible for the block enable.

The Q output informs if the elapsed time reached the programmed time.

PT (Preset Time)

The desired time is formed by a data type and one address or a constant value, depending on the chosen data type.

The signal data type may be:

- constant
- user parameter
- word marker

For the constant data type, the maximum permitted value is 30000 ms.

ET (Elapsed Time)

The elapsed time is formed by a data type and a address.

The data type of the elapsed time may be:

- user parameter
- word marker


NOTE: In the option User Parameter, the current value is not saved in the E2PROM memory, i. e., this last value is not restored.

OPERATION


If the IN input is 0, the Q output remains in 0 and elapsed time keeps unaltered.

If the IN input goes 1, the elapsed time is cleared and then incremented until the value on the argument of the preset time is reached. After this value has been reached, the Q output changes to 1 and remains at this status until the IN input changes to 0.


FLOWCHART

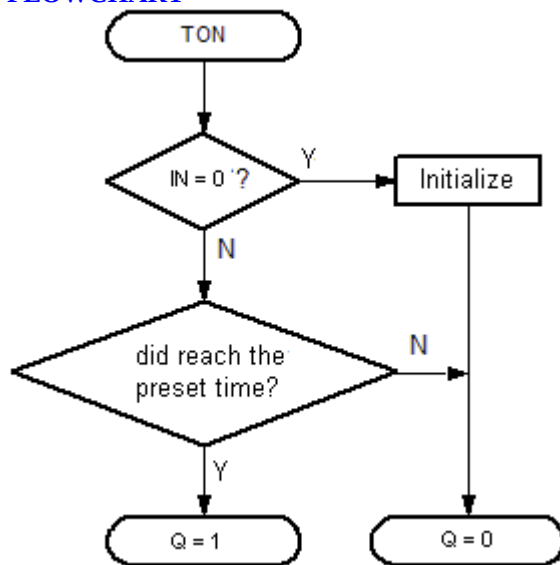

CHART

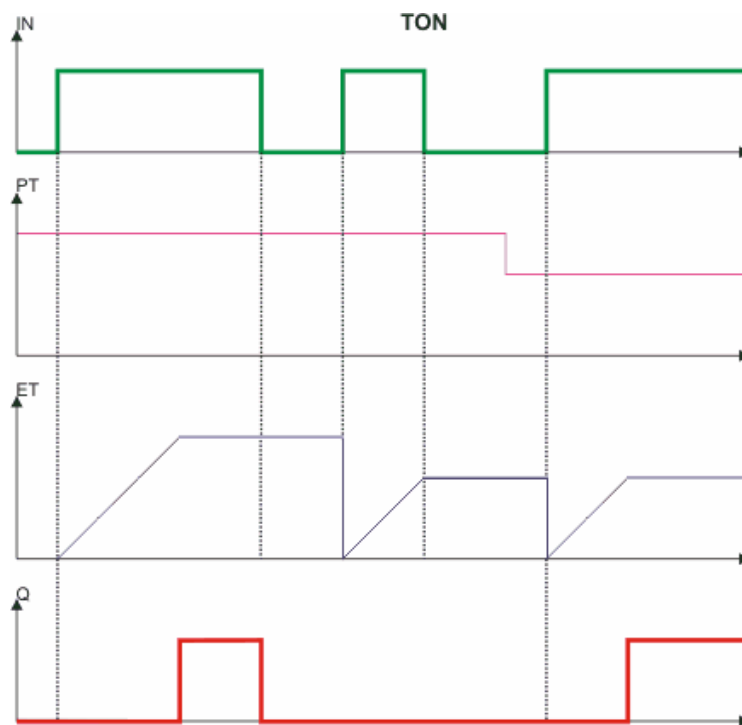


EXAMPLE

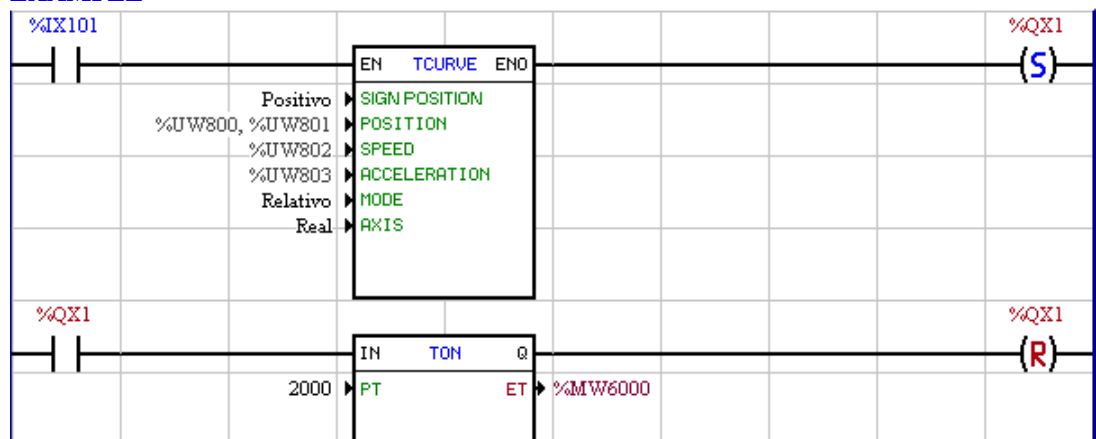

When the digital input 1 of the drive is 1, a positioning based on the user parameter 800 to 803 is enabled. After this positioning has been concluded, the digital output 1 is set and the timer is enabled. After the programmed 2000 ms have been elapsed, the digital output 1 is reset.

7.5.6.2 RTC

SYMBOL

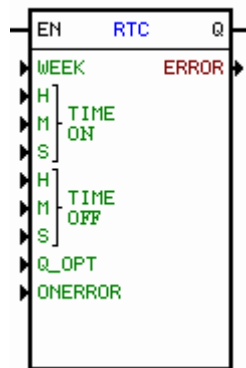

DESCRIPTION

It is composed by 1 input EN, 1 output Q and 6 arguments listed below:

- WEEK – weekdays programmed for block actuation
- TIME ON – (initial time) hour, minute and second for switching on the output
- TIME OFF – (final time) hour, minute and second for switching off the output
- Q_OPT – normal or inverted output option
- ONERROR – option for error condition (it generates alarm or it generates fault for the drive)
- ERROR – error indication in the RTC block

The EN input is responsible for the enabling of the block.

The Q output is activated according to the programming of the arguments.

OPERATION

If the EN input is 0, the Q output will be 0.

If the EN input is 1:


- Q_OPT = 0 (normal output) – the Q output goes to level 1 only when the current time is higher than the initial time and lower than the final time.
- Q_OPT = 1 (inverted output) – the Q output goes to level 1 only when the current time is lower than the initial time or higher than the final time.

Note:

When there is an error in the real time clock, then it will be indicated at the ERROR output.

In the CFW11/PLC11 the HMI must always be connected for using this block.


COMMENTED EXAMPLE

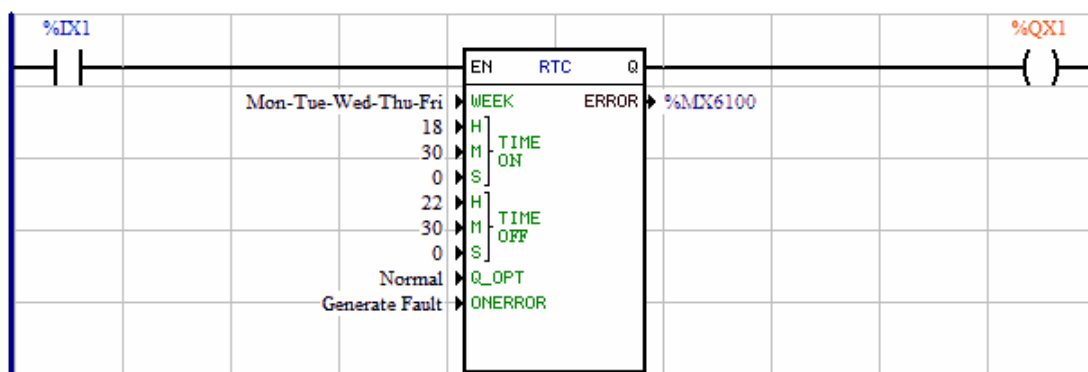

When the digital input 1 is 1, and the weekday were Monday, Tuesday, Wednesday, Thursday or Friday, and the current time were $\geq 18:30:00$ and $\leq 22:30:00$, the digital output 1 will be activated.

7.5.6.3 CTU

SYMBOLO

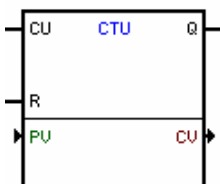

DESCRIPTION

It is formed by 1 CU input, 1 R input, 1 Q output and 2 arguments, as follows:

- PV - preset counter
- CV - counter value

The CU input is the counting input.

The R input resets the counting when on.

The Q output informs if the programmed counting value has been reached.

PV (Preset Value)

Depending on the chosen data type, the preset value is formed by a data type and an address or a constant value.

The counting data type may be:

- constant
- user parameter
- work marker

For the constant data type, the max. allowed value is 30,000.

CV (Counter Value)

The counter value is formed by a data type and an address.

The counter value data type may be:

- user parameter
- word marker

NOTE: In the User Parameter option, the current value is not saved in the E2PROM memory, i. e., this last value is not restored.


OPERATION

When the CU input changes from 0 to 1, the counter value is incremented, exception if the R input is 1.


When the counter value reaches the preset value, output Q changes to 1, and remains at this status till R output changes to 1.

While R input is 1, the counter value is reset and the counting is not incremented.


FLOWCHART

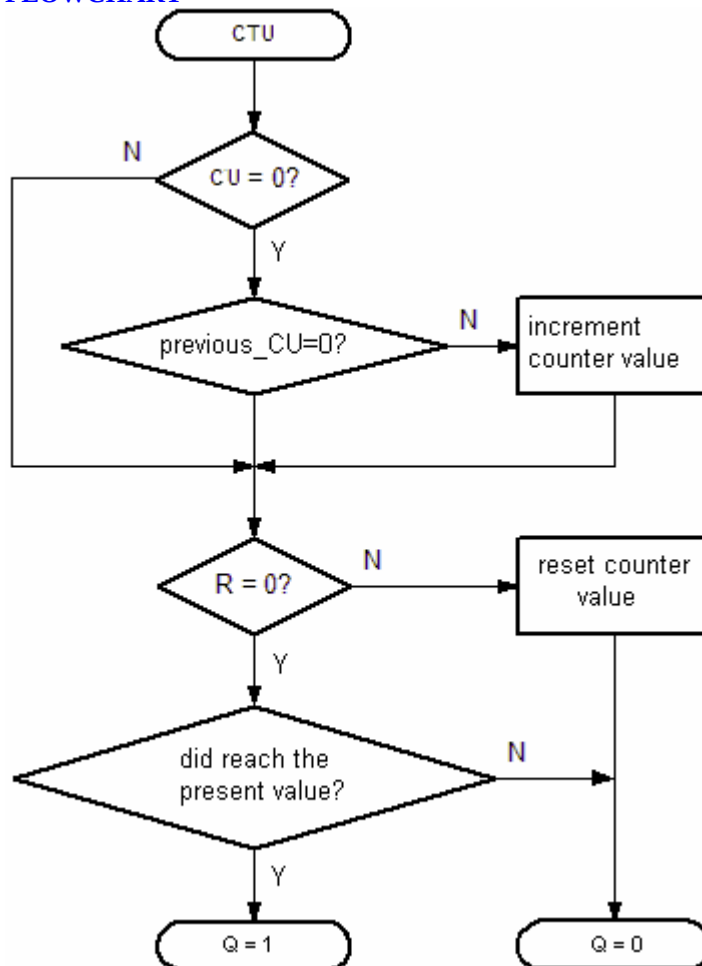

CHART

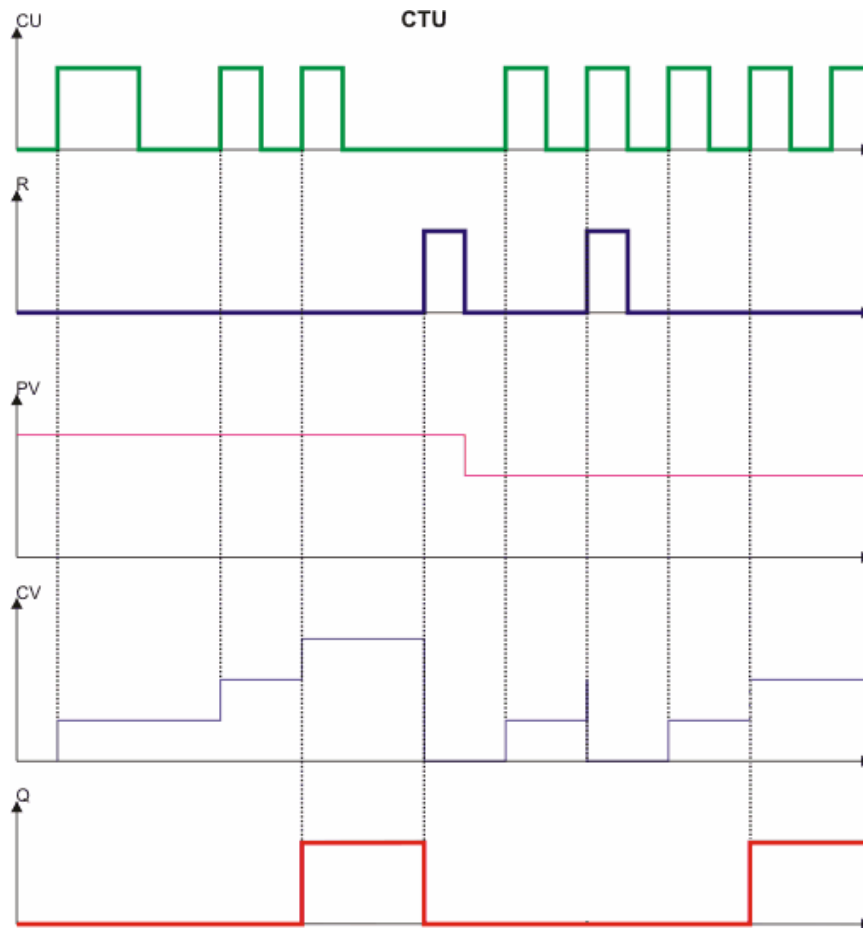

EXAMPLE

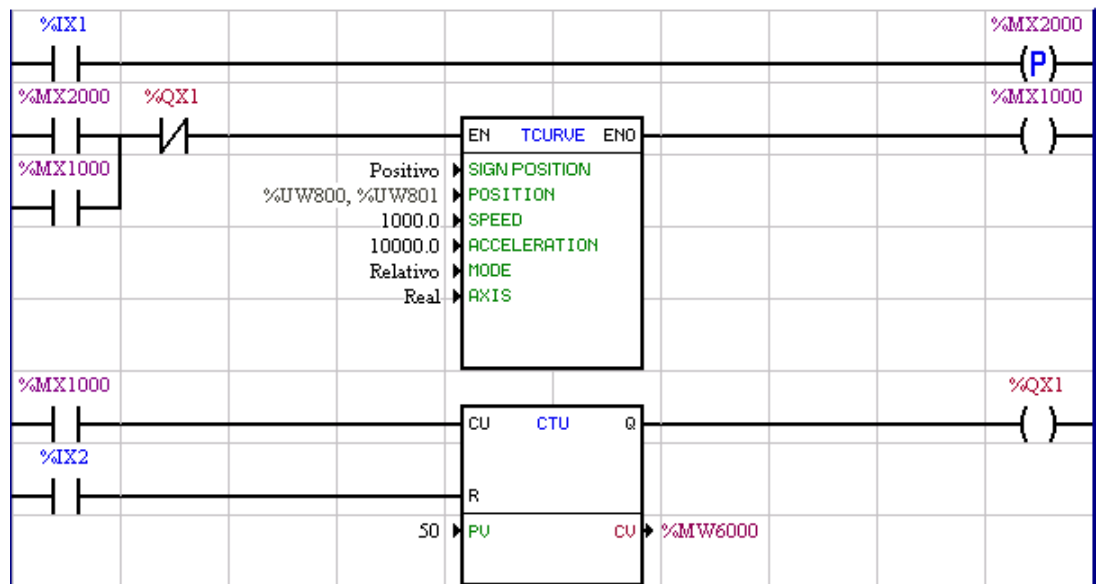


If there is a transition from 0 to 1 at the digital input, or the bit marker 1000 is 1, and the digital output 1 is 0, a TCURVE positioning is enabled. After conclusion, marker 1000 changes to 1, thus enabling the CTU block to make a counting and starting again the positioning, if the digital input 2 is 0. After the counter has

detected 50 positive transitions in the marker 1000, i. e., it has executed 50 positionings, the digital output 1 changes to 1, and makes impossible a new positioning before the digital input 2 is 1, thus resetting the output 1.

7.5.6.4 PID

SYMBOL

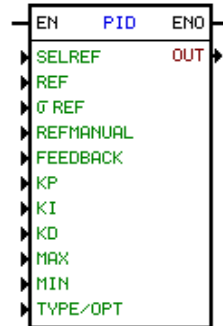

DESCRIPTION

This block is formed by 1 EN input, 1 ENO output and 3 arguments, as follows:

- [selection](#)^[186]
- [signals](#)^[186] (reference, manual reference, feedback, controller output)
- [gains](#)^[187] (KP, KI, KD)
- [limits](#)^[110] (max., min.)
- [type](#)^[187] (parallel or classic)

The EN input is responsible for the block enable.

The ENO output is a copy of the value of the EN input.

As all data type of this block are float constant or float marker, we recommend to use the blocks INT2FL and FL2INT.

Reference Selection (*)

The reference selection argument is composed by type of data and an address.

The address type of data can be:

- Constant;
- Bit marker;
- Digital input;
- User parameter.

When the type of data is constant, there are two options:

- Automatic (0);
- Manual (1).

Signals

The signals are formed by 3 parts:

- [float](#)^[110] - reference
- [float](#)^[110] - manual reference
- [float](#)^[110] - feedback
- [float](#)^[110] - control

Automatic Reference Filter (*)

The Automatic reference filter is a filter passa baixa, and the time constant being programmed through the argument filter.

The Filter argument is composed by type of data and an address.

The float type of data can be:

- Constant float;
- Float marker.

Manual Reference (*)

The manual reference argument is composed by a type of data end an address

The float type of data can be:

- Constant float;
- Float marker.

The controller Mode (*)

The controller mode is always constant, and it can be:

- Direct (error = automatic reference - re-feed);
- Reverse (error = re-feed - automatic reference).

Gains

The gains are formed by 3 parts:

- [float](#) ^[110] - proportional gain (Kp)
- [float](#) ^[110] - integral gain (Ki)
- [float](#) ^[110] - derivative gain (Kd)


OPERATION


The EN input always transfers its value to the ENO output.

The block is executed while the EN input 1. Otherwise the arguments are reset.

Attention: At maximum, two PID blocks may be active simultaneously. When a third block is present, no one will be executed, even when they are active at the EN input.

DIAGRAM BLOCK

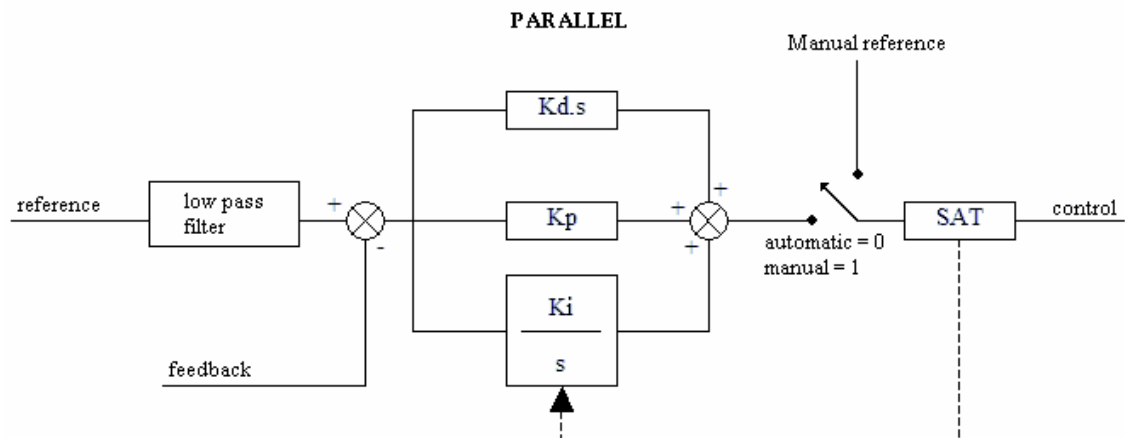

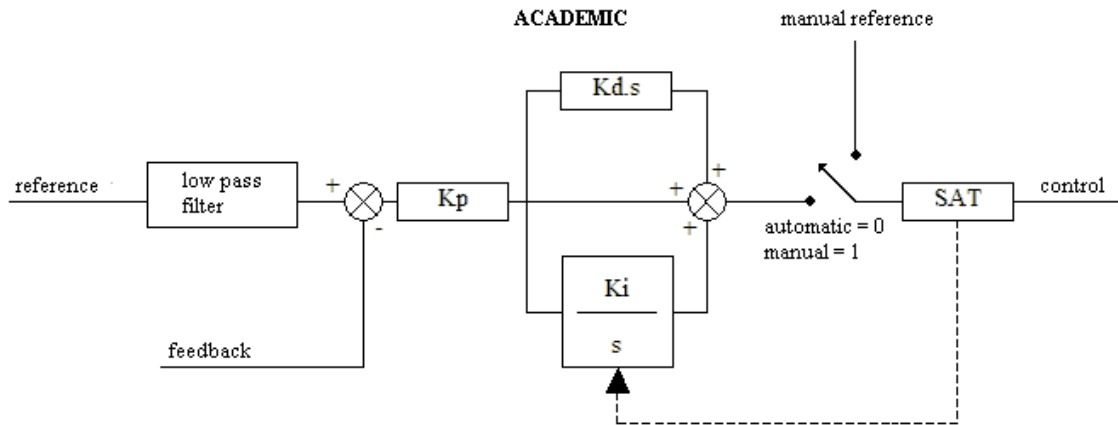

Definition:

e = filtered reference - feedback

u = control output

K_p = proportional gain

K_i = integral gain (inverse of integral time ($1/T_i$))

K_d = derivative gain (derivative time)

DISCRETE EQUATIONS

Academic:

$$u(k) = u(k-1) + K_p * ((1 + K_i * T_s + (K_d / T_s)) * e(k) - (K_d / T_s) * e(k-1))$$


Parallel:

$$u(k) = u(k-1) + (K_p + K_i * T_s + (K_d / T_s)) * e(k) - (K_d / T_s) * e(k-1)$$

So:

T_s = sample time


EXAMPLE

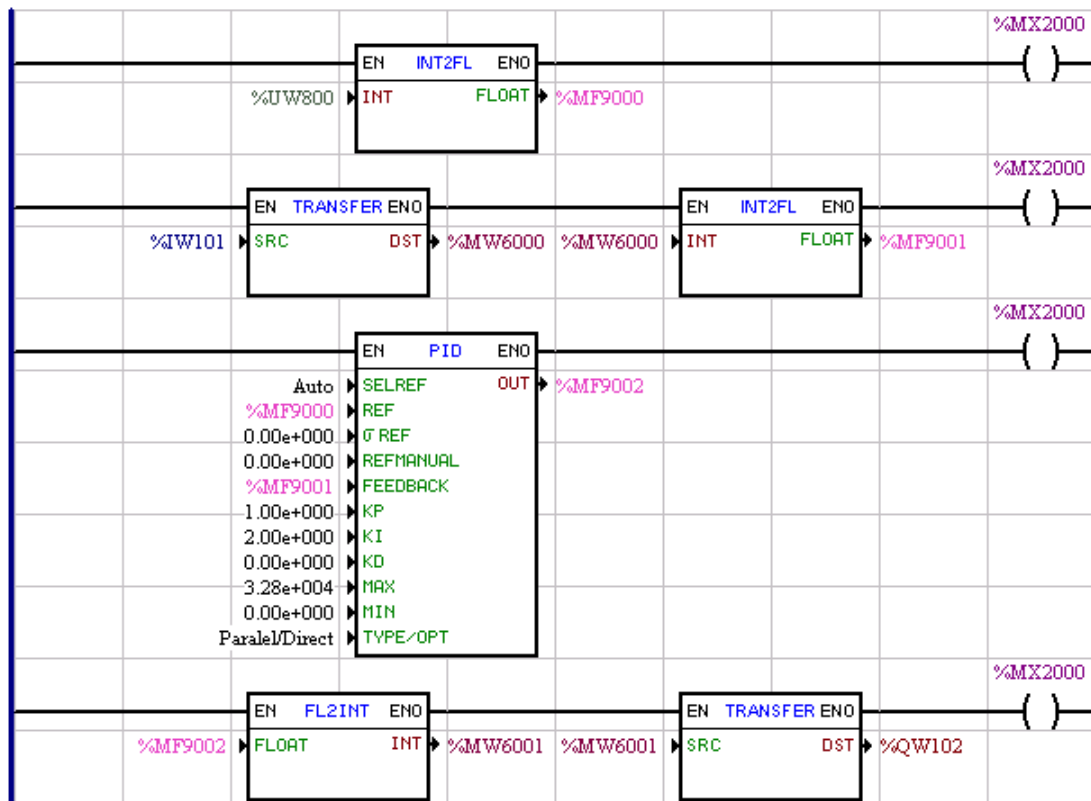

As explanation one can say that the reference value is given by the user parameter 800 and then converted to the float marker 9000. The value of the feedback signal is given by the value contained at the analog input 1 of the drive, which is transferred to the word marker 6000 and converted to the float marker 9001. The control output of the PID block is the marker 9002 which is converted to the word markers 6001 and 6002. The value contained in the word marker 6002 is transferred to the analog output 2 of the drive.

7.5.6.5 FILTER

SYMBOL

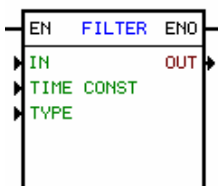

DESCRIPTION

This block is formed by 1 EN input, 1 ENO output and 2 arguments, as follows:

- [values](#) ^[110] (input, output)
- filter type
- [float](#) ^[110] time constant [seconds]

The EN input is responsible for the block enable.

The ENO output is a copy of the value of the EN input.

0

As all data type of this block are float constant or float marker, we recommend to use the blocks INT2FL and FL2INT in order to make the conversions to integer.

Filter Type

The filter type is a constant and may be:

- low-pass filter
- high-pass filter

OPERATION

The EN input transfers always its value to the ENO output.

The block is executed while the EN input is 1. Otherwise the arguments are reset.

The filter transfer function is given by:

- low-pass

$$[\text{output}] = [\text{input}] / ([\text{time constant}] * s + 1)$$


- high-pass

$$[\text{output}] = ([\text{input}] * [\text{time constant}] * s) / ([\text{time constant}] * s + 1)$$


NOTE: The time constant is given in seconds. If you want a constant lower than 1s, you must use the math block to divide the values or use constant values directly in the block (in the user program).

IMPORTANT: At maximum 2 filter blocks may be active each time. When three or more filter blocks are enabled, just two of them will be executed.

BLOCK DIAGRAM

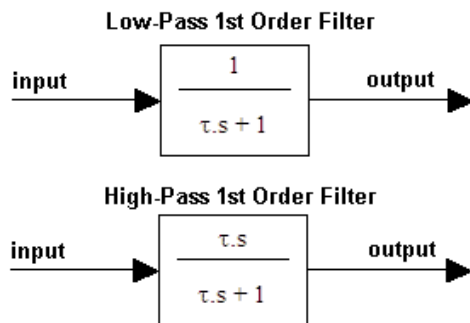


EXAMPLE

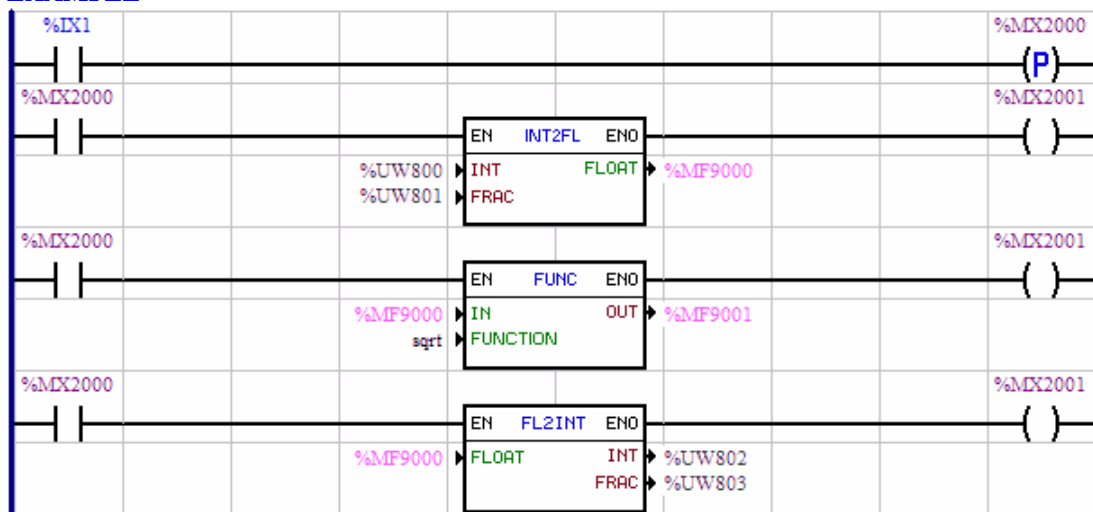

The value contained in the analog input 1 of the drive is transferred to the word marker 6000 which is then converted to float and put into float marker 9000. The float marker 9000 is the filter input, the time constant is 0.1s, the filtered signal is put into the float marker 9001.

7.5.6.6 CTENC

SYMBOL:

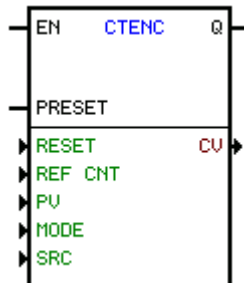

Description:

This block is composed by 1 input EN, 1 input PRESET, 1 output Q and 6 arguments, as follows:

Reset
Count Reference (REF CNT)
Preset (PV)
Count Mode (MODE)
Encoder (SRC)
Accumulated Value (CV)

The input EN is responsible for block enabling.

The input PRESET transfers the value defined on PV to the Accumulated Value (CV).

The output Q is turned ON during one scan cycle if the accumulated value (CV) reached the number of desired pulses (REF CNT). After one scan cycle, the output is turned OFF.


Reset

There are two reset modes: reset via main encoder null pulse or reset via bit register, digital input, digital output or user parameter.

Counting Mode (MODE)


The counting mode is always constant, and the following counting modes are available:

Mode 1: the counting is performed in quadrature between signals A and B, as presented in the following figure. The result has a resolution that is four times the encoder resolution.

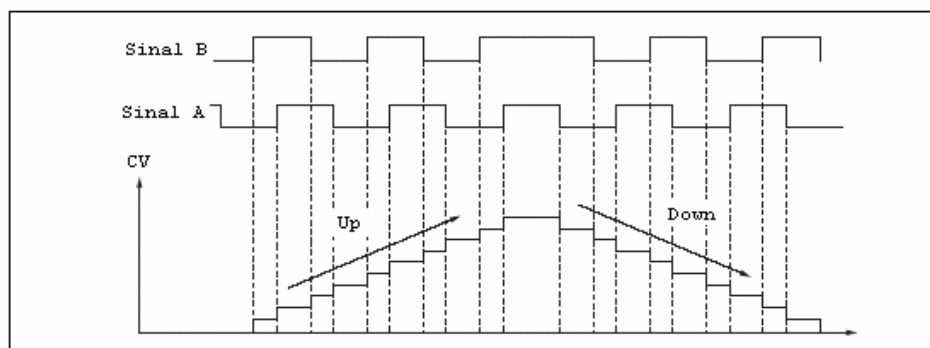

Mode 2: the counting is performed using only signal A. Signal B defines if the counter will count up or count down.

P.S.: Only the auxiliary encoder on PLC2 board and the encoder on POS2 board have the counting option for mode 2, since they are not being used for position feedback.

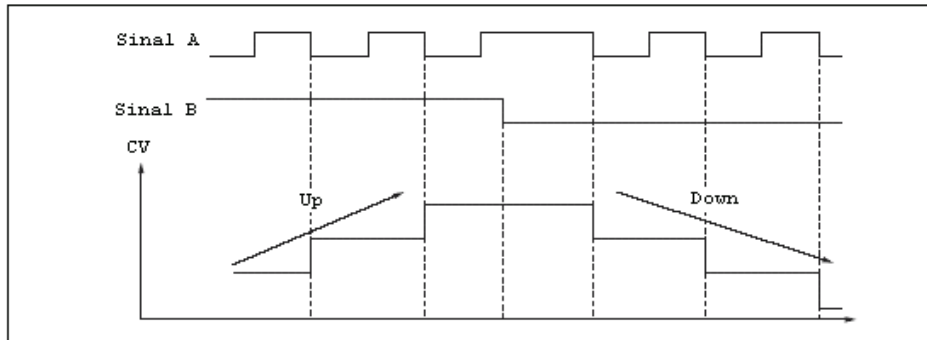

Encoder (SRC)

It is possible to choose which encoder will perform the pulses counting: the main encoder or the auxiliary encoder.

Operation:


If the input EN is OFF, the Accumulated Value (CV) argument is not changed.

If the input EN is ON, the Accumulated Value (CV) is reset on the false-to-true transition of input EN and the main or auxiliary encoder pulses counting starts. When the Accumulated Value (CV) reaches the counting reference (REF CNT), the output Q is turned ON during one scan cycle. After one scan cycle, the output Q is turned OFF.


If a reset command occurs, the Accumulated Value (CV) argument is reset.

When the input PRESET is ON, the Accumulated Value (CV) argument will have the same value of the argument Preset (PV).

FLOWCHART

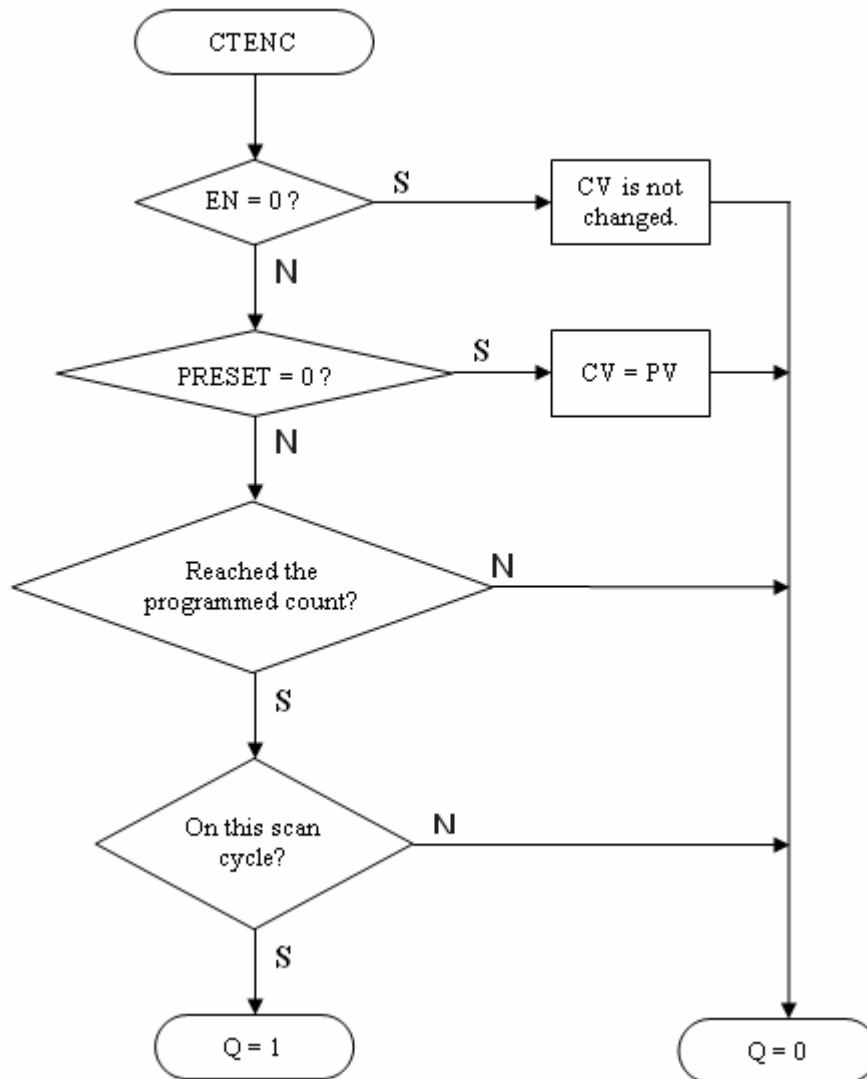

EXAMPLE

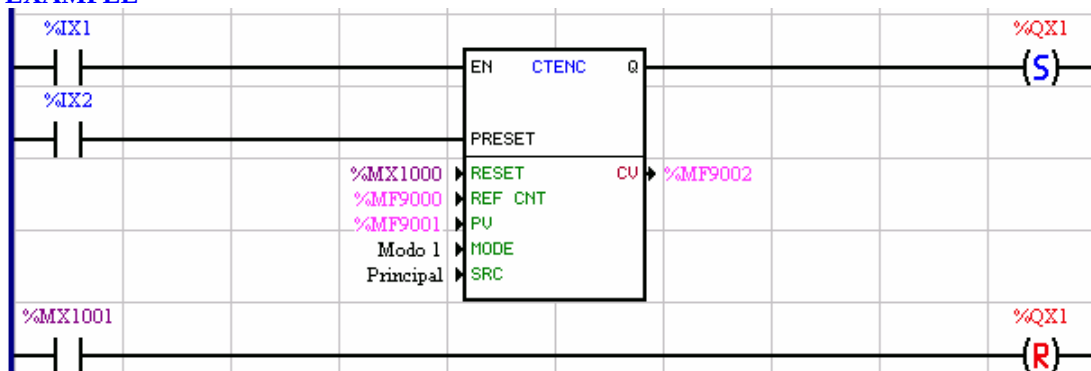


When digital input 1 is ON, the encoder pulses counter block is enabled, the float register 9002 is reset and the main encoder pulses counting is started. If digital input 2 is turned ON, the preset value on the float register 9001 is transferred to the float register 9002. When the float register value reaches the reference value, which is on the float register 9000, the digital output 1 is turned ON, since counter block output Q turns ON for one scan cycle (digital output 1 can be reset by the bit register 1001). If the bit register 1000 is

turned ON, the float register value is reset.

7.5.7 Calculation

7.5.7.1 COMP

SYMBOL

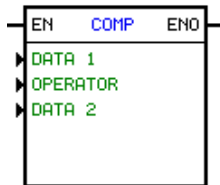

DESCRIPTION

This block is formed by 1 EN input, 1 ENO output and 4 arguments, being:

- format
- operator
- data 1
- data 2

The EN input is responsible for the block enable.

The ENO output goes to 1 depending on operator, float 1 and float 2.

As all data type of this block are float constant or float marker, we recommend to use the blocks INT2FL and FL2INT.

Format:

The format is always constant, and it can be integer or float-pointing.

Operator:

The operator is always constant.

There are following options:


- Equal to (=)
- Different from (≠)
- Higher than (>)
- Higher than or equal to (>=)
- Lower than (<)
- Lower than or equal to (<=)

OPERATION

When EN input is 0, the block is not executed and the ENO output keeps in 0.

While the EN input is 1 and the comparison [data 1][operator][data 2] is true, the ENO output goes to 1. Otherwise it changes to 0.

EXAMPLE

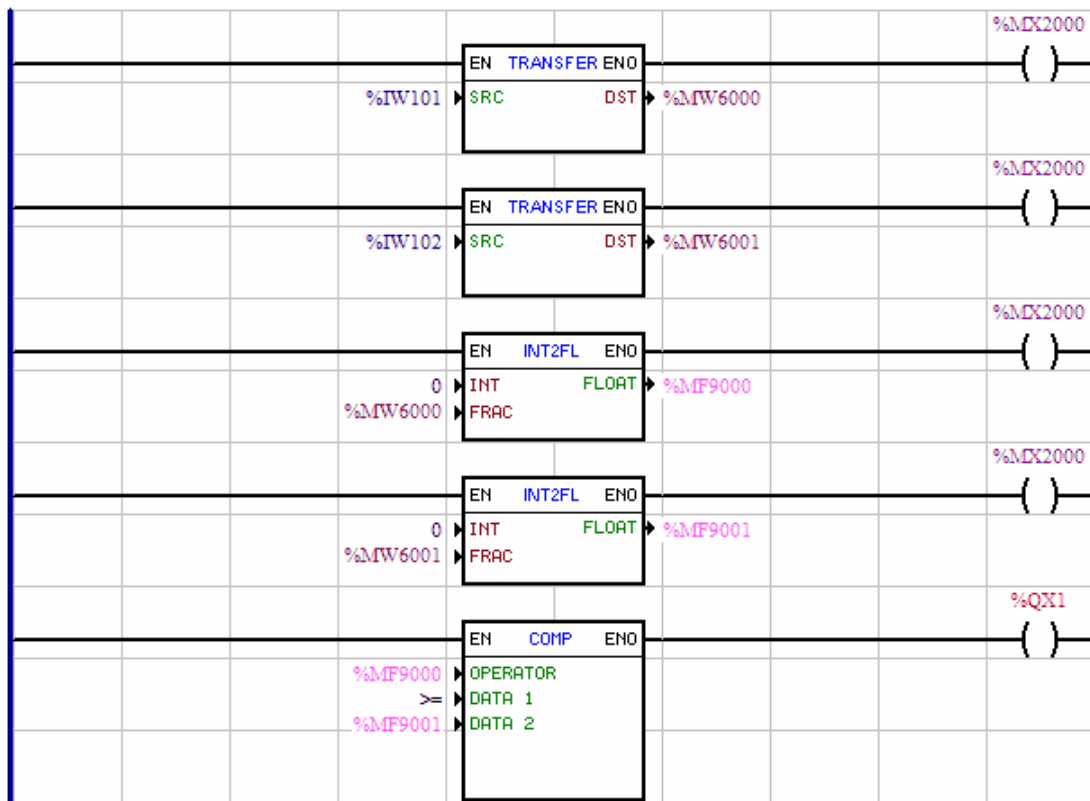

In this example, if the value contained in the analog input 1 of the drive is higher or equal than the value contained in the analog input 2 of the drive, the digital output is switched ON. Otherwise the digital output 1 is switched OFF.

7.5.7.2 MATH

SYMBOL

FLOAT FORMAT:





INTEGER FORMAT :

+, -, *, /, pow

+, -

x


/

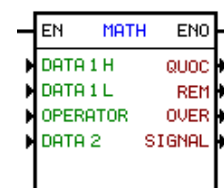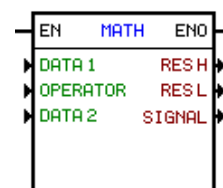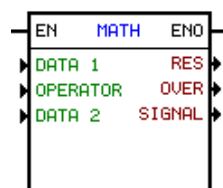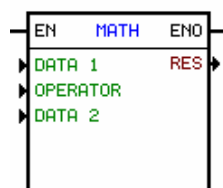


pow

or, and, xor, nor,
nand, xnor

shift

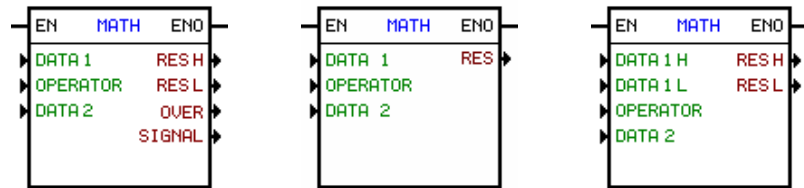

ashift

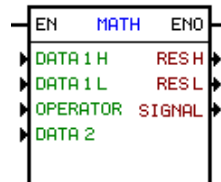

DESCRIPTION

This block is formed by 1 EN input, 1 ENO output and 4 arguments, as follows:

FLOAT FORMAT	INTEGER FORMAT
- format = float - operator - data 1 - data 2 - result	- format = inteiro - operator - data 1 - low part - data 1 - high part - data 2 - result - low part - result - high part - overflow - sinal

The EN input is responsible for the block enable.

The ENO output is a copy of the value of the EN input.

Format:

The format is always constant, and it can be integer or float-pointing.

Operator:

The operator is always constant.

There are the following options:

For [float point](#)^[110]:

- Sum
- Subtraction
- Multiplication
- Division

For [integer](#)^[110]:

- Sum
- Subtraction
- Multiplication
- Division

- Pow (*)
- OR (*)
- AND (*)
- XOR (*)
- NOR (*)
- NAND (*)
- XNOR (*)
- Shift (*)
- Ashift (*)

OPERATION

The input EN always transfers its value to the output ENO.

While the input EN is ON, the math instruction programmed between the arguments is executed.

For the float-pointing format the executed instruction is given by:

[float result] = [float value 1] [operator] [float value 2]

In a division by zero, a "warning" is generated during compilation time. In case the division is performed with a float register on the denominator, this verification does not occur, however, in both cases the value is saturated on the maximum or minimum float values, depending if the numerator value is greater or less than 0. For saturation signal effects, zero is considered a positive number.

For the integer format the executed instruction is given by:

* Addition:

[low result] = [low value 1] + [value 2]
[word] = [word] + [word]

The signal bit is set when the instruction result is less than zero.

The overflow bit is set when [low value 1] + [value 2] > 32767; in this moment the low result saturates in 32767.

The overflow bit is set when [low value 1] + [value 2] < -32768; in this moment the low result saturates in -32768.

* Subtraction:

[low result] = [low value 1] - [value 2]
[word] = [word] - [word]

The signal bit is set when the instruction result is less than zero.

The overflow bit is set when [low value 1] + [value 2] > 32767; in this moment the low result saturates in 32767.

The overflow bit is set when [low value 1] + [value 2] < -32768; in this moment the low result saturates in -32768.

* Multiplication:

[high result, low result] = [low value 1] x [data 2]
[double word] = [word] x [word]

High result and low result represent a 32 bits value, where the high result contains the most significant 16 bits of the multiplication and the low result contains the less significant 16 bits of the multiplication.

The signal bit is set when the instruction result is less than zero.

The overflow bit is not set since it has no action.

*** Division:**

$$\begin{aligned} [\text{result high, resultado low}] &= [\text{data 1 high, data 1 low}] \div [\text{dado 2}] \\ [\text{word, word}] &= [\text{double word}] \div [\text{word}] \end{aligned}$$

High value 1 and low value 1 represent a 32 bits value, where the high value 1 contains the most significant 16 bits and the low value 1 contains the less significant 16 bits.

High result contains the division quotient and the low result contains the division remainder.

The signal bit is set when the instruction result is less than zero.

The overflow bit is set when $[\text{high value 1, low value 1}] \div [\text{value 2}] > 32767$; in this moment the high result and low result saturate in 32767.

The overflow bit is set when $[\text{high value 1, low value 1}] \div [\text{value 2}] < -32768$, in this moment the high result and low result saturate in -32768.

The overflow bit is set if division by zero is detected (parameter or register with a 0 on the denominator). In this moment the high result and low result saturate in 32767 or -32768, depending if the numerator value is greater or less than 0. For saturation signal effects, zero is considered a positive number.

*** Pow:**

$$\begin{aligned} [\text{result high, result low}] &= [\text{data 1}] \wedge [\text{data 2}] \\ [\text{double word}] &= [\text{word}] \wedge [\text{word}] \end{aligned}$$

Result high and result low represent a 32 bits data.

O bit sinal é ligado quando o resultado da operação for menor que zero.

O bit overflow é ligado quando $[\text{dado 1}] \wedge [\text{dado 2}] > 2147483647$, nesse momento o resultado fica saturado em 2147483647.

*** OR:**

$$\begin{aligned} [\text{resultado low}] &= [\text{dado1 low}] + [\text{dado 2}] \\ [\text{word}] &= [\text{word}] + [\text{word}] \end{aligned}$$

*** AND:**

$$\begin{aligned} [\text{resultado low}] &= [\text{dado1 low}] \times [\text{dado 2}] \\ [\text{word}] &= [\text{word}] \times [\text{word}] \end{aligned}$$

*** XOR:**

$$\begin{aligned} [\text{resultado low}] &= [\text{dado1 low}] \oplus [\text{dado 2}] \\ [\text{word}] &= [\text{word}] \oplus [\text{word}] \end{aligned}$$

*** NOR:**

$$\begin{aligned} [\text{resultado}] &= \overline{[\text{dado 1}] + [\text{dado 2}]} \\ [\text{word}] &= \overline{[\text{word}] + [\text{word}]} \end{aligned}$$

***NAND:**

$$\begin{aligned} [\text{resultado low}] &= \overline{[\text{dado1 low}] \times [\text{dado 2}]} \\ [\text{word}] &= \overline{[\text{word}] \times [\text{word}]} \end{aligned}$$

* XNOR:

$$\begin{aligned} [\text{resultado low}] &= \overline{[\text{dado1 low}] \oplus [\text{dado 2}]} \\ [\text{word}] &= \overline{[\text{word}] \oplus [\text{word}]} \end{aligned}$$

* Shift:

$$\begin{aligned} [\text{result high, result low}] &= [\text{data 1 high, data 1 low}] \gg [\text{data 2}] \\ [\text{double word}] &= [\text{double word}] \gg [\text{word}] \end{aligned}$$

Data 2 is the quantity of shifting. If its number is positive, the shifting will be to left

Dado 2 é a quantidade de casas deslocadas, sendo que quando dado 2 for positivo, o deslocamento será para a esquerda "<<" e quando dado 2 for negativo, o deslocamento será para a direita ">>". É inserido zero nos bits deslocados.

* Ashift:

$$\begin{aligned} [\text{resultado high, resultado low}] &= [\text{dado 1 high, dado1 low}] \gg [\text{dado 2}] \\ [\text{double word}] &= [\text{double word}] \gg [\text{word}] \end{aligned}$$

O operador Ashift tem o mesmo funcionamento do operador Shift, com a diferença que o sinal do dado 1 não é deslocado e nem alterado.

For the math instructions that use integer format:

* WORD = 16 bits with signal
Negative Minimum = -32768
Positive Maximum = 32767

* DOUBLE WORD = 32 bits with signal
Negative Minimum = -2147483648
Positive Maximum = 2147483647

Since a double word is represented by two distinct words it is necessary to understand how it works. So, a number represented in a double word will be the composition of two words, where the high word represents the most significant 16 bits of the double Word and the low word represents the less significant 16 bits of the double word, as follows:

$$\begin{array}{rcl} 32 \text{ BITS} & = & \begin{array}{c} 31 \qquad \dots \qquad 16 \quad 15 \qquad \dots \qquad 0 \\ \boxed{\text{WORD HIGH}} \quad \boxed{\text{WORD LOW}} \end{array} \\ \text{DOUBLE WORD} & = & \end{array}$$

Hence, in order to create a double word it is necessary to have two distinct words. The composition of these two words can be determined by the following rules:

* Positive Numbers ($0 < \text{HIGH WORD} < 32767$):

$$\begin{aligned} \text{HIGH WORD} &= \text{INTEGER} (\text{DOUBLE WORD} / 65536) \\ \text{LOW WORD} &= \text{DOUBLE WORD} - (\text{HIGH WORD} \times 65536) \end{aligned}$$

Or

DOUBLE WORD = HIGH WORD x 65536 + LOW WORD

Example: DOUBLE WORD = 500.000

HIGH WORD = INTEGER (500.000 / 65536) = 7

LOW WORD = 500.000 - (7 x 65536) = 41248

DOUBLE WORD = 7 x 65536 + 41248 = 500.000

* Negative Numbers (32768 < HIGH WORD < 65535):

HIGH WORD = INTEGER (DOUBLE WORD / 65536) + 65535

LOW WORD = DOUBLE WORD - ((HIGH WORD-65536) * 65536)

Or

DOUBLE WORD = (HIGH WORD - 65535) x 65536 + LOW WORD - 65536

Example: DOUBLE WORD = -325.000


HIGH WORD = INTEGER (-325.000 / 65536) + 65535 = 65531

LOW WORD = -325.000 - ((65531-65536) x 65536) = 2680

DOUBLE WORD = (65531 - 65535) x 65536 + 2680 - 65536 = 325.000


SAMPLES :

Sample 1:

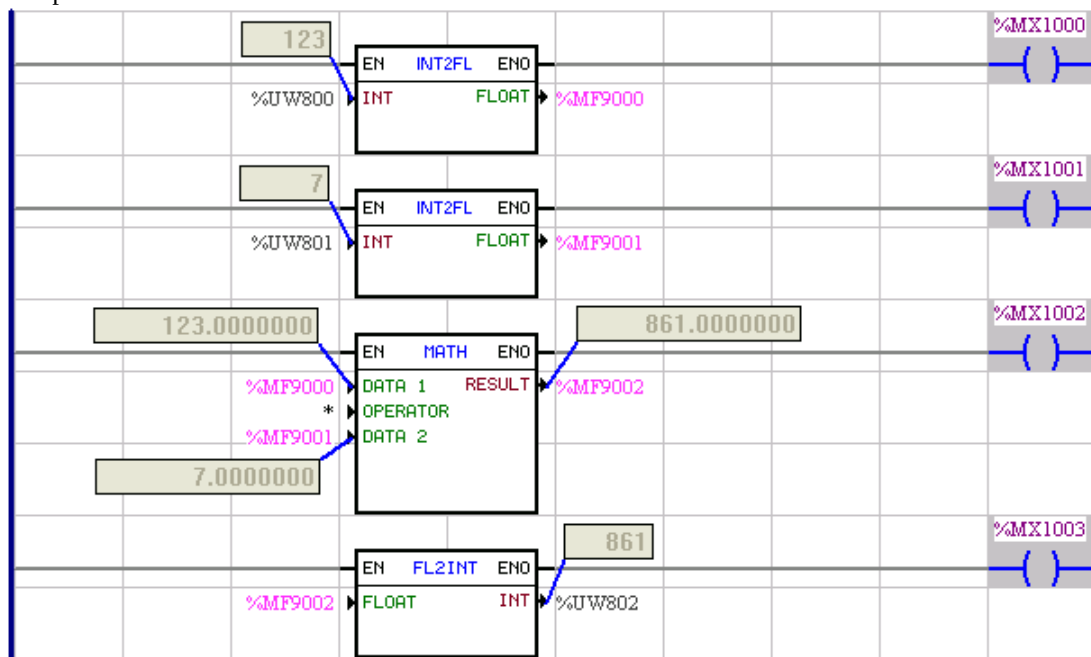


The user parameters 800 and 801 are converted to the float registers 9000 e 9001. The float register 9000 is multiplied by the float register 9001 and the result is stored on the float register 9002. The result is then converted to an integer and it is stored on the user parameter 802.

Sample 2:

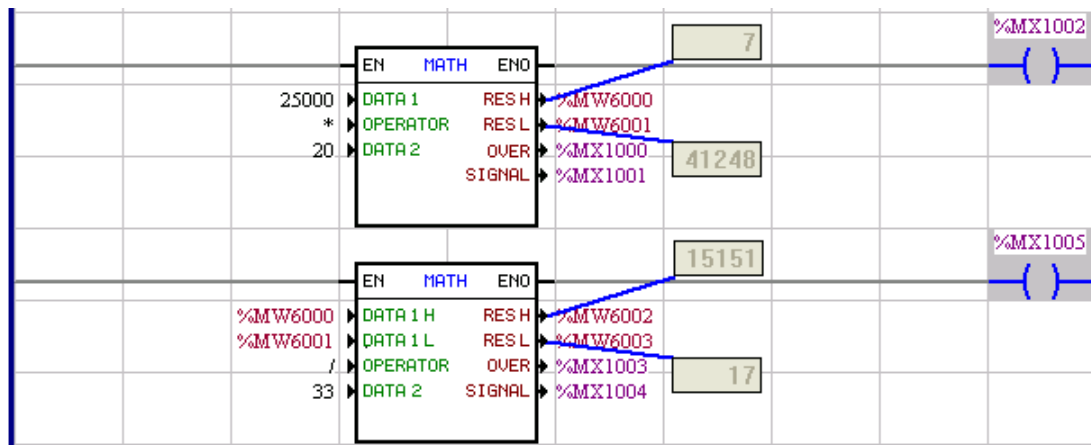

In this example we have 25000 multiplied by 20. The result is equal to 500.000, which is equivalent to high result = 7 and low result = 41248. After that, 500.000 divided by 33 has a result of 15151 and a reminder of 17.

Sample 3:

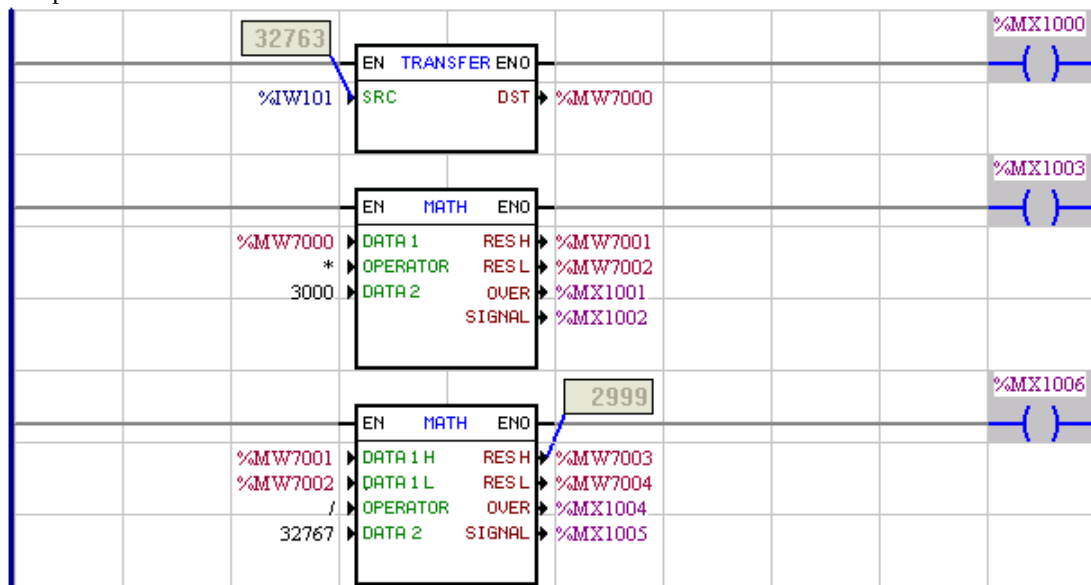

It converts the drive's analog input 1 to an engineering unit.

Range:

 
AI ==> -10...0...10Vcc ==> -32768...0...32767 ==> -3000...0...3000

Formula:

Result = AI * 3000 / 32767

7.5.7.3 FUNC

SYMBOL



DESCRIPTION

This block is formed by 1 EN input, 1 ENO output and 3 types of arguments, as follows:

- format
- function
- [values](#) ^[110]

The EN input is responsible for the block enable.

The ENO output is a copy of the value of the EN input.

As all data type of this block are float constant or float marker, we recommend to use the blocks INT2FL and FL2INT in order to make the right conversions.

Format

The format is always constant, and it can be integer or float-pointing.

Function

The function is always constant.

For the float-pointing format the following options are available:

- absolute (module)
- negative
- square root
- sine
- cosine
- tangent
- sine arc
- cosine arc
- tangent arc
- sine arc
- cosine arc
- tangent arc
- exponential (*)
- ln (*)
- log 10 (*)
- frac (*)
- trunc (*)
- round (*)

For the integer format the following options are available:

- absolute (module)
- negative


NOTE: To the trigonometric functions, the angle unit is radian.

OPERATION

The EN input transfers always its value to the ENO output.

The block is executed while the EN input is 1.


EXAMPLE

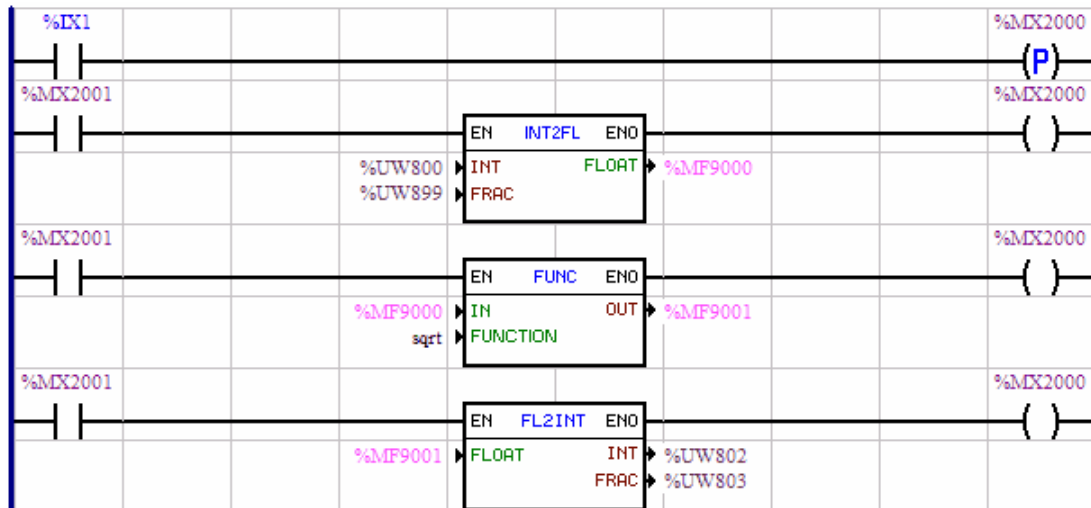

During the transition from 0 to 1 at the digital input 1, the user parameters 800 and 899 are converted to float and put into the float marker 9000. Then the square root is calculated from the value contained in the float marker 9000 and the result is saved in the float marker 9001. Then the value of the float marker 9001 is converted to integer and put into the user parameters 802 and 803.

7.5.7.4 SAT

SYMBOL

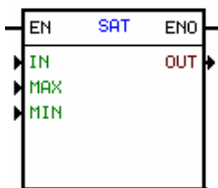

DESCRIPTION

This block has 1 input EN, 1 output ENO and 2 arguments:

- [values \(input, output\)](#)^[110]
- [limits \(maximum, minimum\)](#)^[110]

The EN input is responsible for the block enable.
The ENO output indicates when saturation occurs.


Since all data types of this block are float , we recommend to use the blocks INT2FL and FL2INT in order to make the right conversions.

OPERATION


If the EN input is 0, the block is not executed and the ENO output changes to 0.

While the EN input is 1, the block is executed. The ENO output changes to 1 only, if there is a saturation. Otherwise the ENO output remains at 0.

The function of this block is to transfer the input data to the output, provided they are within the programmed limits. When these values are higher or lower than the maximum and the minimum programmed ones, the output value is saturated with these values.

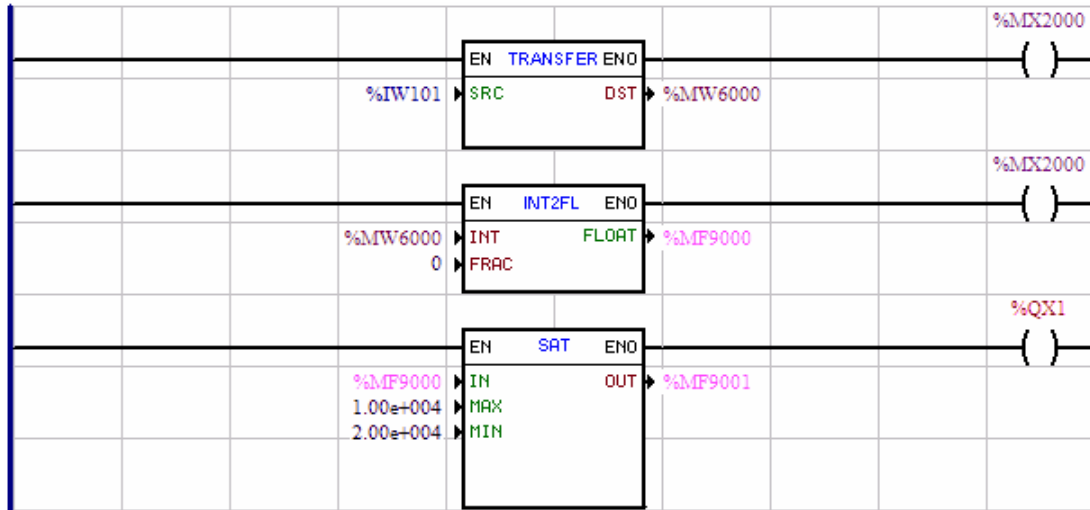EXAMPLE

The value contained at the analog input of the drive is transferred to the word marker 6000 which is then converted to the float marker 9000. The value read at the analog input is a value between 0 and 32767. The SAT block causes that the float marker 9001 stays between these limits values programmed.

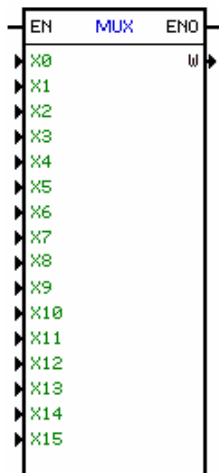7.5.7.5 MUX**SYMBOL****DESCRIPTION**

It has 1 EN input, 1 ENO output and 17 arguments, where:

bit 0 to 15
word

The EN input is responsible to enable the block.
The ENO output informs if the block is running.

BIT 0 a 15

The bit argument is formed by 1 data type and 1 address.

The data type can be:

- desable
- constant
- bit marker
- digital input
- digital output
- user parameter

WORD

The word argumet is formed by 1 data type and 1 address.

The data type can be:

- user parameter
- word parameter


FUNCTION

The EN input always transfer its value to the ENO output.

While the EN was 1, the block is running.


If the block was enabled, the valu of the word argument will be created by the values existing on bit 0 to 15 arguments.

EXAMPLE

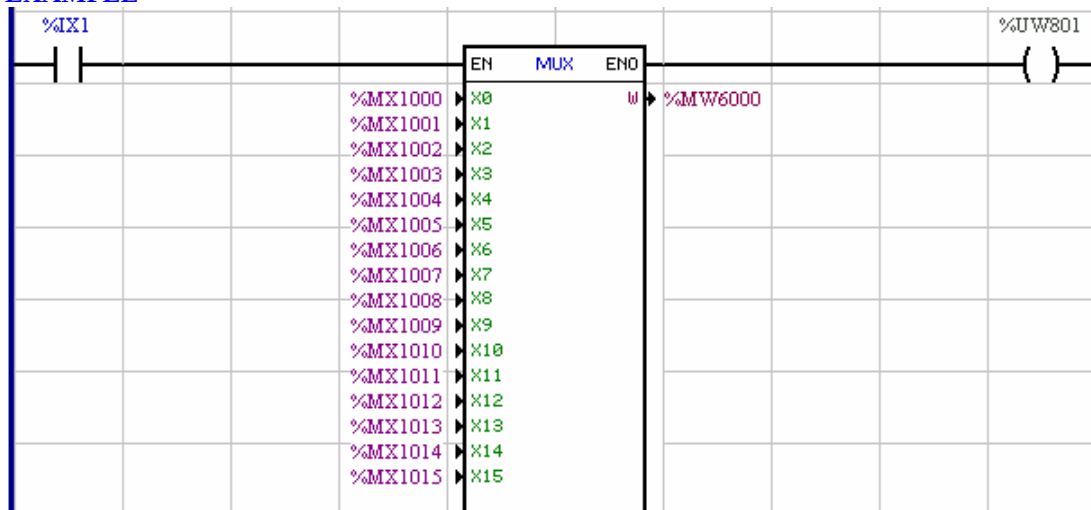

7.5.7.6 DMUX

SÍMBOLO

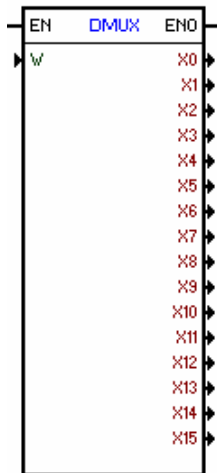

DESCRIPTION

It has 1 input EN, 1 output ENO e 17 arguments, sendo eles:

word
bit 0 ... 15

The EN input is responsible to enable the block;
The ENO output is enabled if the block was enabled too.

WORD

The word argument has 1 data type and 1 address.

The data type can be:

- user parameter
- word marker

BIT 0 a 15

Each bit has 1 data type and 1 address


The data type can be:

- disabled
- bit marker
- digital output
- user parameter

FUNCTION

The EN input always transfer its value to the ENO output. The word value was shared and transfer to the 16 outputs bits.


EXAMPLE

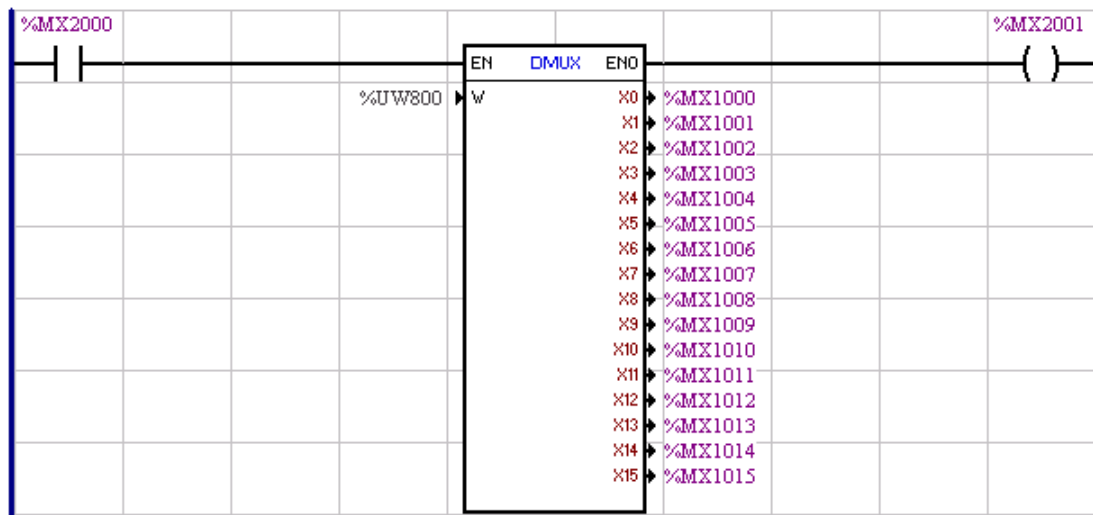

7.5.8 Transference

7.5.8.1 TRANSFER

 SYMBOL



DESCRIPTION

This block is formed by 1 EN input, 1 ENO output and 2 arguments, being:

- SRC - source data
- DST - destination data

The EN input is responsible for the block enable.

The ENO output goes 1 when the transfer is done. In most cases, it is done immediately, unless a driver parameter has been chosen as the source or destination.

SRC (Source Data)

Depending on the selected data type, the source data may be formed by a data type and an address or a constant value:

The source data type may be:

- constant
- float constant
- bit marker
- word marker
- float marker
- system marker
- digital input
- digital output
- analog input
- user parameter
- system parameter
- drive parameter

DST (Destaination Data)

The destination data is formed by data type and an address and it is the local where will be stored the source data value.

The destination data type may be:

- bit marker
- word marker
- float marker
- system marker
- digital output
- analog output
- user parameter
- system parameter
- drive parameter

NOTE: In the option User Parameter, the current value is not saved in the E2PROM memory, i. e., the last value is not restored.


OPERATION

The ENO output goes 1 when the transfer is done. In most cases, it is done immediately, unless a driver parameter has been chosen as the source or destination.


When the EN input is active, the value contained in the source data is transferred to the destination data. Otherwise no operation is realized..

Please consider the compatibility of the source data type and the destination data type.

EXAMPLE

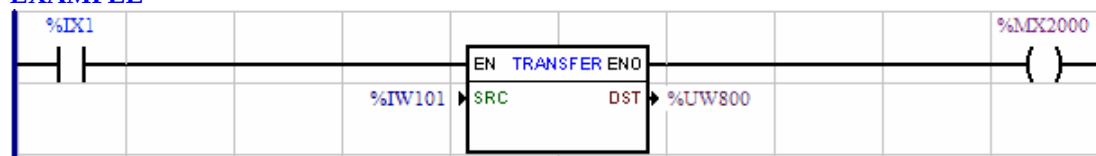


The digital input 1 set to 1, enables the TRANSFER. Thus the value contained in the analog input 1 is shown at the user parameter 800.

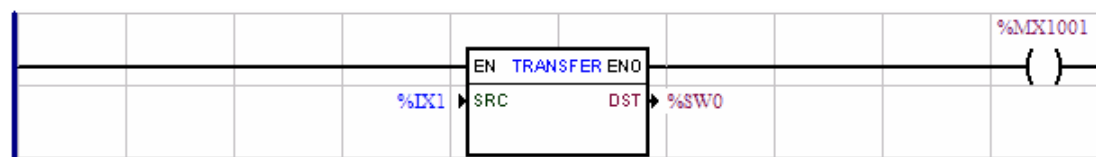

An useful application of the TRANSFER block is to enable the motor, for instance, through a digital input. So SRC will have a digital input as value, and DST a %SX0 system marker. Please consider that the motor is enabled only if it has been already enabled in the CFW-09 inverter. This may be programmed, for instance, at the digital input 1 of the drive.

7.5.8.2 INT2FL

SYMBOL

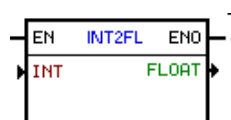

DESCRIPTION

This block is formed by 1 EN input, ENO output and 3 arguments, as follows:

- [integer](#)^[110] - word
- [float](#)^[110] result

The EN input is responsible for the block enable.


The ENO output is a copy of the EN input value.

OPERATION

The EN input transfers always its content to the ENO output.

While the EN input is 1, the values contained in the integer are transferred to the float marker.


EXAMPLE

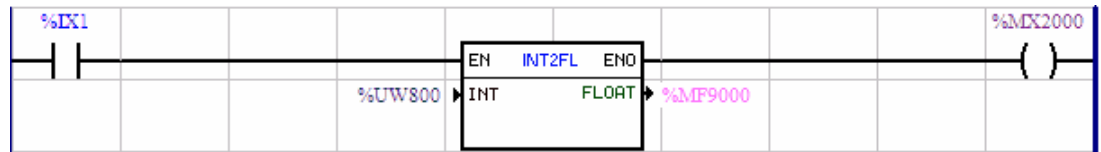

Converts the value of the user parameter 800 to a float and stores it in the float marker 9000.

7.5.8.3 FL2INT

 SYMBOL



DESCRIPTION

This block is formed by 1 EN input, 1 ENO output and 3 arguments, being:

- [float](#)^[110] - 32 bits
- [integer](#)^[110] - word

The EN input is responsible for the block enable.

The ENO output is a copy of the EN input value.

OPERATION


The EN input transfers always its content to the ENO output.

While the EN input is 1, the value contained in the float is transferred to the integer word.

If the float value is higher than 32767, its value is saturated in the conversion, resulting in an integer word equal to 32767.

If the float value is lower than -32768, its value is saturated in the conversion, resulting in an integer word equal to -32768.

EXAMPLE

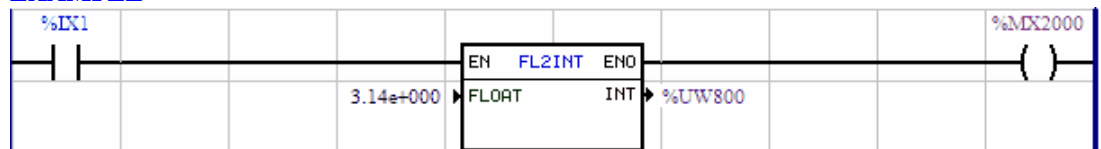


When the digital input 1 is 1, the value of the constant 3.14 is converted to the user parameters 800, where the parameter 800 will be 3.


7.5.8.4 IDATA

SYMBOL

READ

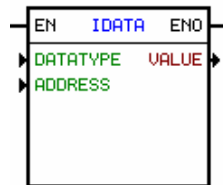

WRITE

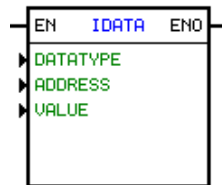

DESCRIPTION

It has 1 EN input, 1 ENO output and 3 arguments:

- * mode (read / write)
- * index
- * value

The EN input enables the block.

The ENO output inform if the index is valid.

Index

It has 2 data types and 1 address.

The data type of address can be:

- constant
- word marker
- user parameter

The data type to be read or written can be:

- bit marker
- word marker
- float marker
- system marker
- digital input
- digital output
- analog input
- analog output
- user parameter
- system parameter
- drive parameter

Value

It has 1 data type and 1 address.

The data type can be:

- bit marker
- word marker
- float marker
- digital input
- digital output
- analógica input

- analógica output
- usuário parameter
- sistema parameter
- drive parameter


FUNCTION

If the read mode was programmed and the EN input was enabled, the value on index address will be the address of the data to be transfer to the address of the value argument. If the value of the index address was the valid value to read mode, the ENO output is set, otherwise reset.

For example, if the data type to be read was a drive parameter and the value of the index address was less than 750, ENO will be set, otherwise it will be reset.


And if the mode was programmed to write, the value on value argument address, will be transferred to the address of the index address.

EXAMPLE

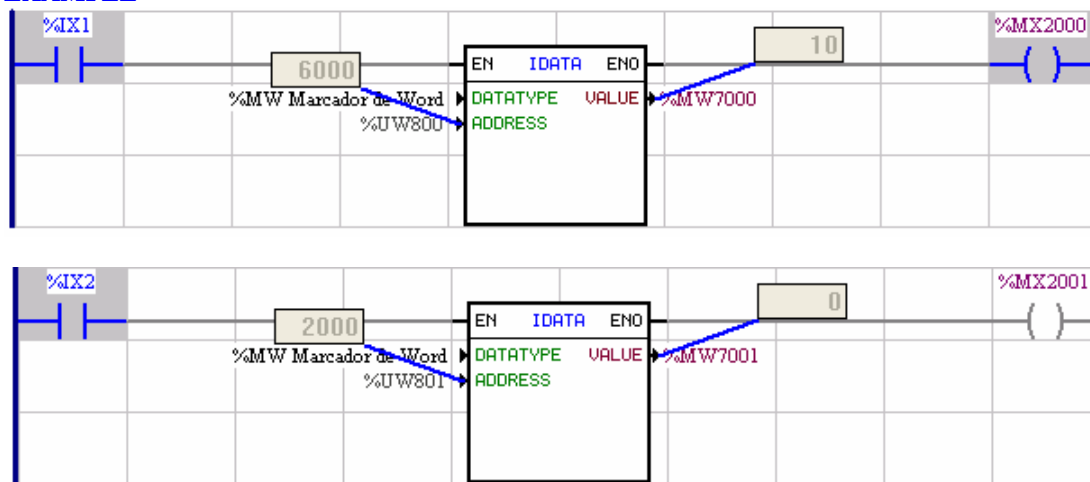

7.5.8.5 USERERR

SYMBOL

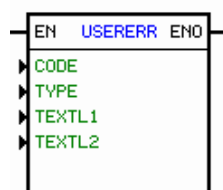

DESCRIPTION

It is composed by 1 input EN, 1 output ENO and 4 arguments listed below:

- CODE – Alarm or fault code:
 - 950 to 999 (PLC11-01 and PLC11-02)
 - 750 to 799 (SoftPLC CFW11)
 - 150 to 199 (SRW01-PTC and SRW01-RCD)
- TYPE – Type of error:
 - 0: Alarm, 1: Fault (PLC11-01, PLC11-02 and SoftPLC CFW11)
 - 0: Error, 1: Fault (SRW01-PTC and SRW01-RCD)
- TEXTL1 – Error text – line 1 (12 characters)
- TEXTL2 – Error text – line 2 (12 characters)

The EN input is responsible for the enabling of the block.
The ENO output is on when block is active.

FUNCTION

If the EN input is 0, the ENO output will be 0

When the EN input were activated, the alarm or fault code will be displayed on the HMI, with the respective text.


If it was an alarm and the block is disabled, the alarm will be removed from the HMI.

If it was a fault and the block is disabled, the fault will not be removed from the HMI. It will be necessary to reset the drive in this case.

Note:

If another alarm/fault were active, when activating the block this user alarm/fault will not overwrite the active alarm/fault.

COMMENTED EXAMPLE

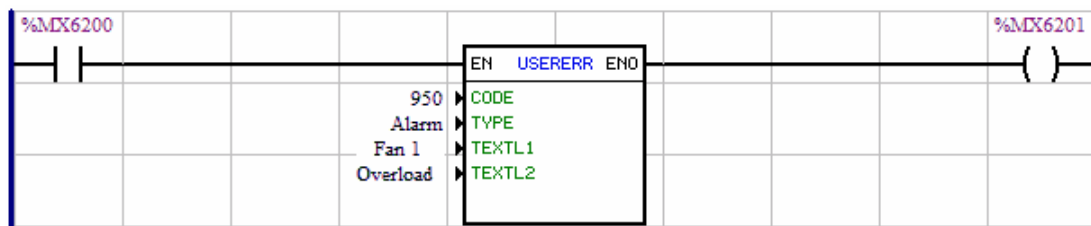


When the bit marker %MX6200 is 1, the alarm 950 will be generated at the drive HMI with the message "Fan 1 Overload".

7.5.9 CAN Network

7.5.9.1 MSCANWEG

 SYMBOL



DESCRIPTION

This block is constituted by 1 input EN, 1 output ENO and 2 arguments, as follows:

- Speed Source: informs which speed value the CAN WEG Master will transmit to the slaves - the real speed or the speed reference.
- Axis : define what axis is transmit to slave (real or virtual)

The input EN is responsible for enabling the master to transmit the speed and real position references to the slaves connected in the CAN network.


The output ENO informs if the CAN network is enabled.

OPERATION

When the block is enabled it cyclically transmits the speed and real position references through CAN network.

NOTE: If the block is not enabled on the master, the slave will not follow the master.


SAMPLE

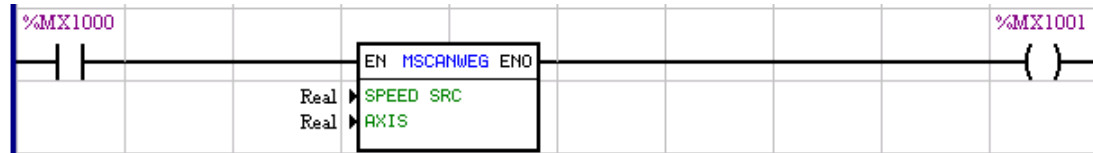

When the bit register %MX1000 is ON, the board will cyclically transmit the speed and real position reference.

7.5.9.2 RXCANWEG

 SYMBOL



DESCRIPTION

It consists of 1 EN input, 1 ENO output and 2 arguments, as follows:

- speed - float marker, where the speed will be received
- position - float marker, where the position will be received


The EN input is responsible for the block enable.

The ENO output changes to 1, whilst the block is reading the data of the CANWEG network.

OPERATION


As soon the block is enabled, the speed and the position data read by the CANWEG network will be stored in their respective float markers.

EXAMPLE

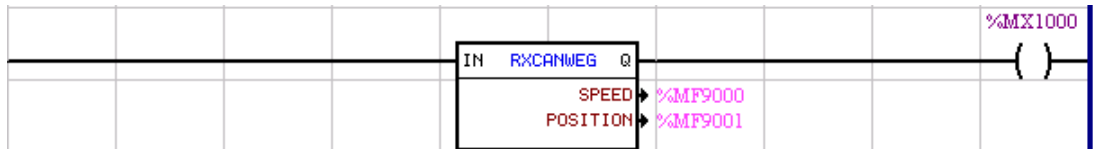

7.5.9.3 SDO

SYMBOL:

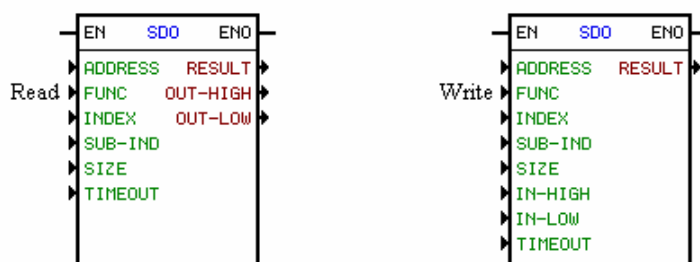

DESCRIPTION:

It is composed by one EN input, one ENO out put and 9 arguments, which are:

ADDRESS : CANopen network node address

FUNC : Fonctionn (read or write)

INDEX : Index of the object that is to be read or written (decimal)

SUB-IND : Sub-Index of the object that is to be read or written (decimal)

SIZE : Size of the object that is to be read or written (decimal)

TIMEOUT : Time of waiting, in ms, for reading or writing the value

RESULT : Result of the block execution

0 = Successfully executed

1 = Card cannot execute the function (Example: master not enabled)

2 = Timeout on hold for the master response

3 = Node returned error

OUT-HIGH : The most significant value of the read object

OUT-LOW : The least significant value of the read object

IN-HIGH : The most significant value to be written on the object

OUT-HIGH : The least significant value to be written on the object

The EN input is responsible for enabling the block

The ENO output goes to 1 after executing the block

OPERATION:

If the EN input is zero, the block is not executed.


If the EM input suffers a transition from 0 to 1, the card will send a message via CANopen network to the network node, according to the programmed arguments. If the block is programmed for reading, the card will require the node and the value informed by the node will be saved in the output arguments. If the block is saved for writing, the input arguments will be written on the object correspondent to the node. After the execution of the block the ENO output goes to 1 and only returns to zero after the EN input returns to zero.

EXAMPLE:


Reading of the DC voltage of the SCA-05:

Through the WSCAN software it is verified that the DC voltage of the SCA-05 corresponds to the 20004h (hexadecimal) object which in decimal is equal to 8196. The object being an INTEGER16 then the number of bytes =2.


Network (WSCAN) :

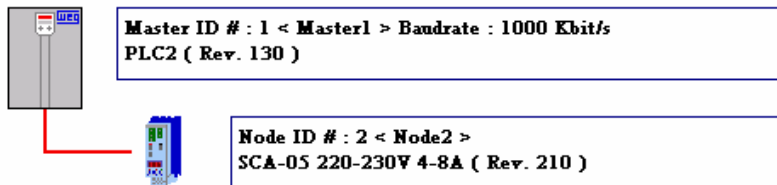

Objects Dictionary (WSCAN) :

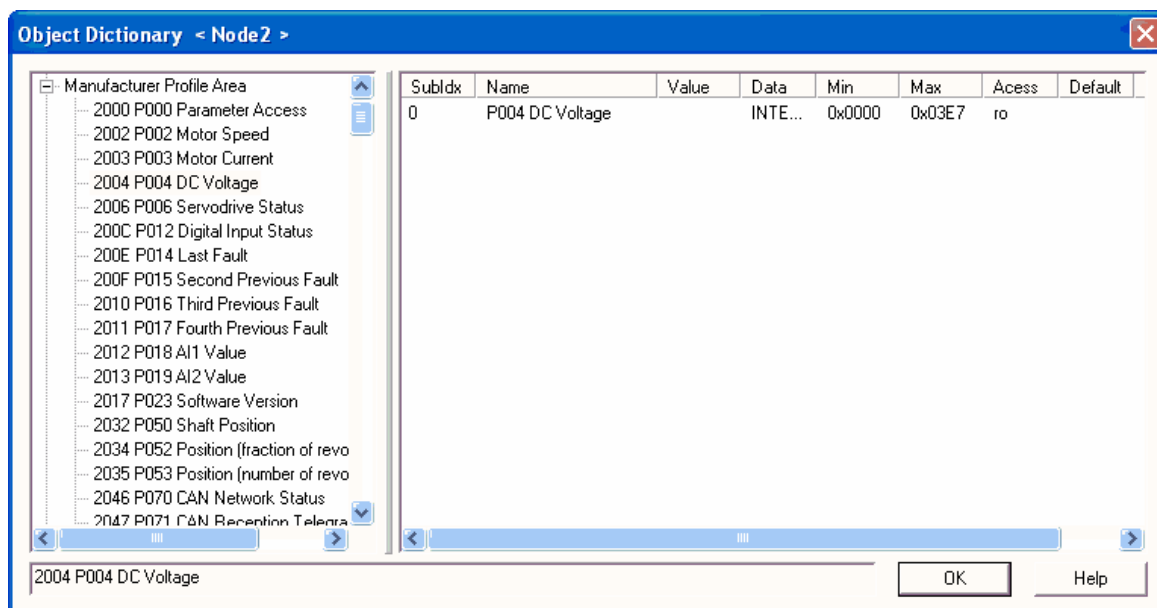

Ladder diagram :

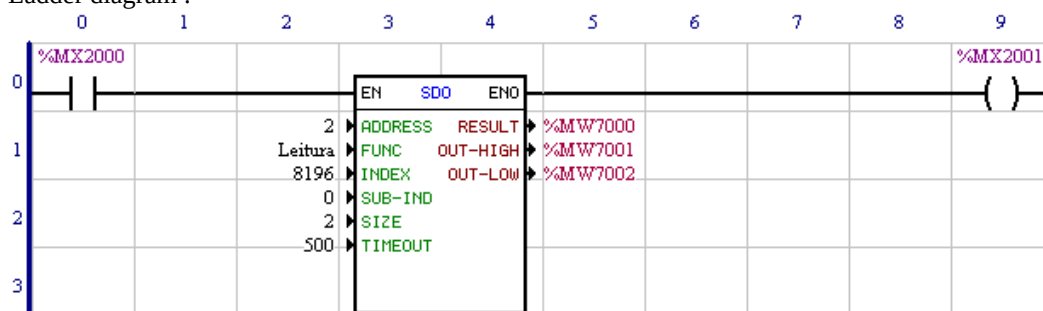

Operation :

When the bit marker %MX2000 suffers a transition from 0 to 1 the card will send a message via CANopen grid requesting the reading of the object 2004h. When the value is received it will be stored on the word markers %MW7001 and %MW7002.


Note !

WSCAN = WEG Software CANopen Config

This block only works when the card is enabled as master of the CANopen grid, in other words a valid grid configuration for the card must be loaded through the WSCAN software.

7.5.10 USERFB

SYMBOL

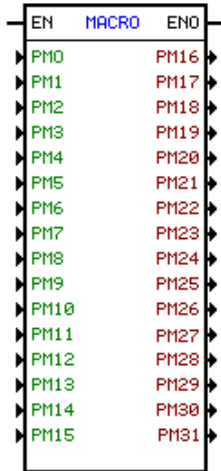

DESCRIPTION

It is composed by 1 input EN, 1 output ENO and 32 arguments, as follows:

- 16 input parameters (PM0 to PM15)
- 16 input/output parameters (PM16 to PM31)

The input EN is responsible for block enabling.
The output ENO will be on while the block is executed.

The USERFB block is responsible for executing a ladder subroutine that was created by the user.

USERFB parameters are memory areas that are used by the main program, which calls the USERFB, to interact with subroutines programmed inside the USERFB.
They can be of the following types: BOOLEAN, WORD e FLOAT.

The following table shows the objects that can be used for each type of USERFB parameter:

Type of USERFB Parameter	Inputs PM0 a PM15	Inputs/Outputs PM16 a PM31
BOOLEAN	%MX - Bit Marker %IX – Digital Input	%MX – Bit Marker %QX – Digital Output
WORD	Constant %UW – User Parameter %MW – Word Marker %IW – Analog Input	%UW – User Parameter %MW – Word Marker %QW – Analog Output
FLOAT	Float Constant %MF – Float Marker	%MF – Float Marker


FUNCTION

If the input EN is off, the output arguments PM16 to PM31 are not changed.


If the input EN is on, the content of the arguments PM0 to PM31 is copied to the memory area corresponding to the USERFB parameters (PM). After that, the ladder subroutine is called and executed and

the content of the USERFB parameters PM16 to PM31 is copied to the corresponding arguments.

FLOWCHART

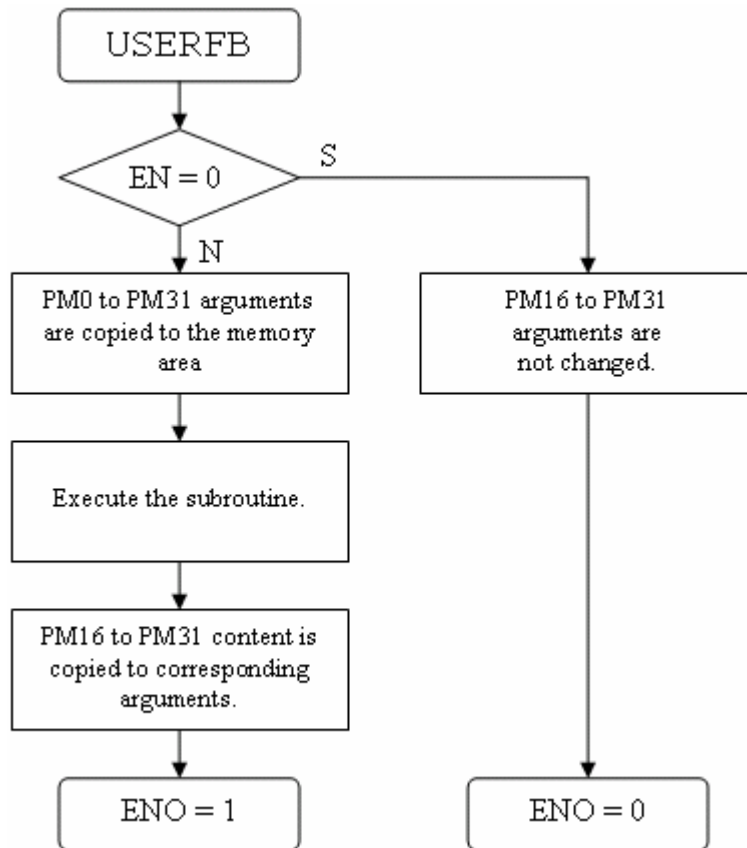

Properties Box of the USERFB Block

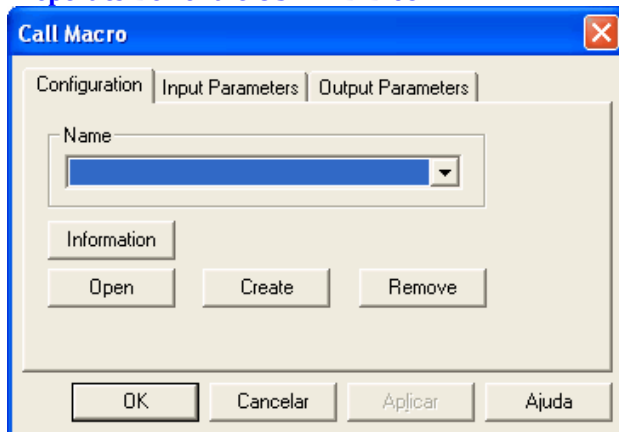

Double-clicking the USERFB block opens this properties box.


It is possible to perform the following operations by using the Properties Box:

- Select the USERFB to be executed by using the "Name" select.
- Obtain information about the selected USERFB by using the "Information" button.
- Open the USERFB for edition by using the "Open" button.
- Create a new USERFB by using the "Create" button.

- Remove the selected USERFB by using the "Remove" button.
- Define the arguments of the input parameters by using the tab "Input Parameters".
- Define the arguments of the output parameters by using the tab "Output Parameters".

Creating a new USERFB

In order to create a new USERFB, click on the "Create" button and a creation assistant will help you to define the necessary parameters for the USERFB, as presented in the following example.

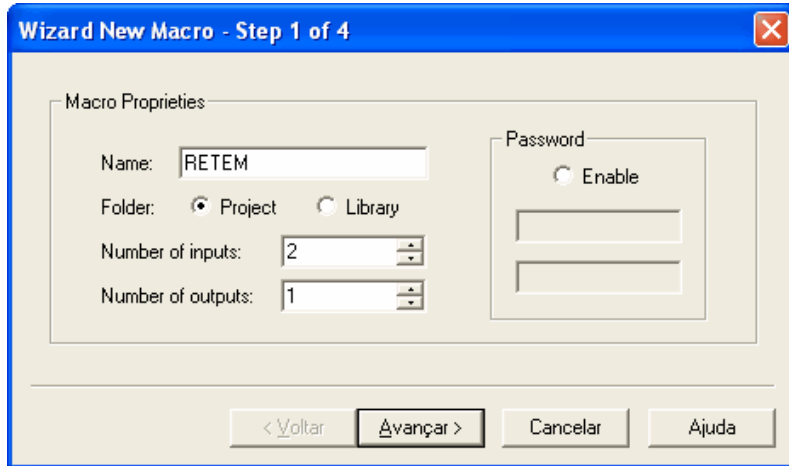

The screenshot shows the 'Wizard New Macro - Step 1 of 4' dialog box. It contains the following fields and controls:

- Macro Proprieties:**
 - Name:** A text box containing 'RETEM'.
 - Folder:** Two radio buttons, 'Project' (selected) and 'Library'.
 - Number of inputs:** A spin box set to '2'.
 - Number of outputs:** A spin box set to '1'.
- Password:** A section with a radio button labeled 'Enable' and two empty text boxes for password entry.

At the bottom, there are four buttons: '< Voltar', 'Avançar >', 'Cancelar', and 'Ajuda'.

The first step of the USERFB creation assistant is to define the name, the number of input and output parameters, if the USERFB will be stored in the project or in the USERFB library, and a password.

When you choose the Folder = Project the USERFB is stored in {Directory where WLP is installed}\PROJECTS\{Project Name}\MACROS\


When you choose the Folder = Library the USERFB is stored in {Directory where WLP is installed}\MACROS\

On a standard WLP installation {Directory where WLP is installed} = C:\WEG\WLP VX.YZ where X.YZ is the WLP version.

Note:

USERFBs that are stored in the USERFB library can be used by any project. If you activated the password option and want to use this option, please, create a password that you will remember.

The password will be required for future USERFB edition. Click on the "Next" button.

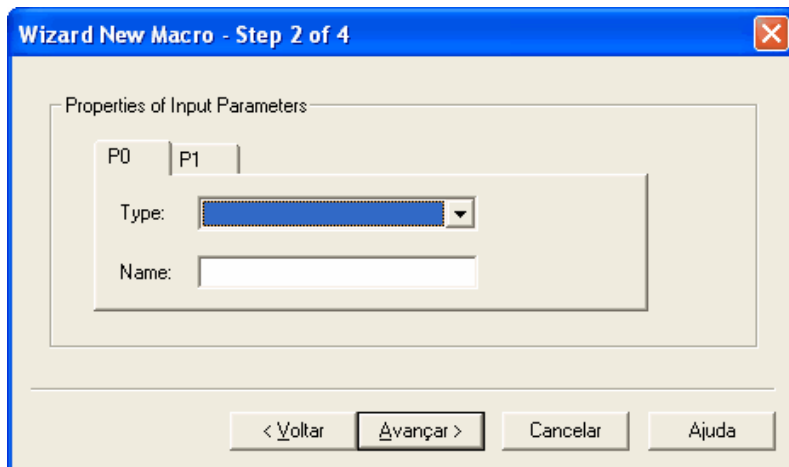


The screenshot shows the 'Wizard New Macro - Step 2 of 4' dialog box. It contains the following fields and controls:

- Properties of Input Parameters:**
 - Two tabs, 'P0' and 'P1', are visible.
 - Type:** A dropdown menu.
 - Name:** A text box.

At the bottom, there are four buttons: '< Voltar', 'Avançar >', 'Cancelar', and 'Ajuda'.

The second step of the USERFB creation assistant is to define the input parameters properties. The type of parameter can be one of the following options:

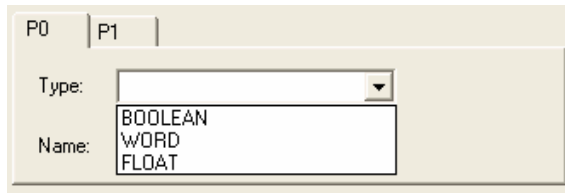


P0 | P1

Type: BOOLEAN

Name: WORD

FLOAT


In this example the input parameters will be defined as follows:

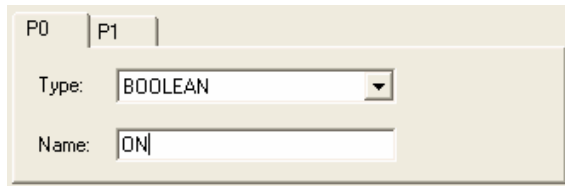

P0 | P1

Type: BOOLEAN

Name: ON

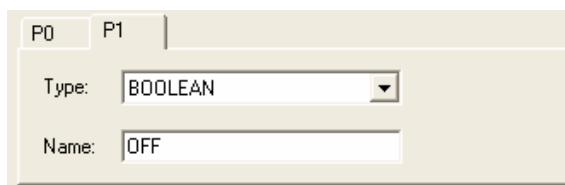


P0 | P1

Type: BOOLEAN

Name: OFF

Click on the "Next" button:

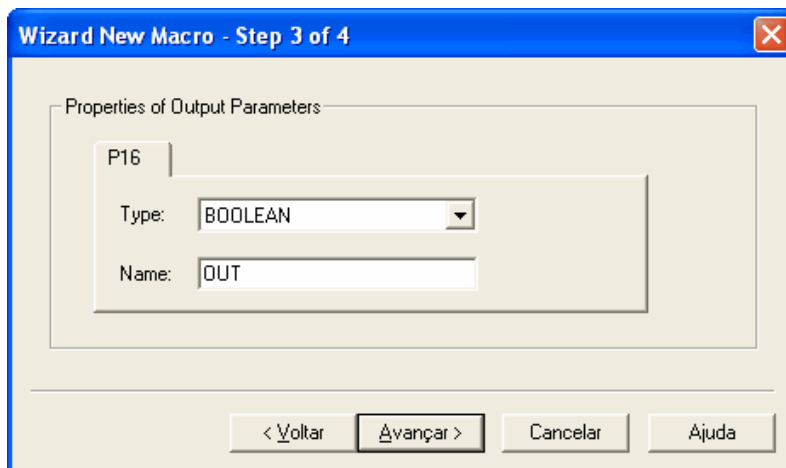

Wizard New Macro - Step 3 of 4

Properties of Output Parameters


P16

Type: BOOLEAN

Name: OUT


< Voltar Avançar > Cancelar Ajuda

The third step of the USERFB creation assistant is to define the properties of the output parameters. Click on the "Next" button:

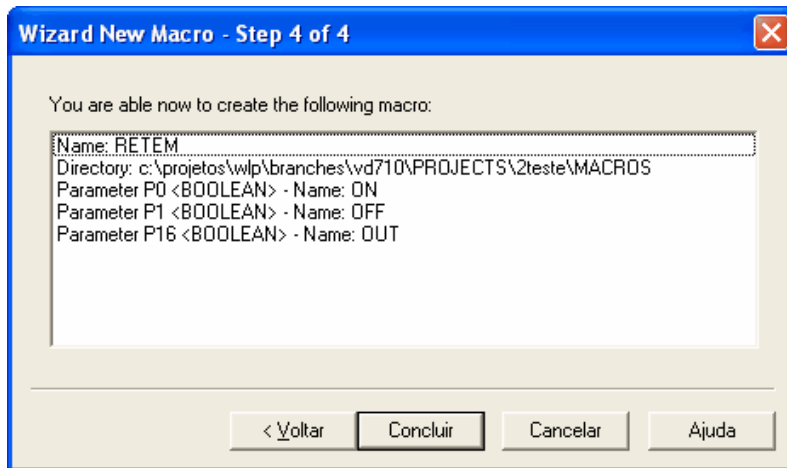


On the fourth step of the USERFB creation assistant it is possible to review all the options defined on the previous steps. In case it is necessary to change anything click on the "Back" button; otherwise click on the "Finish" button.

After clicking on the "Finish" button a new ladder edition window will be opened, as presented in the following figure:

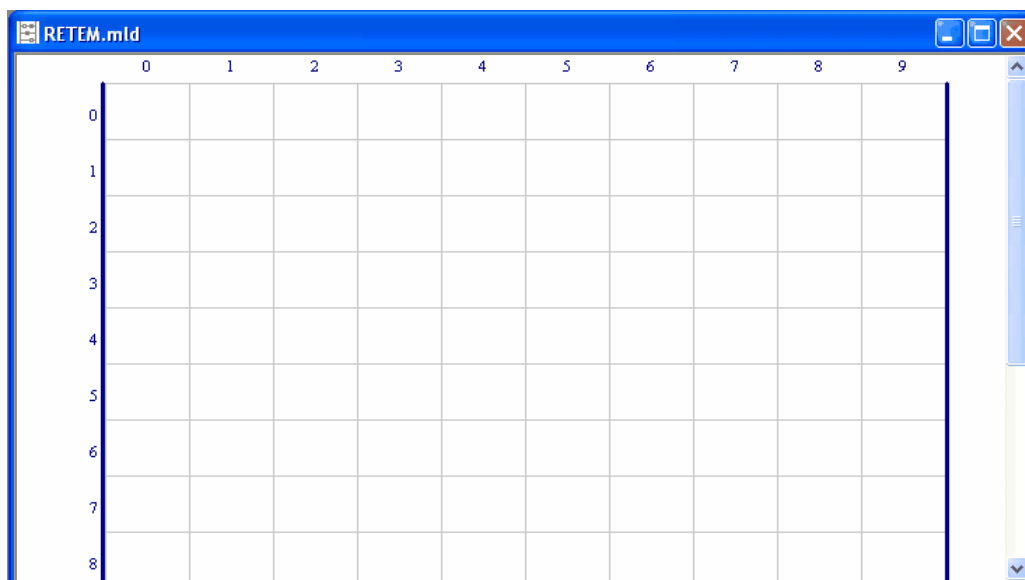

This window will have the USERFB name plus the extension ".mld", which defines a file of the type "USERFB".

For this example we will use the following ladder diagram.

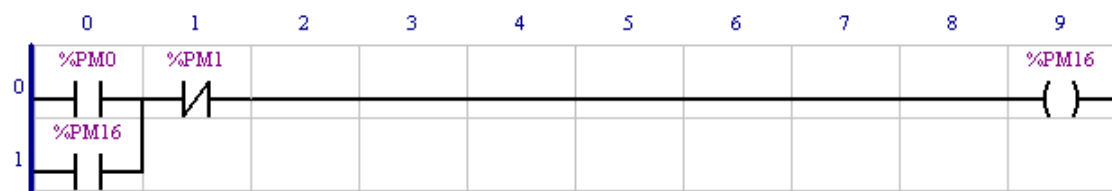


Where %PM0 = USERFB parameter 0, %PM1 = USERFB parameter 1 and %PM16 = USERFB parameter

16.


It is possible to use all the ladder blocks available for a specific equipment inside a USERFB ladder diagram. All the arguments of these blocks can be defined as a USERFB parameter.

By activating the option "TAG" of the WLP software the ladder diagram will be presented as follows.

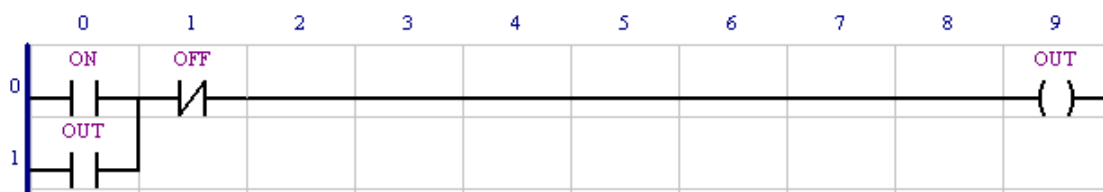


The symbols for each USERFB parameter were defined on the creation assistant.

If it is necessary to change the USERFB configuration defined through the creation assistant, use the "USERFB" menu to access the available options, as presented on the following figure.

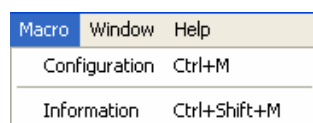


The option "Configuration" opens the following window:

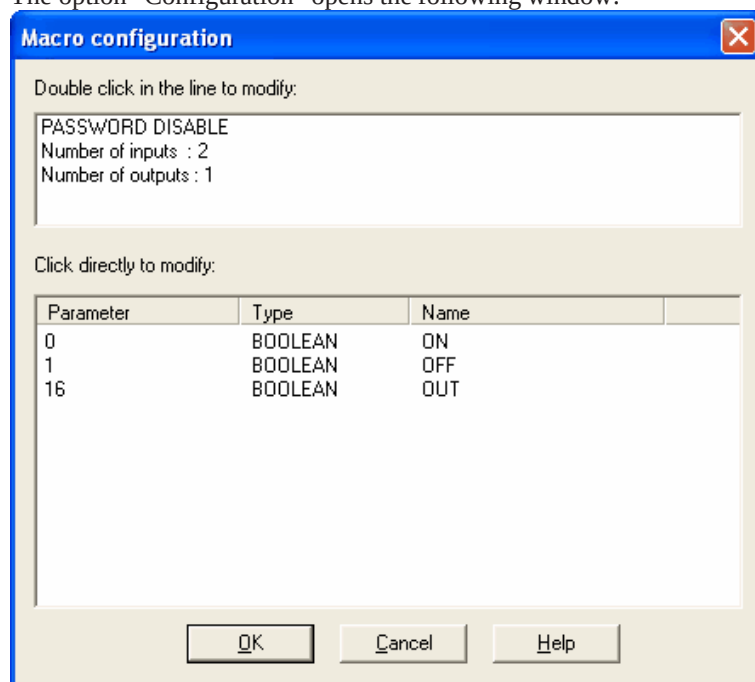

It is possible to perform the following operations by using this option:


- Activate / Deactivate the USERFB password by directly clicking on the option "ACTIVE/INACTIVE PASSWORD".
- Change the number of input/output parameters by directly clicking on the number of inputs/outputs.
- Change the parameter type by directly clicking on the type.
- Change the parameter name by directly clicking on the parameter name.

The option "Information" opens the following window:

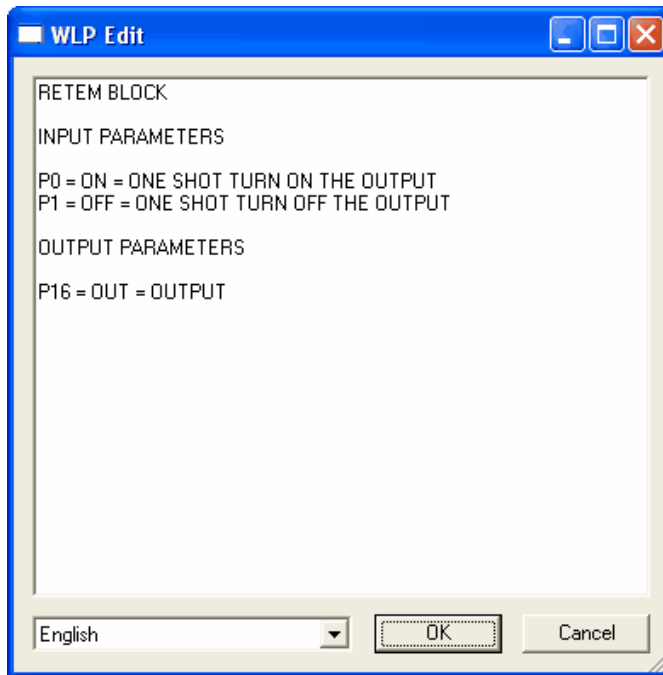


It is possible in this window to write, in a simplified way, a text that will be showed when the information key of the USERFB property box is pressed. This file has an "rtf" format and can be edited by means of an advanced editor directly in the folder where the USERFB has been stored.

After the new USERFB has been configured, its ladder diagram window can be closed, and then the main program ladder diagram that calls the USERFB must appear in the following way:


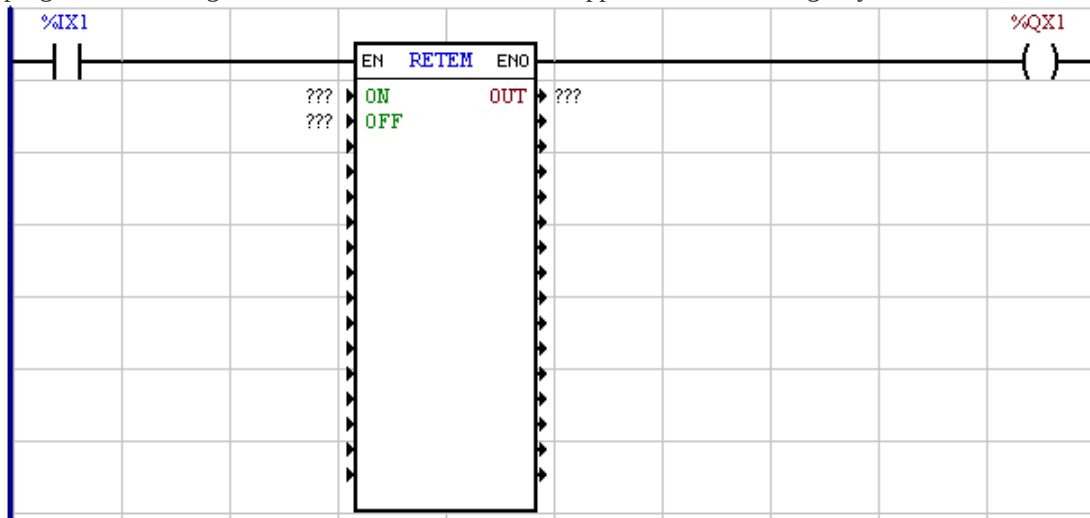


Now, the USERFB block is represented with the options and definitions that were given to it.


The properties box will have the following aspect by double-clicking the USERFB block:

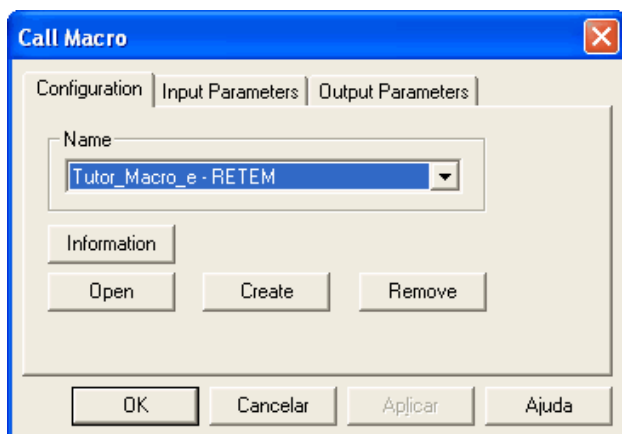

The USERFB name is described as follows: "{USERFB Location} - {USERFB Name}". The USERFB Location has two options available: WLP or the project name. WLP option means that the USERFB is stored in the USERFB library, as described previously, and can be accessed by other projects. By clicking on the options "Input Parameters" and "Output Parameters", the properties box will have the following aspect:

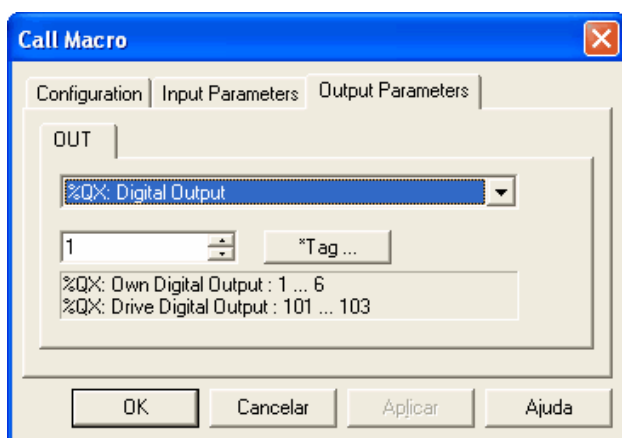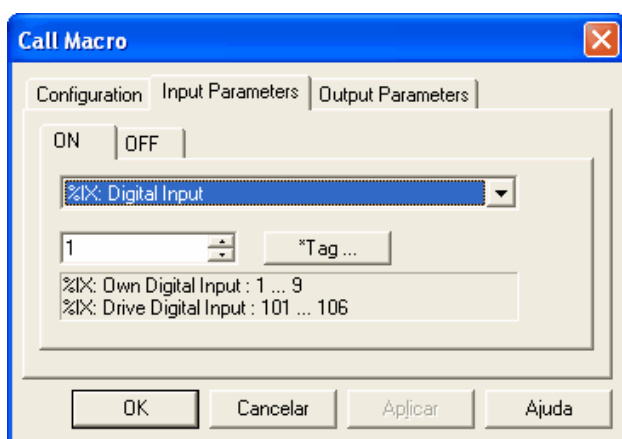


After defining the input and output parameters, the ladder diagram will have the following aspect:

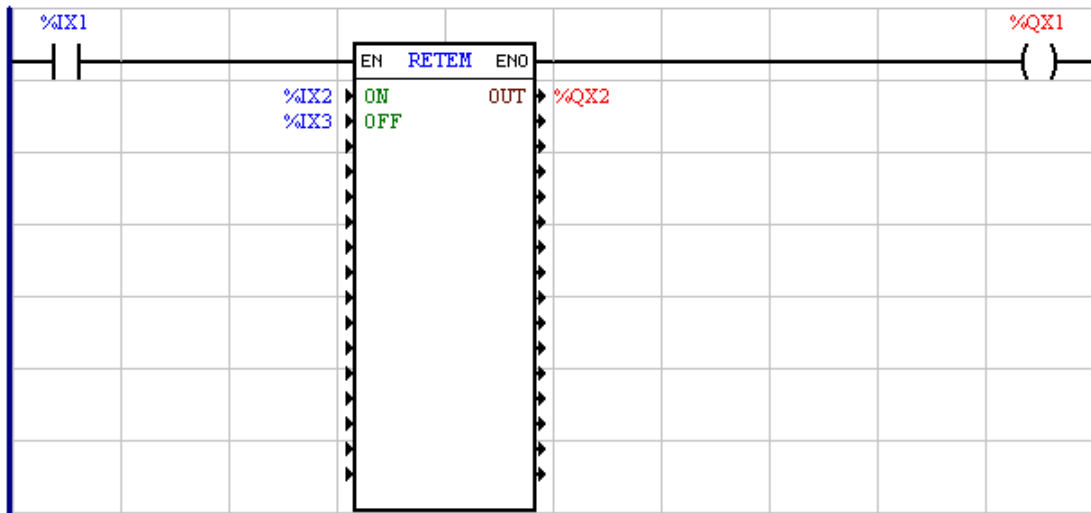


Now, compiling the main program, which will also compile the USERFB, and transferring it to the board under use, we will have the following situations:


Situation 1: Even if the USERFB input "ON" is true, the output "OUT" remains off, since the USERFB block is disabled (%IX1 is off).

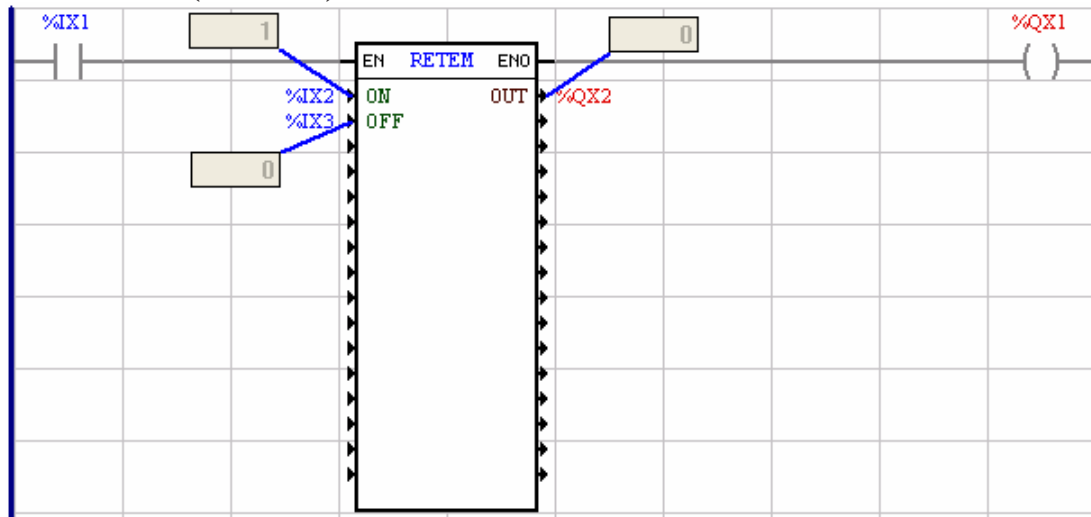


Situation 2: When the USERFB is enabled (%IX1 is on), the output "OUT" is off, since the input "ON" is false.

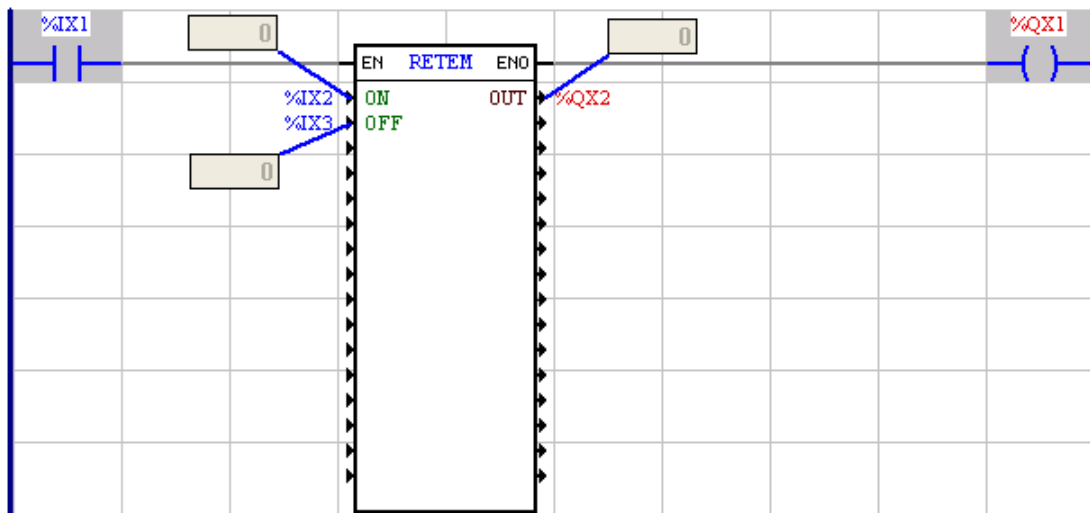

Situation 3: When the USERFB is enabled (%IX1 is on) and the input "ON" is true, the output "OUT" is turned on.

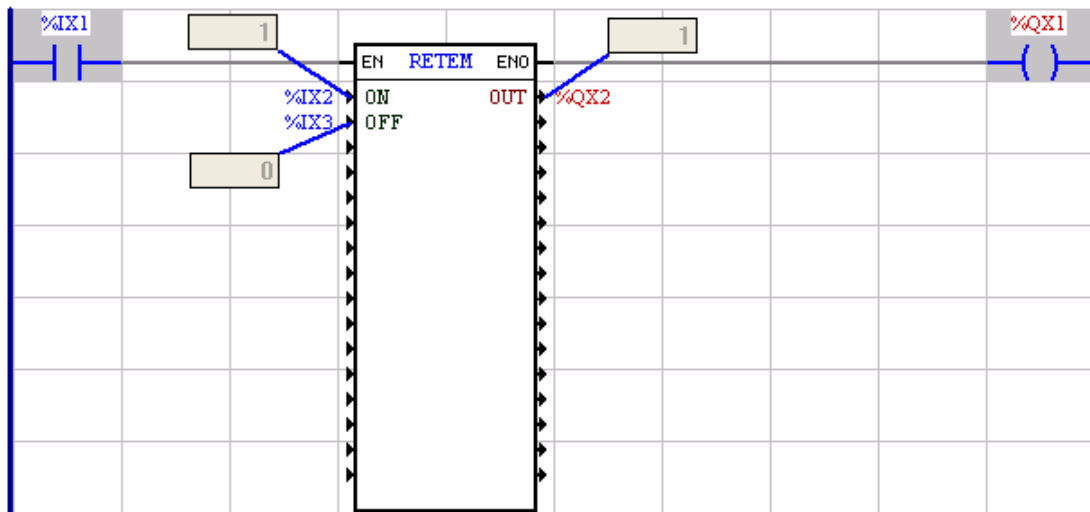


At this moment, it is possible to monitor the internal operation of the USERFB. In order to do so, disable the on-line monitoring of the main program, open the USERFB and then reactivate the on-line monitoring.

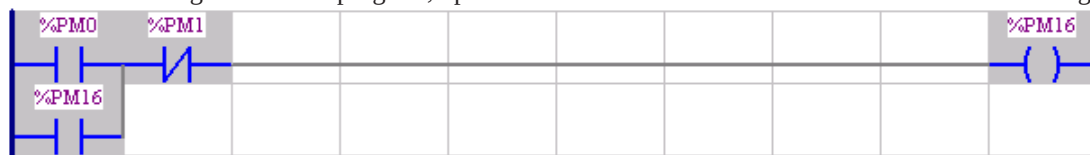


Note: The on-line monitoring of a USERFB is performed by reading the USERFB parameters. Every time a USERFB is called, the USERFB parameters share the same internal memory area of the board. Therefore, the values of the USERFB parameters that were monitored coincide with the last USERFB block call performed by the main program. Hence, we recommend, for USERFB depuration purposes, to use only one USERFB call on the main program, because in this way the monitoring will indicate the real behavior of the USERFB under question. After USERFB depuration you can use as many calls as necessary, limited to the board programming capacity.

Situation 4: When the input "ON" is false, the output "OUT" remains on, since the USERFB is still enabled (%IX1 is on) and the input "OFF" is also false.

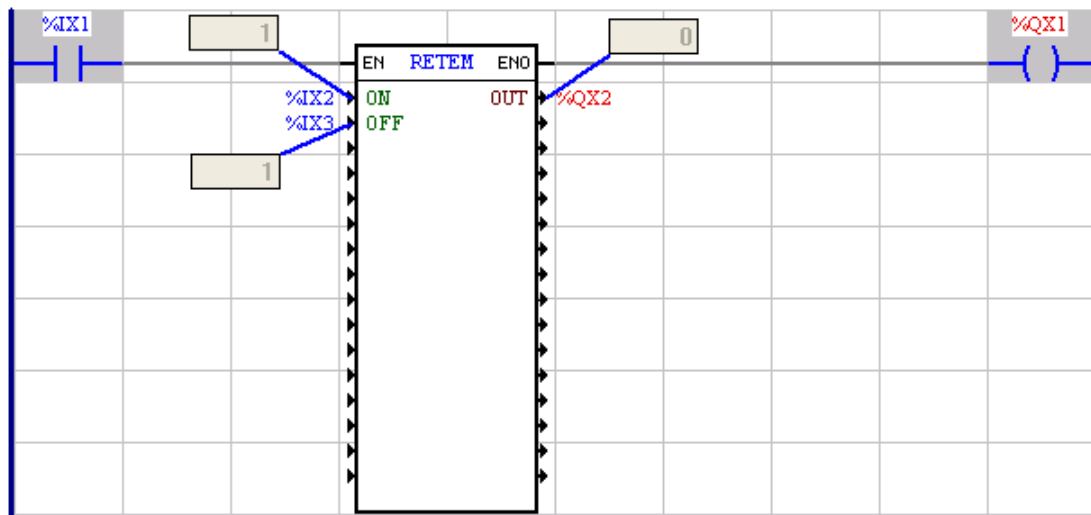


Monitoring of the USERFB internal situation:

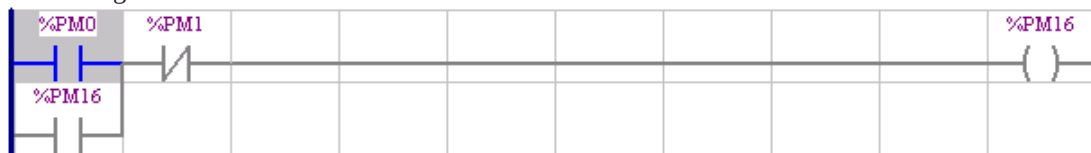

The following figure presents an example of how to use a USERFB in multiple calls. All the USERFB calls execute the same ladder diagram, but in an independently way, according to the operators programmed for the USERFB.

7.5.11 MMC

SYMBOL

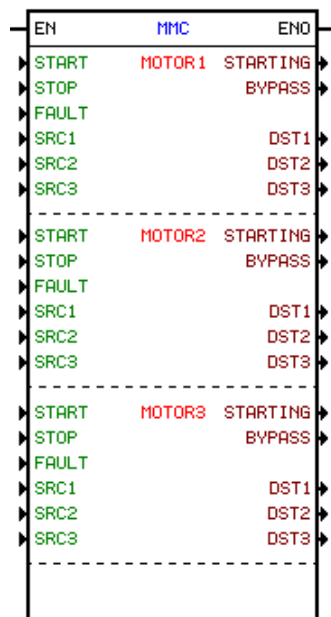

DESCRIPTION

This block is composed by 1 input EN, 1 output ENO, and 33 arguments, which are::

A function block called MMC – Multimotor Control, which together with the SSW06 optional IOS6 board, makes the automatic starting of up to three motors possible, has been developed, for multimotor drive systems.

Properties of the Motor 1, 2 or 3:

- START: Starts the motor with 1.
- STOP: Stops the motor with 0.
- FAULT: Stops the motor with 0.
- STARTING: It indicates starting or stopping motor.
- BYPASS: Indicates closed by-pass.
- SRC1: Source datum.
- SRC2: Source datum.
- SRC3: Source datum.
- DST1: Destination datum.
- DST2: Destination datum.
- DST3: Destination datum.

OPERATION

For more details on the operation, refer to the Multimotor Application Guide, available together with the SSW-06 documentation.

7.6 User Blocks

7.6.1 User Blocks installed in the WLP

The block [USERFB](#) ^[216] is responsible for the execution of a subroutine created by the user. In the WLP setup program there are available some USERFB blocks with predefined functions for the user application. Find below a brief description of these blocks.

ANALOG_I - Analog input conversion

It converts the value read at analog input in binary format to an engineering unit as defined by the scale.

ANALOG_O - Analog output conversion

It converts the engineering unit value with a defined scale to the analog output in binary format.

DIAMCALC - Diameter calculation

It calculates the diameter of a winding in mm according to the relation between the line speed in m/min and the effective motor speed (rpm).

DIAMLENG - Diameter estimation

It estimates the coil diameter in mm according to the wound material length and thickness.

DMux - Conversion from word to binary

It converts one word to its respective 16 bits.

DRAW

It implements the draw function to a given speed reference. Draw is a value that can be added or multiplied to the value of a given speed reference.

EP - Electronic Potentiometer

It implements the electronic potentiometer function to the speed reference.

FLOAT2PO - Conversion of the floating point to position

It converts the value (rpm) as floating point to position as revolution and fraction of revolution. These values can be used directly at the inputs of the positioning blocks.

LRAMP - Linear reference ramp

It implements the linear reference ramp according to the programmed acceleration and deceleration time, plus quick deceleration ramp with option for selecting slow or normal reference.

MFILTER - First order lowpass filter

It implements the first order lowpass filter with enabling and reset. This filter block does not show the same dynamic as the block FILTER of WLP, since its calculations depend on the nameplate scan cycle.

MMIN2RPM - Speed conversion from m/min to rpm

It determines the motor RPM that the motor should have, based on the line speed (m/min) and the roll diameter of the driven shaft. Mux - Binary to word conversion It converts 16 bits into a respective word.

PO2FLOAT - Position to floating point conversion

It converts the position of the actual or virtual axis (only POS2) from the format signal, turns and turn fraction to a floating point number.

The data acquisition is performed directly from the board parameters, being then converted to a floating point number.

RPM2MMIN - Conversion of a rpm speed to a linear speed (m/min)

It determines the line speed in m/min based on the motor speed (rpm) and on the roll diameter of the driven shaft.

RPMCFW09 - Conversion of the effective speed in 13/15 bits format to rpm

The Word marker of the system %SW1 (effective speed (13/15bits)) and the parameter of the system %P767 (synchronous motor rpm), will give you the effective motor speed (rpm) as well as the motor direction of rotation. This is only available with the CFW09.

TAPER - Calculation of the taper / hardness function

Through an initial and a final diameter definition you define will set the taper (hardness) function for winding according to predefined force set point and a percentual decreasing of this set point.

8 Compiler

8.1 General Review

Commands :
[Compile](#) ⁶²
[Compile Subroutine/USERFB](#) ⁶²
[Debug](#) ⁶²
View :
[Compilation errors](#) ³⁴
[Compilation info](#) ³⁴
[Search compilation errors](#) ³⁴
Messages :
[Fatal Errors](#) ²³¹
[Errors](#) ²³²
[Warnings](#) ²³⁴
[Informations](#) ²³⁵

8.2 Fatal Errors

See below the description of the Fatal Compiler Errors.

"Fatal Error C1 : Compiler window can not be created"

Why? Memory error

Action: close application and start it again or restart the computer.

" Fatal Error C2 : directory not found '%1'"

Why? Internal error

Action: contact WEG Service, or WEG Representative, providing description and details about the error.

" Fatal Error C3 : compiler received non-valid argument"

Why? Internal error

Action: contact WEG Service, or WEG Representative, providing description and details about the error.

" Fatal Error C4 : file '%1' can not be opened ==> caused ..."

Why? The file does not exist or can not be accessed; file error

Action: based on the error cause, try to eliminate it.

" Fatal Error C5 : directory '%1' can not be created"

Why: Hard Disk error

Action: reset computer and compiler

" Fatal Error C6 : incorrect equipment"

Why? Source file <Project>.LDD is corrupted
Action: create a new program

"Fatal Error C7 : page number is not correct"

Why? Source file <Project>.LDD is corrupted
Action: create a new program

"Fatal Error C8 : file can not be opened"

Why? Source file <Project>.LDD is corrupted
Action: edit your program again and save it

"Fatal Error C9 : overload of the internal resource memory destined for longs"

Why? internal resource memory destined for WLP blocks exceeded its limit.
Action: reduce program size.

"Fatal Error C10 : overload of the internal resource memory destined for bytes"

Why? internal resource memory destined for WLP blocks exceeded its limit.
Action: reduce program size.

8.3 Errors

See below the description of the Compiler Errors.

"Error C101 : incorrect header version"

Why? Source file <Project>.LDD is corrupted
Action: create a new program

"Error C103 : incorrect software version"

Why? Source file <Project>.LDD is corrupted
Action: create a new program

"Error C103 : incorrect body version"

Why? Source file <Project>.LDD is corrupted
Action: create a new program

"Error C104 : non-existing address"

Why? the field Address is empty
Action: fill out the field Address with a valid address

"Error C105 : unknown cell type"

Why? Source file <Project>.LDD is corrupted
Action: create a new program

"Error C106 : unknown function block type"

Why? Source file <Project>.LDD is corrupted
Action: create a new program

"Error C107 : undefined element in the instruction list"

Why? internal error
Action: contact WEG Service, or WEG Representative, providing description and details about the error.

"Error C108 : non-valid line"

Why? Source file contains non-valid characters
Action: save and close the program; restart the program again

"Error C109 : vertical connection with right connection"

Why? This version does not accept right connection

Action: delete the vertical connection

"Error C110 : vertical connection without connection"

Why? There is a vertical connection that does not have one of the limit elements

Action: delete the vertical connection

Note: error available only in WLP V1.00

"Error C111 : contact can not be connected to the right border directly"

Why? No coil has been found in the last column

Action: delete the horizontal line, insert a coil in the last column and connect the contact and the coil.

"Error C112 : coils can be connected only to the right border"

Why? the last column contains an element that is not a coil

Action: delete the element and insert a coil.

"Error C113 : element become a non-valid logic"

Why? the program is not complete

Action: element from the left border should be connected to the right border.

"Error C114 : invalid address"

Why? address inserted into the block is invalid.

Action: check the address of the element that caused the error.

"Error C115 : block is not valid for the equipment with the specified firmware version"

Why? block inserted into the program is not compatible with the equipment and firmware version.

Action: erase block or check configured equipment.

"Error C116 : invalid USERFB parameter"

Why? USERFB parameter is not valid or it is disabled.

Action: check USERFB parameter inside of the USERFB that caused the error.

"Error C117 : invalid USERFB programming"

Why? programming inside of the USERFB is not valid.

Action: check program inside of the USERFB.

"Error C118 : word math is not allowed for this firmware version"

Why? word math is not compatible with the equipment and specified firmware version.

Action: erase block, check block, or check configured equipment.

"Error C119 : encoder input is not allowed for this equipment"

Why? encoder counter was programmed with an input that is not available for the specified equipment.

Action: erase block or check configured equipment.

"Error C120 : counting mode is not allowed for this equipment"

Why? encoder counter was programmed with a counting mode that is not available for the specified encoder input.

Action: check block programming.

"Error C121 : USERFB is not allowed for USERFB block"

Why? USERFB block inserted into USERFB ladder program.

Action: delete the USERFB block.

"Error C122 : programming no allowed for this version of firmware/equipment"

Why? option or value for the block is not allowed for selected firmware version or equipment.

Action: check block programming or change de properties of project.

“Error C123: File cannot be found”

Why? The file has not been found in the specified pass.

Action: Verify the block programming checking if it aims to the refereed file.

“Error C124: Cam profile cannot be generated”

Why? Cam profile binary file has not been generated.

Action: Verify the programming and possible errors generated for the Cam blocks inserted in the project.

“Error C125: Memory reserved for Cam profiles exceeded”

Why? The addition of the points used in all the Cam blocks inserted in the project exceeded the capacity of the memory allotted for the Cam profiles.

Action: Erase some Cam block or reduce its number of points.

“Error C126: Error compiling USERFB”

Why? Some error occurred during the referred USERFB block compilation.

Action: Verify the Cam block by trying to compile it separately.

“Error C127: Memory reserved for user program exceeded”

Why? The program size exceeded the allotted memory for user program.

Action: Reduce the size of the user program.

“Error C128: Unsupported floating point resource”

Why? An attempt to use floating point with equipment that does not support floating point.

Action: Modify the blocks in order to use fixed point (integer).

8.4 Warnings

See below the compiler warnings description:

"Warning C201 : element is not connected at the right side"

Why? Element is not connected to the other elements in the left side.

Action: complete or delete the logic.

"Warning C202 : the position value is too small to generate a trajectory"

Why: the position value does not generate any trajectory; this warning may be displayed in the function blocks: in position, S-Curve, trapezoidal curve.

Action: fill out the field with a value > 360/65536 (0.0054931640625)

"Warning C203 : incomplete logic"

Why? There is a vertical connection or one element is not connected (the program is not complete)

Action: delete the logic, or connect the elements correctly (left border and right border)

"Warning C204 : position value is very small"

Why? In this condition, the motor stays at the same position.

Action: Fill the position with a value bigger than 360/65536 degrees.

"Warning C205 : encoder speed reference is zero (it does not run)"

Why? The relationship between master and slave is zero.

Action: program any value different from zero in the entire ratio and/or program any value different from zero for the slave ratio.

"Warning C206 : division by 0"

Why? The divider of the math block is a float constant equal to 0.

Action: change data 2 to a value different from 0. If this change is not made, the division result will be

saturated to the maximum value.

“Warning C207: Input address is equal to the output address”

Why? The same variable was used at the input and at the output of the block.

Action: Use different variables.

8.5 Informations

A dialog Box gives information about the compiler, program and files.

Information about the Compiler

Here is shown the equipment, project name, date hour and elapsed time since the last compiling process.

Information about the Program

Here is shown the number of pages, logics, and elements used in the user program.


Information about the Files

Here is shown the name, hour, date a length of the files that have been generated during the last compilation.


9 Applications

9.1 Applications in the WLP

- By means of the “Application” option of the “Tools” menu, select the desired equipment, according to the figure below. Thereby one obtains access to the set of applications developed for use in the WLP.

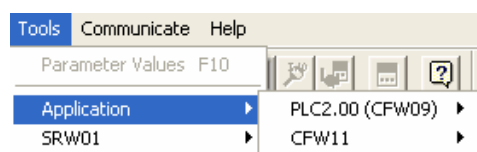


- In the WLP7.10 or higher, the application menus were organized in conformity with the equipment and application type, according to the next figure (new methodology).

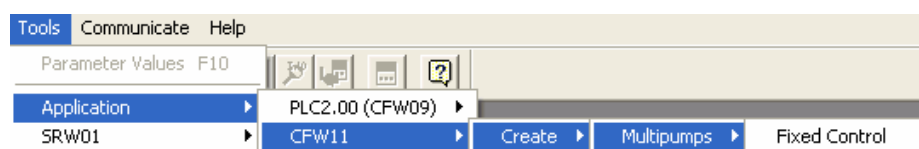


In this example, by clicking on the option “Fixed Control”, a CFW11 Multipump Fix Control will be created.

- In the WLP versions prior to V7.10, a structure in function of the equipment was used, according to the next figure (old methodology).

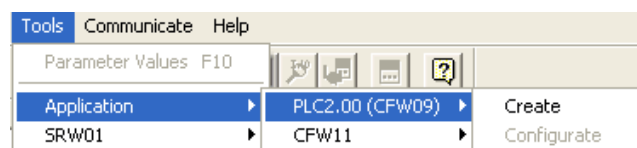

In this example, by clicking on the “create” option, an application for the PLC 2 will be created, where a


dialog box will be open next in order to define the type and name of the application.

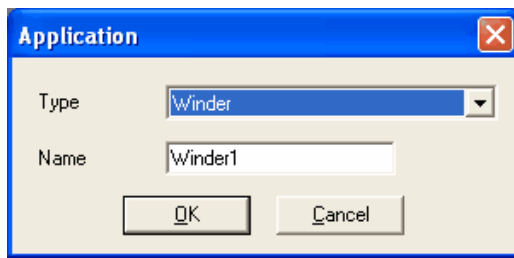


Note:

Even using the WLP V7.10 or higher, there will still be applications developed with the old methodology, which can be used without any restriction.


- In both cases mentioned above, after the selections and confirmations, a [configuration wizard](#)²⁶ that will configure the application parameters will be initiated, according to the example below.

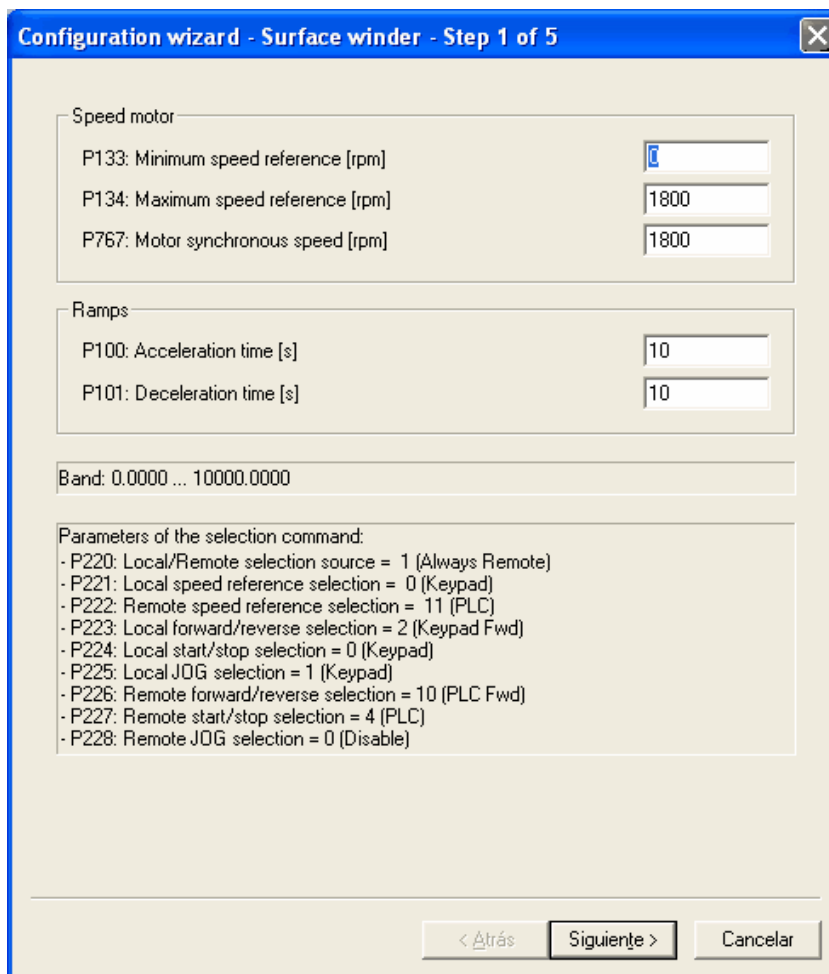

- After the configuration wizard steps, the process for the transmission of the user program, the user parameter texts and the parameter values (old methodology), or configuration wizards (new methodology) will be initiated, always observing that only the selected item will be transmitted. In the figure below the three items are enabled for the transmission:

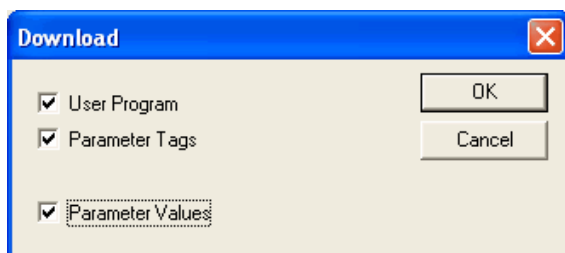


Old methodology (WLP < V7.10)

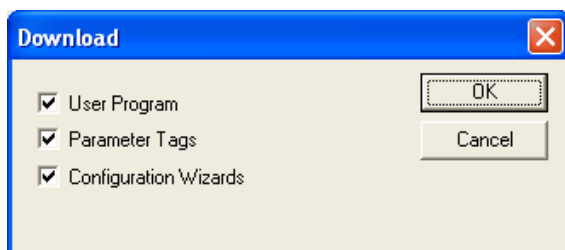

New methodology (WLP >= V7.10)


With this the creation process of the wished applicative is finished. In case it be necessary to change the values of the configuration parameters, it is possible to open again the configuration wizard as showed next.

- For applications developed with the new methodology by means of the [project tree](#)^[24] according to the next figure.

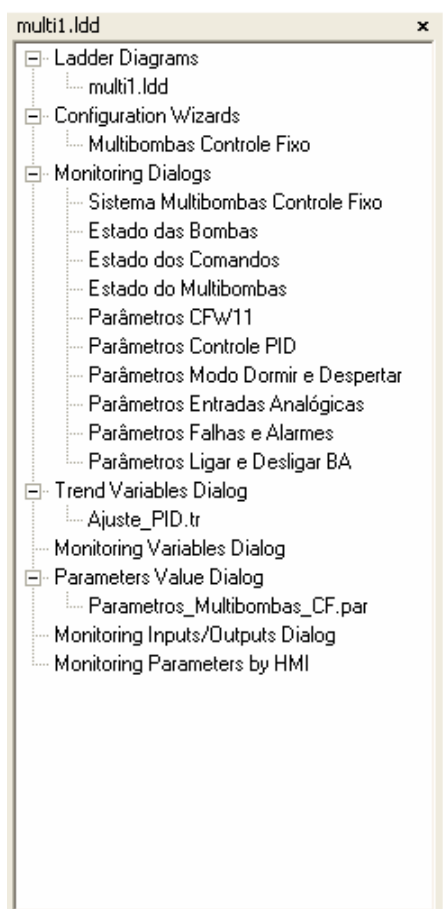


In order to execute the configuration wizard, double click on the wizard name.

- For applications developed with the old methodology by means of the “Application” option of the “Tools” menu, click on “Configure”, according to the next figure.

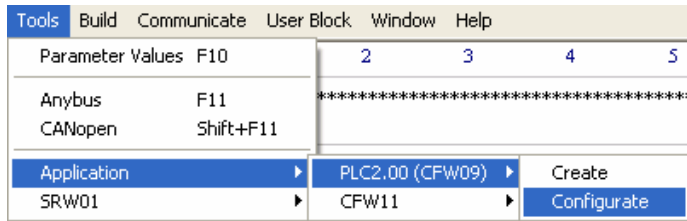


After the conclusion of the configuration wizard, the transmission process is initiated again, for updating the performed changes, as showed next.

- New methodology:

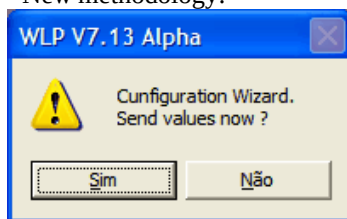

- Old methodology:

In this case, it is also possible the transmission of only the parameter values, according to the figure below.

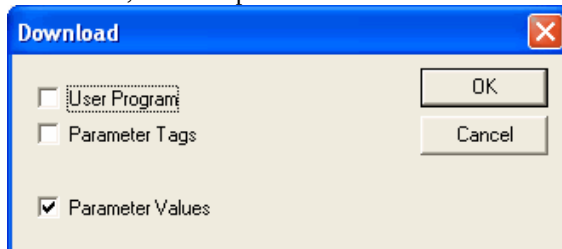

For more details on the application, refer to the respective Application Guide available on the CD that comes with the product.

10 Tutorial

10.1 General Resume

Tutorial:

[Installing the WLP Software](#) ^[239]

[Executing the WLP Software](#) ^[242]

[Creating a New Project](#) ^[243]

[Editing a Ladder Programm \(Tutor1\)](#) ^[244]

[Monitoring a Ladder Program \(Tutor1\)](#) ^[254]

Examples of User's Programs:

[On/Off via buttons \(Tutor2 and Tutor3\)](#) ^[256]

[On/Off via user's parameters \(Tutor4\)](#) ^[257]

[Enable/disable drive and control speed \(Tutor5 and Tutor6\)](#) ^[258]

[Relative positioning with s-curve and t-curve \(Tutor7\)](#) ^[261]
[Absolut positioning with s-curve and t-curve \(Tutor8\)](#) ^[265]
[Analog Input Reading 0-10Vdc \(Tutor9\)](#) ^[269]
[Analog Input Reading 4-20mA \(Tutor10\)](#) ^[270]
[Motor control speed through PID block \(Tutor11\)](#) ^[272]

10.2 Installing the WLP Software

The WLP software can be obtained from the WEG web site: <http://www.weg.net>, downloads and online systems.

When the WLP installer is downloaded, it will be in a ZIP format compacted file. One must extract this file to a temporary folder and then run the installation setup. This extraction can be done by means of software like, for instance, the 7zip that can be found on the web site <http://www.7-zip.org/> or the WinZip software that is on the web site <http://www.winzip.com/>.

After extracting, the files will appear in the temporary folder. The WLP-X.YZ.setup.exe file is the WLP installer. Double click it in order to run it.

Name	Size	Type
wlp-X.YZ.setup.exe	7,174 KB	Application

Figure - WLP installation set.

When executing the SETUP.EXE file, the following table will appear. In this first screen, the WLP version, which will be installed, is displayed. To proceed with the installation, click on the "Next" button.



Figure - WLP installation presentation screen.

Afterwards the software license and information will be showed, click "Next".

The next screen shows the folder where the WLP will be installed. The default folder C:\WEG\WLP\WLP

version" is recommended. Continue with "Next".

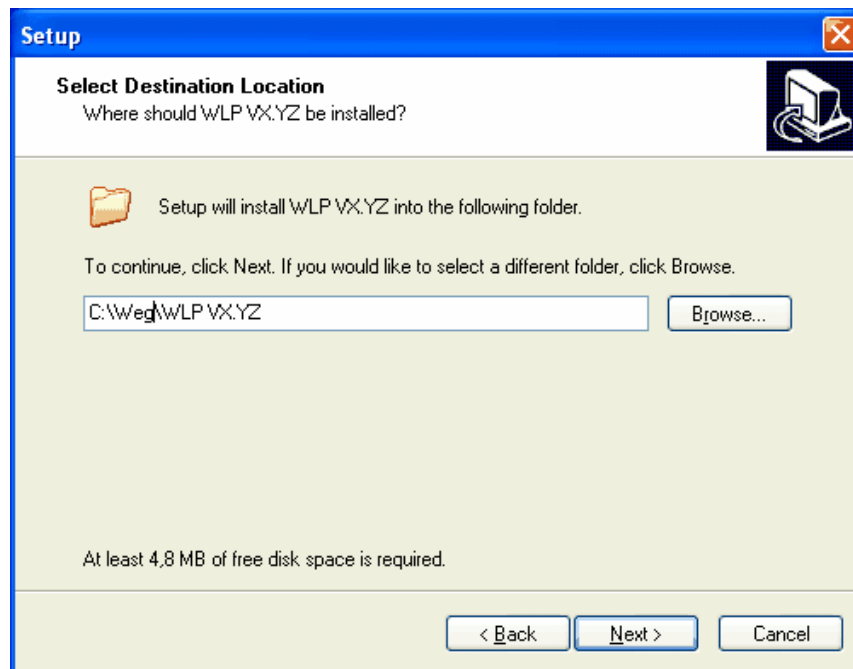


Figure - WLP installation directory screen.

In the next table, select the "Typical" option and click on the "Next" button.

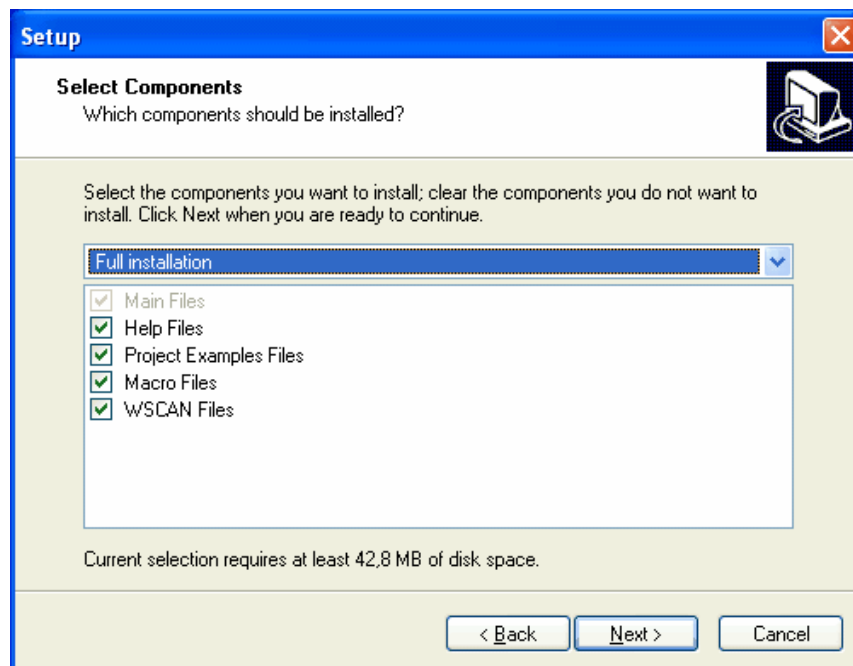


Figure - Type of WLP installation.

The "Select Program Folder" screen indicates the folder that will be used to file the shortcuts in the Windows start menu. WEG standard folder and "WLP Version" WLP subfolder are recommended. Click on the "Next" button.

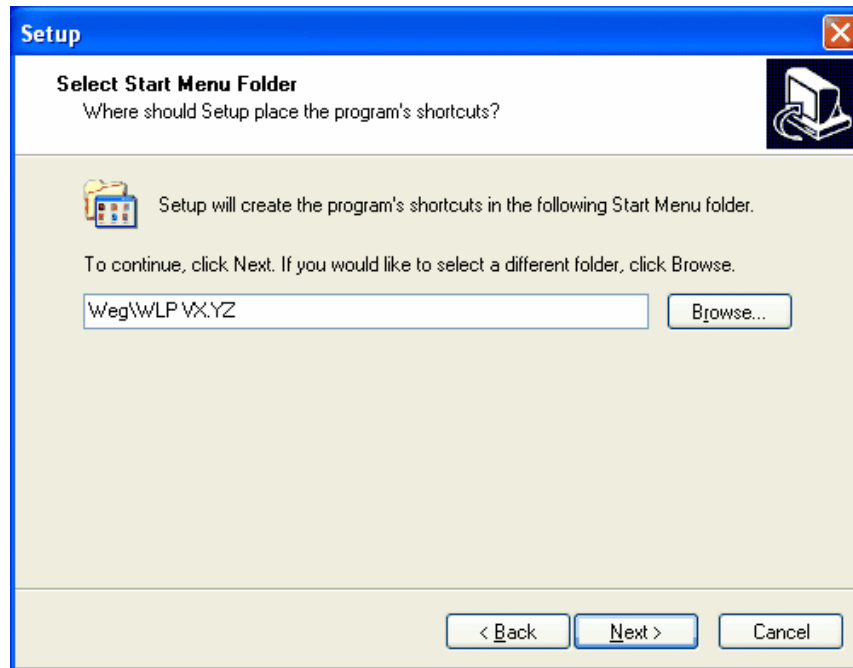


Figure - Location of WLP shortcuts.

In the next screen, the definitions previously shown are displayed. Check if all are correct and then click on the "Next" button.

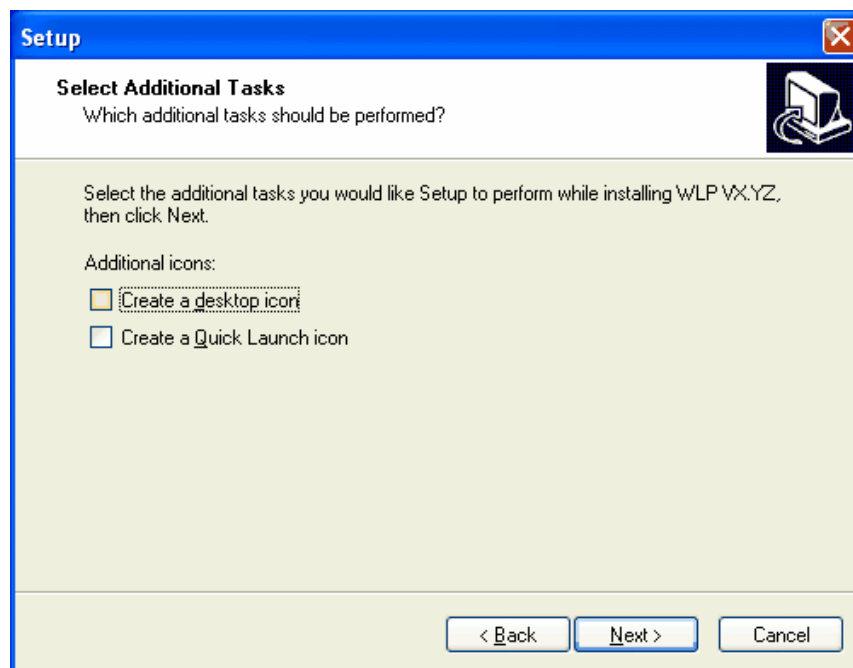


Figure - Selected options of the WLP installation

After clicking on the "Next" button of the previous screen, the installation process will be started and a bar will be displayed with the current status of the installation. After that, a text box will be displayed with the following option.

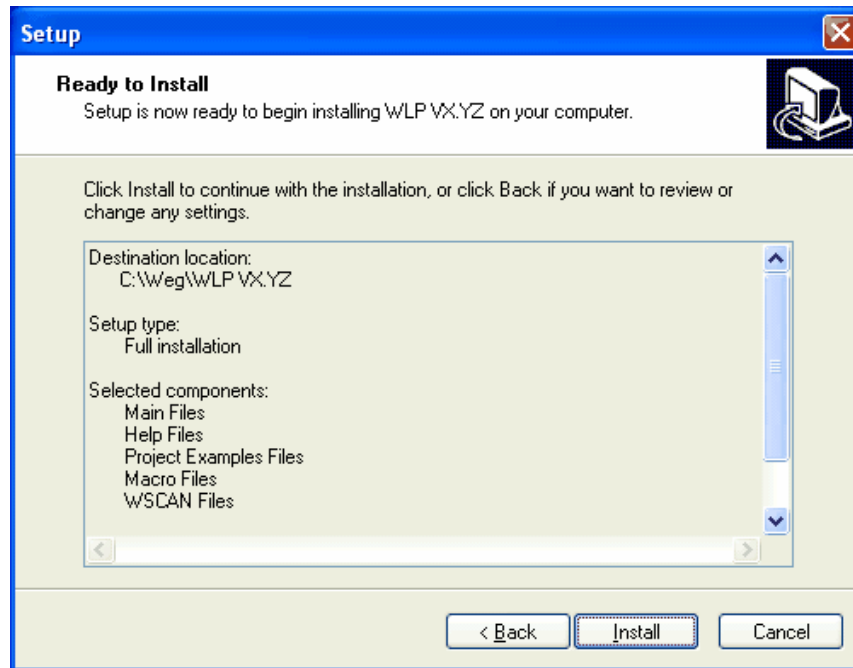


Figure - Confirmation of common or personal shortcut creation.

Thus, the installer will create the WLP program shortcuts and will open a box with them, according to the next figure.


Name	Size	Type
Ajuda WLP V6.20	1 KB	Shortcut
Ajuda WSCAN V1.20	1 KB	Shortcut
Help WLP V6.20	1 KB	Shortcut
Help WSCAN V1.20	1 KB	Shortcut
Uninstall WLP V6.20	1 KB	Shortcut
WLP V6.20	1 KB	Shortcut
WSCAN V1.20	1 KB	Shortcut

Figure - WLP software shortcuts.

Close this last window, thus finishing the WLP software installation in your computer.

10.3 Executing the WLP Software

To execute the WLP software, go through the following path: in the Windows start menu, go to the WEG program group. In the subgroup of the WLP wished version, click on the program's shortcut, according to the next figure.

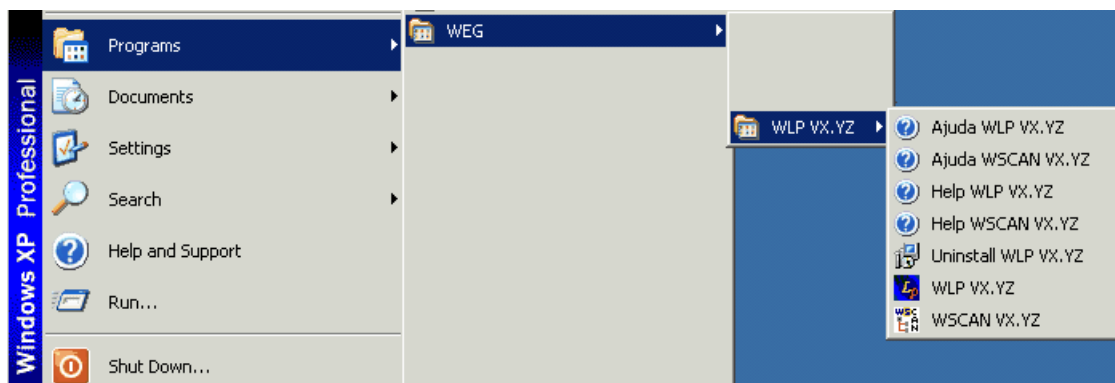

10.4 Creating a New Project

A new project can be created in the Project Menu with the New option, according to next figure.

 


Figure - New project menu.

After clicking on the "New Project" button, the following box will be displayed:

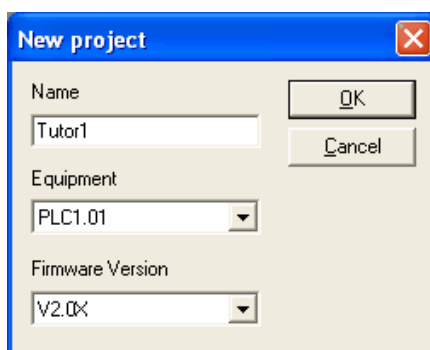


Figure - New project name.

In this box, enter the name of the new project and click on the "OK" button. Thus, the new project will be created blank and with only one page. In this example, the Tutor1 project was created.

In the path where the WLP projects are saved C:\WEG\WLP VX.YZ\Projects, a folder was automatically created with the name of the new project Tutor1, according to next figure.

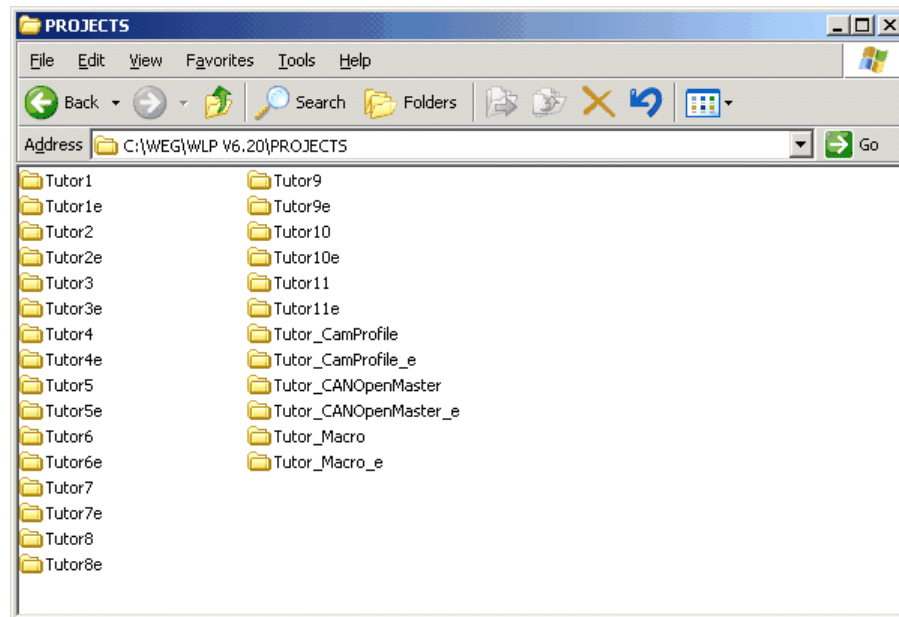


Figure - Path of the WLP projects.

This folder contains all the information and configurations that belong to the project. When it is necessary either to copy the project to another computer or to save a safety copy, one should copy this folder to a new target.

10.5 Editing a Ladder Programm (Tutor1)

With a new blank project created and all the environment functionalities known, one can create the program in ladder. The example displayed is very simple, however it will help to illustrate some aspects of the edition and programming environment.

To create the program, follow the steps below:

1° step - Select function insert contact usually opened

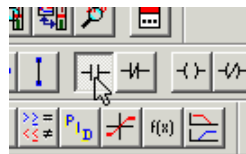


Figure – Select NO Contact.

2° step – Take the cursor up to the cell of line 0 and column 0



Figure – Position in lin 0 / col 0.

3° step - Click this cell with the mouse

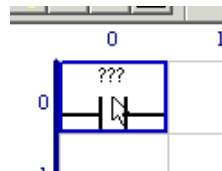


Figure – Insert NO contact.

4° step - Press the "ESC" key or select the pointer function



Figure – Select pointer function.

5° step – Take the mouse up to the inserted contact

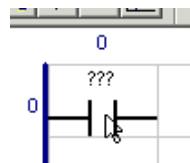


Figure –Position inserted contact.

6° step - Double click the contact. The following box will be displayed .

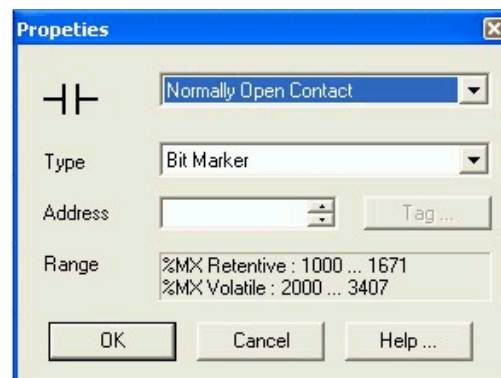


Figure - Contact property box.

This is the contact property box, one can redefine the type of contact in it, according to next figure.



Figure – Contact type.

In this box, the type of address used by the contact is also defined, according to next figure.



Figure – Type of address.

Once the type of address is defined, one should define the address itself. Each type has a valid address range, which is always displayed in its property box. In this example, the address is defined as digital input 1, according to next figure.

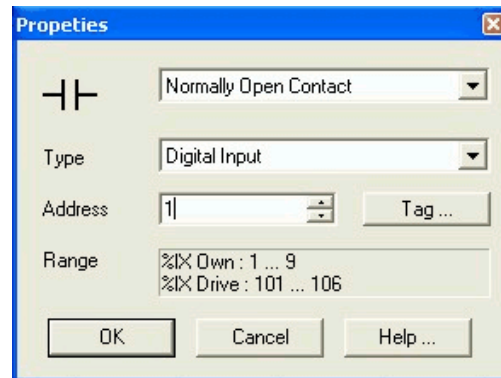


Figure – Digital input 1.

As you can see, the digital input 1 is the card's first input. It is always named as "Proper". The addresses named as "Drive" correspond to inputs or outputs of the "Drive" where this board is connected. In this same property box is the "Tag" button.

This button is for defining which symbol will identify this address. To define the symbol, click on the "Tag" button. The following box (figure 33) will be displayed.

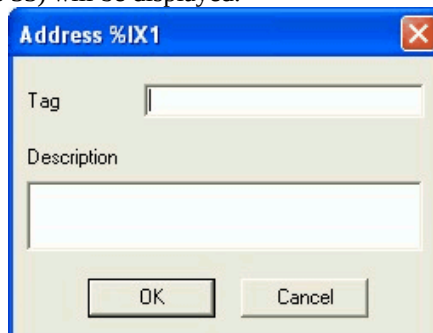


Figure – Tag definition box.

In this box, one defines either the "Tag" or symbol of the address as well as a description about the address in question, according to next figure.

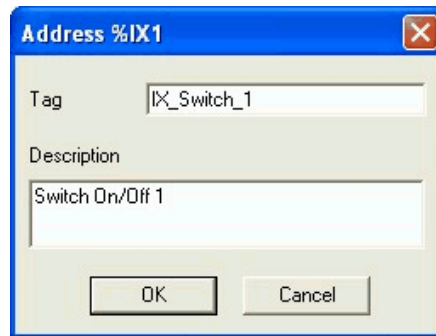


Figure – Tag definition box.

When clicking on "OK", this "Tag" will be saved in the Project and it will be used in all places where the address in question is. The "Tag" button changes and an asterisk is displayed at the front ("*Tag") indicating that the address in question already has a defined "Tag". Defining a "Tag" to the address makes it easy to identify if the address is being used in the project or not, because all with "Tag" are displayed with an asterisk in the "*Tag" button.

The locate tool allows identifying if the address in question is being used in the program.

After defining the address and the "Tag", click on the "OK" button of the contact property box. Then, it will have its representation according to next figure



Figure – NO contact.

So that "Tag" is displayed on screen instead of the contact's address, click on the "Tag/Address" button  in the "Display" menu. Then, the contact will appear in the following way

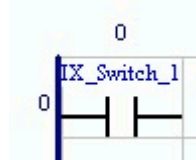


Figure – NO contact with Tag.

7º step - Select insert coil function



Figure – Select coil.

8º step - Go to the cell of line 0 and column 9 with the cursor



Figure – Position in line 0 / col. 9.

9º step - Click this cell with the mouse



Figure – Insert coil.

10° step - Press the "ESC" key or select the pointer function



Figure – Select pointer function.

11° step - Go to the inserted coil with the mouse

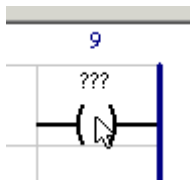


Figure – Position inserted coil.

12° step - Double click the coil. The following box will be displayed.

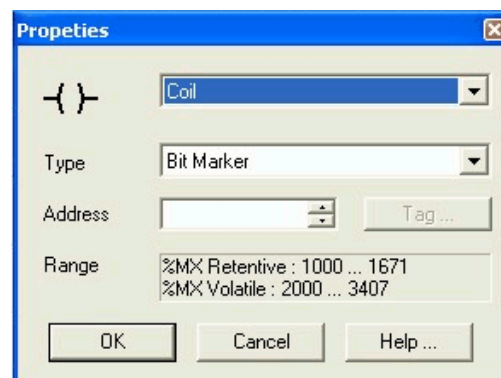


Figure – Coil property box.

In this box, it is possible to do the address configuration digital output n° 1 (output configuration is in the same way as the input ones, previously described on step 6), with the "Tag" = "QX_K1" and description = "Counter K1" according to next figure.

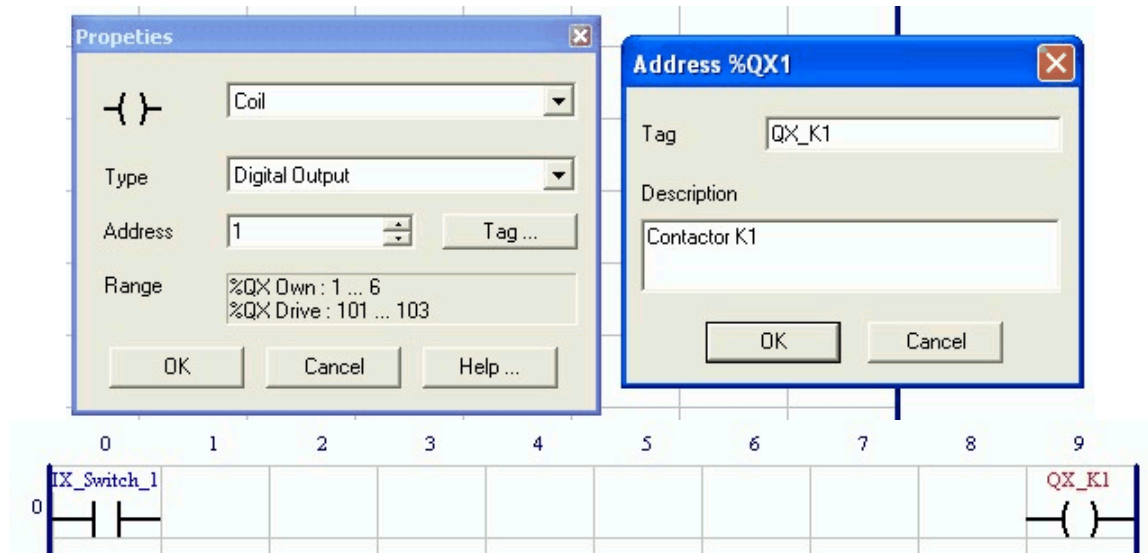


Figure – Coil properties.

13° step – To connect digital input 1 with digital output 1, select "insert horizontal connection".



Figure – Select horizontal connection.

14° step - Go to one of the cells among digital input 1 and digital output 1 with the mouse.



Figure – Position between NO contact and coil.

15° step - Click on this area and the program will create the connection between input and output.

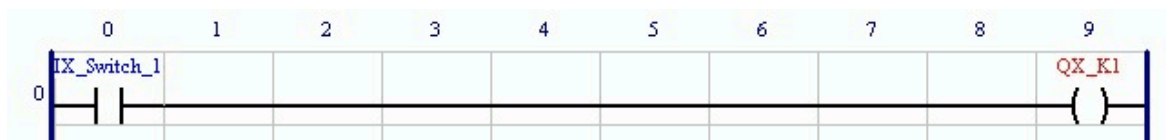


Figure – First example in ladder.

16° step - According to next figure, the program is ready.

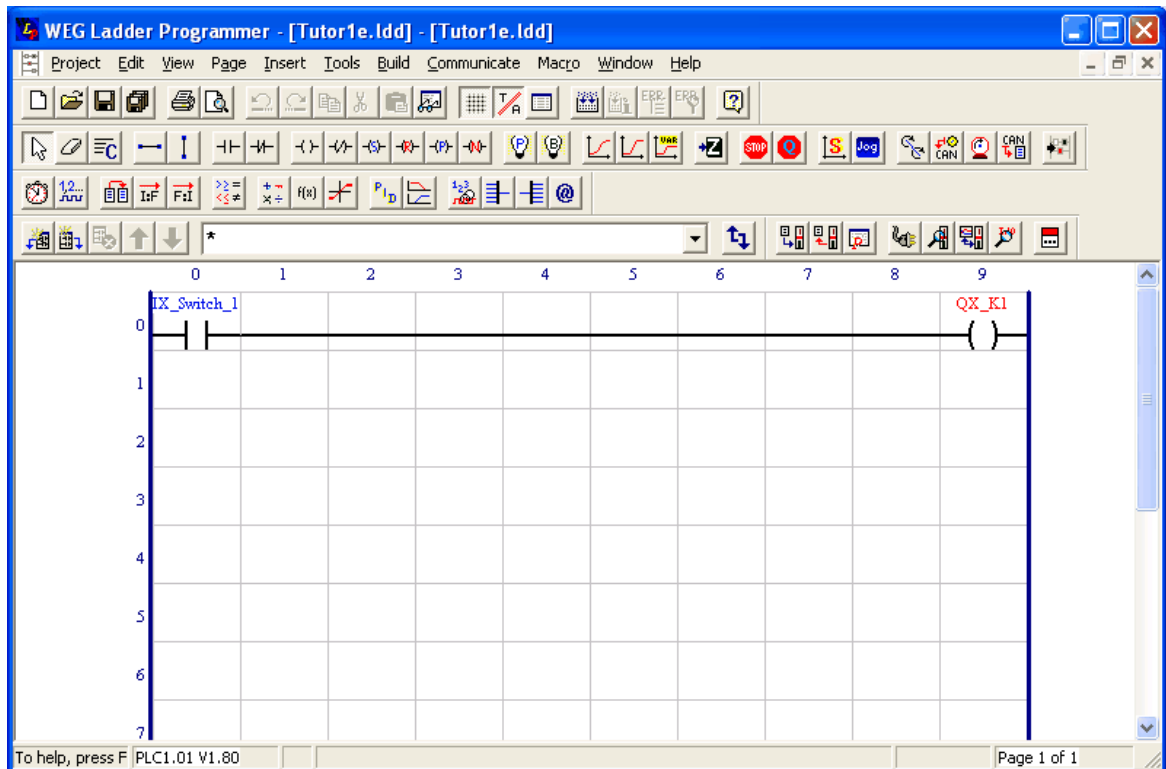


Figure – Example program ready.

17º step - On this stage, one should compile the program. For such, click on the compile button.

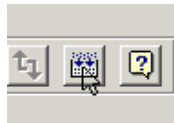


Figure – Compilation button.

During the compilation, the compilation status box will be displayed (Figure 49), indicating the compilation process.

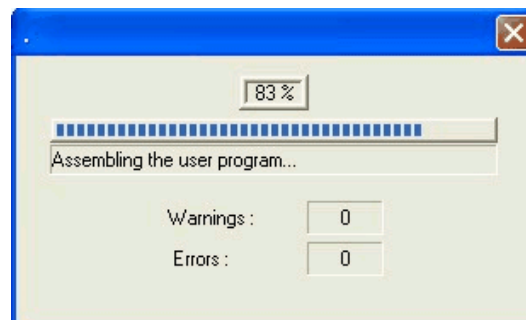


Figure – Compilation status box.

After the compilation, another box will be displayed, indicating if some compilation error was generated.

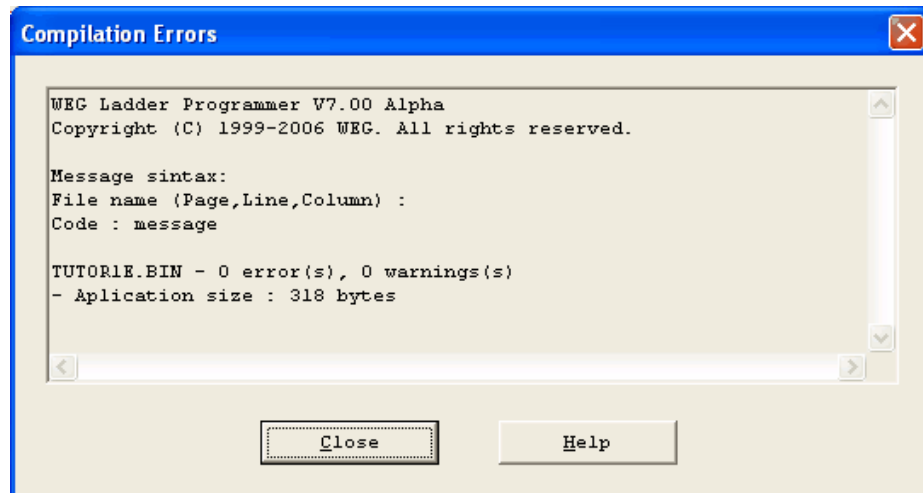


Figure – Compilation result box.

168 If there is any edition error in the program, they will be displayed during the compilation. Foreexample, if a horizontal connection is missing, the following compilation error will be displayed in the compilation.

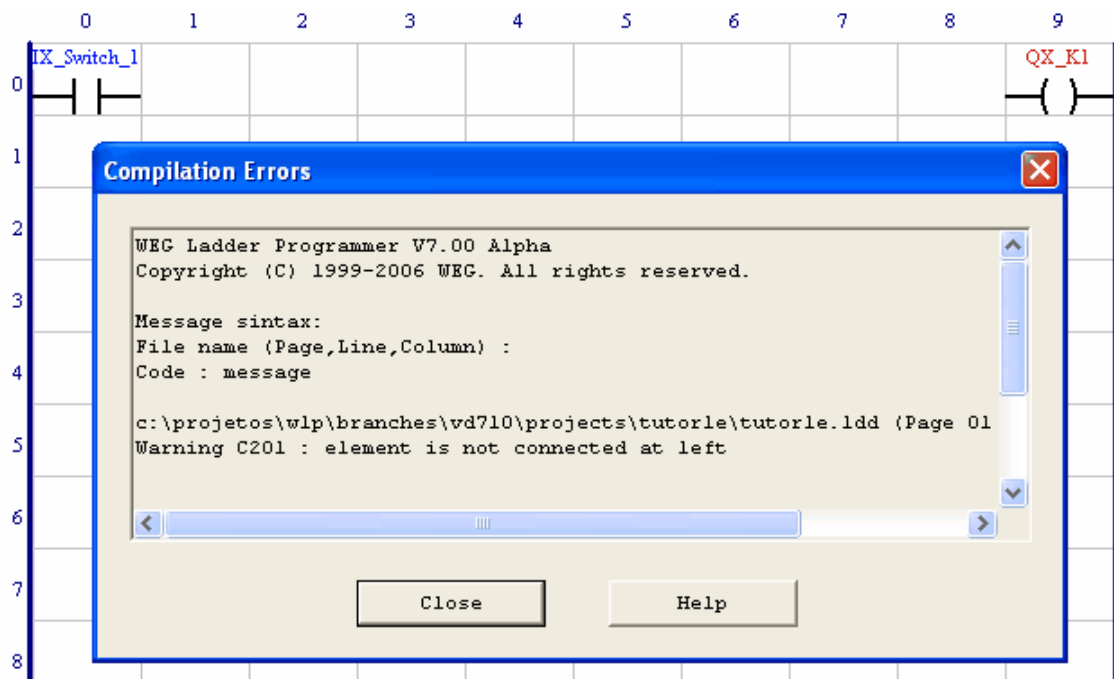


Figure – Example of compilation error.

The errors generated were the following:

```
c:\weg\wlp v4.01\projects\tutor1\tutor1.1dd (Page 01, Ln 00, Col 09) :Warning C201 :
element
is not connected to the left.

c:\weg\wlp v4.01\projects\tutor1\tutor1.1dd (Page 01, Ln 00, Col 00) :Warning C203 : logic
incomplete.
```

Page, Line and column where the error was found are always displayed. If option "Error location" of the

"Display" menu is enabled, the cell where the error is will have a red border according to next figure.

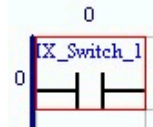


Figure – Cell with compilation error.

18° step - On this step, one should transfer the user's program to the board in question. For such, firstly one should check the serial communication configuration. To configure the serial communication both board configuration and WLP software should be the same.

Configuration of WLP software is done in the "Configurations..." option, in the "Communication" menu.

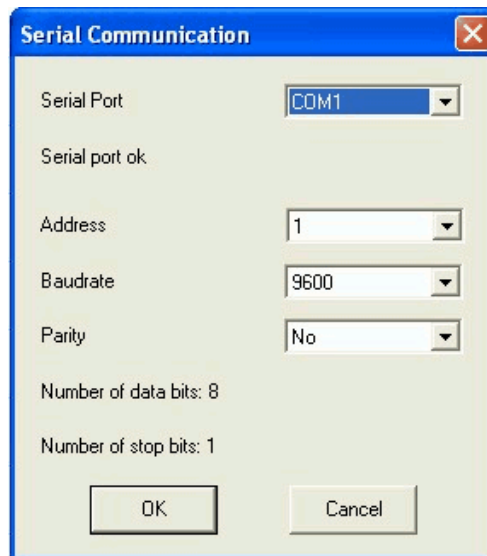


Figure – Serial communication configuration box.

There are three basic configurations for the functioning of the communication:

- 1 - Port where the communication cable is connected between the computer and the board.
- 2 - Address of the board in the modbus net which should be the same as parameter of the board.
- 3 - Transmission tax (Baud rate) of the serial communication that should be the same as parameter of the board.

NOTE!

For the CFW-11 SoftPLC it is only necessary the [installation of the USB](#) ⁸⁸ communication drive. No CFW-11 configuration is necessary.

Once the configuration is done, check if the communication cable is connected between the computer's port of the board. Also, check if the board is energized.

To transfer the program, click on the program transference button . The following box will be displayed.

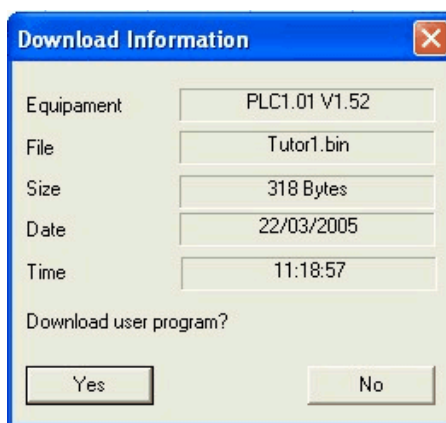


Figure – Download information box.

This box will display important information related to the program transference. It displays the target equipment connected via serial; the file's name to be transferred as well as the date and time it was compiled. To transfer the program, click "Yes". The transfer will be started. It should be very clear that during the program transference the board will not be active, thus not executing any program. If there are linked outputs or the converter is enabled, they will be unlinked and the converter will be disabled. During program transference, the following box will be displayed.

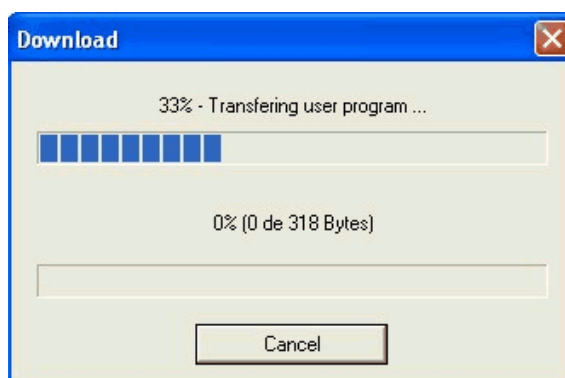


Figure – Download status box.

This box displays the program's transference status, which when finalized, will display the following message.

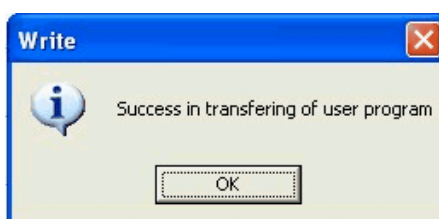


Figure – Success box in program transference.

If the transference occurred successfully, the board will start executing the new user's program.

Note: Parameter P763 of the board has the function of disabling the user's program. For the program to be normally executed, it should be in zero.

10.6 Monitoring a Ladder Program (Tutor1)

19^o step – With the program running on the board, it can be monitored on the computer's screen.

After compilation and transference of the program on the board, it is possible to monitor the ladder by pressing the on-line monitoring button . At this moment, the WLP will try to establish a communication with the board by testing the serial communication. If there is no problem, in communication, represented in next figure, it will be displayed on the program's status bar, located at the lower part of WLP



Figure – Status of on-line monitoring.

This bar has a LED-type indicator in the blue color. It flashes indicating that the communication is in progress .

If any communication fail occurs, a message box will be displayed with the fail information and a possible solution. Once monitoring is activated, all edition tools will be deactivated and the edition window will display the logic status of the program in ladder.

To deactivate on-line monitoring, just press the on-line monitoring button again.

Next, the graphic representation of the logic status for contacts and coils in on-line monitoring will be described :



NORMAL OPEN (NO) CONTACT CLOSED



NORMAL OPEN (NO) CONTACT OPEN



NORMAL CLOSED (NC) CONTACT CLOSED



NORMAL CLOSED (NC) CONTACT OPEN



COIL ACTIVATED



COIL DEACTIVATED



NEGATED COIL DEACTIVATED



NEGATED COIL DEACTIVATED



 
SET COIL ACTIVATED



SET COIL DEACTIVATED



RESET COIL ACTIVATED

-  RESET COIL DEACTIVATED
-  POSITIVE TRANSITION COIL ACTIVATED
-  POSITIVE TRANSITION COIL DEACTIVATED
-  NEGATIVE TRANSITION COIL ACTIVATED
-  NEGATIVE TRANSITION COIL DEACTIVATED

In the next screen, the on-line monitoring of the user's program in question is represented.

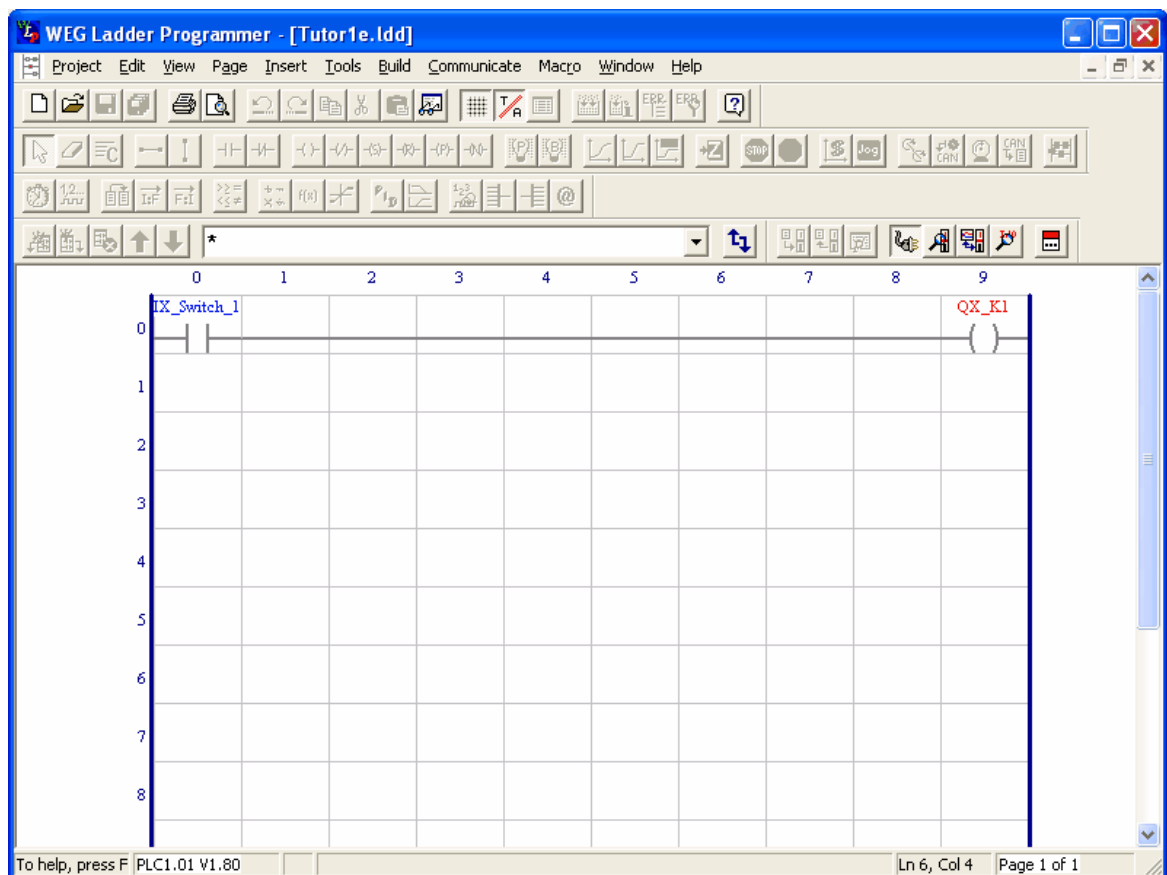


Figure – Active on-line monitoring.

If digital input 1 of the board is active, on-line monitoring should appear as in figure 60. The figure indicates that digital input 1 is active and that when executing the user's program the digital output 1 is also activated.

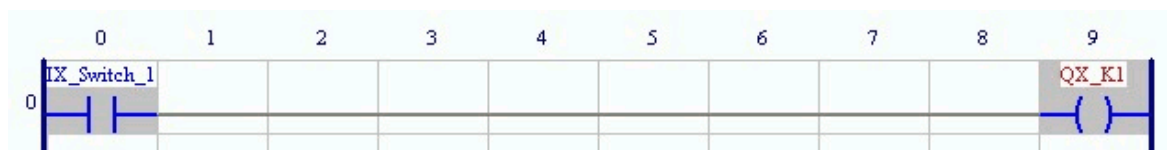


Figure – Digital input 1 activated.

The digital input/output monitoring box can also be used through the button  according to next figure. It indicates the same thing as ladder monitoring, that is, when activating digital input 1, digital output 1 will also be activated



Figure – Input/output monitoring box.

10.7 Examples of User's Programs

10.7.1 On/Off via buttons (Tutor2 and Tutor3)

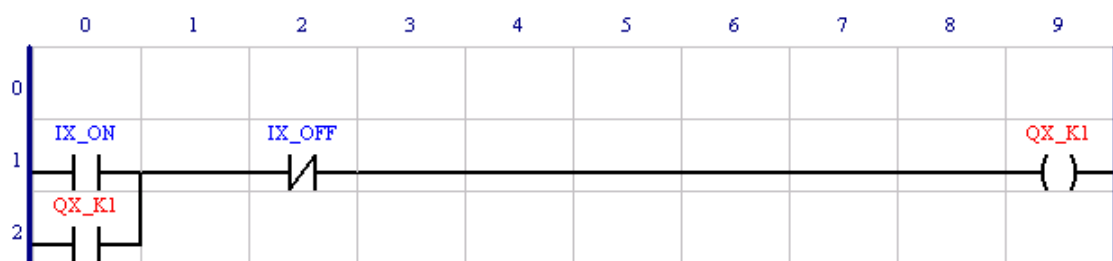


Figure – Tutor2 (representation with tags).

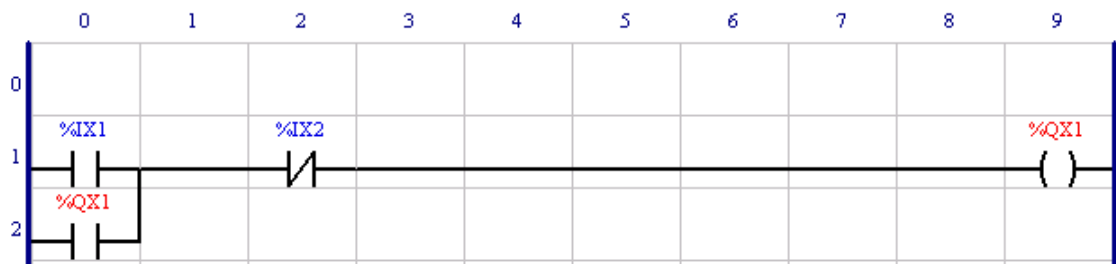


Figure – Tutor2 (representation with addresses).

Functioning:

When applying a pulse in digital input 1 (%IX1) digital output 1 (%QX1) is activated and it is maintained by its own contact in parallel to digital input responsible for its activation. When pulsing digital input 2 (%IX2), the circuit is opened, thus deactivating digital output 1 (%QX1).

The same program could be redone in the following way by using set and reset coils (Tutor3).

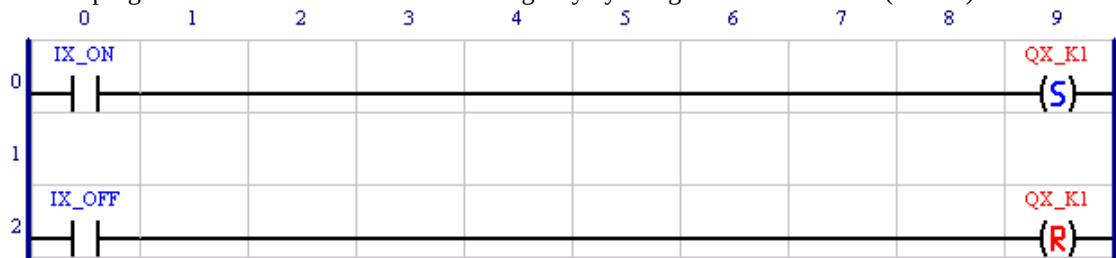


Figure - Tutor3 (representation with tags).

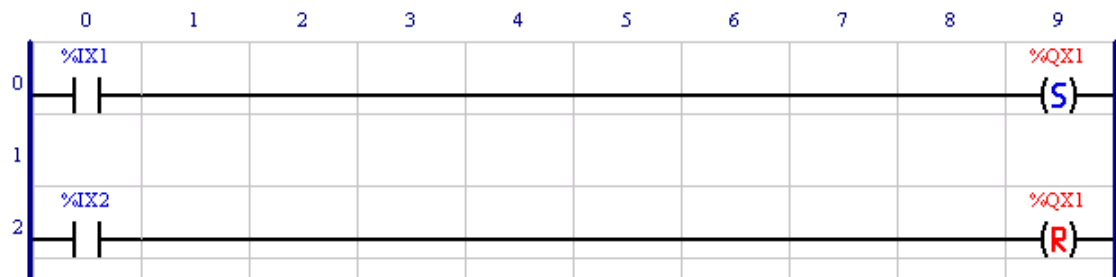


Figure – Tutor3 (representation with addresses).

10.7.2 On/Off via user's parameters (Tutor4)

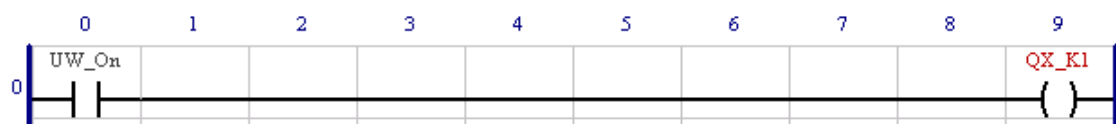


Figure – Tutor4 (representation with tags).

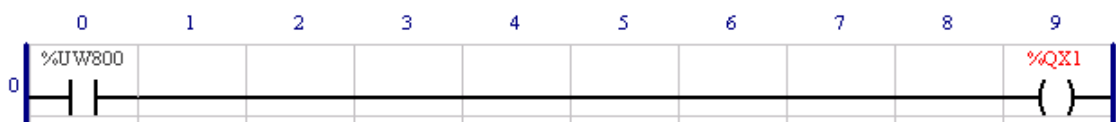


Figure – Tutor4 (representation with addresses).

Functioning:

With parameter P800 equal to zero, digital output 1 will be off; with parameter P800 in 1 the digital output 1 will be activated. When we use parameters as contacts, even values represent zero for contact, and odd values represent one for the contact.

10.7.3 Enable/disable drive and control speed (Tutor5 and Tutor6)

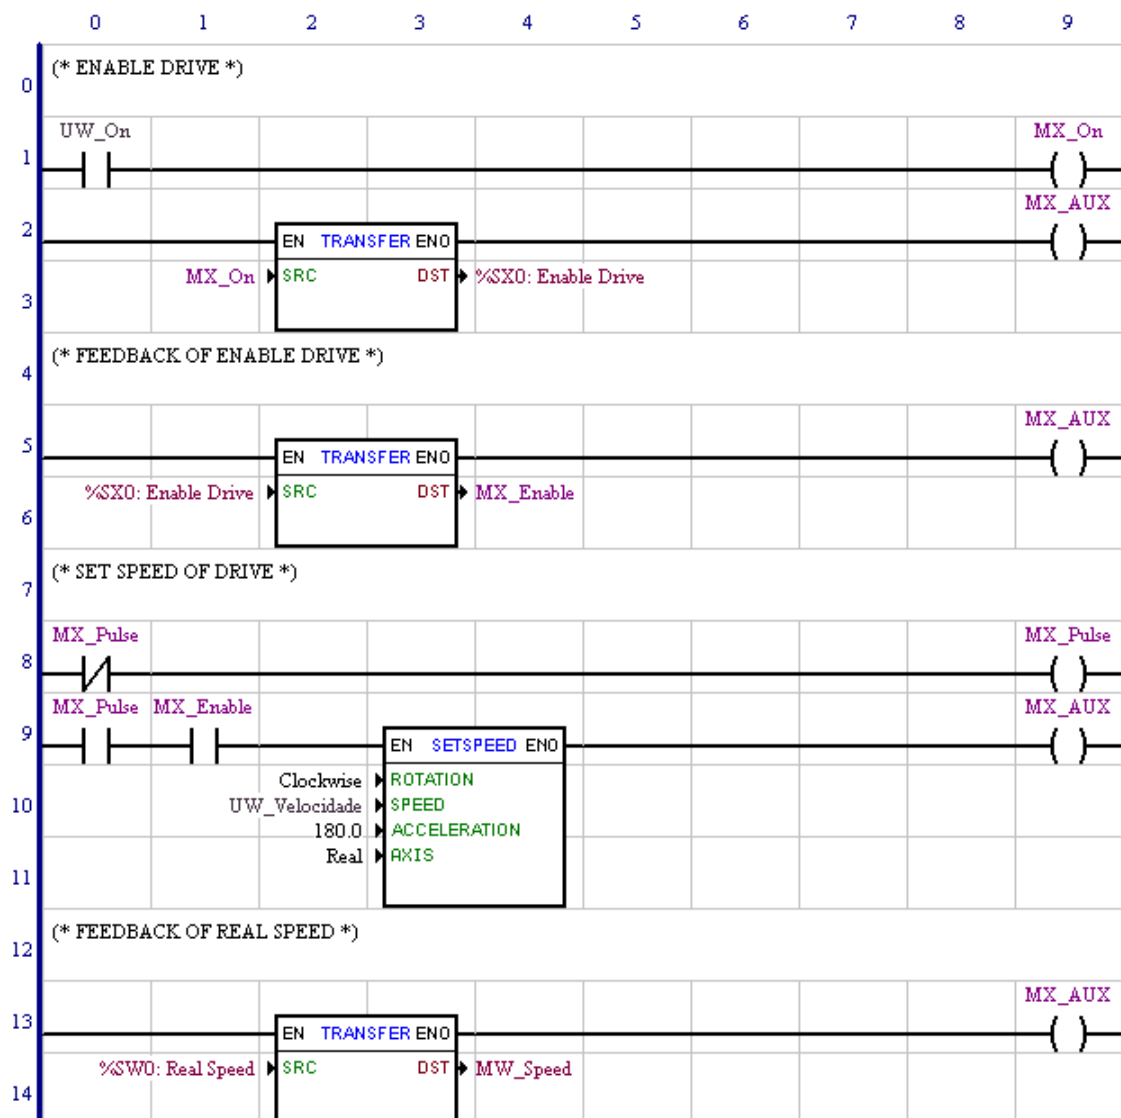


Figure – Tutor5 (representation with tags).

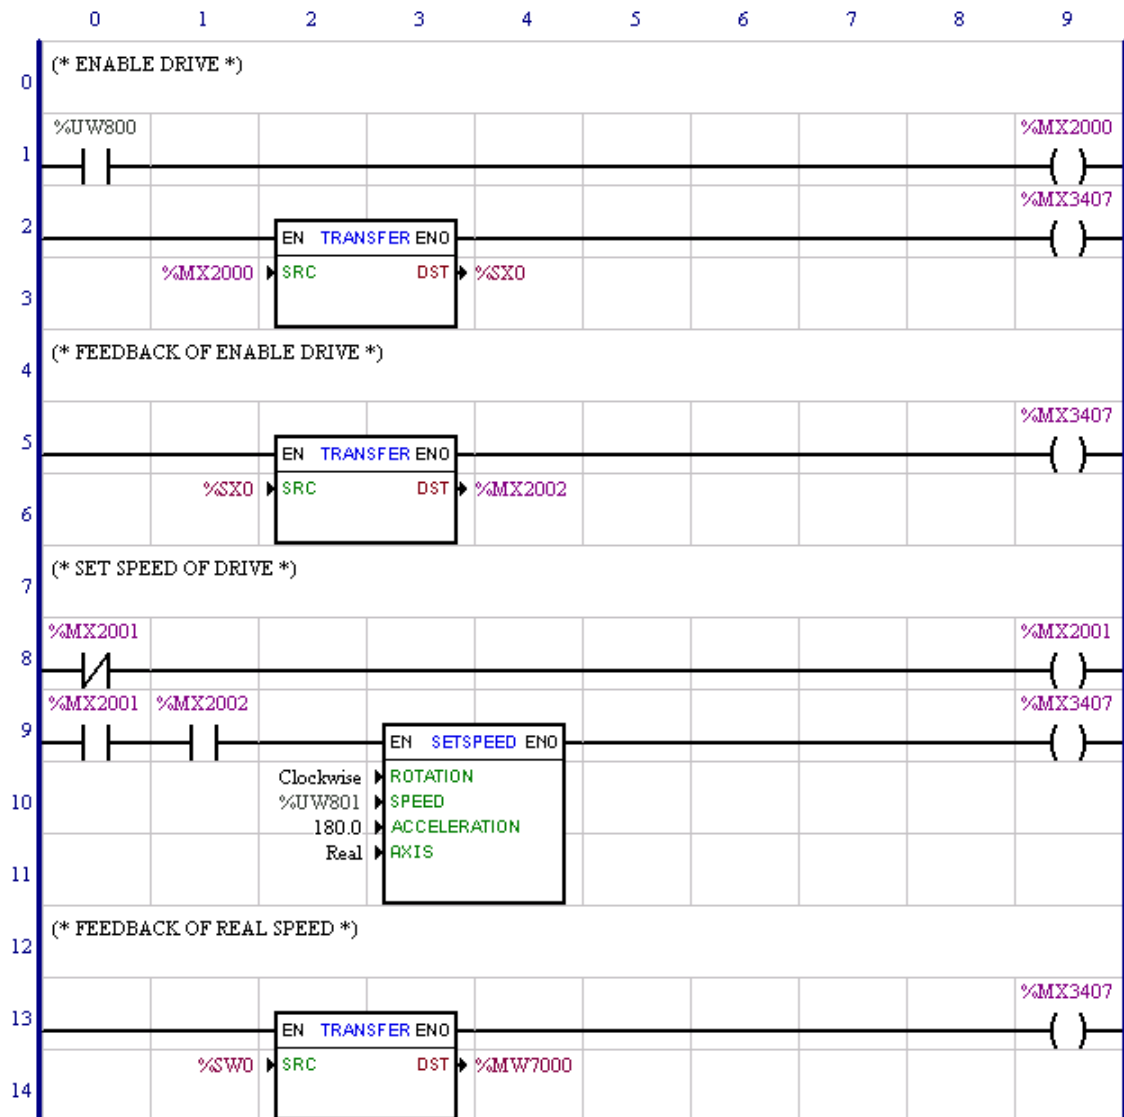


Figure – Tutor5 (representation with addresses).

Functioning:

- Drive enable :

The content of the P800 user parameter is used to activate the MX2000 bit marker in line 1, but in line 2, the MX2000 bitmarker content is transferred to the bitmarker of the SX0 system, which is responsible for enabling the converter. Then, if the P800 parameter is zero, the converter will be disabled, and if it is one, the converter will be enabled.

- Drive enable return :

In line 5, the MX0 system bit marker content is transferred to the MX2002 bitmarker. So, the MX2002 bit marker will indicate if the converter is really enabled. When placing the SX0 system bitmarker in the target (DST) of the “transfer” block, it enables the converter. When it is placed in the source (SRC) of the “transfer” block, it indicates if the converter is enabled.

- Speed reference through block set-speed :

Line 8 displays a bit that pulses at every execution cycle of the user’s program. In one cycle it will be in one and in the other in zero. It is necessary because the set-speed block sets the converter speed in the positive

transaction of its “EN” enabling bit.

In line 9 is the set-speed block, which holds the content of the P801 user parameter and it sets the converter speed. In serial to the pulse bit MX2001 bit marker is the enabling return bit MX2002 bitmarker. This is needed because when enabling the set-speed block with the converter disabled, the board will indicate E54.

- Drive real speed return :

The content of the SW0 systemword marker is transferred to the MW7000 Word marker, so that the real speed in rpm will be in the MW7000 word marker.

To execute this program, the following parameters of the drive should be adjusted:

P202 = 4 (vector control with encoder)

P220 = 0 (local always)

P221 = 11 (local reference via PLC)

P224 = 4 (rotate/stop local via PLC)

To use the converter scaling control (P202=0, 1 or 2) with speed variation via board PLC, it is necessary to rewrite the program according to what was displayed in the next figure.

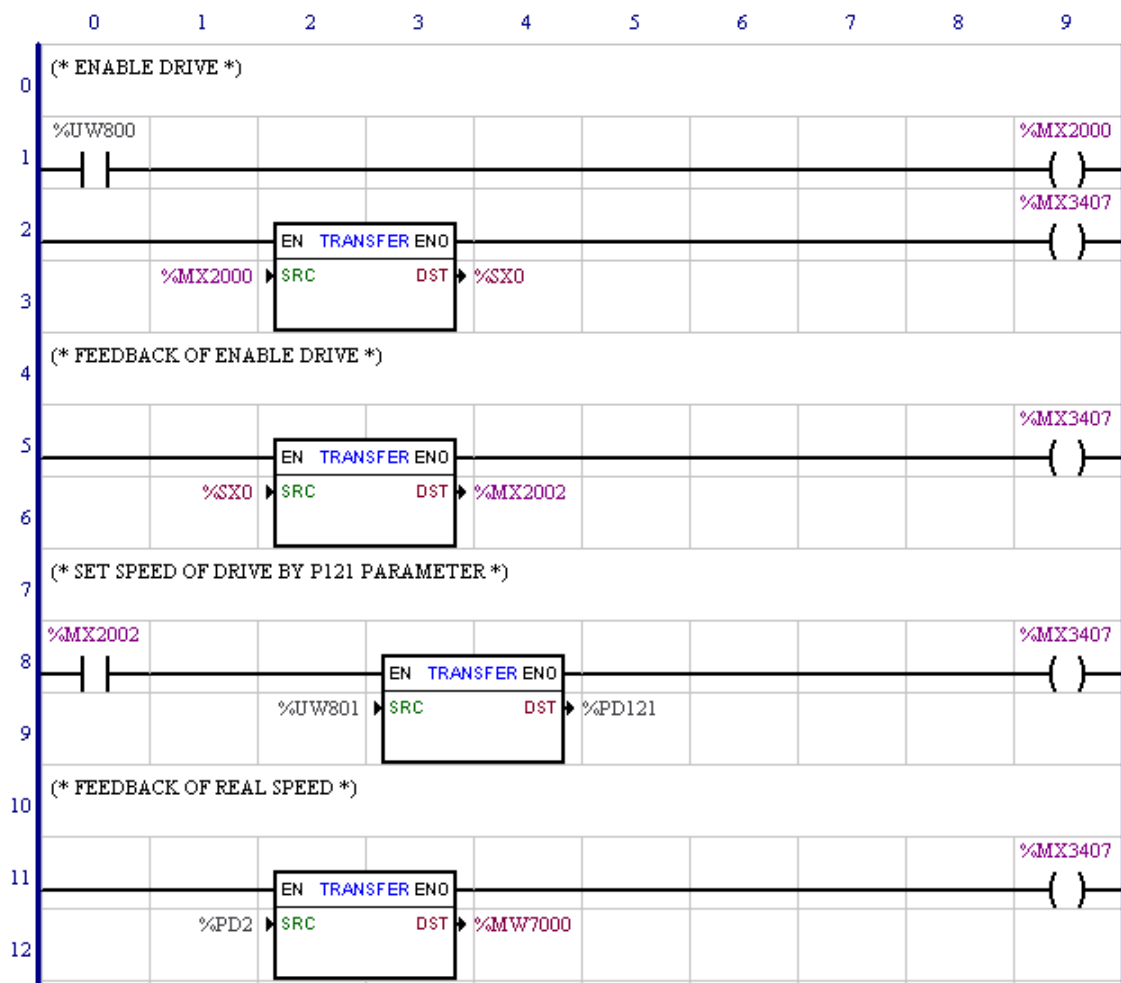


Figure – Tutor6.

In this new example, the P801 user parameter content is transferred to the P121 drive parameter which is the reference through the converter keys. The real speed is read from the P002 drive parameter. This is the motor's real speed. Converter enabling remains via PLC board.

To execute this new program, the following drive parameters should be adjusted:

P202 = 0, 1 or 2 (scaling control U/F)

P220 = 0 (always local)

P221 = 0 (local reference via key)

P224 = 4 (rotate/stop local via PLC)

NOTA !

For CFW-09 with firmware version ≥ 3.70 do CFW-09 is possible to use de blocks SPEED/SETSPEED for all controls.

10.7.4 Relative positioning with s-curve and t-curve (Tutor7)

To use positioning blocks, it is mandatory that the converter is in vector control with encoder, this is necessary because every positioning is based on position return given by the encoder.

For such, adjust the following converter parameters:

P202 = 4 (vector control with encoder)

P220 = 0 (always local)

P221 = 11 (local reference via PLC)

P224 = 4 (rotate/stop local via PLC)

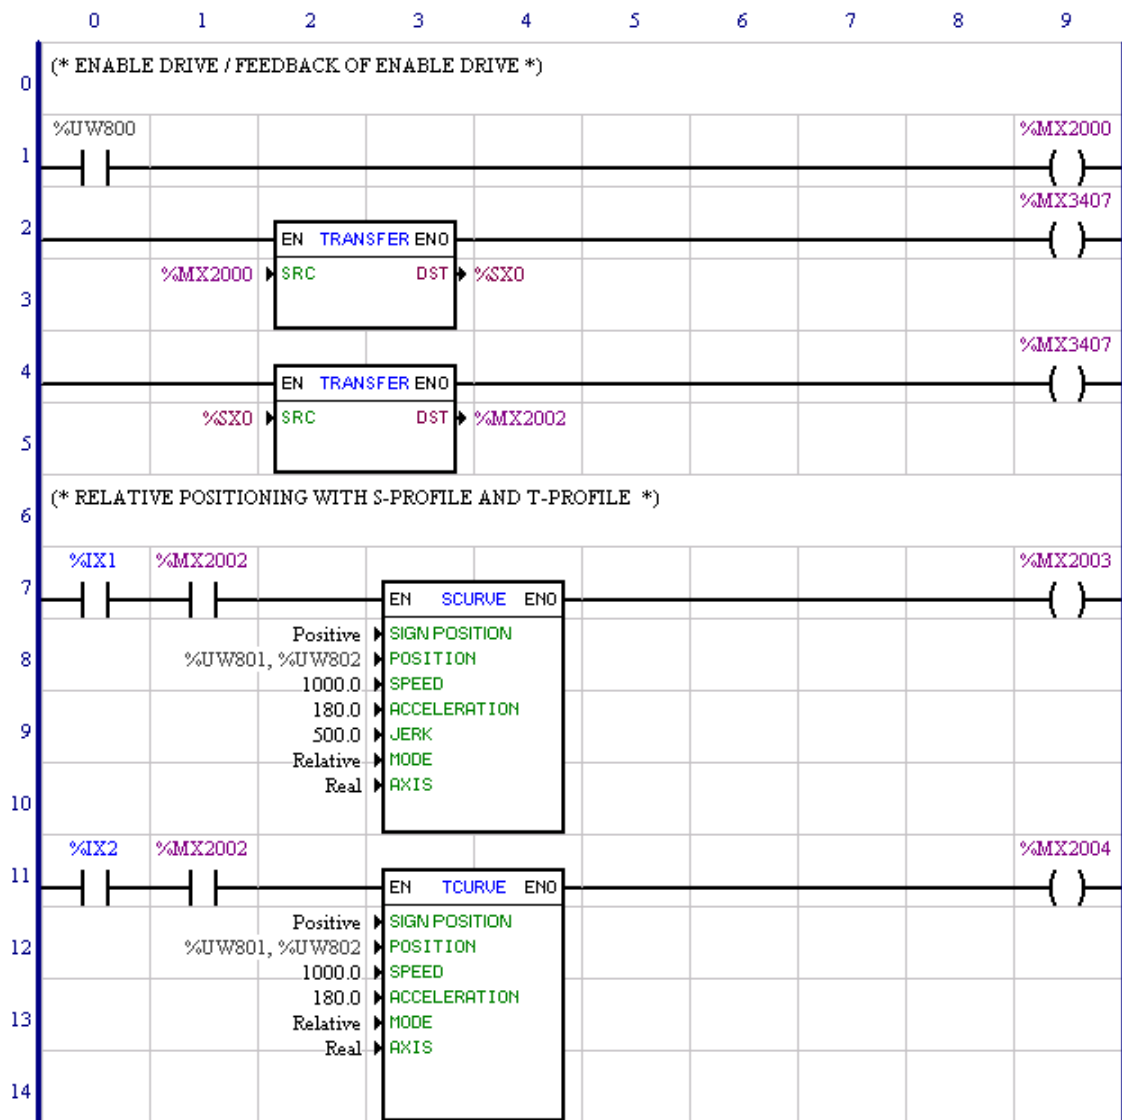


Figure – Tutor7.

Functioning :

Converter enabling is done in the same way as displayed on Tutor5.

When activating digital input 1, the board will position the motor according to parameters of Position, Speed, Acceleration, Jerk and Mode in Curve with “s” profile.

The figure below shows the simulator of the “s” curve, which is in the property box of the “s” curve.

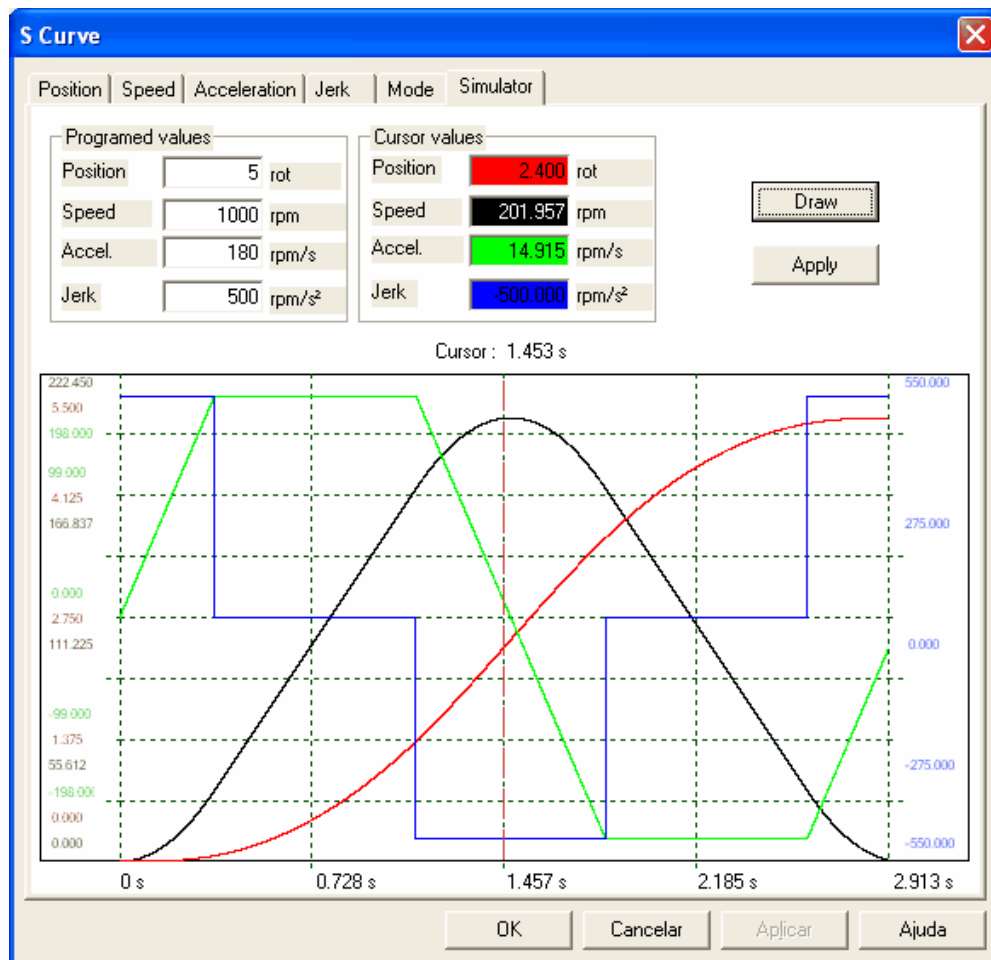


Figure – Simulator of “s” curve.

In this example, the “s” curve was programmed with position 5 rotations, that is, one position of 5 turns around the motor axle, with speed equal to 1000rpm, acceleration equal to 180 rpm/s and jerk equal to 500rpm/s². One can observe the several curves with their variants during the time, where position is in red, speed in black, acceleration in green and jerk in blue.

In this example, position was executed in 2.913s, according to axe x of the graph. Such parameters can be modified so as to get the desired answer. It should be very clear that this simulator is theoretical and that during positioning other situations may occur with current limitations due to the charge that could modify the positioning profile.

A relative position means that it will be done from the point where the axe is. For example, if we program a relative position of 5 turns with a plus sign it means that the axe will turn 5 times clockwise from the point it is and, if it is a minus sign it will be counterclockwise.

Another important thing in positioning are the units used in programming, which are defined in menu “Project”, option “Units”, according to the next figure.

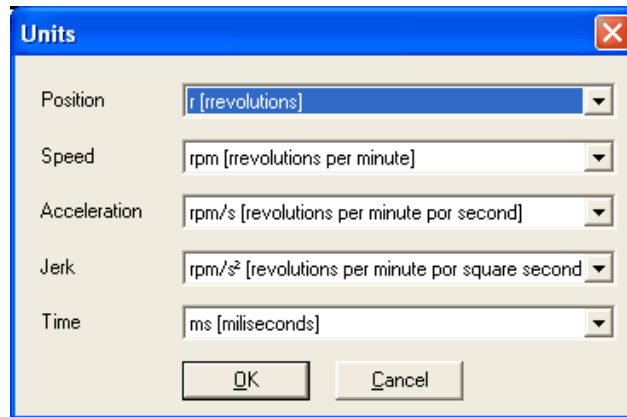


Figure – Constant unit box.

Those unit configurations are only valid for Constant positioning parameters. When positioning parameters are used with word markers or user's parameters, positioning units are fixed:
 position= rotations, speed=rpm, acceleration=rpm/s and jerk=rpm/s².

When activating digital input 2, the board will position the motor according to parameters of Position, Speed, Acceleration and Mode in Curve with "t" profile.

The next figure below shows the simulator of the "t" curve, which is in the property box of the "t" curve.

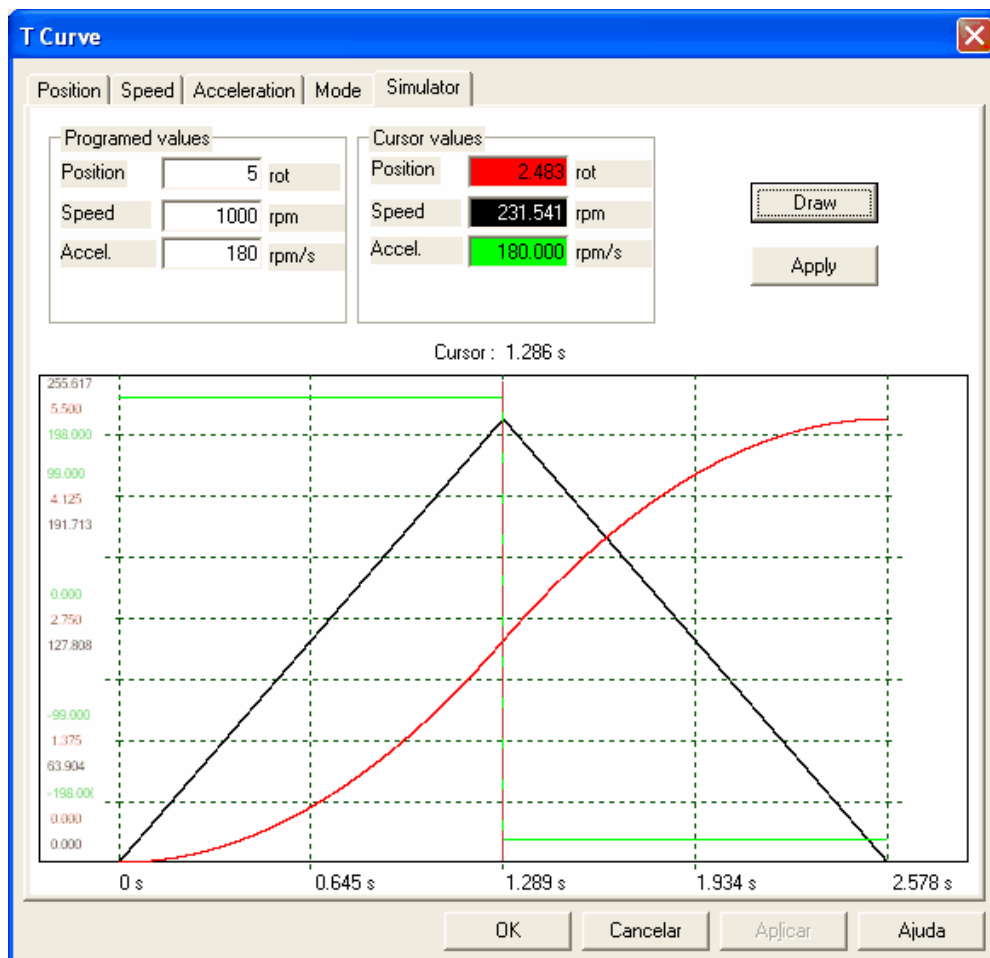


Figure – Simulator of "t" curve.

In this example, the “t” curve was programmed with position of 5 rotations, with speed equal to 1000rpm, acceleration equal to 180 rpm/s. One can observe the several curves with their variants during the time, where position is in red, speed in black, acceleration in green. In this example, positioning was executed in 2.578s. When comparing this t curve to the s curve, positioned in more time, one can observe that it has a speed profile much less aggressive than the t curve.

The t curve imposes more abrupt variations in the motor speed and, as a consequence, in the activated charge.

10.7.5 Absolut positioning with s-curve and t-curve (Tutor8)

In the previous example, the relative type of positioning was executed, which is always executed from the point where the motor axe is at the moment. Now the concept of absolute positioning was introduced.

The absolute positioning is always referred to a point defined as zero. For example, when executing an absolute positioning of 2 rotations, with a plus sign, the card will search the point in 2 rotations clockwise, from the point defined as zero. If at the position start the current position is lower than the desired position, the axe will move clockwise. If the current position is higher than the desired position, the axe will move counterclockwise. See next figure.

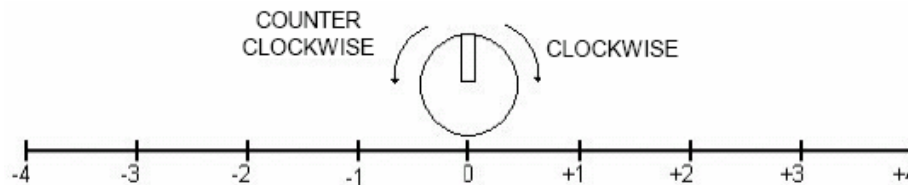


Figure – Absolute positioning virtual scale.

Consider a virtual scale, in which, every motor axe turn clockwise corresponds to go 1 ahead in this scale. And that at every turn counterclockwise corresponds to go back 1 in this scale. If the axe is in position -2 in this scale, that is, at -2 turns from point zero and it executes an absolute positioning of 2 turns with a plus sign, then the axe will have to turn twice clockwise to reach point zero and 2 turns more clockwise to reach position +2 turns. This is how absolute positioning works, always referred to a point defined as zero. Actually, this point zero is defined through a special positioning block. This block is called search of zero machine, which is a block that will be used only to define the zero point for all absolute positioning. See the program below (Tutor8).

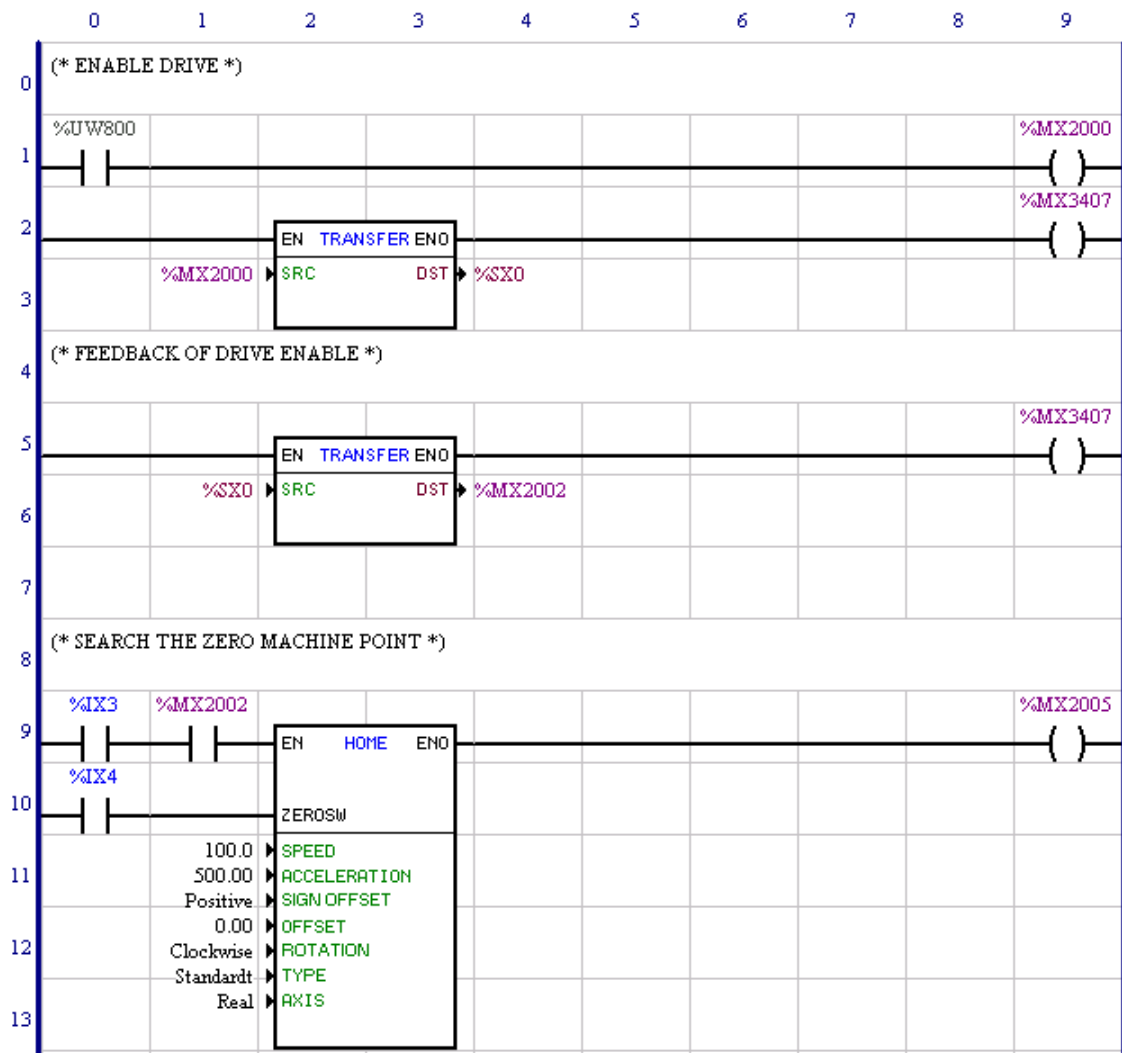


Figure – Tutor8 / Page 1 of 2.

Functioning page 1 :

In this first page is the block of zero search. This block should always be the first to be executed due to its function of defining the zero position for all absolute position.

When enabling the zero search block through the EN input, the motor will turn according to programmed parameters of speed, acceleration and direction. While the motor is turning, the block will wait for the sign of the zero key which is connected in the ZEROSW input of the block, when receiving this sign the block will understand that this is position zero. For more details about the zero search block, refer to the card's manual.

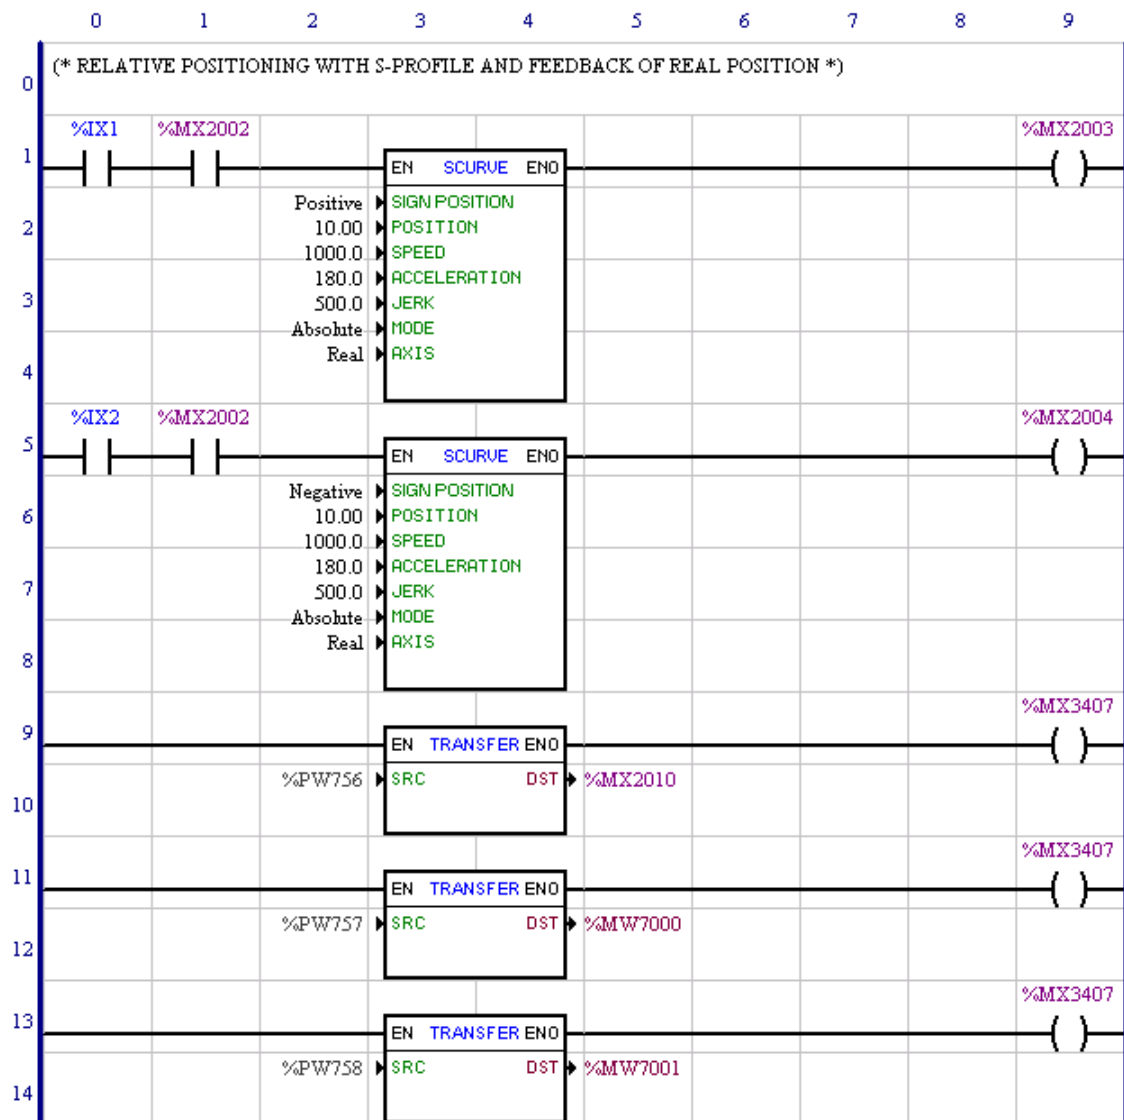


Figure – Tutor8 / Page 2 of 2.

Functioning page 2 :

In this second page, there are two blocks of “s” curve positioning programmed as absolute. One of them is programmed for position +10 (Plus 10.00) and another for position -10 (Minus 10.00).

Still in this same page there are three TRANSFER blocks reading the value of three parameters of the system, which are:

P756 – Sign of real position (0=negative, 1=positive)

P757 – Real position (rotation)

P758 – Real position (fraction of turn, degree/10)

The result obtained in these three parameters after the execution of each one of the blocks is displayed in next three figures.

After the execution of the machine zero search block :

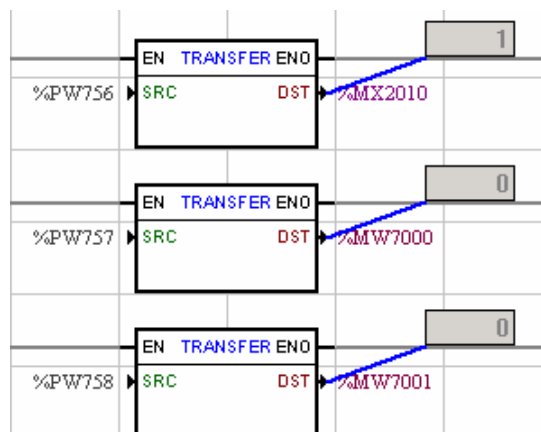


Figure – P756=1, P757=0 e P758=0.

After the execution of the “s” curve positioning with position +10.00 :

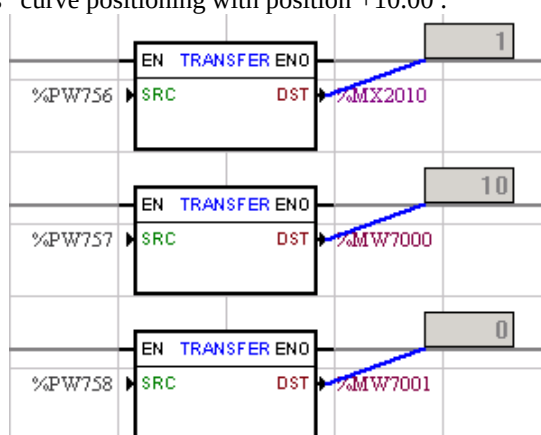


Figure – P756=1, P757=10 e P758=0.

After the execution of the “s” curve positioning with position -10.00 :

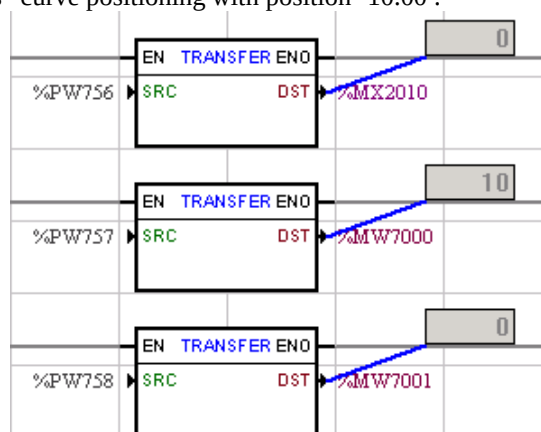


Figure – P756=0, P757=10 e P758=0.

10.7.6 Analog Input Reading 0-10Vdc (Tutor9)

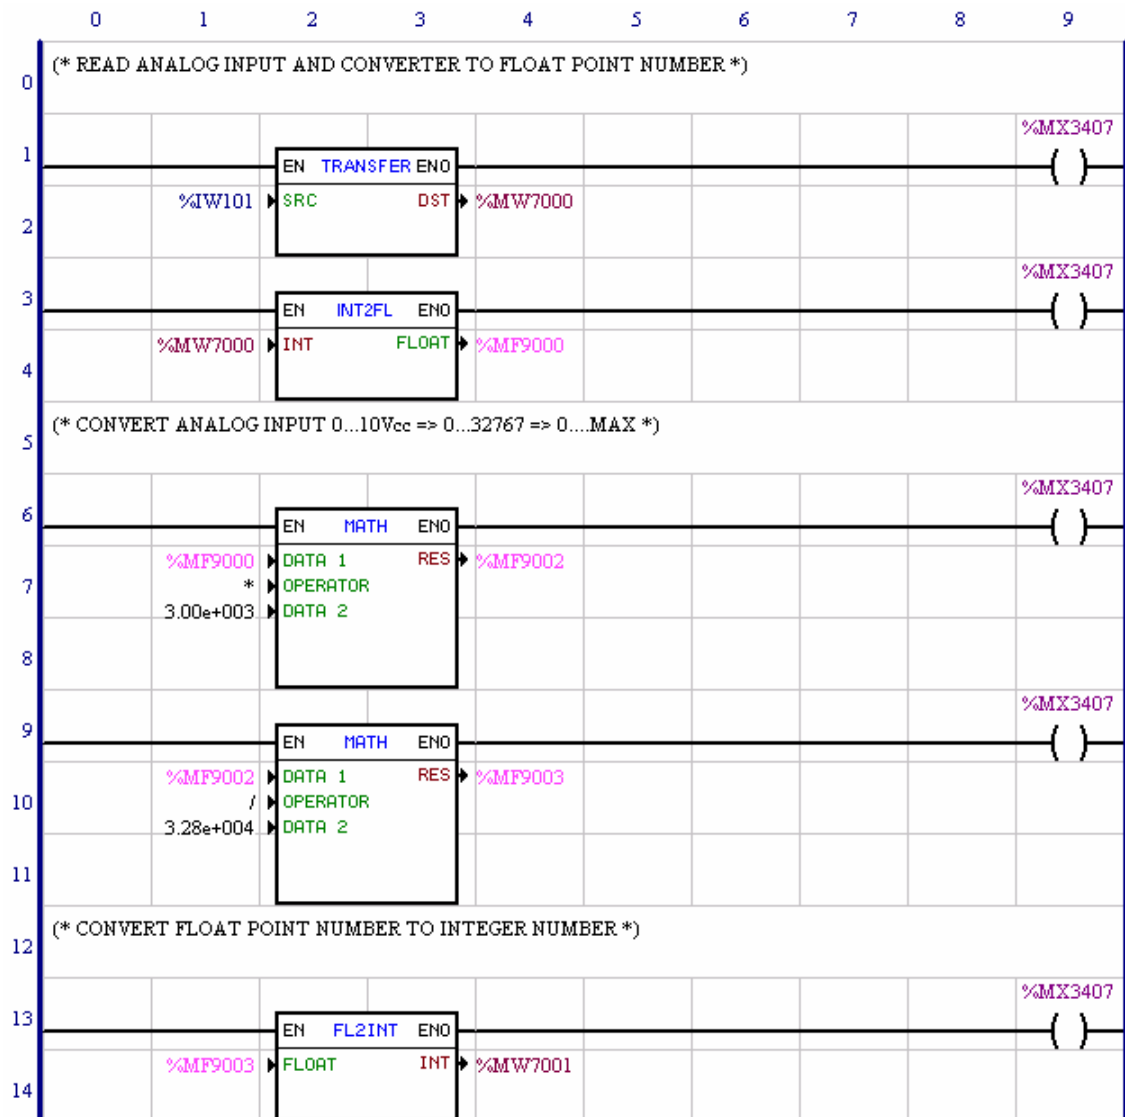


Figure – Tutor9.

Functioning:

In line 1, the analog input 1 of the converter (IW101) is transferred to MW7000 word marker.

In line 3, the MW7000 marker is converted into floating point and stored in the MF9000 float marker.

In line 6, the MF9000 float marker, which has the content of the analog input AI1 (0 to 10Vcc = 0 to 32767), is multiplied by the engineering unit maximum value. In this example, 3000 was used and the result is stored in the MF9002 float marker.

In line 9, the MF9002 float marker is divided by the range of the analog input (0 to 32767), and the result is stored in the MF9003 float marker, which is already the analog input converted into engineering unit (0 to 3000).

In line 13, the MF9003 float marker is converted into integer and stored in the MW7001 word marker.

Basically, the analog input of 0 to 10Vdc that has its content represented as 0 to 32767 is converted to an engineering unit with 0 to 3000 scale and stored in the MF9003 and MW7001 markers.

10.7.7 Analog Input Reading 4-20mA (Tutor10)

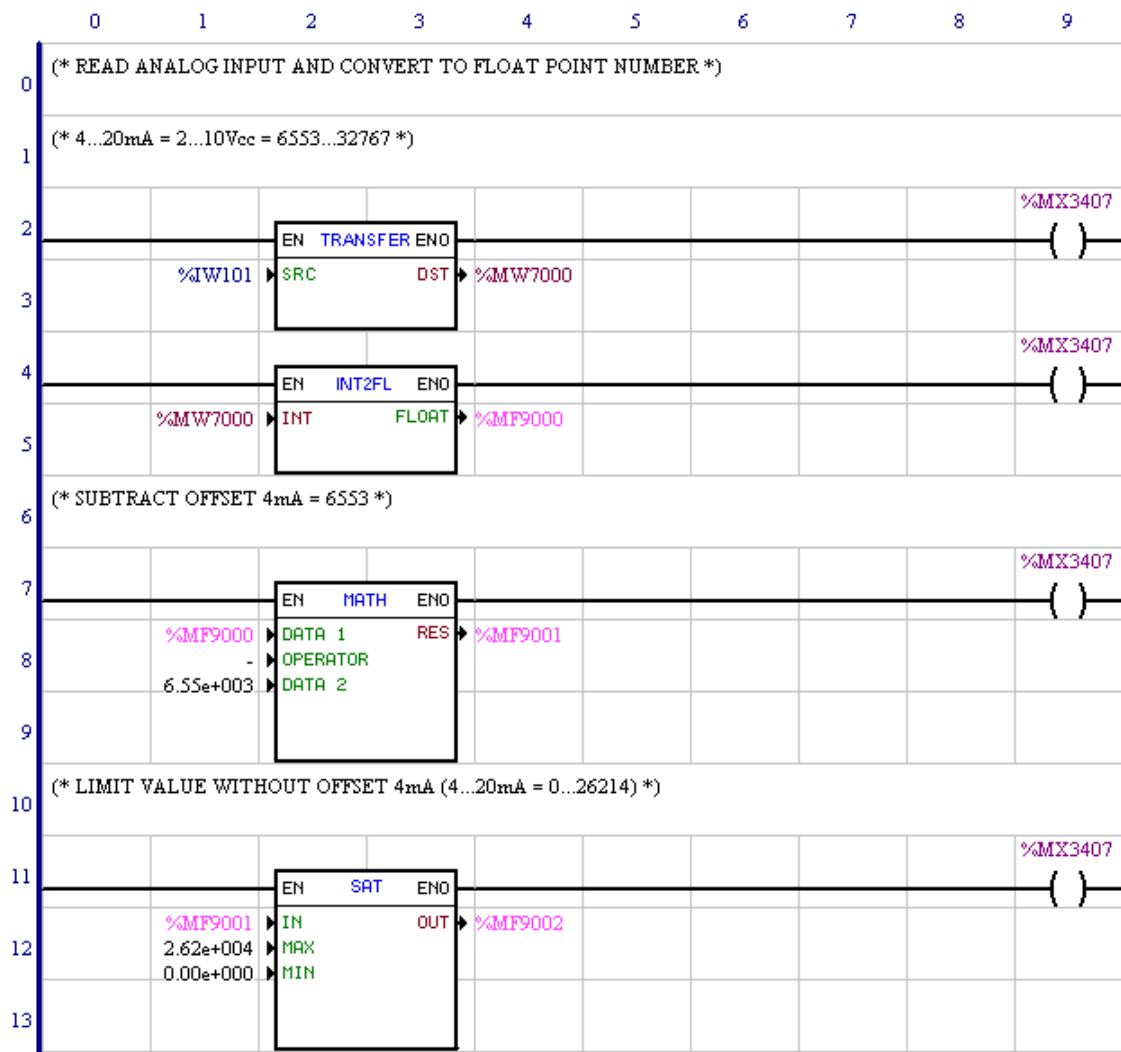


Figure – Tutor10 / Page 1 of 2.

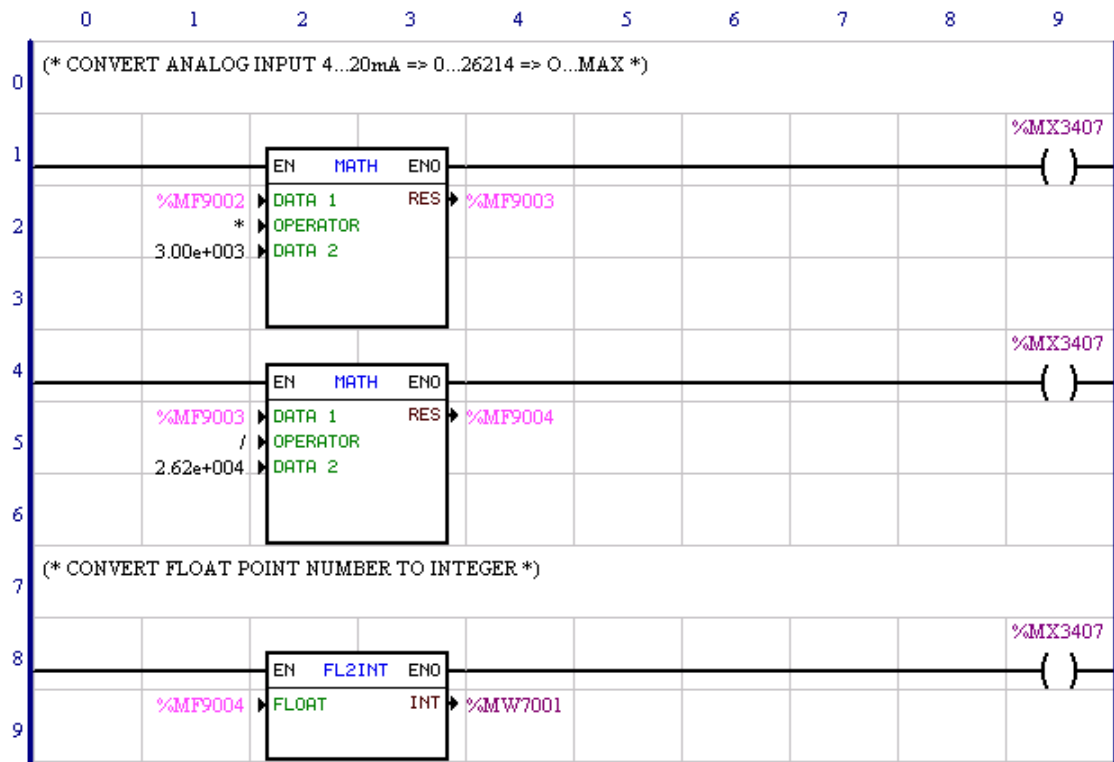


Figure – Tutor10 / Page 2 of 2.

Functioning:

In line 2 of page 2, the analog input 1 of the converter (IW101) is transferred to MW7000 word marker.

In line 4 of page 1 the MW7000 marker is converted into floating point and stored in the MF9000 float marker.

In line 7 of page 1, the offset is subtracted from the 4mA of the MF9000 float marker and stored in the MF9001 float marker.

In line 11 of page 1, the MF9001 float marker is limited to (0 to 26214), where $(32767 - 6553 = 26214)$, and stored in the MF9002 float marker.

In line 1 of page 2, the MF9002 float marker, which stores the content of analog input AI1 (4 a 20mA = 0 a 26214), is multiplied by the engineering unit maximum amount - in this example 3000 was used - and the result is stored in the MF9003 float marker.

In line 4 of page 2, the MF9003 is divided by the range of the analog input that is 26214 and the result is stored in the MF9004 float marker which already is the analog input converted to the engineering unit (0 to 3000).

In line 8 of page 2, the MF9004 float marker is converted to integer and stored in the MW7001 word marker. Concisely, the analog input of (4 a 20) mA that has its content represented as 6553 to 32767 is converted to an engineering unit with 0 to 3000 scale and stored in the MF9004 and MW7001 markers.

To activate converter the analog input of 4 to 20mA, you should turn on the switch for that function.

10.7.8 Motor control speed through PID block (Tutor11)

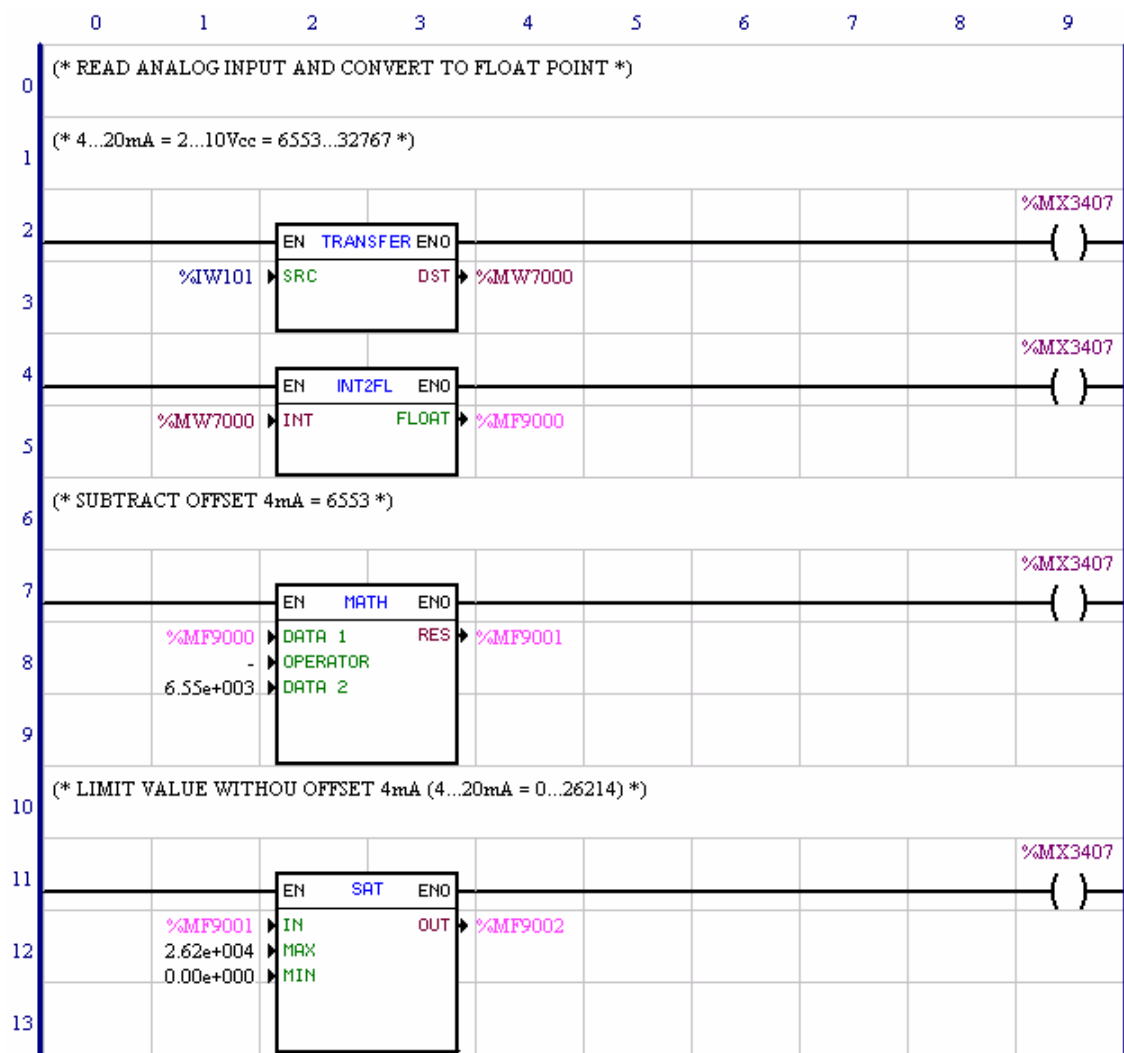


Figure – Tutor11 / Page 1 of 5.

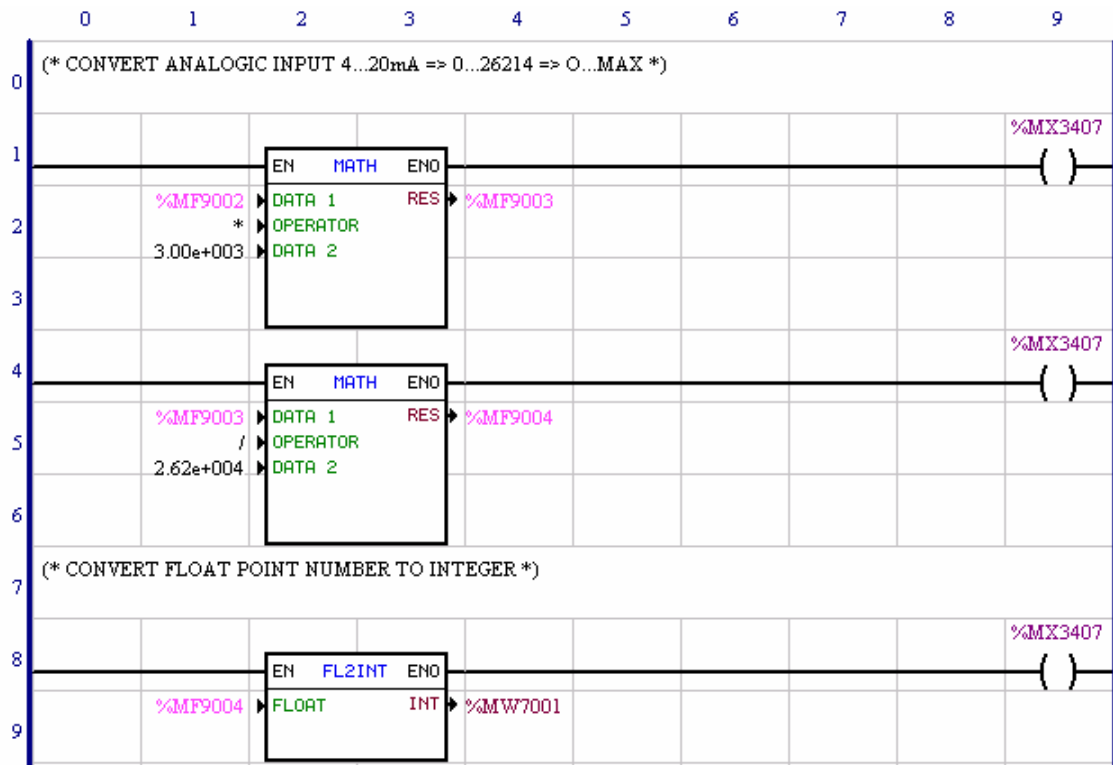


Figure – Tutor11 / Page 2 of 5.

Functioning pages 1 and 2 :

The first two pages of the project are the same as the previous project, which simply convert the analog input (4-20)mA into an engineering unit.

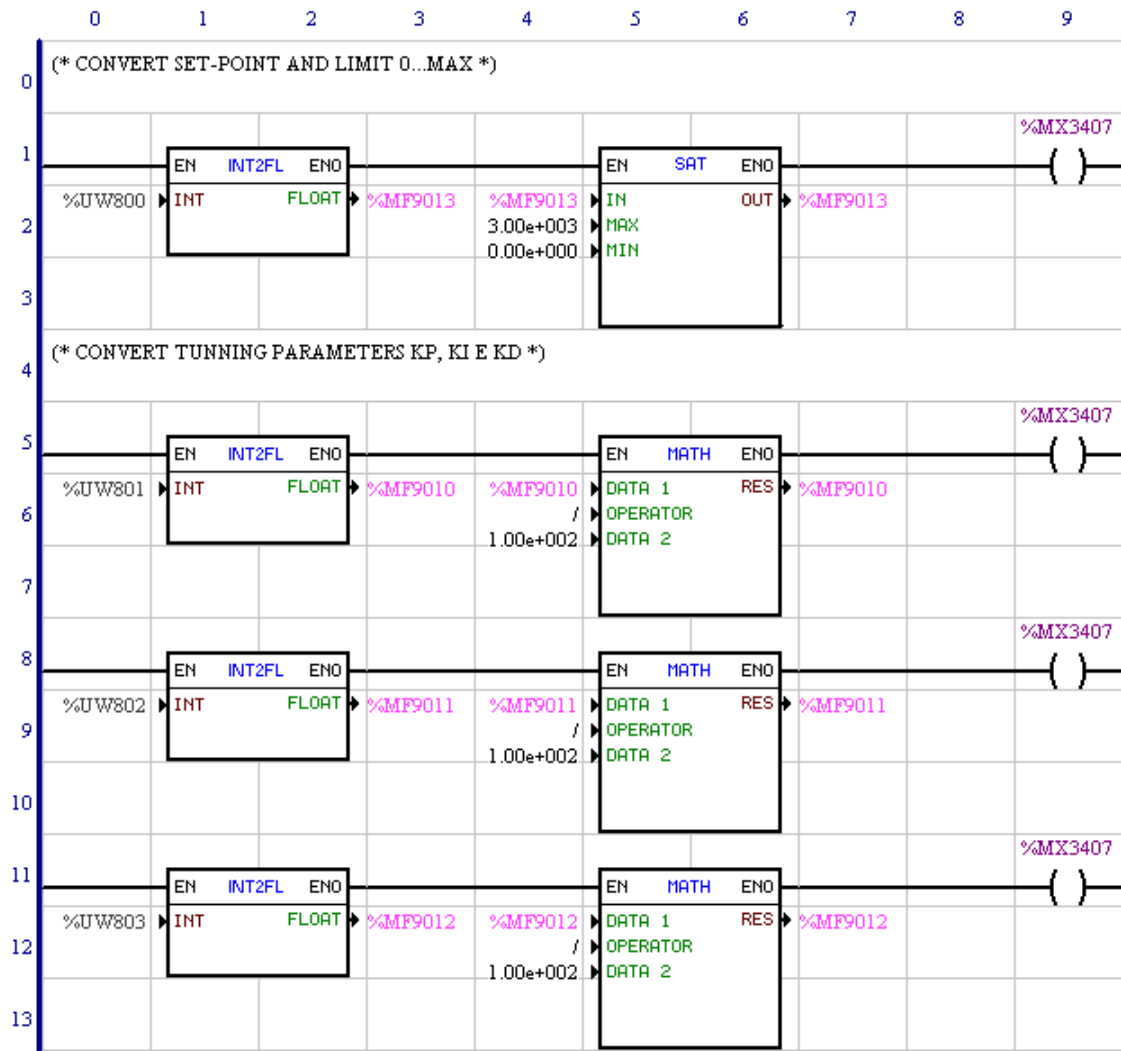


Figure – Tutor11 / Page 3 of 5.

Functioning page 3 :

On this page, it is read the PID block set-point, which is adjusted via user's parameter, P800, and limited to its value at the same scale as that of the analog input.

Also on this page, it is read the Kp, Ki and Kd gain of the PID block, which are adjusted via user's parameter P801, P802 and P803. At this point, they are divided by 100 in order to obtain a better adjustment resolution.

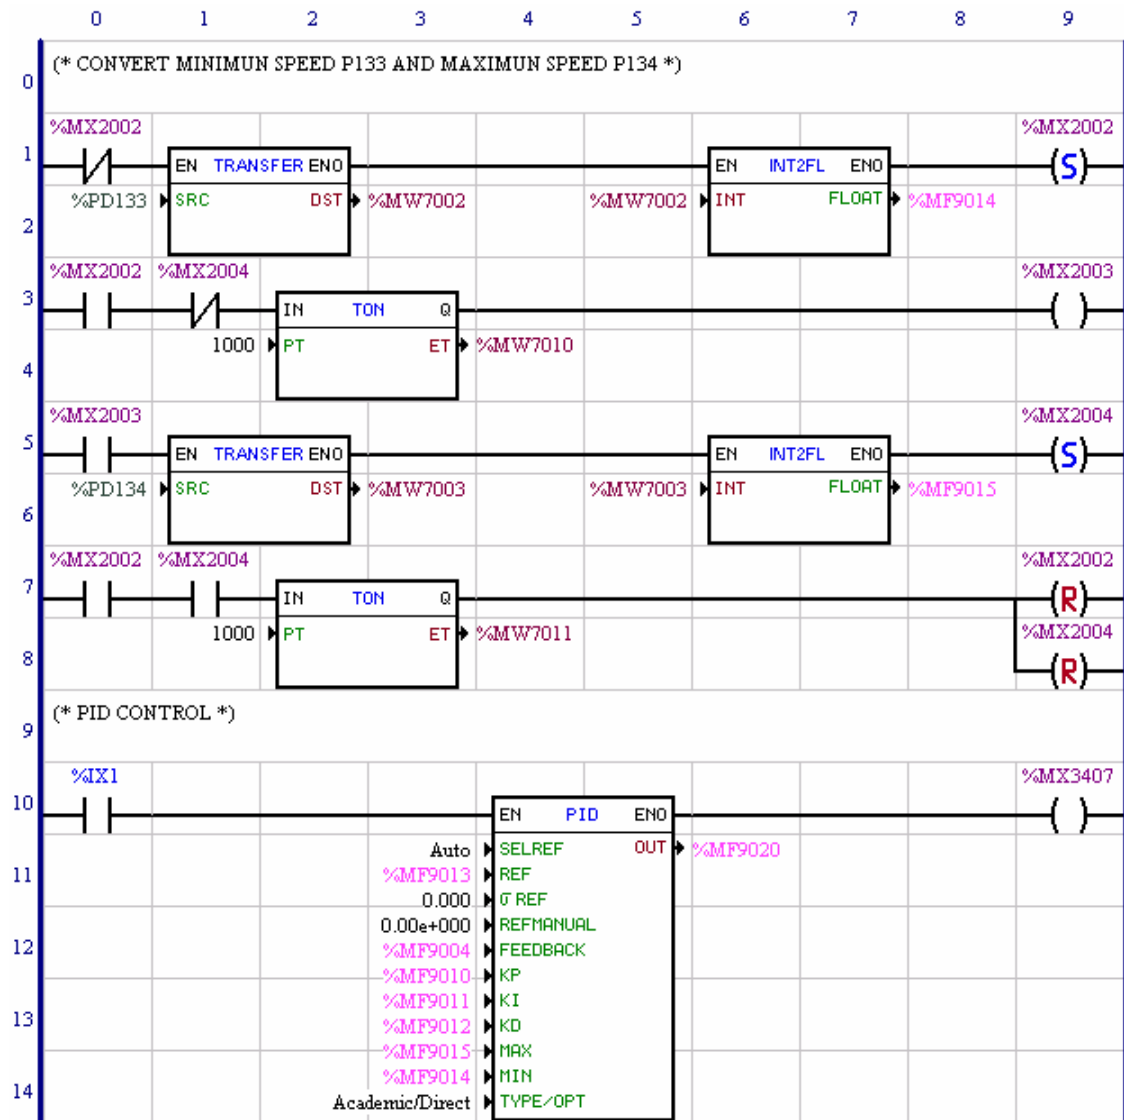


Figure – Tutor11 / Page 4 of 5.

Functioning page 4 :

On this page, it is read the maximum and minimum value of the PID block output, which will be used to control the motor speed. These values are being removed from P133 and P134 parameters that are already adjusted for the motor minimum and maximum speed.

In this example there is a timing between the actuation of these transfer blocks. This is necessary because the drive parameter reading is slow and it takes the CPU quite some time to do it. Therefore, the performance of the control referred to is improved, since it is not necessary a continuous reading of these parameters.

Here you find the PID block, whose functioning depends on the handling of the parameters done in the previous steps.

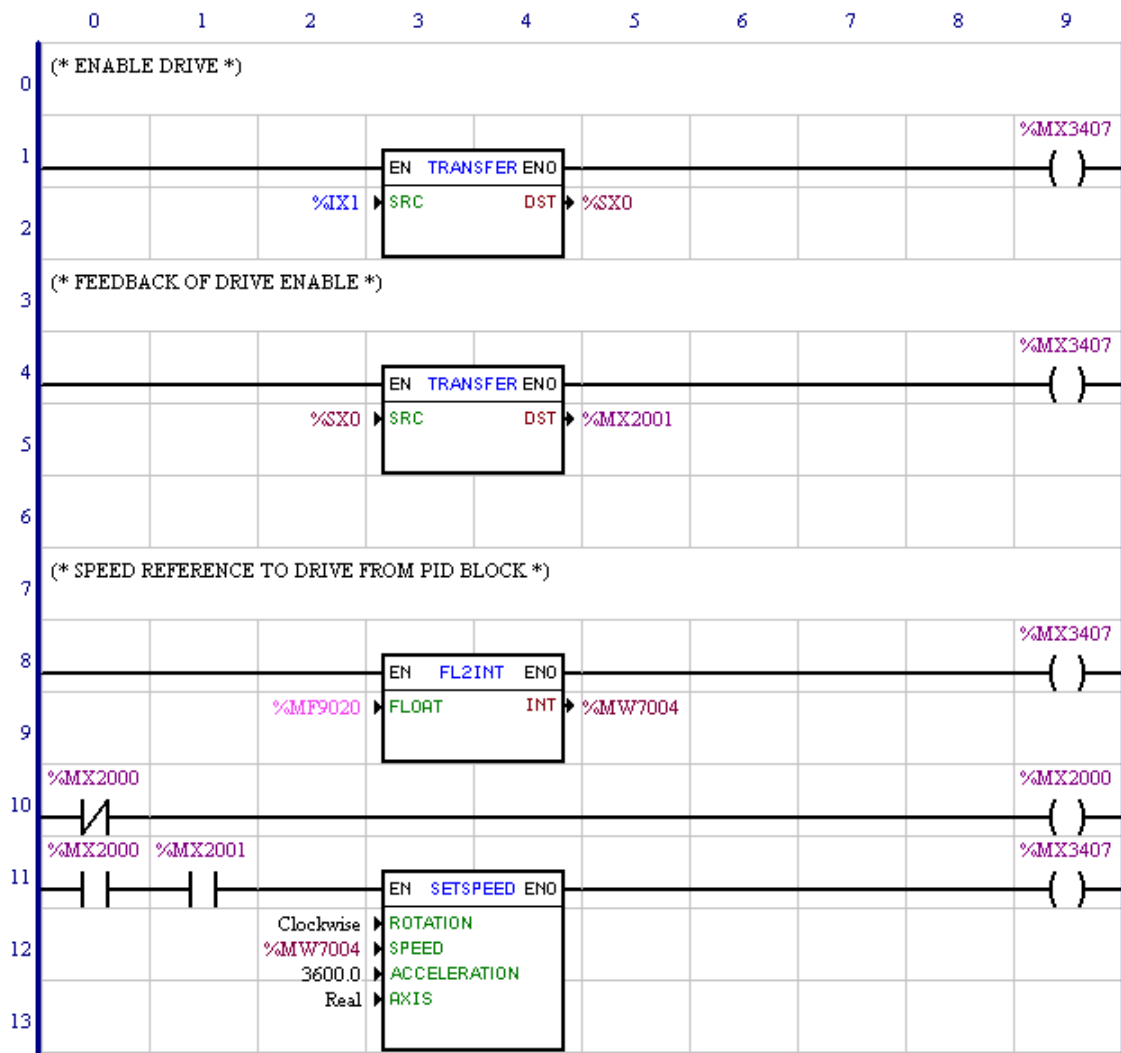


Figure – Tutor11 / Page 5 of 5.

Functioning page 5 :

On this page, it is done the enabling of the converter and speed control, according to mentioned in the item Tutor5. The only difference here, and very important, is that the steeped block has its speed adjusted by the PID output. This can be observed in line 8 and 11 of this page.

Control strategy :

The PID Controller module its manipulated variable (OUT) so that the process variable (FEEDBACK) is equaled to the reference (REFERENCE). That is, the PID acts indirectly on the process variable through an actuator or manipulated variable, and the process variable is the process answer to the stimulus generated by the actuator or manipulated variable.

We normally define the difference between REFERENCE and FEEDBACK as the controller error signal, that is, $Error = (REFERENCE - FEEDBACK)$, and we say the PID finds a value for the output (OUT) in which the controller error is equal to zero.

Examl PID (Pressure control) :

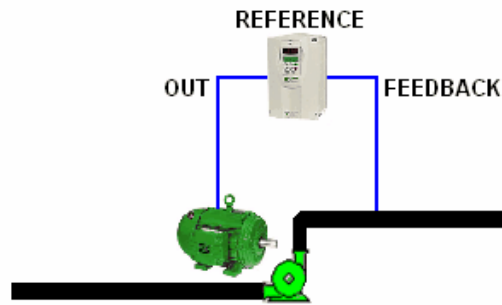


Figure – Pressure control example.

In this example, the inverter controls the speed of amotor (OUT) that is coupled to a pump. Attached to the tubing of this pump there is a pressure sensor that feeds back (FEEDBACK) the inverter with a signal (4 to 20)mA proportional to the system pressure. So when you increase the motor speed, the line pressure increases. When you decrease the motor speed, so does the line pressure.

This is the objective of the PID control net:modulate (increase or decrease) the motor speed so that a certain line pressure (REFERENCE) is maintained. The ladder program can be didactically represented in the next figure.

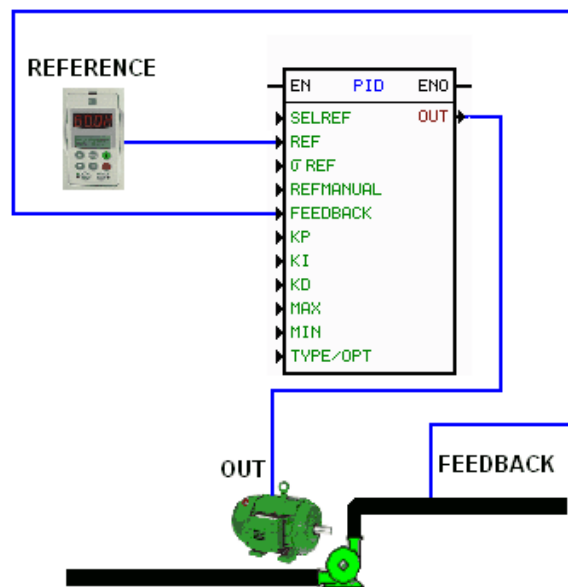


Figure – PID block example (pressure control).

11 Getting Help

11.1 Fixing computer problems

This section describes problems that may arise while this application is run.

VIDEO

The recommended resolution is at least 800x600

This application has been designed to run in computers able to show 65536 colors or more. Although this application run in system that show only 256 colors, there will be a significant image quality reduction. When the application is run with a resolution of 640x480, some of the larger graphics may be shown outside

the active window. Thus is recommended to run this application with a resolution of 800x600 or better.

PERFORMANCE

There are several ways to run this application faster. Below some helpful hints to improve the performance of some applications in Windows. For more details about the performance, refer to your Windows supporting documentation.

This application uses computer RAM. If this application runs too slow or error messages, such as "out of memory", are displayed, this may be due to insufficient RAM. Please find below some hints to improve the use of the memory of your computer.

- Close all applications that are not being used.

- Add more RAM to your computer. You can determine the required memory capacity by checking the Windows 95 / Windows 98 performance in the control panel or in the Task Manager of Windows NT.

- If you are using more than 256 colors in your video monitor, but you want to reduce this number, please refer to your Windows documents.

For more detail how to improve the performance of your computer, please refer to your Windows 95 Manual and to your CD-ROM documents.

PRINTING PROBLEMS

The screen resolution and the printing resolution are sometimes different each other. Thus the printing quality may not be the same as shown on the screen.

If a General Protection Fault is displayed when you are printing some topic, check the printer driver. If possible, install a later driver software..

Ensure that the printer is ON and that it permits printing from any application. If the problem persists, open the page Properties of the printer you are using.

Click on Font table and select a download method of True Types fonts that will work better with your system.

11.2 Copyright

The information from this document may be changed without previous notice.

The names of companies, products, people, characters and/or data here mentioned are fictional and they do not intend in no way represent any people, company, product or effective events, except when no mentioned.

No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, scanning or otherwise for any purpose, except for personnel use, without prior written permission of WEG. Copies may be made only through electronic devices.

WEG may have patent protections, patent applications, trademarks, copyrights or other intellectual property contained in this document. The supply of this document does not grant any patent license, trademarks, copyrights or other intellectual property

Products or company names here mentioned may be trademarks of the respective owners.

12 Technical Support

12.1 Technical Support

Your comments about WLP are welcome.

Please inform us how WLP has helped you to program your drive more efficiently.

WLP is available on our website! See Download.

You can contact us at <http://www.weg.net/> or contact a local WEG branch or representative.

Index

- A -

About 67
Address 33, 34
Application 61, 62
Applications 235
Arguments 107
AUTOREG 45, 173

- B -

Bar 32, 33
Barras 33
Blocks 103, 111

- C -

CALCCAM 42, 152
Calcula Nova Tabela Cam 158
Calculation 47, 48, 194, 195, 202, 203, 204, 206
CAM 41, 42, 139, 152
Cam Profiles 52
CAN 50, 51, 212, 213
CANOpen 51, 52, 213
Cells 68, 69, 70
CFW-11 88
Close 28
Coil 38, 39, 114, 115, 116, 117, 118, 119
Colar 31
Comment 37, 112
Communicate 63, 64, 65, 66, 87, 88
COMP 47, 194
Compatibility 103
Compilation 34, 62, 231, 232, 234, 235
Configuration 66
Connection 37
Contact 38, 113
Copy 31
Copyright 278
CTENC 47, 191
CTU 46, 183

Cut 31

- D -

Data 90
Delete 35, 36
DMUX 48, 206
Download 63

- E -

Edit 30, 31, 32, 68, 69, 70
Editing 244
Errors 34
Executa curva Cam 159
Executing 242
Exibir 33
Exit 30

- F -

Fieldbus 52
FILTER 46, 189
Finaliza MC_CamIn 160
FL2INT 49, 209
FOLLOW 44, 171
Force 65, 84
FUNC 48, 202

- G -

Gear-Box 44, 45, 171, 173
Grid 33

- H -

Help 67
HMI 65, 83
HOME 41, 131

- I -

IDATA 49, 210
INBWG 45, 177
Information 20, 65, 86
Initialization 21

INPOS 45, 175
Inputs 65, 81, 84
Inserir 40, 41, 51
Insert 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51
Insert Page 35
Installation 21, 88, 239
INT2FL 49, 208
Introduction 22

- J -

JOG 43, 164

- L -

Ladder 89, 90, 97, 103, 107, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120, 123, 125, 128, 131, 137, 139, 152, 155, 161, 164, 166, 168, 171, 173, 175, 177, 179, 182, 183, 186, 189, 191, 194, 195, 202, 203, 204, 206, 207, 208, 209, 210, 211, 212, 213, 216, 229, 230
Language 30, 89, 90, 97, 103, 107, 111

- M -

Markers 97
MATH 47, 195
MC_CamIn 159
MC_CamOut 160
MC_CamTableSelect 157
MMC 51, 229
Monitoring 63, 64, 65, 70, 71, 74, 75, 77, 81, 83, 84, 86, 254
Movement 43, 44, 161, 164, 166, 168
MSCANWEG 50, 212
MUX 48, 204
MW_CamCalc 158

- N -

New 27
News 10

- O -

Online 86

Open 27
Outputs 65, 81, 84

- P -

Page 35, 36
Parada 40
Parameters 34, 51, 65, 83, 86
Perfil Cam 52
PID 46, 186
PLC 45, 46, 47, 179, 182, 183, 186, 189, 191
Posicionamento 41
Positioning 40, 41, 42, 125, 128, 131, 137, 139, 152, 155
Print 28, 29
Problems 277
Project 24, 27, 28, 29, 30, 235, 243
Projeto 28
Proprieties 29

- Q -

QSTOP 40, 123

- R -

Redo 31
REF 44, 168
Reference 111
Remove 28
RTC 46, 182
RXCANWEG 50, 213

- S -

SAT 48, 203
Save 27, 28
SCURVE 40, 125
SDO 51, 213
Search 32
Selecione Tabela Cam 157
Select 36
Serial 87
SETSPEED 43, 161
SHIFT 42, 155
Solutions 277

SPEED 44, 166
Stop 40, 120, 123
Support 279
System 97

- T -

Tag 33
TCURVAR 41, 137
TCURVE 40, 128
TON 45, 179
Tools 51, 52, 61, 62
TRANSFER 49, 207
Transference 49, 50, 207, 208, 209, 210, 211
Trend 64, 77
Tutor1 244, 254
Tutor10 270
Tutor11 272
Tutor2 256
Tutor3 256
Tutor4 257
Tutor5 258
Tutor6 258
Tutor7 261
Tutor8 265
Tutor9 269
Tutorial 238, 239, 242, 243, 244, 254, 256, 257,
258, 261, 265, 269, 270, 272

- U -

Undo 30
Units 29
Upload 63
USB 88
USERERR 50, 211
USERFB 51, 66, 216, 230

- V -

Variables 64, 75, 77, 90, 97
Verify 45, 175, 177
View 32, 33, 34

- W -

What is WLP 20
Window 67
WLP 10, 20, 21, 22, 24, 67