

Internal/Flush-mount Installation

The internal flush-mount installation method requires an installation support that is purchased separately. *Refer to Item Names and Part Numbers (Sold Separately) on page 12* for information regarding the installation support and mounting hardware. *Figure 9* illustrates how to attach the Installation Support A.

1. Cut an opening in the enclosure panel for the LCD Operator Option according to *Figure 10*.
2. Mount the LCD Operator Option to the installation support (sold separately).
3. Mount the installation support and LCD Operator Option to the enclosure panel.

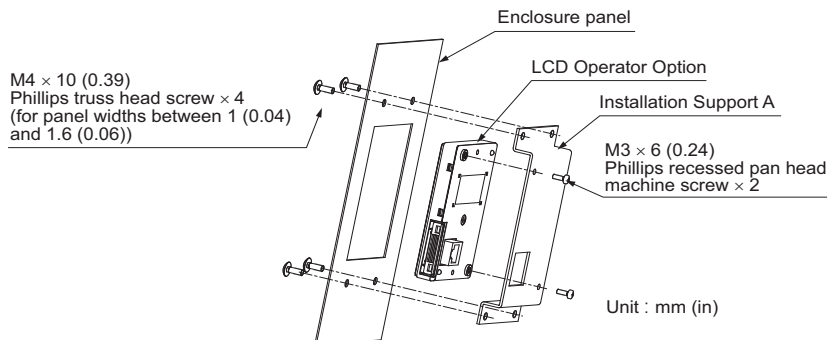


Figure 9 Internal/Flush Mount Installation

Note: For environments with a significant amount of dust or other airborne debris, use a gasket between the enclosure panel and the LCD Operator Option.

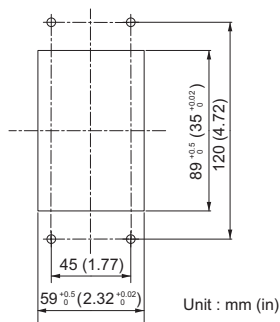


Figure 10 Panel Cut-out Dimensions (Internal/Flush-mount Installation)