




2.3.4 Wiring instructions

- 1) Use shielded or twisted cables for connection to the control circuit terminals and run them away from the main and power circuits (including the 200V relay sequence circuit).
- 2) Use two or more parallel micro-signal contacts or twin contacts to prevent a contact faults when using contact inputs since the control circuit input signals are micro-currents.

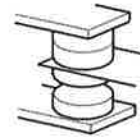

Micro signal contacts




Twin contacts

- 3) Do not apply a voltage to the contact input terminals (e.g. STF) of the control circuit.
- 4) Always apply a voltage to the fault output terminals (A, B, C) via a relay coil, lamp, etc.
- 5) It is recommended to use the cables of 0.75mm² gauge for connection to the control circuit terminals.
If the cable gauge used is 1.25mm² or more, the front cover may be lifted when there are many cables running or the cables are run improperly, resulting in an operation panel contact fault.
- 6) The wiring length should be 30m(200m for terminal FM) maximum.

2.3.5 When connecting the operation panel using a connection cable

When connecting the operation panel (FR-DU07) to the inverter using a cable, the operation panel can be mounted on the enclosure surface and operability improves.

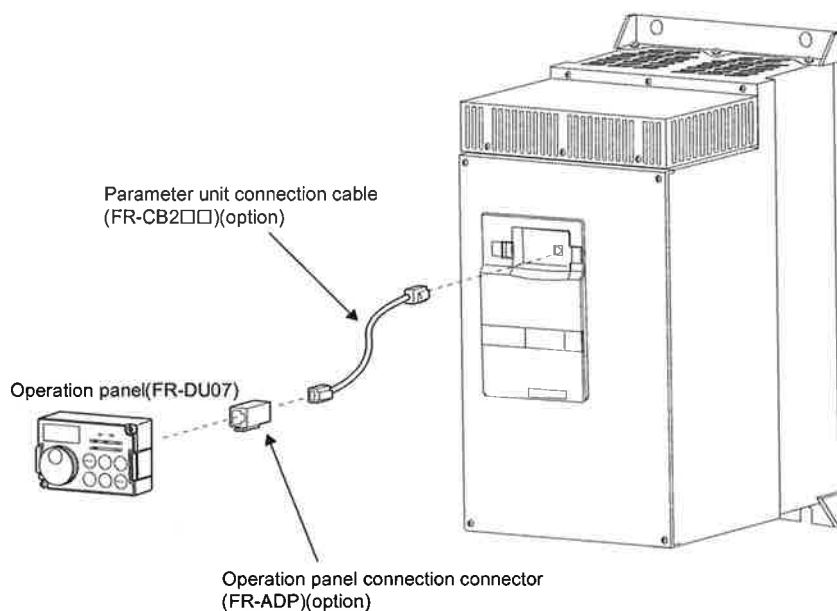

CAUTION

Do not connect the PU connector to the computer's LAN port, FAX modem socket or telephone connector.
The inverter and machine could be damaged due to differences in electrical specifications.

REMARKS

- Refer to *page 4* for removal method of the operation panel.
- Overall wiring length when the operation panel is connected: 20m maximum
- Refer to the following when fabricating the cable on the user side.
Commercially available product examples (as of Sep., 2006)

	Product	Type	Maker
1)	10BASE-T cable	SGLPEV-T 0.5mm × 4P	Mitsubishi Cable Industries, Ltd.
2)	RJ-45 connector	5-554720-3	Tyco Electronics Corporation

- The inverter can be connected to the computer and FR-PU04/FR-PU07.