



SRW01

Smart Relay

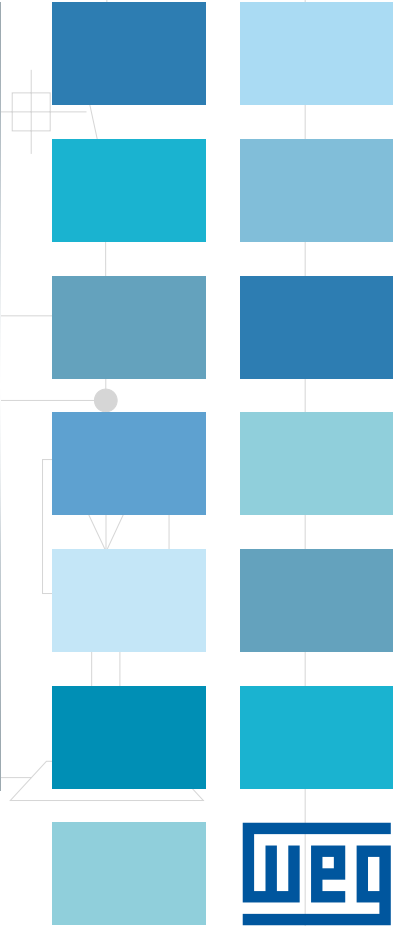

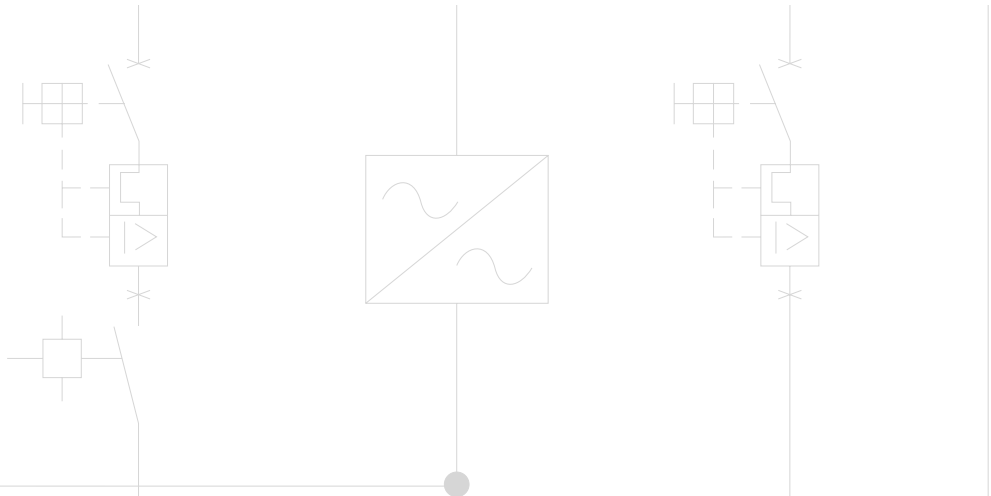

Smart Relay

SRW01

Summary

Overview	04
Features	06
Modular Design	07
Benefits	09
Functions	09
Applications	10
Selection Guide	11
Accessories	12
Operating Modes Diagrams	15
WLP Software	19
Technical Characteristics	20
Dimensions (mm)	22



Overview

The SRW01 is a low-voltage electric motor management system with state-of-the-art technology and network communication capabilities. Additionally, its modular concept allows the expansion of its functionalities, Plug and Play philosophy, free WLP programming software and USB communication.





Versatility

The SRW01 supports the following communication networks protocols: DeviceNet, Modbus-RTU, and Profibus-DP.

The communication modules can be easily exchanged due to its plug and play capabilities.

The SRW01 provides a USB port for relay monitoring, programming and back-up on-line the parameters through PC when using WLP software.

The SRW has a HMI that can be used for quick system monitoring and relay parameterization. Additionally, the internal memory allows the user to do the upload and download of up to three parameters set and three user programs.

The SRW01 includes a thermal memory circuit in order to maintain a motor thermal image, even if power supply is removed.

Flexibility

The SRW01 has a modular design, providing easy assembling and integration.

The Control Unit (UC) can be assembled with the Current Measuring Unit (UMC) or current and voltage measuring unit (SRW01-UMCT), forming a single unit, or separated (up to 2 meters).

The SRW01 has pre-programmed operation modes, which operates in several kinds of starting and monitoring modes. One of them is the transparent mode that can be programmed according to your needs, making the SRW01 fit to the most diverse applications.

The digital input and output functions of the Control Unit (UC) are automatically configured as the operation mode is selected, defining in an easy and simple way the connection between the control circuit and the SRW01 in the starter.

The digital inputs can be configured to monitor external digital signals using the external fault function. With this feature the user can connect the output contact from an external relay to the digital input of the SRW01 relay. Thus the relay SRW01 makes possible the user to use various protections for a motor in a same relay, as earth leakage and thermal like PTC.

** The current and voltage measuring unit (UMCT) only allows separate assembly of the Control Unit (UC).*



Features

The SRW01 incorporates a main Control Unit SRW01-UC and a Current Measuring Unit (SRW01-UMC) or a current and voltage measuring unit (SRW01-UMCT) that are electrically connected using a flat cable SRW01-CB.

The relay allows to add digital inputs and outputs through the digital expansion module.

This management system is a modular design, providing more flexibility in the design, project and assembly the motor starter.



The interface with the relay may be performed in three ways:

- Via Fieldbus (Modbus, DeviceNet, Profibus)
- Via SRW01-HMI
- Via software - WLP (USB)

Through Fieldbus, the user can operate, monitor and configure the SRW01 remotely, via PLC or supervisory system.

The HMI is connected to SRW01 through cable connection that can be programmed, operated and monitored in a use-friendly way.

The interaction can be done via software through a shielded USB cable or via Modbus network, through the WLP.

Modular Design

Characteristics

- Reduced size, compact structure
- Control Unit (UC) input power range: 110-240 V ac/dc or 24 V ac/dc
- Control Unit (UC) with 4 digital inputs and 4 digital outputs
- DIN rail or screws mounting
- Easy network module change, via exclusive drawer system
- Programming via free WLP software or HMI (optional)

PTC or ground leakage sensor input

Reset

Profibus - DP network connection

*Modbus, DeviceNet
or Profibus - DP connection*


Led indicator for digital input

Mini USB port

Connection for EDU and IHM

Led indicator for digital output

Communication module

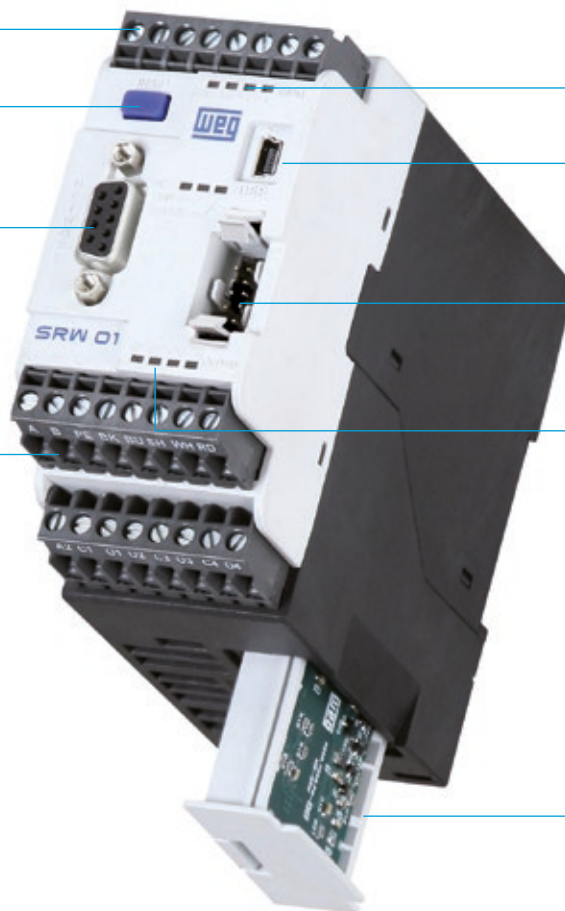

The SRW01-UC Control Unit provides LED indicators for input and output activations, status, operation mode, power supply status, failure and alarm status. The mounting of the Control Unit can be done either by 35 mm DIN rail or onto back panel mounting.

Communication protocols: DeviceNet, Modbus, and Profibus are defined using proper protocol installed in the communication drawer.

The Plug and Play concept automatically recognizes and configures the SRW01 for safe operation, avoiding manual error configuration.



Modular Design

Digital Expansion Unit (EDU)



Provides the option of increasing the number of digital inputs and outputs. It has 6 digital inputs and 4 digital outputs, totaling 10 digital inputs and 8 digital outputs, with the inputs and outputs of the Control Unit (UC). It can be used to transfer information, alarm signalling or external devices state.

**Maximum of 1 digital expansion unit (EDU) for 1 Control Unit (UC).*

Current Measuring Unit (UMC) or Current and Voltage Measuring Unit (UMCT)



UMC

UMCT

The Current Measuring Unit (UMC) measures the current of the three motor phases.

Using a current and voltage measuring unit (UMCT), in addition to measuring the motor currents (as in the UMC), it is also possible to monitor voltages up to 690 V ac, phase sequence, power factor, all the motor powers and make management and electric power consumption (kW/h).


The values are digitally transmitted to the Control Unit (UC).

Free Programming Software - WLP (WEG Ladder Programmer)


- SRW01 parametrization, programming, command and monitoring
- Configures, edits the parameters and programs in “Ladder” language with mathematical and control blocks
- Configuration assistant
- USB or Modbus network communication



USB connection

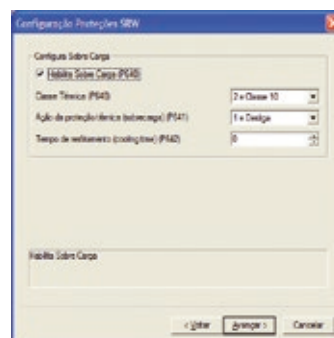

Configuration assistant

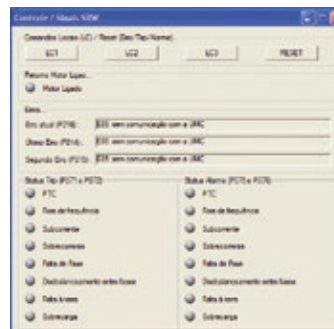

Monitoring diagnosis

Benefits

- WLP Software free
- USB port to connect the relay with the computer
- Back-up the relay configuration using the software WLP
- Downtime reduction
- Power factor monitoring and consumption, via current and voltage measuring unit (UMCT)
- Higher reliability in the motor protection system
- Safety during the operation, monitoring and maintenance
- Modularity and easy system expansion
- Reduction of the control wiring
- Reduced hardware responsible for motor control
- Remote reset via fieldbus network
- Quick and accuracy in identifying failures or alarms
- Automatic defect records and statistics
- Monitoring, supervision and control via fieldbus network, computer (WLP) or human-machine interface

Functions

The SRW01 protection, monitoring and operating functions enhance system protection reliability and precision. The operating modes are auto-adjustable, meaning that the user selects the operating mode and the relay search for proper parameters automatically. This feature ensures quick and safe parameterization. All operating modes allow motor monitoring. Its friendly parameterization mode allows users to access all digital inputs and outputs, thus increasing flexibility to cover many applications.

Protection

- Overload protection (adjustable tripping class 5-45)
- Thermal protection via PTC
- Phase loss protection
- Protection against current unbalance between phases
- Protection against overcurrent and locked rotor
- Protection against undercurrent
- Internal ground fault protection
- Protection against out of range frequency
- Earth leakage
- External fault
- Phase sequence*
- Voltage unbalance*
- Phase loss (voltage)*
- Over and undervoltage*
- Over and underpower*
- Over and under power factor*
- Management consumption kWh and kVArh*

Monitoring

- Digital input and output activation
- RMS current of each phase and average in amperes or % of I_n adjusted current
- Line and average voltage (V)
- Motor frequency
- Number of activation per failute type
- Number of start ups
- Motor running hours
- Relay running hours
- Phase unbalance levels
- Internal ground fault level
- Earth leakage current
- Power factor*
- Consumption*
- Active, reactive and apparent power*
- PTC value

* Available only using UMCT

Operating Modes

- Transparent operation - digital input and output can be configured according to application needs. In this operation mode the UMC/UMCT is used
- Operation as overload relay - similar to an overload relay
- Direct starter - direct-on-line starter for single and three-phase motors
- Reversing starter - reversing starter for three-phase motors
- Star-Delta starter - star-delta starter switch for three-phase motors
- Dahlander starter- starter for Dahlander three-phase motors
- Two windings starter - starter for two windings three-phase motors
- PLC mode - similar to the running of a PLC
In this operation mode the UMC/UMCT is not used



Applications

The main function of the SRW01 is to protect and control electric motors in their most diverse industrial applications.

Due to its reduced size and modular design, the relay is frequently used when space for its assembly is a determining point, e.g. in Intelligent Motor Control Centers.

Its high reliability and precision make the SRW01 suitable for the toughest industrial applications.

The on-line monitoring options, failure diagnosis and failure statistics allow preventive maintenance to be more effective, thus reducing the number of downtimes.

It offers wide application for continuous process plants in the following market segments:

- Chemical and Petrochemical
- Pulp and Paper
- Mining and Cement
- Food and Beverage
- Metal and Fabrication
- Plastics and rubber
- Automotive
- Ceramics
- Textile
- Refrigeration
- Other segments



Selection Guide

UC - Control Unit



SRW01-UC P T 1 E47

Communication protocol
 B = Without communication
 D = DeviceNet
 M = Modbus
 P = Profibus

Protection
 E - Earth leakage
 T - PTC

Digital input operating voltage
 1 = 24 V dc
 2 = 110 V ac

Supply voltage
 E26 - 24 V ac (50-60 Hz) / V dc
 E47 - 110-240 V ac (50-60 Hz) / V dc

Reference	Protection	Supply voltage	Communication protocol	Digital input voltage
SRW01-UC-BE1E47	Earth leakage	110-240 V ac (50-60 Hz) / V dc	Without communication	24 V dc
SRW01-UC-BE1E26	Earth leakage	24 V ac (50-60 Hz) / V dc		24 V dc
SRW01-UC-BE2E47	Earth leakage	110-240 V ac (50-60 Hz) / V dc		110 V ac
SRW01-UC-BE2E26	Earth leakage	24 V ac (50-60 Hz) / V dc		110 V ac
SRW01-UC-BT1E47	PTC	110-240 V ac (50-60 Hz) / V dc		24 V dc
SRW01-UC-BT1E26	PTC	24 V ac (50-60 Hz) / V dc		24 V dc
SRW01-UC-BT2E47	PTC	110-240 V ac (50-60 Hz) / V dc		110 V ac
SRW01-UC-BT2E26	PTC	24 V ac (50-60 Hz) / V dc		110 V ac
SRW01-UC-DE1E47	Earth leakage	110-240 V ac (50-60 Hz) / V dc	DeviceNet	24 V dc
SRW01-UC-DE1E26	Earth leakage	24 V ac (50-60 Hz) / V dc		24 V dc
SRW01-UC-DE2E47	Earth leakage	110-240 V ac (50-60 Hz) / V dc		110 V ac
SRW01-UC-DE2E26	Earth leakage	24 V ac (50-60 Hz) / V dc		110 V ac
SRW01-UC-DT1E47	PTC	110-240 V ac (50-60 Hz) / V dc		24 V dc
SRW01-UC-DT1E26	PTC	24 V ac (50-60 Hz) / V dc		24 V dc
SRW01-UC-DT2E47	PTC	110-240 V ac (50-60 Hz) / V dc		110 V ac
SRW01-UC-DT2E26	PTC	24 V ac (50-60 Hz) / V dc		110 V ac
SRW01-UC-PE1E47	Earth leakage	110-240 V ac (50-60 Hz) / V dc	Profibus-DP	24 V dc
SRW01-UC-PE1E26	Earth leakage	24 V ac (50-60 Hz) / V dc		24 V dc
SRW01-UC-PE2E47	Earth leakage	110-240 V ac (50-60 Hz) / V dc		110 V ac
SRW01-UC-PE2E26	Earth leakage	24 V ac (50-60 Hz) / V dc		110 V ac
SRW01-UC-PT1E47	PTC	110-240 V ac (50-60 Hz) / V dc		24 V dc
SRW01-UC-PT1E26	PTC	24 V ac (50-60 Hz) / V dc		24 V dc
SRW01-UC-PT2E47	PTC	110-240 V ac (50-60 Hz) / V dc		110 V ac
SRW01-UC-PT2E26	PTC	24 V ac (50-60 Hz) / V dc		110 V ac
SRW01-UC-ME1E47	Earth leakage	110-240 V ac (50-60 Hz) / V dc	Modbus	24 V dc
SRW01-UC-ME1E26	Earth leakage	24 V ac (50-60 Hz) / V dc		24 V dc
SRW01-UC-ME2E47	Earth leakage	110-240 V ac (50-60 Hz) / V dc		110 V ac
SRW01-UC-ME2E26	Earth leakage	24 V ac (50-60 Hz) / V dc		110 V ac
SRW01-UC-MT1E47	PTC	110-240 V ac (50-60 Hz) / V dc		24 V dc
SRW01-UC-MT1E26	PTC	24 V ac (50-60 Hz) / V dc		24 V dc
SRW01-UC-MT2E47	PTC	110-240 V ac (50-60 Hz) / V dc		110 V ac
SRW01-UC-MT2E26	PTC	24 V ac (50-60 Hz) / V dc		110 V ac



Accessories

Current Measuring Unit (UMC) or Current and Voltage Measuring Unit (UMCT)

Shall be chosen according to motor rated current.

Current range (A)	Current Measuring (UMC)	Current and Voltage Measuring (UMCT) ¹⁾
0.5-5	SRW01-UMC1	SRW01-UMCT1
1.25-12.5	SRW01-UMC2	SRW01-UMCT2
2.5-25	SRW01-UMC3	SRW01-UMCT3
12.5-125	SRW01-UMC4	SRW01-UMCT4
42-420	SRW01-UMC5	SRW01-UMCT5
84-840	SRW01-UMC6	SRW01-UMCT6

1) Alternating Voltage Range from 35 to 690 V.

Note: the Control Unit (UC) can be assembled with the Current Measuring Unit (UMC), creating a unique unit, or detached (until 2 meters). The Current and Voltage Measuring Unit (UMCT) exclusively can be assembled detached with the Control Unit.



SRW01-UMC1, 2 and 3 SRW01-UMCT1, 2 and 3

Width (mm)	Current (A)	Power connection
45	0.25 - 2.5 ²⁾	Cable through UMC
	0.5 - 5	
	1.25 - 12.5	
	2.5 - 25	

2) For current range 0.25 to 2.5 A use SRW01-UMC1 or SRW-UMCT1 with two windings on the primary. For further information, verify the User's Manual.



SRW01-UMC4 SRW01-UMCT4

Width (mm)	Current (A)	Power connection
66	12.5 - 125	Cable through UMC



SRW01-UMC5 SRW01-UMCT5

Width (mm)	Current (A)	Power connection
120	42 - 420	Busbar



SRW01-UMC6 SRW01-UMCT6

Width (mm)	Current (A)	Power connection
265	84 - 840	Cable through or busbar

For applications in higher currents, or that are out of the UMC's or UMCT's range showed above, it is possible to use external current transformers (CT), supplied by the user.

SRW01-CB Connection Cable

The cable SRW01-CB is responsible for the electric connection of the Control Unit SRW01-UC with the UMC or UMCT or EDU, make capable the assembly detached until 2 meters and facilitate the installation.



Reference	Length (mm)
SRW01-CB0 ¹⁾	60
SRW01-CB1 ²⁾	120
SRW01-CB2 ³⁾	500
SRW01-CB3	2,000
SRW01-CB4	1,000

Notes: 1) Cable for connect the Control Unit with the EDU.

2) Minimum cable for connect the Control Unit with the UMC/UMCT 1, 2, 3 and 4.

3) Minimum cable for connect the Control Unit with the UMC/UMCT 5 and 6.

Digital Expansion Unit - EDU

The digital expansion unit is used to add six digital inputs and four digital outputs in the Control Unit with the purpose of the control systems that has more variables.



Reference	Digital inputs	External digital input supply voltage	Digital outputs
SRW01-EDU1	6	24 V dc	4
SRW01-EDU2	6	110 V ac	4

Human Machine Interface - HMI

The HMI is connected in front of the relay through a communication cable, making configuration and operation practical and easier.



Reference	Description
SRW01-HMI	Human machine interface - HMI



Reference	Description
SRW01-HMI2	Human machine interface - HMI (horizontal installation)

Earth Leakage Sensor (ELS)

The earth leakage sensor must be installed separately from the Control Unit (UC).

It can be installed in any position and connected on the Control Unit (UC) through a twisted pair and/or shielded cable, connected to the sensor and S1 and S2 terminals, with maximum recommended distance of 10 m.



Reference	Diameter (mm)	UMC/UMCT compatible
SRW01-EL1	35	SRW01-UMC/UMCT 1, 2, 3
SRW01-EL2	70	SRW01-UMC/UMCT 4
SRW01-EL3	120	SRW01-UMC/UMCT 5
SRW01-EL4	210	SRW01-UMC/UMCT 6

It is recommended to use the equivalence relation between the Current Measuring Unit (UMC) or current and voltage measuring unit (UMCT) and the ELS sensors for the installation, as shown on the table above.

Accessories

Connection Cable UC-HMI



Reference	Length (mm)
SRW01-CH1	500
SRW01-CH2	1,000
SRW01-CH3	1,500
SRW01-CH4	2,000

USB Communication Cable



Reference	Length (mm)
SRW01-USB	2,000

Communication Module



Reference	Communication protocol
SRW01-MCD	DeviceNet
SRW01-MCM	Modbus
SRW01-MCP	Profibus-DP

For part replacement or Control Unit (UC) without network module.

Fixing Adaptor



Reference	Description
PLMP	Adaptor for screws fixing (2 pieces per package/0.006 kg)

Busbar for UMC and UMCT



Reference	Description
JBL-RW407D	Busbar for Current Measuring Unit UMC6 and UMCT6

Protection Cover



Connector IHM

DB9

Mini USB

Reference	Description
SRW01-CDB ¹⁾	Plastic cover for DB9 protection
SRW01-CMU ¹⁾	Plastic cover for mini USB connector
SRW01-CBP ^{1) 2)}	Plastic cover for HMI connector / accessories


Notes: 1) 10 unit package;

2) Plastic cover for old housing model (not the current rubber cover).

The protection covers are for spare part purpose, because the SRW01 is already delivered with these accessories.


Operating Modes Diagrams

Power Cables

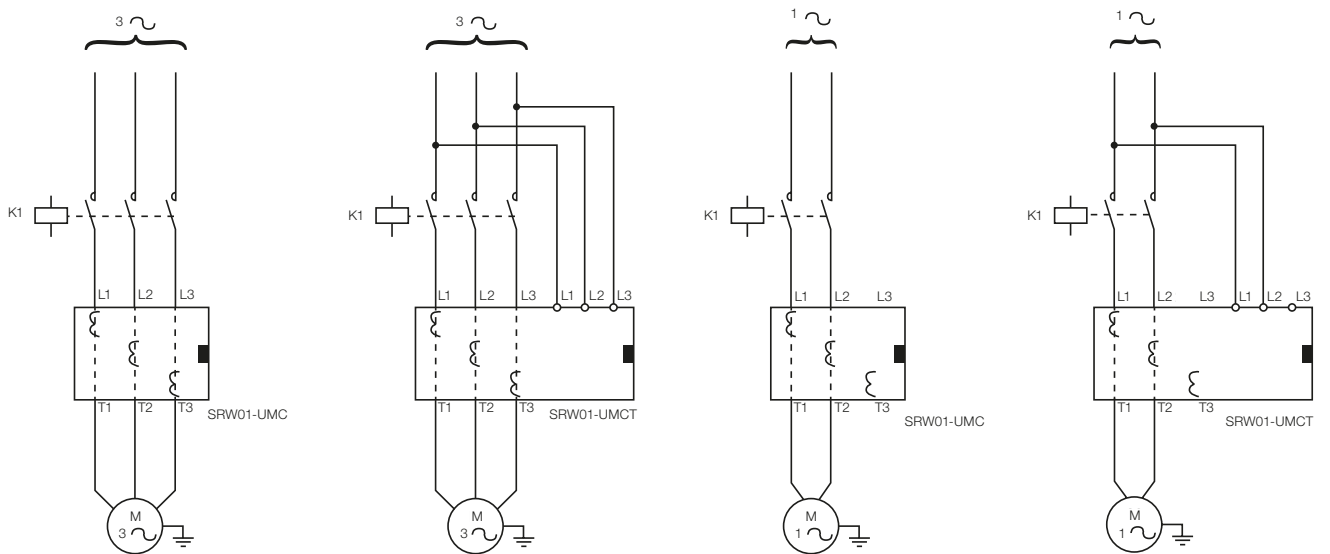

Three-phase and single-phase of the Current Measuring Unit (UMC) and Current/Voltage Measuring Unit (UMCT).

Connection of the Control Unit to the Expansion Digital Unit

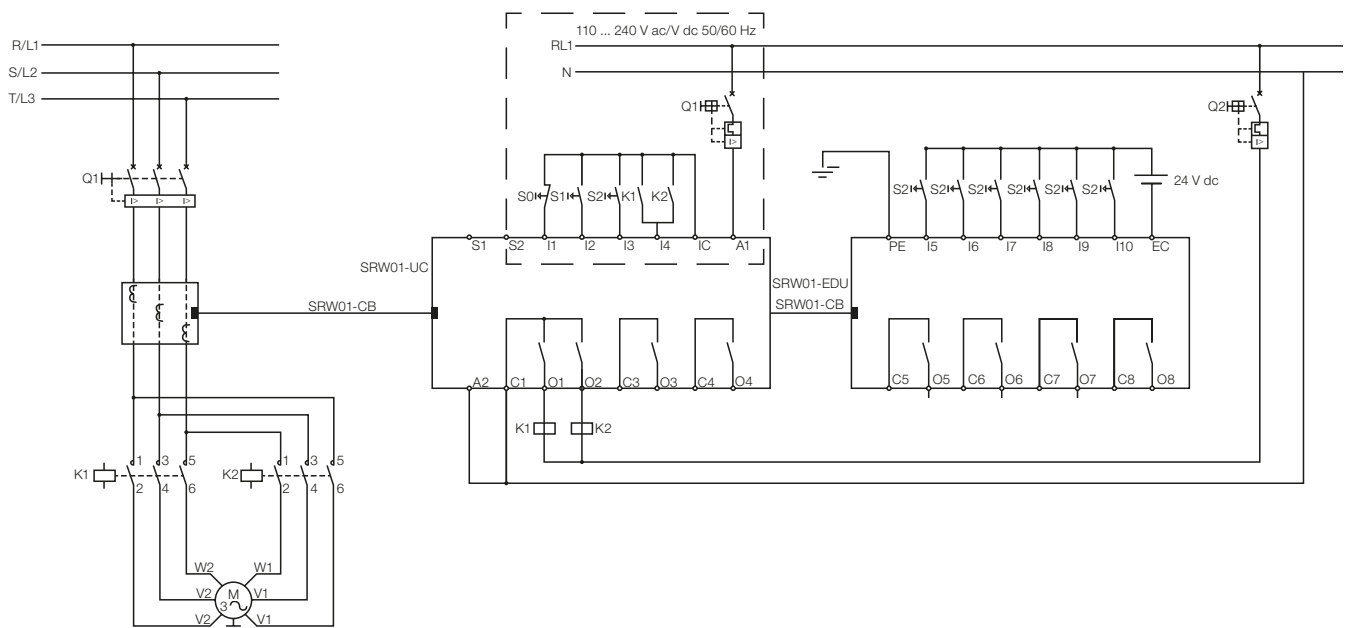


Connection diagrams of the Control Unit (UC) with the Digital Expansion Unit (EDU).




Operating Modes Diagrams

Direct Starter

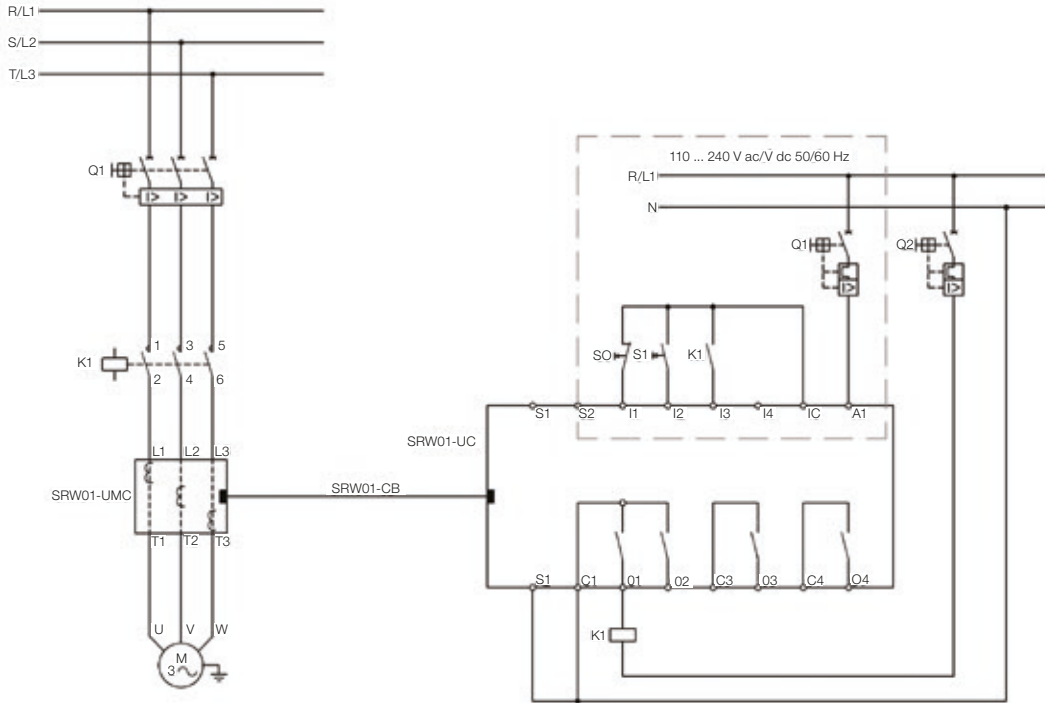


Connection diagrams for the Direct Starting Operation Mode using digital inputs at 24 V dc and driven by pushbuttons (P230 = 1). For further information consult the SRW-01 User's Manual.

Reversing Starter

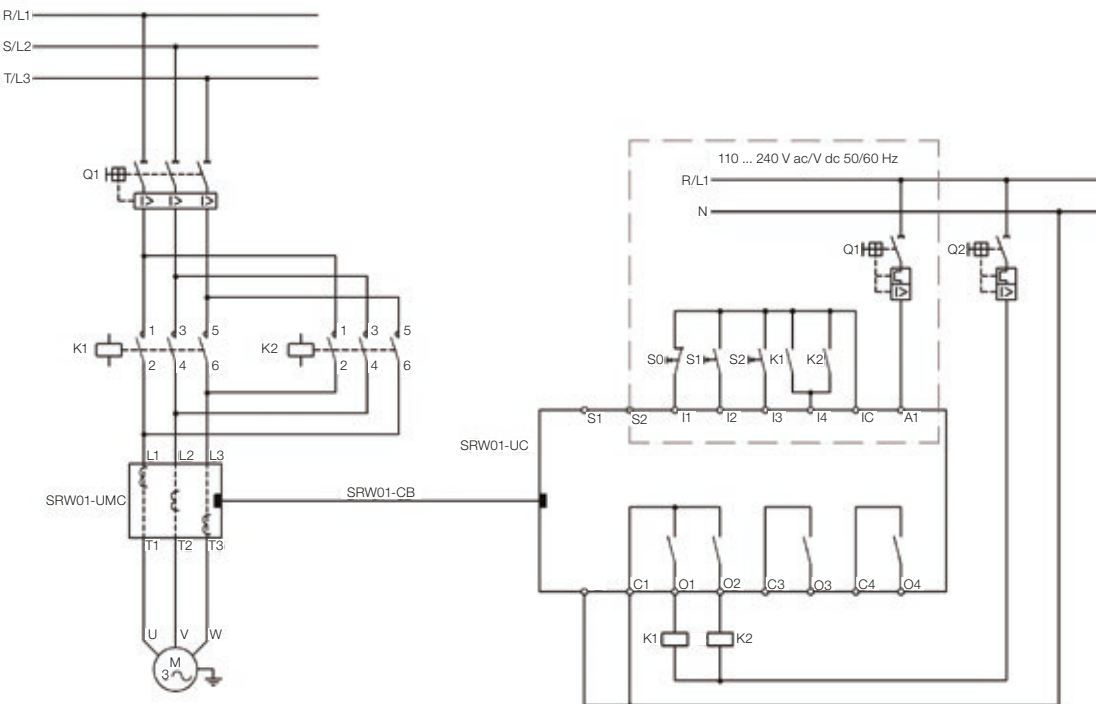


Connection diagram for the Reverter Starting Operation Mode using digital inputs at 24 V dc and driven by pushbuttons (P230 = 1). For further information consult the SRW-01 User's Manual.

Overload Relay

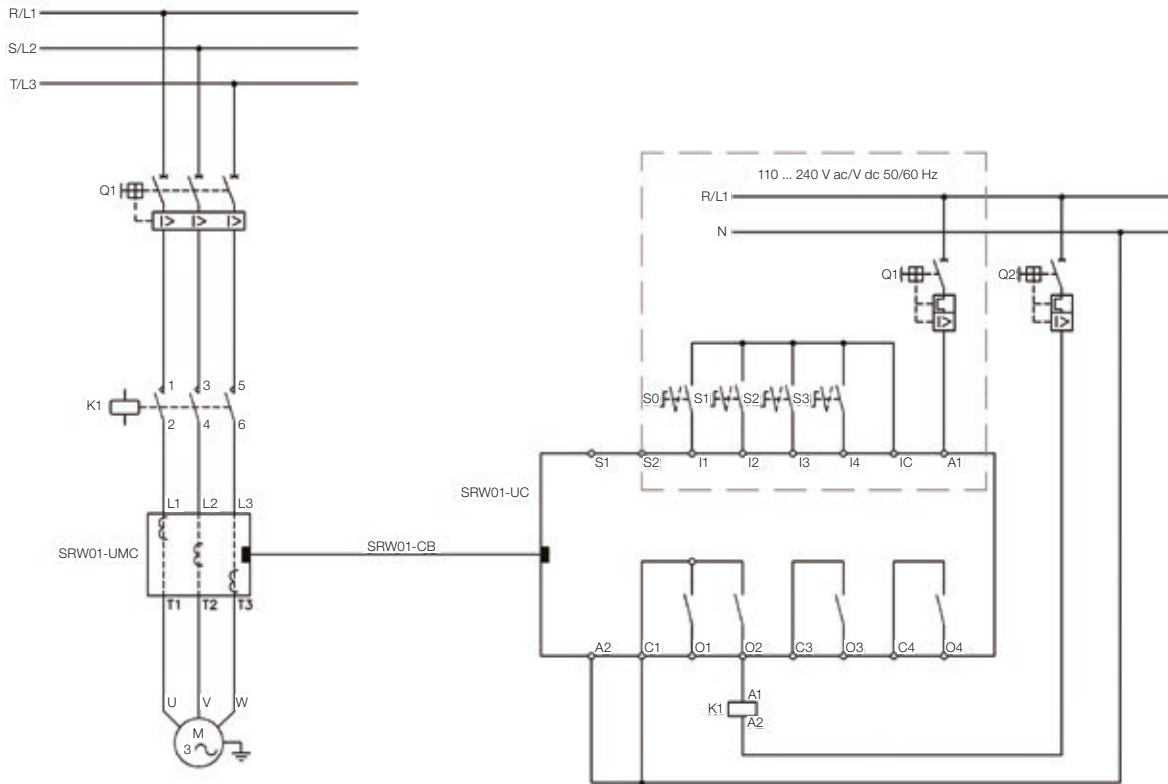

Connection diagram for the Overload Relay operation mode using digital inputs at 24 V dc.
For further information consult the SRW-01 User's Manual.


Two Windings Starter

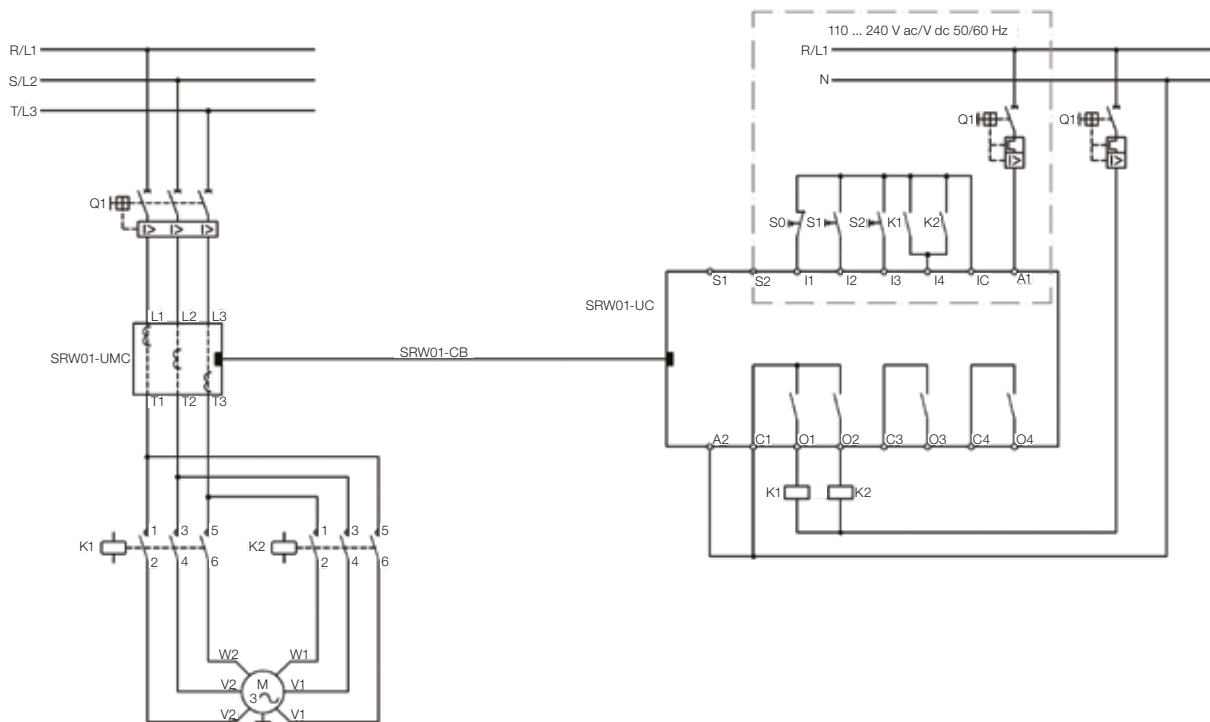

Connection diagram for the Two Windings Starting Operation Mode using digital inputs at 24 V dc and driven by pushbuttons (P230=1).
For further information consult the SRW-01 User's Manual.

Operating Modes Diagrams


Star-Delta Starter

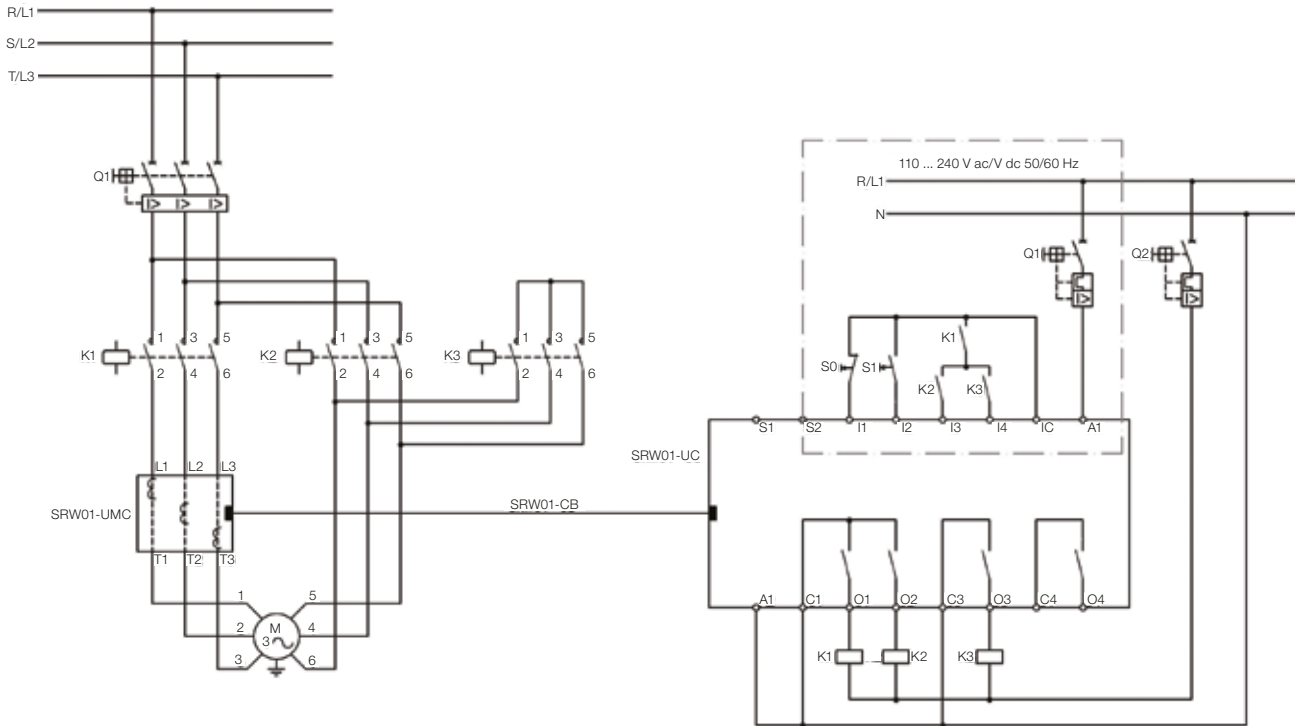

Connection diagram for the Star-Delta Starting Operation Mode - using digital inputs at 24 V dc and driven by pushbuttons (P230=1) and measuring of delta current. For further information consult the SRW-01 User's Manual.

Transparent Mode

The transparent mode allows the user to develop its own application using the WLP software ladder language.

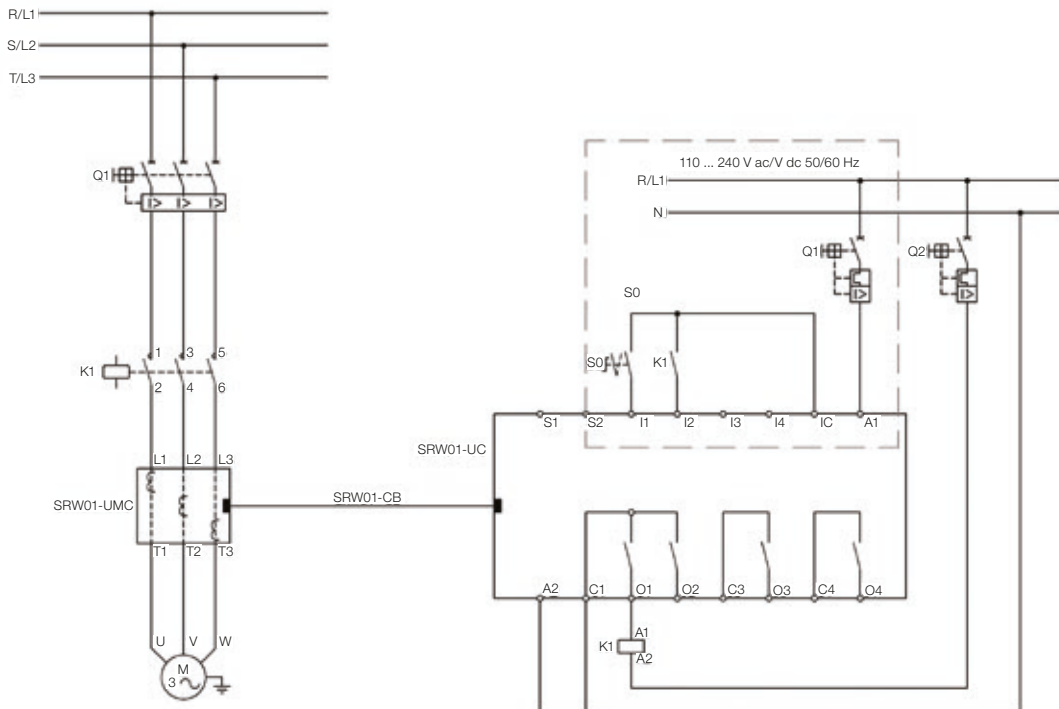

Connection diagram for the Transparent Operation Mode using digital inputs at 24 V dc. For further information consult the SRW-01 User's Manual.

WLP Software



The WLP is the SRW01 configuration software for Windows environment with user friendly interface that enables system parametrization, programming, controlling and monitoring. The WLP software enables the user to configure the relay, edit parameters and program in LADDER. Through the WLP configuration assistants the user has a guided routine that enables relay configuration. When necessary, the relay can be programmed in LADDER using mathematical and control blocks.

The LADDER program has a 64 kbytes memory and can use the relay digital inputs and outputs. Communication between software and relay can be performed through USB port or Modbus network. The WLP software is free and supplied with the product. It can be also obtained from the website www.weg.net.

Configuration Assistants

These routines have been especially created to assist relay configuration. They help the user to configure the relay in an easy self explanatory manner.




- Configuration assistant: control configuration

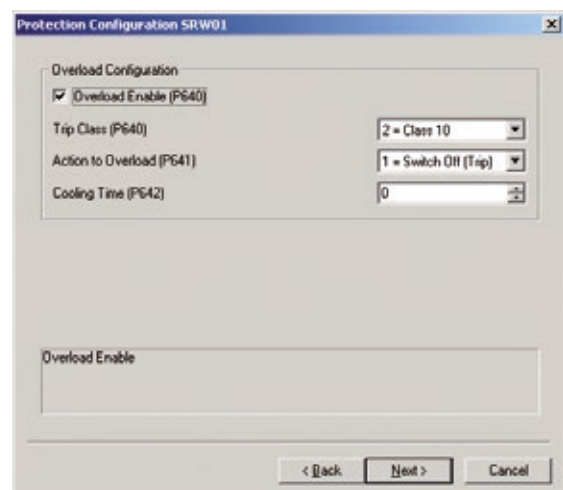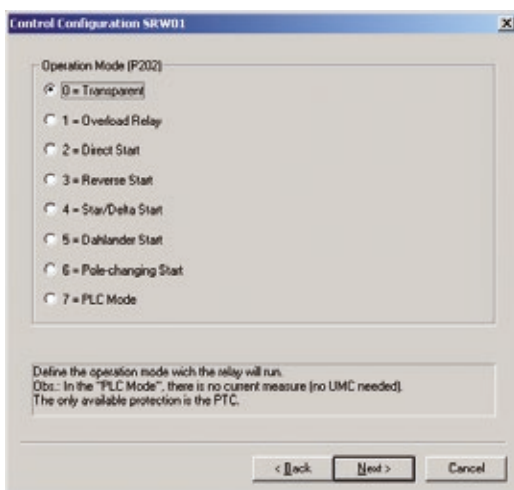

Monitoring Dialogues

These dialogues have been especially created to monitor the relay. They monitor exclusive relay information.

- Monitoring dialogues: diagnostic

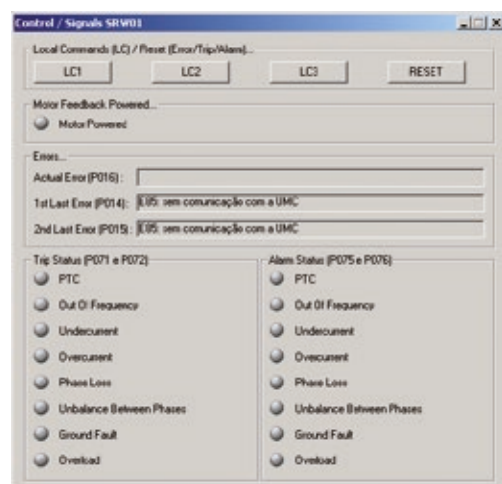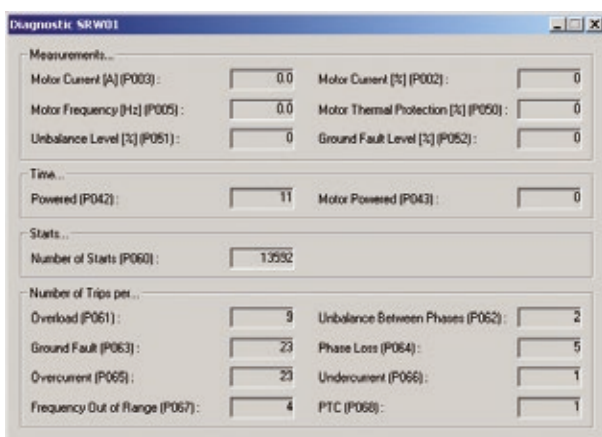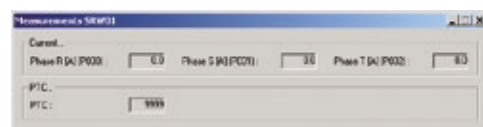

Technical Characteristics

General data	Mounting position	Any	
	Pollution degree	2	
	Protection degree (IEC 60529)	<ul style="list-style-type: none"> - Control Unit (UC): IP20 - Current Measuring Unit (UMC): <ul style="list-style-type: none"> - Without busbar: IP20 - With busbar: IP00 - Current and voltage measuring unit (UMCT): <ul style="list-style-type: none"> - Without busbar: IP20 - With busbar: IP00 - Digital expansion unit (EDU): IP20 - Human machine interface (HMI): IP54 - Earth leakage sensor (ELS): IP20 	
	Allowed ambient temperature	<ul style="list-style-type: none"> - Operation: According IEC: 0...+55 °C According UL: 0...+40 °C - Storage and transport: -25...+80 °C 	
	Short-circuit ratings (UL) ¹⁾	Control Unit (UC): 200,000 A Current Measuring Unit (UMC) and Current/voltage Measuring Unit (UMCT): 200,000 A	
	Tripping class (UL)	<ul style="list-style-type: none"> - Control Unit (UC): classes 10/20/30 - Current Measuring Unit (UMC): classes 10/20/30 	
Control Unit (UC)	Isolation rated voltage U_i	300 V	
	Supply rated voltage	110 - 240 V ac/V dc @ 50/60 Hz	24 V ac/V dc @ 50/60 Hz
	Operation range	0.85 Us - 1.10 Us	0.80 Us - 1.20 Us
	Consumption (typical) ²⁾	6 W	5 W
	Number of digital inputs	4 optically isolated inputs (24 V dc or 240 V ac)	
	Digital inputs supply	24 V dc	110 V ac
	Digital inputs power source	Internal 24 V dc isolated power source or external	External 110 V ac power
	Digital inputs current	11 mA @ 24 V dc	5 mA @ 110 V ac
	Digital inputs isolation	3 kV	
	Number of digital outputs	4 relay outputs	
	Contacts grouping	<ul style="list-style-type: none"> - 2 SPST outputs - 2 common shared SPST outputs 	
	Maximum operation voltage	250 V dc, 240 V ac	
	Smallest operation power	1 W or 1 VA	
	Switching capacity per relay contacts	<ul style="list-style-type: none"> - UL 508: C300, R300 - AC-15 (IEC 60947-5-1): 1.5 A ac / 120 V ac 0.75 A ac / 240 V ac - DC-13 (IEC 60947-5-1): 0.22 A dc / 125 V dc 0.1 A dc / 250 V dc 	
	Contacts capacity (resistive load)	3 A, 30 V dc / 250 V ac	
	External protection against short-circuit	6 A gL/gG fuse	
	Motor protection VIA - PTC	<ul style="list-style-type: none"> - TRIP value: > 3.4 kΩ - Rearm value: < 1.6 kΩ 	
Terminals (connectors)	<ul style="list-style-type: none"> - Torque: 0.5 Nm - 4.5 lb.in - Conductors section: <ul style="list-style-type: none"> - Rigid and bare: 1 x (0.2 ... 2.5 mm²); 1 x (2 ... 12 AWG) - Flexible with/without terminals: 1x (0.2 ... 2.5 mm²); 1 x (26 ... 12 AWG) - Screws: M3 		
Reset button	<ul style="list-style-type: none"> - Error or fault reset - system - TRIP or alarm reset - protections - TRIP test 		

Notes: 1) Consult the user's manual;


2) Considering the Control Unit (UC) and Current Measuring Unit (UMC) or current/voltage measuring unit (UMCT) consumption.




Current Measuring Unit (UMC)	Current range	0.25 - 840 A ac	
	Isolation degree U_i	690 V ac	
	Rated operational voltage U_e	- IEC 60947-4-1: 690 V ac - UL 508: 600 V ac	
	Impulse voltage U_{imp}	6 kV	
	Frequency range	50/60 Hz	
	Application	Three-phase, single-phase	
	Cable hole diameter	- UMC 1, 2 and 3: 8 mm - UMC 4: 15 mm - UMC 5: busbar - UMC 6: 32 mm or busbar	
Current and Voltage Measuring Unit (UMCT)	Current range	0.25 - 840 A ac	
	Voltage range	35 - 690 V ac	
	Isolation degree U_i	690 V ac	
	Rated operational voltage - U_e	IEC 60947-4-1: 690 V ac UL 508: 600 V ac	
	Impulse voltage U_{imp}	6 kV	
	Frequency range	50/60 Hz	
	Application	Three-phase, single-phase	
	Cable hole diameter	UMCT 1, 2 and 3: 8 mm UMCT 4: 15 mm UMCT 5: busbar UMCT 6: 32 mm or busbar	
Terminals (connectors)	- Torque tightening: 0.5 Nm - 4.5 lb.in - Maximum conductos section: - Rigid and bare: 1 x (0.2 ... 2.5 mm ²); 1 x (26 ... 12 AWG) - Flexible with/without terminals: 1 x (0.2 ... 2.5 mm ²); 1 x (26 ... 12 AWG) - Screws: M3		
Earth Leakage Sensor (ELS)	Current range	0.3 - 5 A ac	
	Isolation degree U_i	690 V ac	
	Rated operation voltage	- IEC 60947-4-1: 690 V ac - UL 508: 600 V ac	
	Impulse voltage U_{imp}	6 kV	
	Frequency range	50/60 Hz	
	Application	Monophasic and triphasic	
	Window internal diameter	- EL1: 35 mm - EL1: 70 mm - EL1: 120 mm - EL1: 210 mm	
Terminals (conectors)	- Torque: 0.29 Nm - 2.6 lb.in - Maximum conductos section: - Rigid and bare: 1 x (0.2 ... 2.5 mm ²); 1 x (22 ... 14 AWG) - lexible with/without terminals: 1 x (0.2 ... 1.5 mm ²); 1 x (22 ... 14 AWG) - Screws: M3		
Digital Expansion Unit (EDU)	Rated isolation voltage U_i	300 V	
	Number of digital inputs	6 optically isolated inputs (24 V dc or 110 V ac)	
	Digital inputs supply	24 V dc	110 V ac
	Digital inputs power source	External 24 V dc power source	External 110 V ac power source
	Digital inputs current	11 mA @ 24 V dc	5 mA @ 110 V ac
	Digital inputs isolation	3 kV	
	Number of digital outputs	4 relay outputs	
	Contacts grouping	4 SPST outputs	
	Maximum operation voltage	250 V dc, 240 V ac	
	Smallest operation power	1 W or 1 VA	
	Switching capacity per relay contact	- UL 508: C300, R300 - AC-15 (IEC 60947-5-1): 1.5 A ac / 120 V ac 0.75 A ac / 240 V ac - DC-13 (IEC 60947-5-1): 0.22 A dc / 125 V dc 0.1 A dc / 250 V dc	
	Contacts capacity (resistive load)	3 A, 30 V dc / 250 V ac	
	Short-circuit external capacity	6 A gl/gG fuse	
	Terminals (conectors)	- Torque: 0.5 Nm - 4.5 lb.in - Conductors section: - Rigid and bare: 1 x (0.2 ... 2.5 mm ²); 1 x (26 ... 12 AWG) - Flexible with/without terminals: 1 x (0.2 ... 2.5 mm ²); 1 x (26 ... 12 AWG) - Screws: M3	

Dimensions (mm)


Control Unit - SRW01-UC

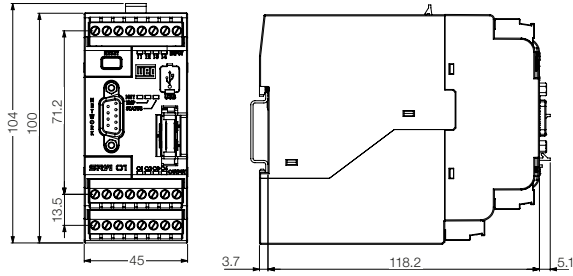


Digital Expansion Unit - EDU

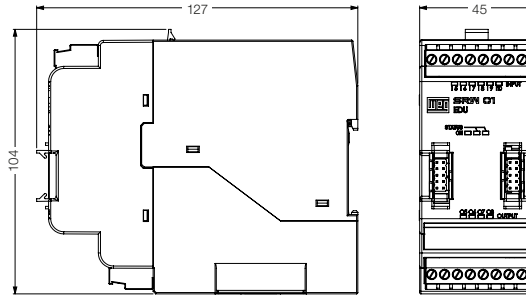


Human Machine Interface - HMI

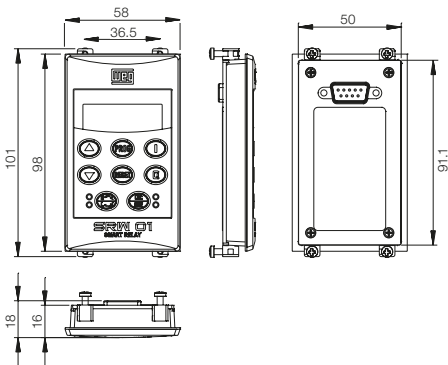

Human Machine Interface (Horizontal) - HMI

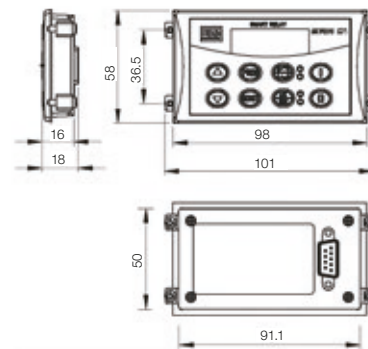


Current Measuring Unit - SRW01 - UMC

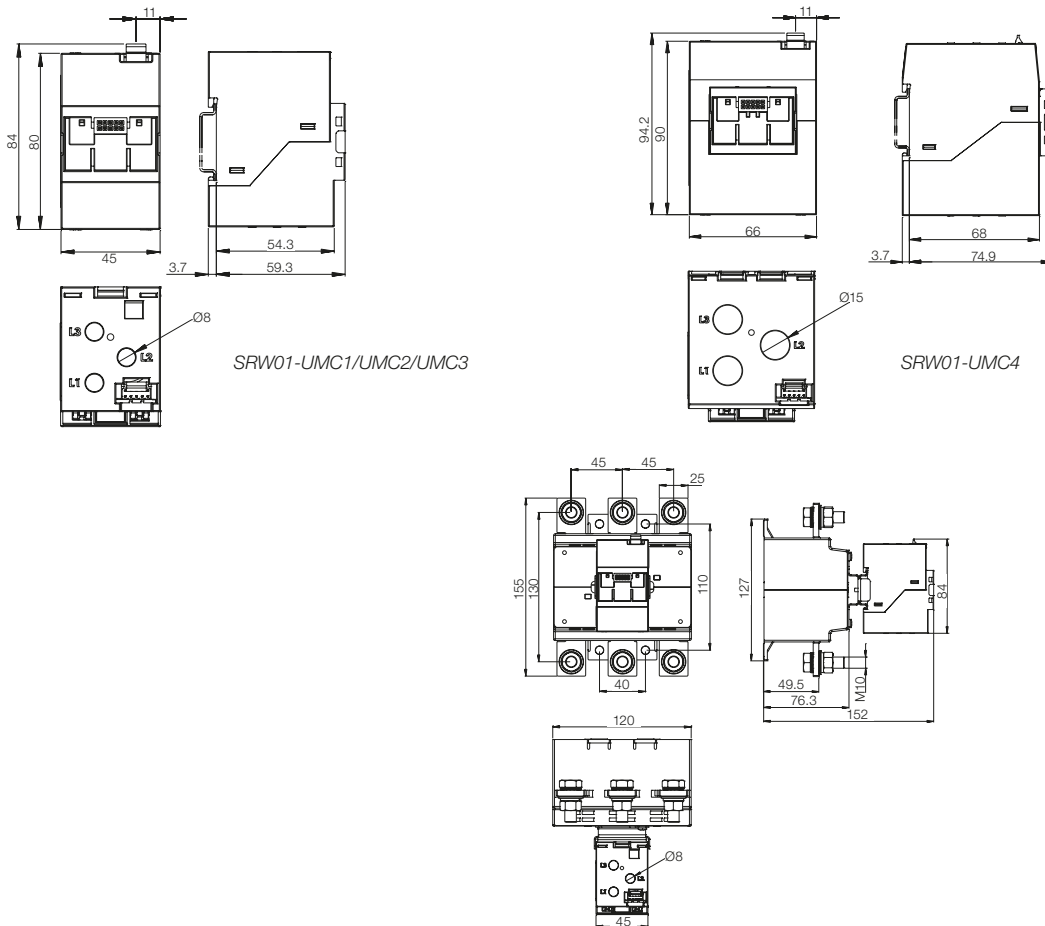


SRW01-UMC5

Current Measuring Unit - SRW01 - UMC

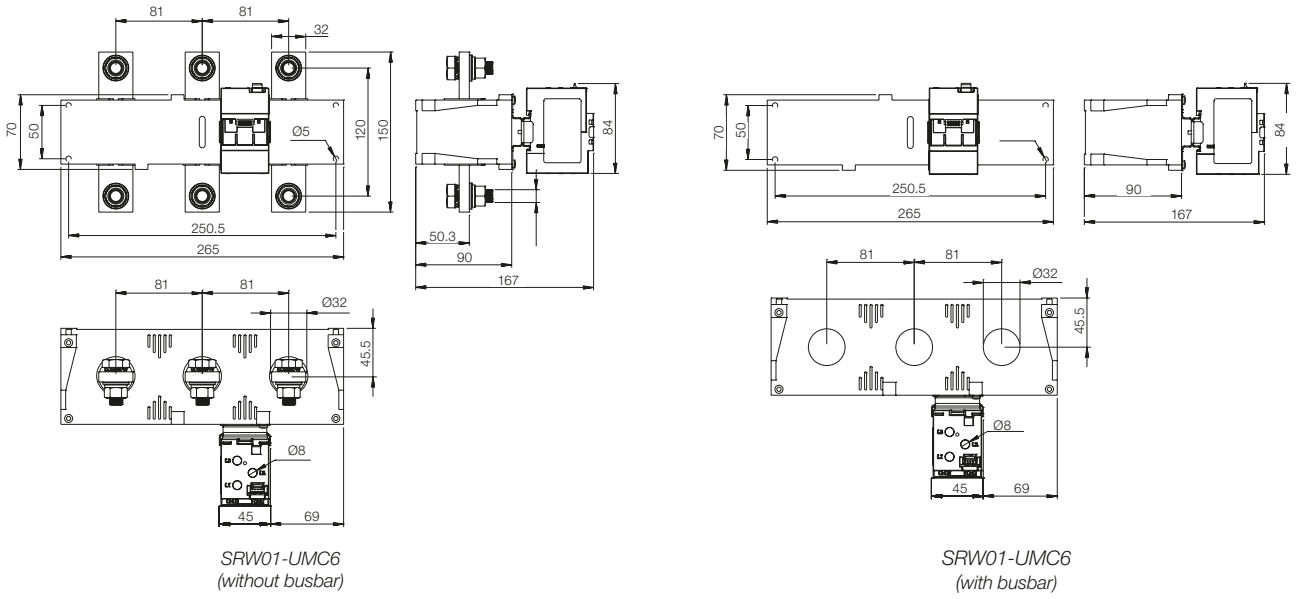


Current and Voltage Measuring Unit - UMCT

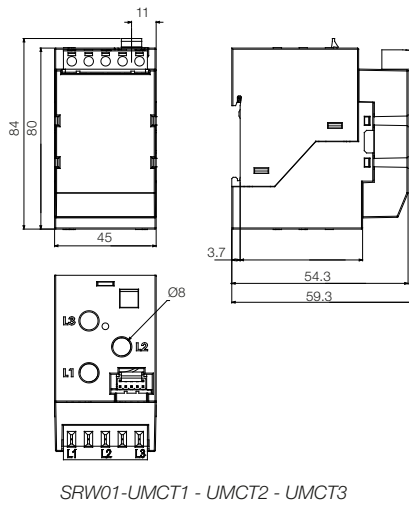


Dimensions (mm)


Current and Voltage Measuring Unit - UMCT

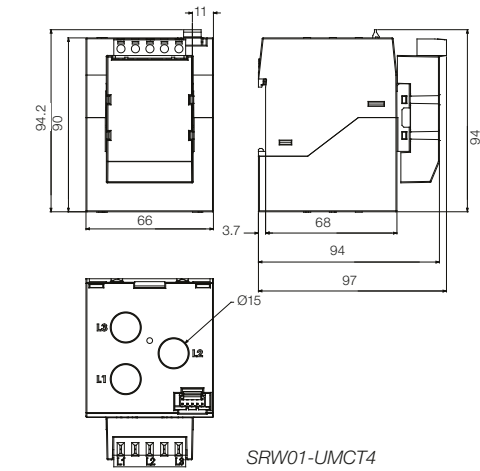


SRW01-UMCT4

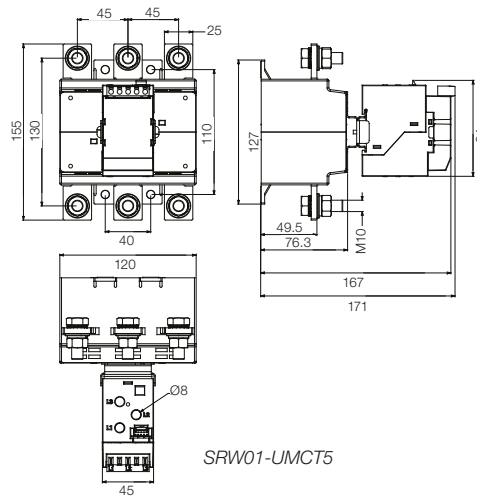

SRW01-UMCT5

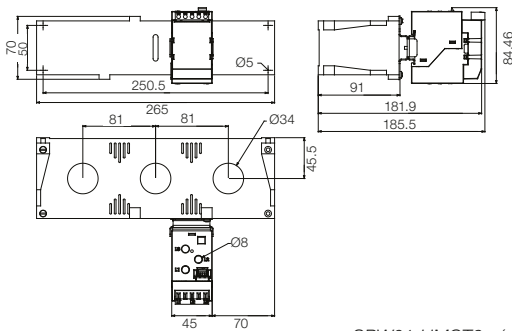


SRW01-UMCT6 - (without busbar)

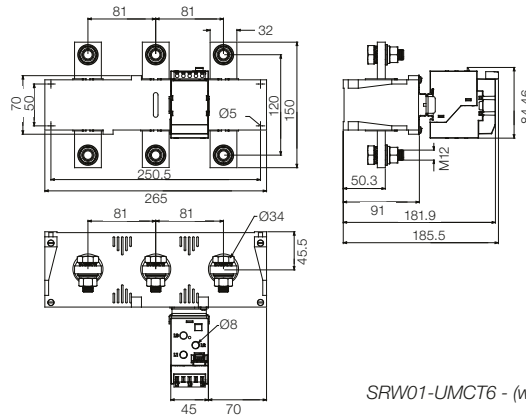


SRW01-UMCT6 - (with busbars)

Earth Leakage Sensors (ELS)

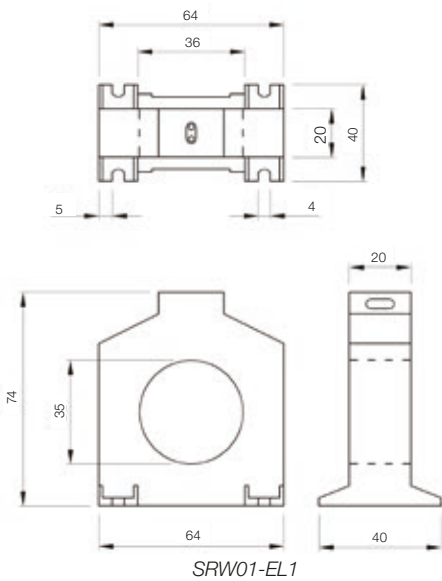

SRW01-EL1

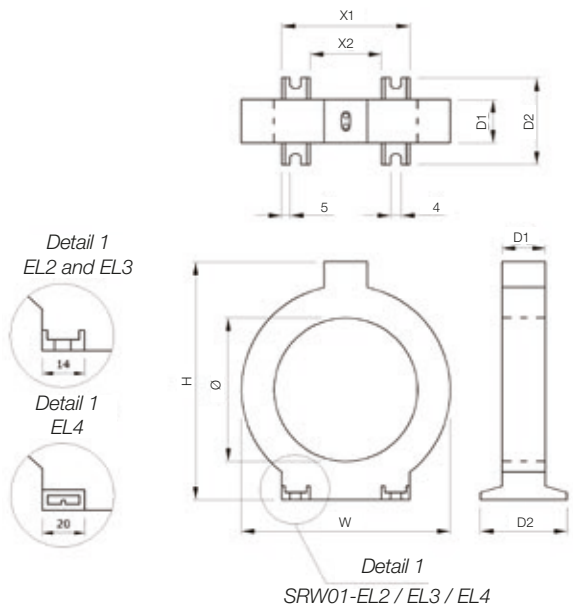

SRW01-EL2 / EL3 / EL4

Model	Ø	H	W	X1	X2	D1	D2
EL2	70	116	104	64	36	20	40
EL3	120	169	154	94	66	20	40
EL4	210	304	290	150	110	33	90*

* With base metallic support.

WEG Worldwide Operations

ARGENTINA

San Francisco - Cordoba
Phone: +54 3564 421484
info-ar@weg.net

Cordoba - Cordoba
Phone: +54 351 4641366
weg-morbe@weg.com.ar

Buenos Aires
Phone: +54 11 42998000
ventas@pulverlux.com.ar

AUSTRALIA

Scoresby - Victoria
Phone: +61 3 97654600
info-au@weg.net

AUSTRIA

Markt Piesting - Wiener
Neustadt-Land
Phone: +43 2633 4040
watt@wattdrive.com

BELGIUM

Nivelles - Belgium
Phone: +32 67 888420
info-be@weg.net

BRAZIL

Jaraguá do Sul - Santa Catarina
Phone: +55 47 32764000
info-br@weg.net

CHILE

La Reina - Santiago
Phone: +56 2 27848900
info-cl@weg.net

CHINA

Nantong - Jiangsu
Phone: +86 513 85989333
info-cn@weg.net

Changzhou - Jiangsu
Phone: +86 519 88067692
info-cn@weg.net

COLOMBIA

San Cayetano - Bogota
Phone: +57 1 4160166
info-co@weg.net

ECUADOR

El Batán - Quito
Phone: +593 2 5144339
ceccato@weg.net

FRANCE

Saint-Quentin-Fallavier - Isère
Phone: +33 4 74991135
info-fr@weg.net

GERMANY

Türnich - Kerpen
Phone: +49 2237 92910
info-de@weg.net

Balingen - Baden-Württemberg
Phone: +49 7433 90410
info@weg-antriebe.de

Homburg (Efze) - Hesse
Phone: +49 5681 99520
info@akh-antriebstechnik.de

GHANA

Accra
Phone: +233 30 2766490
info@zestghana.com.gh

INDIA

Bangalore - Karnataka
Phone: +91 80 41282007
info-in@weg.net

Hosur - Tamil Nadu
Phone: +91 4344 301577
info-in@weg.net

ITALY

Cinisello Balsamo - Milano
Phone: +39 2 61293535
info-it@weg.net

JAPAN

Yokohama - Kanagawa
Phone: +81 45 5503030
info-jp@weg.net

MALAYSIA

Shah Alam - Selangor
Phone: +60 3 78591626
info@wattdrive.com.my

MEXICO

Huehuetoca - Mexico
Phone: +52 55 53214275
info-mx@weg.net

Tizayuca - Hidalgo
Phone: +52 77 97963790

NETHERLANDS

Oldenzaal - Overijssel
Phone: +31 541 571080
info-nl@weg.net

PERU

La Victoria - Lima
Phone: +51 1 2097600
info-pe@weg.net

PORTUGAL

Maia - Porto
Phone: +351 22 9477700
info-pt@weg.net

RUSSIA and CIS

Saint Petersburg
Phone: +7 812 363 2172
sales-wes@weg.net

SOUTH AFRICA

Johannesburg
Phone: +27 11 7236000
info@zest.co.za

SPAIN

Coslada - Madrid
Phone: +34 91 6553008
wegiberia@wegiberia.es

SINGAPORE

Singapore
Phone: +65 68589081
info-sg@weg.net

Singapore
Phone: +65 68622220
watteuro@watteuro.com.sg

SCANDINAVIA

Mölnlycke - Sweden
Phone: +46 31 888000
info-se@weg.net

UK

Redditch - Worcestershire
Phone: +44 1527 513800
info-uk@weg.net

UNITED ARAB EMIRATES

Jebel Ali - Dubai
Phone: +971 4 8130800
info-ae@weg.net

USA

Duluth - Georgia
Phone: +1 678 2492000
info-us@weg.net

Minneapolis - Minnesota
Phone: +1 612 3788000

VENEZUELA

Valencia - Carabobo
Phone: +58 241 8210582
info-ve@weg.net

For those countries where there is not a WEG own operation, find our local distributor at www.weg.net.



WEG Group - Automation Business Unit
Jaraguá do Sul - SC - Brazil
Phone: +55 47 3276 4000
automacao@weg.net
www.weg.net

